

Manual

SMA-FTP Touch2Plan SMA-FTP 8.2

Version 1.0.23049

Last changed on: 02.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	SMA-FTP Touch2Plan	4
2	Touch2Plan	5
2.1	General	5
2.2	Overview	5
2.3	Individual applications	6
2.3.1	Planning	6
2.3.2	Configuration	8
2.3.3	Resource configuration.....	9
2.4	Examples	12
2.4.1	Create machine	12
2.4.2	To process a machine	12
2.4.3	Plan an order	13
2.4.4	Finalize order.....	13
2.4.5	Reschedule an order	13

1 SMA-FTP Touch2Plan

Purpose

The function package SMA-FTP Touch2Plan includes functions for production control, work scheduling, production management and for supervisors for rapid, mobile planning and consideration of the current production plan with the following features:

- Individual configuration options for each machine to be displayed
- Clear calendar presentation of the production plan
- Intuitive operating elements
- Planning functions for allocating, reallocating or deallocating operations
- Conflict verifications (check for violations of basic dates and capacity over-utilization) in planning
- Real-time synchronization with the HYDRA server


2 Touch2Plan

2.1 General

Using Touch2Plan a member of staff can directly control planned orders in production. An overview of planned orders in form of a calendar is now available.

2.2 Overview

On the home page of the application Touch2Plan you have the option to select "Planning", "Configuration" and "Resource configuration". Selecting one of the three options a corresponding application opens automatically.

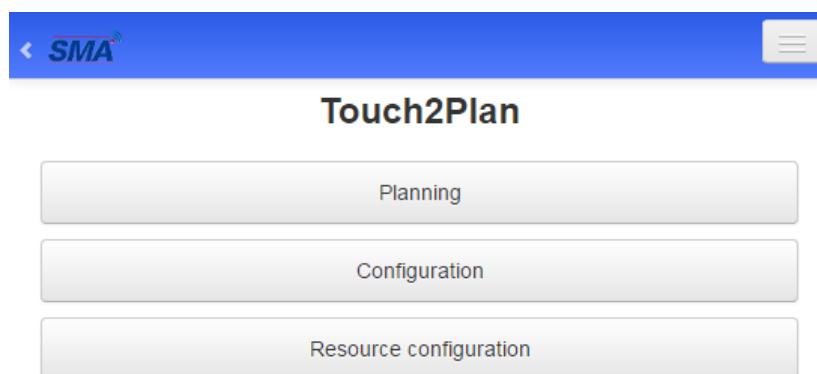

2.3 Individual applications

2.3.1 Planning

The planning application presents the currently configured machines and planned orders clearly. Using this application the production supervisor can obtain information about the current production planning for the next few days or can carry out planned activities (planning, canceling or rescheduling of orders).

Touch2Plan

Planning deactivated | Update | Release planning | Today

50611 | 50612 | 50623


50611

Montag, 17. August 2015	Dienstag, 18. August 2015	Mittwoch, 19. August 2015	Donnerstag, 20. August 2015	Freitag, 21. August 2015
S30005050100	S30003010100	S30003130100	S30003120100	S30003190100
S30005050100	S30003010100	S30003130100	S30003120100	S30003190100
S30005050100	S30003010100	S30003130100	S30003120100	S30003190100
S30005050100	S30003010100	S30003130100	S30003120100	S30003190100
S30005050100	S30003010100	S30003130100	S30003120100	S30003190100
S30005050100	S30003030100	S30003100100	S30003140100	S30003190100
S30005050100	S30003030100	S30003100100	S30003140100	S30003190100
S30005050100	S30003030100	S30003100100	S30003140100	S30003200100

Pool of orders


Order number	Article	OP
S3000300	SAL-FMO011-K-7 033	0100
S3000301	SAR-FMO011-K-7 033	0100

Function keys




Planning mode activated/diactivated

This function enables the planning mode to be activated or deactivated. Please note that planning activities can only be issued when the planning mode is active.




Update

Using this function current data (planned orders and order backlog) is downloaded from the HYDRA server and displayed in the Touch2Plan application.



Release planning

This function enables to store the current planning state. That means that planned events of the modified orders are transferred to the HYDRA server and updated.



"Today"

Requesting the function today's date is used as the first day in the calendar and appears to the left.



Search

Using the search function you can find orders with the aid of the order number.



Showing times

Requesting this function on the left next to the calendar you can see for each time block the time of day. The individual time block presents the time of day.



Browse through the calendar

Using the arrows of the calendar you can scroll backward and forwards.

2.3.2 Configuration

The application "Configuration" includes the setting of the overall application. This configuration specifies the settings of the overall application. You can define here, additionally to the display, the planned period for the machine.

Machine	Show?	Sorting
50611	☒	0
50612	☒	0
50623	☒	0

Planning horizon 11 Days

Past period 1 Days

Save Planning Cancel

Field Description

Display?

Should be machine be displayed in the application when it has been planned in?

Sorting

This numbering defines the sequence of the display in the planning application. The smaller the number the further on the left the machine is displayed.

Planning horizon

This value determines how many days in advance planning can be issued. Please note that the performance of the application relates to the number of data being displayed.

Period in the past

Defining the past enables one to obtain an overview over production of the previous few days. The past defines therefore how many days from the past must be displayed for planning purposes.

2.3.3 Resource configuration

The application "Resource configuration" includes the function to configure machines for the Touch2Plan application.

The screenshot shows the 'Touch2Plan - Resource configuration' dialog box. It has a blue header bar with the SMA logo and a menu icon. The title 'Touch2Plan - Resource configuration' is centered. Below the title is a 'Configuration' section. At the top left of this section is a dropdown menu with '-/-' selected. At the top right is a 'Create machine +' button. The configuration fields include: 'Capacity (per thousand)' with a text input; 'Rounding percentage' with a text input followed by a '%' symbol; 'Time block size' with a text input followed by 'min.'; 'Availability time from' and 'hh:mm until' with two text inputs; 'Number of days shown' with a text input; 'Break time' with an 'Add break time' button; 'Shift duration' with a text input followed by 'h'; and 'Delete machine configuration' with a button containing an 'x' icon. At the bottom are three buttons: 'Save', 'Planning', and 'Cancel'.

Function keys

Create machine +

Using this function a new machine for display and planning purposes can be set up in the Touch2Plan. If this function is requested a separate input tab appears where required data can be inserted.

-/-

This button can download an existing resource configuration. If an existing resource configuration is downloaded the name of the downloaded resource appears in the selection list.

Add break time

This function enables to add breaks to a machine (times when the machine is not producing). If this function is requested a separate input tab appears where start and end of breaks can be stored.

Delete machine
configuration



This function can delete the currently downloaded machine configuration. Please note that deleting only refers to the application in the Touch2Plan and has no effect on the HYDRA configuration.

Planning

Using this function you can directly change to the planning application.

Save

When using the saving function the currently entered values for the selected machine are stored on the mobile device.

Cancel

Using this function the not yet saved entries can be rejected.

Field Description

Capacity (per thousands)

This value defines how many orders can be planned in simultaneously on a machine. Please note that every order has a demand of 1000 by default.

Percentage

This number defines when a time block is considered "assigned" (in percentages).

Time block factor

This value defines the period of time represented by a time block. For example time block factors = 120min are selected meaning that the time block for this machine is always 2 hours. Available times must be entered like the following: 0:00 - 2:00, 2:00 - 4:00, 4:00 - 6:00 etc.


Available times from/until

Both times define from what time and until when the machine is available.

Number of displayed days

This value can specify how many days are simultaneously displayed in the calendar of the planning application.

Break times

If there is a break specified for the machine then it is shown in the list of break times. Break time can be added using the function  .


Shift duration

This value specifies the times after which an optical separation is inserted into the time blocks.

2.4 Examples

2.4.1 Create machine

In order to create a new machine for the application you must request the function  in the application "Resource configuration". You can enter the required information in the screen now opening (see screenshot).

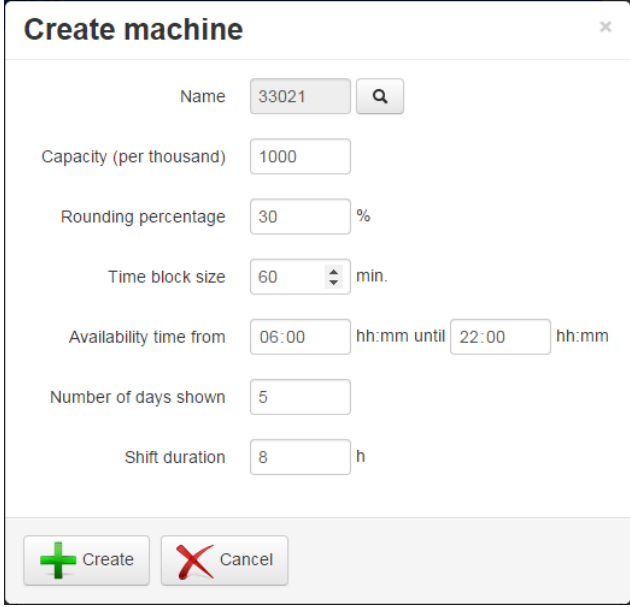

In the above example machine 33021 is created available daily from 06.00 until 22.00. Each time block in the planning calendar represents one hour (60 min).


2.4.2 To process a machine

In order to process an existing machine select in the box . The current valid data of the machine is displayed in the screen and can be changed there.

2.4.3 Plan an order

Please proceed as follows to plan an order:


1. (Optional) Activate planning function by the selecting the function
2. Select the order to be planned (highlighted in color)
3. Select time block for the order to be planned
4. Release planning using the function

A rectangular button with a lock icon and the text "Planning deactivated".A rectangular button with a right-pointing triangle icon and the text "Release planning".

2.4.4 Finalize order

Please proceed as follows to finalize an order:

1. (Optional) Activate planning function by the selecting the function

A rectangular button with a lock icon and the text "Planning deactivated".

2. Select the finalized order (highlighted in color and a symbol is additionally attached)





3. Select symbol (the order is then transferred into the order backlog)
4. Release planning using the function

A rectangular button with a right-pointing triangle icon and the text "Release planning".

2.4.5 Reschedule an order

Please proceed as follows to reschedule an order:

1. (Optional) Activate planning function by the selecting the function
2. Select the order to be reschedule (highlighted in color and an X is additionally attached).
3. Select  function
4. Select time block in order to reschedule the order
5. Release planning using the function

A rectangular button with a lock icon and the text "Planning deactivated".A rectangular button with a right-pointing triangle icon and the text "Release planning".