

Manual

Palletizing / Packaging / Assembling TRT-PPK 8.1

Version 1.0.54

Last changed on: 19.06.2020

Copyright

©Copyright 2012 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Palletize / Package / Assemble	4
2	Activating Palletizing/ Packaging/ Assembling.....	5
3	Palletizing/ Packaging/ Assembling at the Terminal	7

1 Palletize / Package / Assemble

Overview

Purpose

The function package Palletize / Package / Assemble expands the material and production logistics as well as tracking and tracing with functions to support the logistic processes processing and palletizing and to integrate into the data entry and tracing system.

Implementation Considerations

Use this function package in combination with the function package Material and Production Logistics and/or Tracking & Tracing to document the summary of material in handling units in the system to

- use the data for tracing purposes
- label and identify the generated handling units

Features

- Packaging station configuration
 - Configuring a work place as a packaging station
- Special posting process
 - Mapping specific input processing for palletizing and packaging procedures at packaging stations
 - Function to generate handling units on Windows based BDE terminals
- HU Corrections
 - Function to edit the handling units (e.g. assigning batches to and removing batches and from the handling unit)
- Printing labels at the HU
 - Capability to print a label at the handling unit when the label was created using the HYDRA Designer for labels and production papers (HYD-ETD)

2 Activating Palletizing/ Packaging/ Assembling

Requirements

Ensure that:

- The flag "Batch management requirement" is set at the operation
- The operation material type does not have the flag "Consumption balance"
- The primary quantity unit for the operation is "KG"

Ensure that at the [workplace](#):

- The flag "Batch administration" is set
- The machine type "Packing location" is selected
- Machine monitoring is not activated

Procedure

Assign the [workplace to a terminal](#). Reboot the terminal.

Results

The following specific dialogs are available at the terminal for the configured packing location:

<i>Dialog</i>	<i>Description</i>
A_AN_HU	Log packing OP on (no input batches)
A_P_AN_HU	Log packing OP on (no input batches, with person)
CE_AN_HU	Assign batch to running OP/ TPU
CA_WL_HU	Complete TPU (output batch change)
A_UN_HU	Interrupt packing OP
A_AB_HU	Finish packing OP
A_AUT_HU	Log off/ interrupt OP selection
C_VLOS_HU	Display preceding TPU



The TPU batch numbers created are permanently generated at the terminal with the prefix HU.
The prefix is not currently configurable.



There is no off-line entry capability

3 Palletizing/ Packaging/ Assembling at the Terminal

Log on packing OP

Using the following entry function (dialog A_AN_HU or A_P_AN_HU) the operator can log a packing OP on that is subject to batch management:

When the OP is logged on, an operation is selected from the sequencing list and then logged on at the machine. OPs without input material requiring batch management are logged on and posted using the PDM command A_AN or A_P_AN.

If the machine is configured so that a person must be logged on with the OP, then the command A_P_AN is used and the badge number must be available as an entry field.

Assign batches

Using the following entry function (dialog CE_AN_HU) on a terminal, batches for a current TPU (active output batch) can be assigned to an active OP requiring batch processing:

Assign batches <CE_AN_HU>

Machine: MPDV-PAC Transp. unit: HUPBF9011D
Order: PLATE000320000850

Batch No.

Batches in transport unit

* Batch No.	Material	Weight	Einh	Designation
- PRPBF90116	PLATE_WIP07	1,00	KG	Plate finishing Article

No. of batches: 1 Total qty.: 1
Staff badge number:

Exit Assign batch Remove batch Complete TPU

Illustration: Assign batches dialog - CE_AN_HU

By entering a batch number that is known in HYDRA and pressing the "Assign batch" key, the batch is logically assigned to the current TPU. After it is successfully assigned, the batch is in the "processed" status and is displayed in the list of TPU batches.

General note: Only batches with the same material number may be assigned.

Using the "Remove batch" button, you can remove a batch from assignment by selecting it (double click on the line). This switches the batch back to the "free" status.

The number of assigned batches and the sum of their total quantity in kg are displayed in the window as supplementary status information about the current TPU.

The content of the grid "Batches in transport unit" is configured in the file ctaipalay.ini using the section [C_PAL_ZUORD.LST].

Complete TPU

By using the following entry function (dialog CA_WL_HU) on the terminal, the currently active output batch (TPU/handling unit) can be completed.

Complete TPU <CA_WL_HU>

Machine	MPDV-PAC	Material	PLATE_WIP07
Order	PLATE000320000850	New TPU	HUPBF9P116
BatchNo.	1		

Target buffer

Transp. unit

Status
☒ Free
☐ Locked
☐ Waste

Tare weight

Net weight

Gross weight 18 KG

Reason

Staff badge number

Cancel Prod. TPU GEWICHT Generate TPU

Illustration: Complete TPU dialog – CA_WL_HU

Using the "Complete TPU" function, a TPU can be completed by entering the weight and the status good / blocked / scrap. When the TPU is completed, the active output batch is posted with quantity (net weight) and completed, and a goods receipt (movement type 101) is posted. At the same time, the next output batch is logged on at the OP.

The following data can be entered at this posting:

Target buffer

Material buffer the TPU batch is posted to. Default assignment is the machine's output buffer.

Gross weight / Tare Weight / Net weight

The net weight is preset with the sum (in kilograms) of the assigned individual batches. If entered manually, the calculation is as follows:

$$\text{Gross weight} = \text{tare weight} + \text{net weight}$$

The values gross weight and tare weight are also stored as batch attributes at the TPU batch:

Gross weight - batch attribute 301 (ATTR:301)

Tare weight - batch attribute 302 (ATTR:302)

Transp. unit (Transport unit)

By selecting a transport unit available in the system, an assignment can be made to the TPU batch.

Please note: The transport unit's defined weight is currently not assumed as the tare weight in the input mask.

Status (free / blocked / scrap)

In addition to the "free" status (yield), the generated TPU batch can also be generated on the "blocked" status (Class yield) or as a scrap batch (Class scrap).

In the case of scrap, the quantity is also posted as scrap at the operation by entering a reason.

Number of batches

Shows the number of batches currently assigned to the TPU. The value is stored with a fixed value as batch attribute 201 (ATTR:201).


After confirming with OK, additional batch attributes may be entered if they were defined at the operation's material type.

After the posting is successfully completed, the TPU batch is generated as a so-called merged batch and the quantity and goods movement relating to the operation are entered.

Log OP off/ interrupt OP

Using the following entry function (dialog A_UN_HU or A_AB_HU) on the terminal, the packing OP can be interrupted or logged off.

After a selection is made, the operator can interrupt or terminate the packing OP:

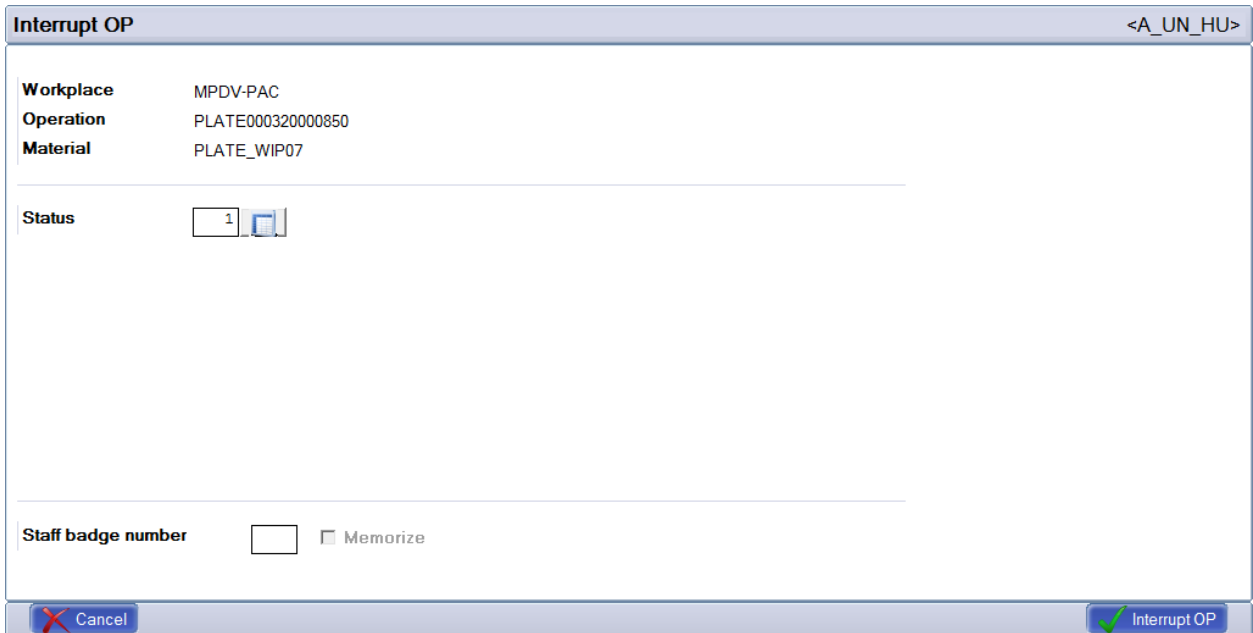

Interrupt OP <A_UN_HU>			
Workplace	MPDV-PAC		
Operation	PLATE000320000850		
Material	PLATE_WIP07		
Status	<table border="1"> <tr> <td>1</td> <td></td> </tr> </table>	1	
1			
Staff badge number	☐ Memorize		
 Cancel  Interrupt OP			

Illustration: Interrupt packing OP dialog – A_UN_HU

After confirming with OK, the active packing OP is interrupted/ terminated.

Please note/ restrictions:

- The last active output batch at the packing OP is completed without a quantity by setting the status "deleted".
- If there are still assigned batches on the TPU when logging off, the posting is refused with an error message.
- The ADE inspections relating to the operation's over/ underdelivery are inactive using this posting function.
- It is not possible to post a quantity using this function.