

HYDRA Documentation

Install MES Operation Center for HYDRA MW4.0pe

Version 1.0.23049

Last changed on: 02.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of Oracle Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Purpose	4
2	Requirements	5
3	Installation MES Operation Center	6
3.1	Overview	6
3.2	Notes	6
3.3	Download Installation Program MOC Updater	8
3.4	Installation	10
3.4.1	Installation via the Maintenance Manager	12
3.4.2	Installation from a Zip Archive	19
3.5	Silent install	26
3.6	Deploy by Copy	29
4	Configuration after Installation	30
4.1	Update without administration rights	30
4.2	Subsequent configuration change	35
4.3	Configuration tips when using different software releases for one client	37
4.3.1	Storage location for the log file	37
4.3.2	Download path for updates	37
4.3.3	Preparing the user directory	38
4.4	Citrix XenApp or MS terminal server	39
4.5	HTTPS encryption	40
5	Uninstallation of the MES Operation Center	41
5.1	Uninstallation by requesting uninstallation routine	41
5.2	Uninstallation (manually)	43
5.2.1	Remove MOC program files	43
5.2.2	Remove desktop links	43
5.2.3	Uninstallation of the visualization component	43
5.2.4	Remove files of the installation/update program	44
5.2.5	Remove user settings	44

1 Purpose

This installation manual describes all necessary steps to install the HYDRA MW4.0pe Client Software "**MES Operation Center**" (MOC) on a workstation PC with a Windows operating system.

2 Requirements

- Client PC according to MPDV's recommendation.
- Windows operating system according to MPDV's recommendation.
- 1 GB available space
(for installation of the demo data additional 500 MB per installed language).
- Windows desktop with a screen resolution of at least **1920 x 1080**
- Windows user with administration rights (e.g. Administrator).
- Installed Microsoft **.NET Framework 4.5.2**
e.g. download from:
<http://www.microsoft.com/en-us/download/details.aspx?id=42642>
Please adhere to the installation instructions.
- Installed Microsoft **Visual C++ 2005 Runtime**
e.g. download from:
<http://www.microsoft.com/downloads/de-de/details.aspx?FamilyID=32bc1bee-a3f9-4c13-9c99-220b62a191ee>
Please adhere to the installation instructions.
- Installed HYDRA server with running HYDRA 8 (MW4.0pe) server software.

3 Installation MES Operation Center

3.1 Overview

The installation of a MES Operation Center is carried out as follows:

- Download the archive **MOC_Updater.zip** from your HYDRA server using the HYDRA Maintenance Manager.
Note: Once downloaded you could distribute the archive to other client PC e.g. by using an USB stick.
- Unpack the archive and run the file **MOCUpdater.exe** in order to start the program MOC Updater.
- Start the installation process. **Administration rights are required.**

3.2 Notes

The program MOC Updater (referred to as installation program) can run in the "installation mode" or in the "update mode". In this case, the initial installation is always carried out in the installation mode.

If installed successfully, the program is normally carried out in the update modus from the MOC directory. Therefore, you can then remove the archive MOC_Updater.zip and the unpacked files from the current Windows system.

You can configure the installation program via the file UpdateConfiguration.txt to pre-assign input fields during the installation process (e.g. field containing the server address of the Maintenance Manager). The Maintenance Manager automatically looks after this file and the file is located in the archive MOC_Updater.zip.

You can edit the entries in the Maintenance Manager if required (see *HYDRA documentation Maintenance Manager*).

If the installation program is started with command line argument, then the command line argument is the preferred option.


The installation program knows if a new version is available.

If a new version is detected, then the installation program updates itself and then re-starts to continue the installation or update process.

Please do not start all updates/setups simultaneously to avoid an overload of the server where the Maintenance Manager is installed.

You can also start the MOCUpdater.exe without the user interface by using the prompt.

You need to issue the prompt with your administration rights.

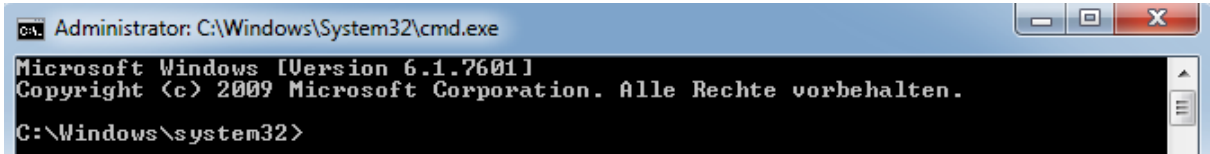


```
Administrator: C:\Windows\System32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. Alle Rechte vorbehalten.
C:\Windows\system32>
```

3.3 Download Installation Program MOC Updater


Open a web browser on your client PC, e.g. the Internet Explorer.

Enter the URL for the Maintenance Manager on your HYDRA Server.


e.g.: `http://servername:18080`

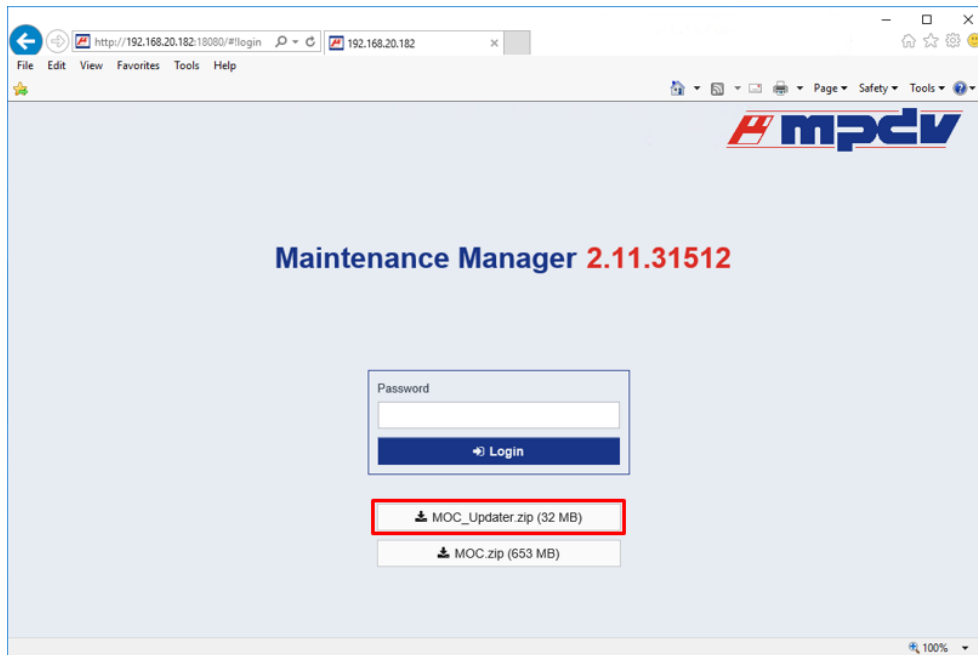

Click on the button „MOC_Updater.zip“ and save the ZIP file to a directory on your client PC.

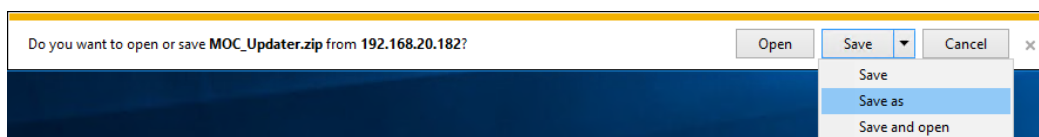


Unpack the contents of the file „MOC_Updater.zip“:

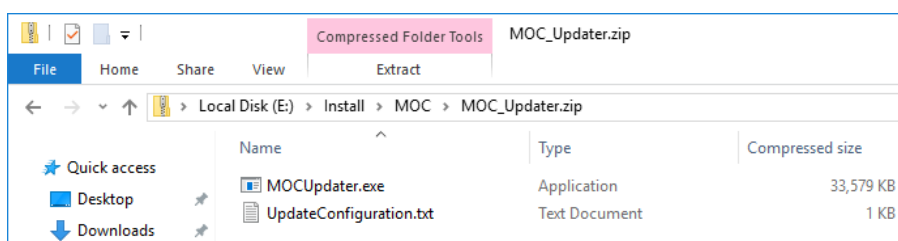


If you plan an installation „from a Zip Archive“, see chapter „[3.4.2 Installation from a Zip Archive](#)“, you need to download the file „MOC.zip“ as well and save it to a directory on your client PC.

You do not need to unpack the contents of that ZIP file!

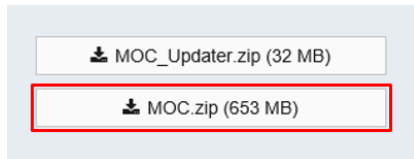


Should it not be possible to click on the two buttons „MOC_Updater.zip“ and „MOC.zip“ because they are inactive then the HYDRA Maintenance Manager is still busy with creating an up-to-date version of those ZIP files.

Depending on your server environment that might take a few minutes.

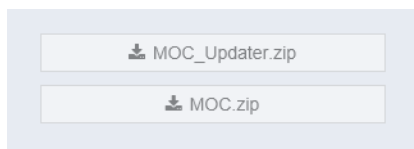

In such cases just try it again a little bit later:

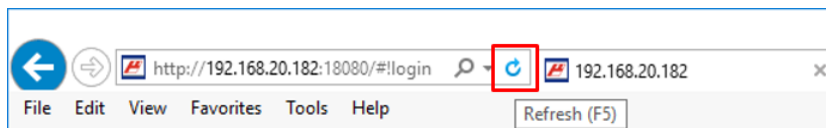


3.4 Installation

Logon to your client PC with a user who has administration privileges.

Start the installation of the MES Operation Center by executing the file **MOCUpdater.exe**.


If the date format of your client PC is set to German, then the Updater will start in German language. Otherwise it will start in English.

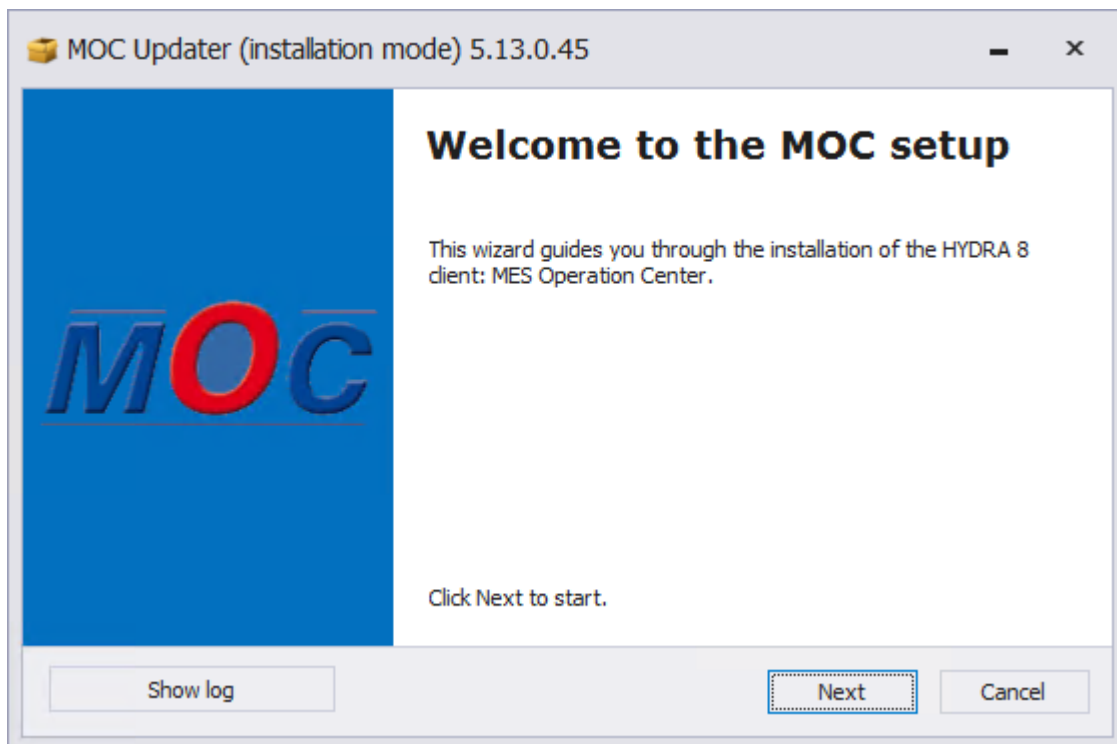

Next

Please read the license agreement.

Click on **Next**, if you agree to the conditions of the license agreement.

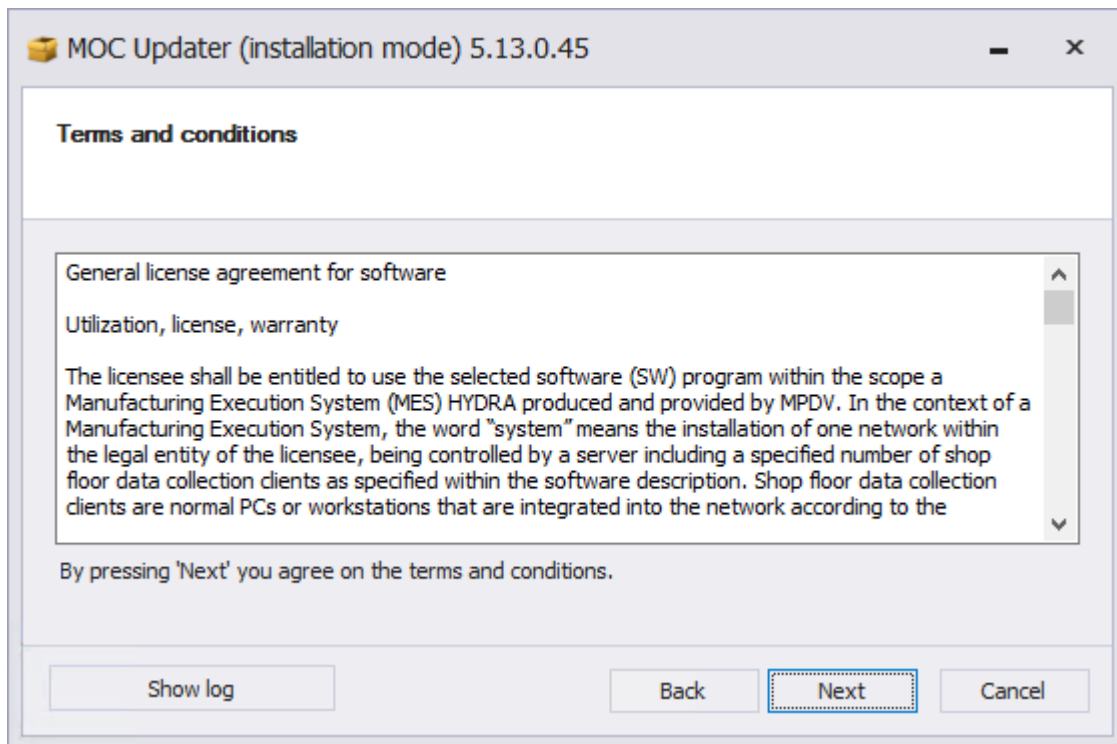

Next

There are two different options available regarding the installation source.

Option one is directly from the Maintenance Manager.

Option two is from a local Zip archive.

Please note


If the network broadband is weak, we recommend to install from the local Zip archive.

In this case a connection to the Maintenance Manager is not necessary.

Please note, that in this case, the installation program might update itself.

3.4.1 Installation via the Maintenance Manager


In order to start the installation via the Maintenance Manager, please select the option "Maintenance Manager" and click on "Next".

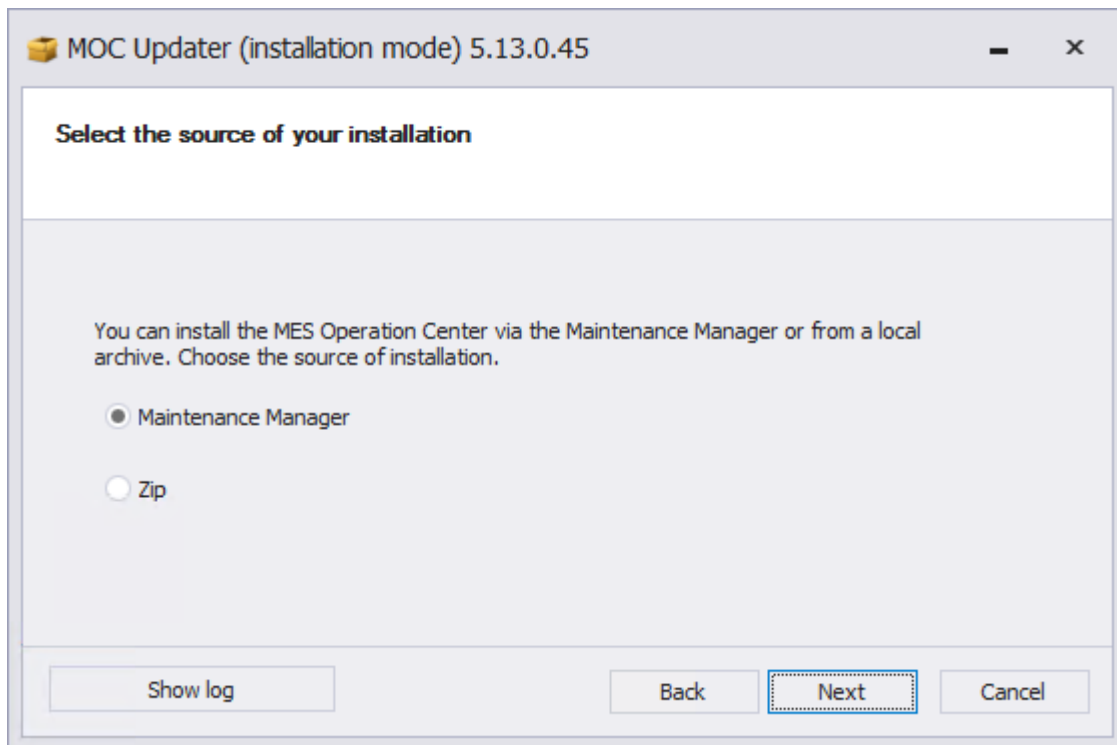

Next


The Installer will offer the host address for the Maintenance Manager on your HYDRA server, e.g.:
`http://servername:18080`.

Check that it is the correct address before proceeding with the installation.

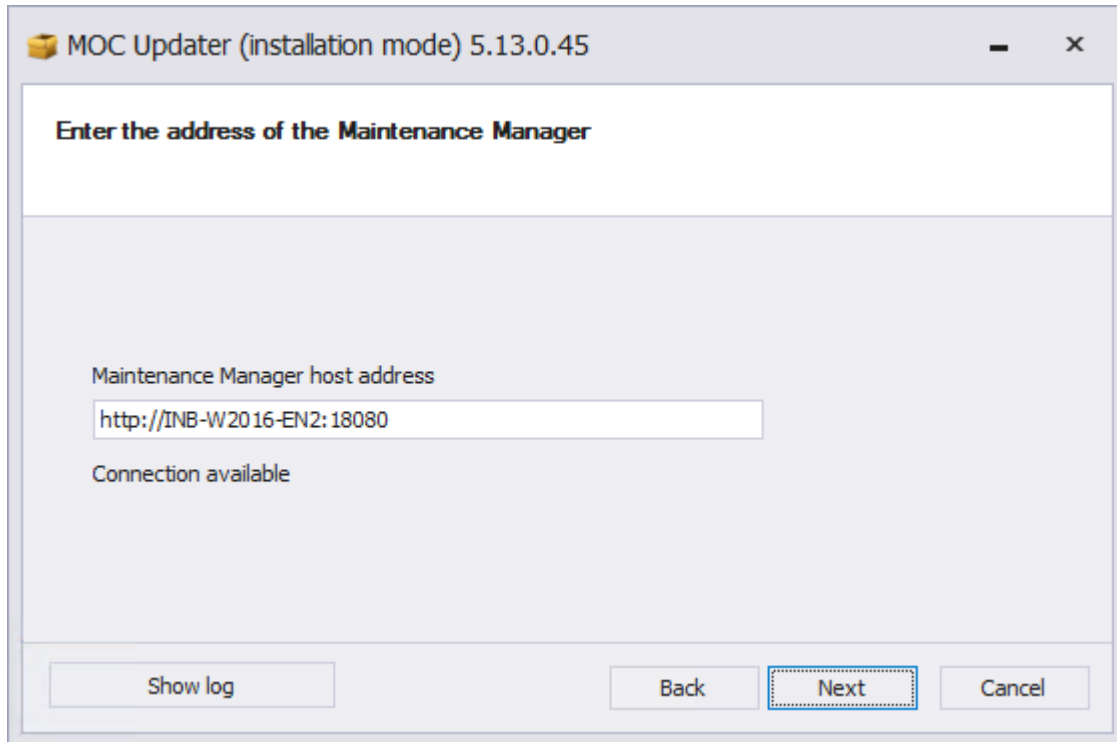

Next

Select the installation directory for the MOC Client.

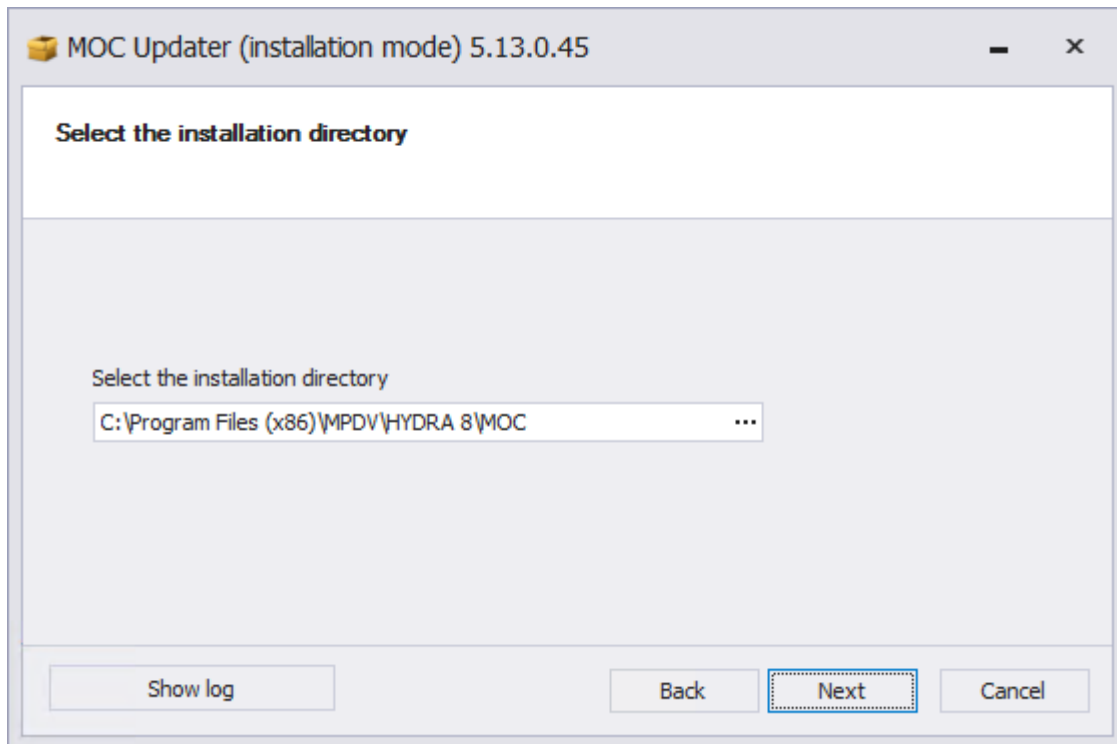


Next

During the installation links to MOC.exe are automatically created in the Windows start menu and on the Windows desktop.


When installing on a 64-Bit operating system links for both MOC versions (32-Bit and 64-Bit) will be created for all users on that computer by default.

If necessary, you can change the default settings now.

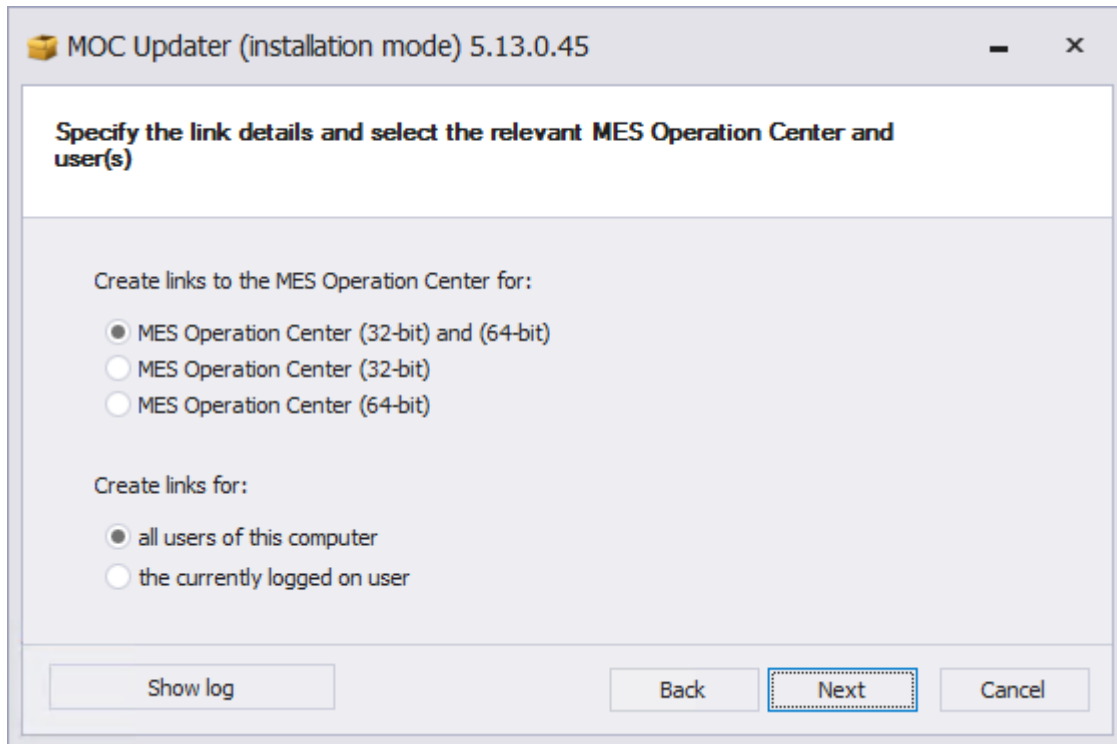


Next

Before proceeding with the installation check if the settings are correct.

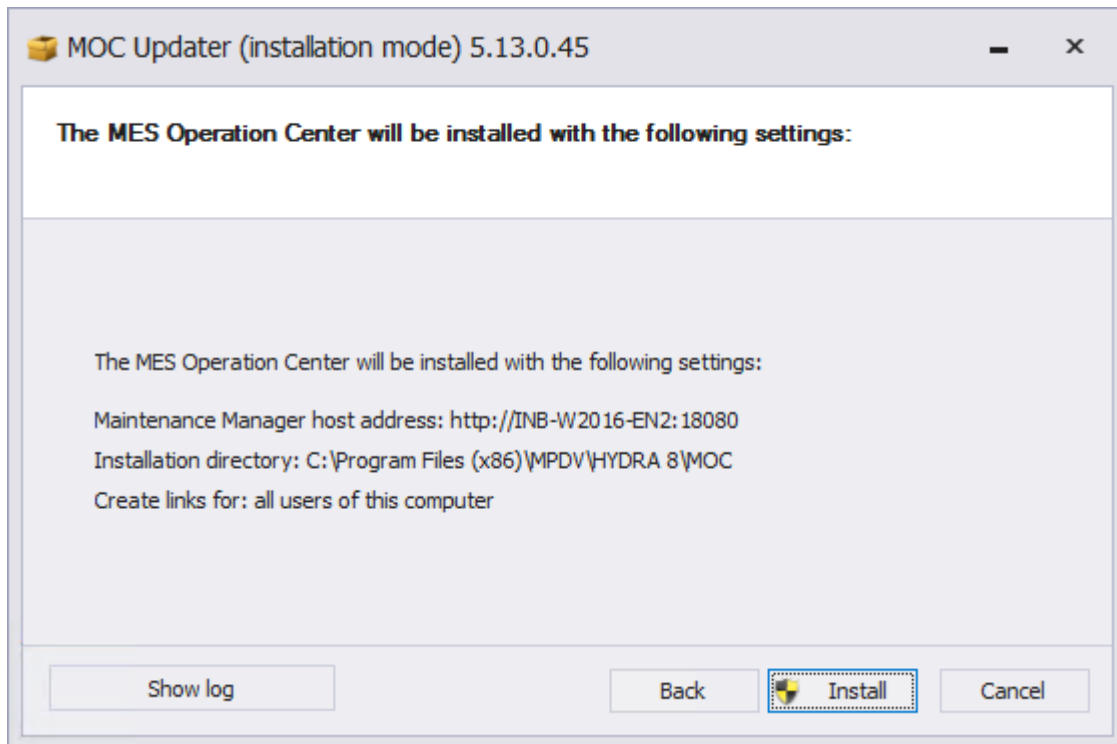

Install


Wait until the installation finished successfully.

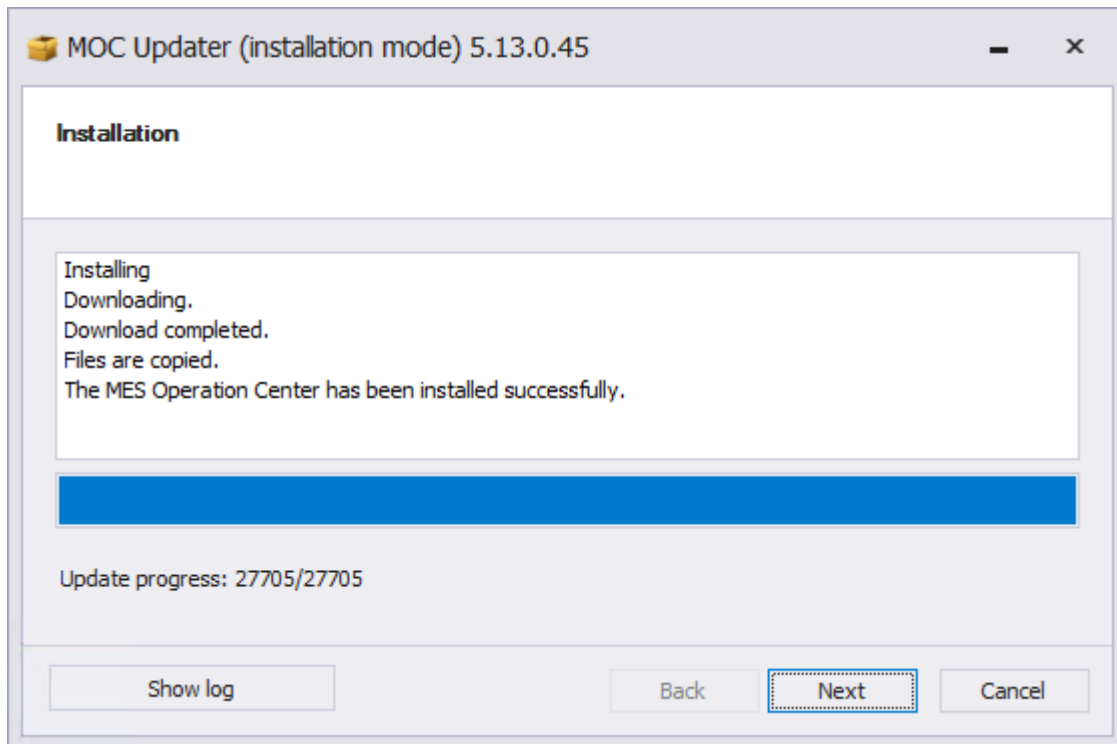

Next

Click "Finish" to complete the installation.

Unless you have unchecked the box "Start MOC" the MOC client will start automatically afterwards.

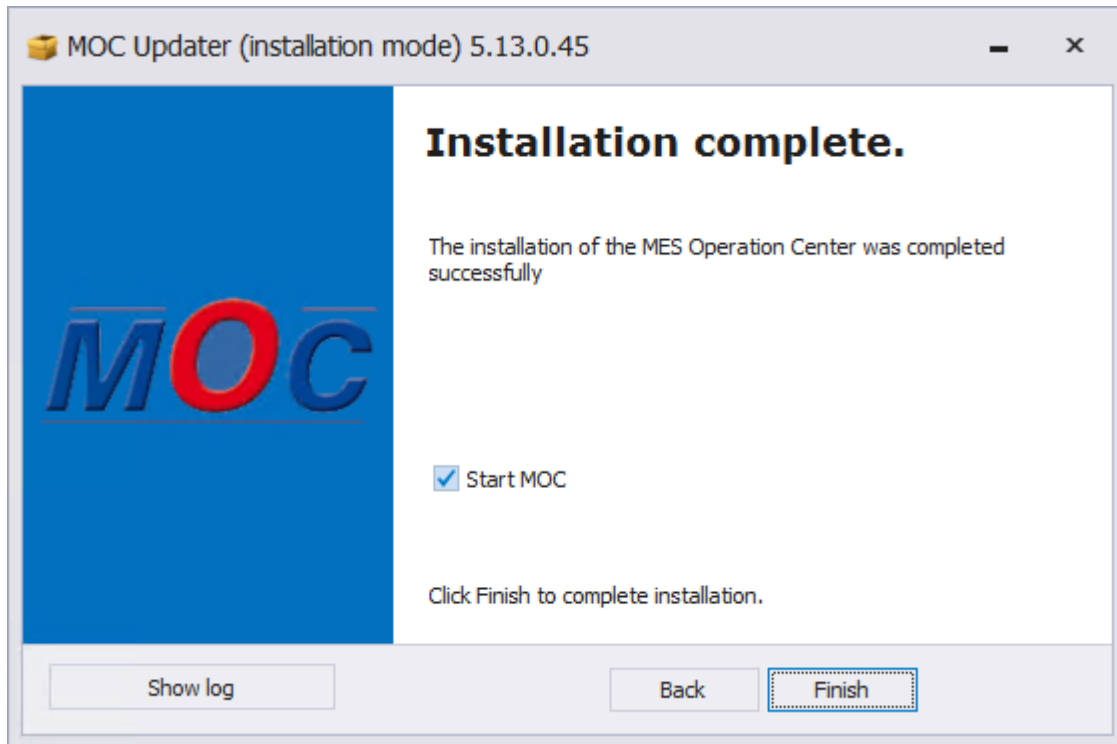


Finish




3.4.2 Installation from a Zip Archive

In order to start the installation from a local Zip archive, please select the option "Zip" and click on "Next".

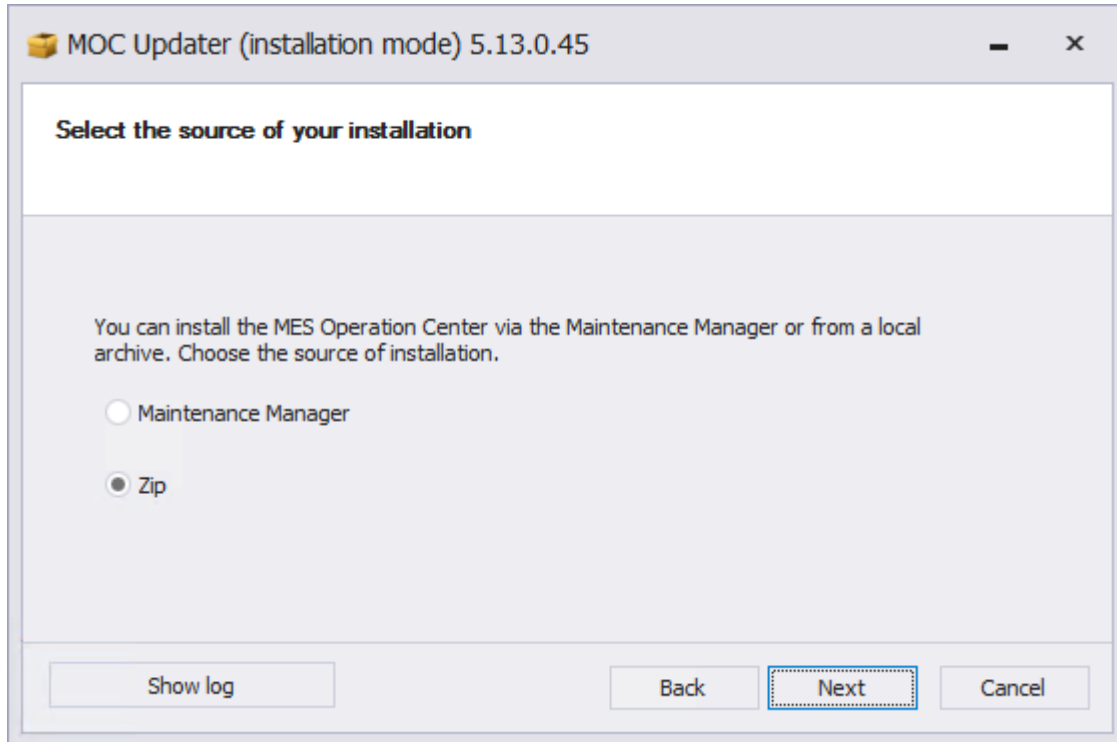


Next

Please enter the path to the locally stored Zip archive.

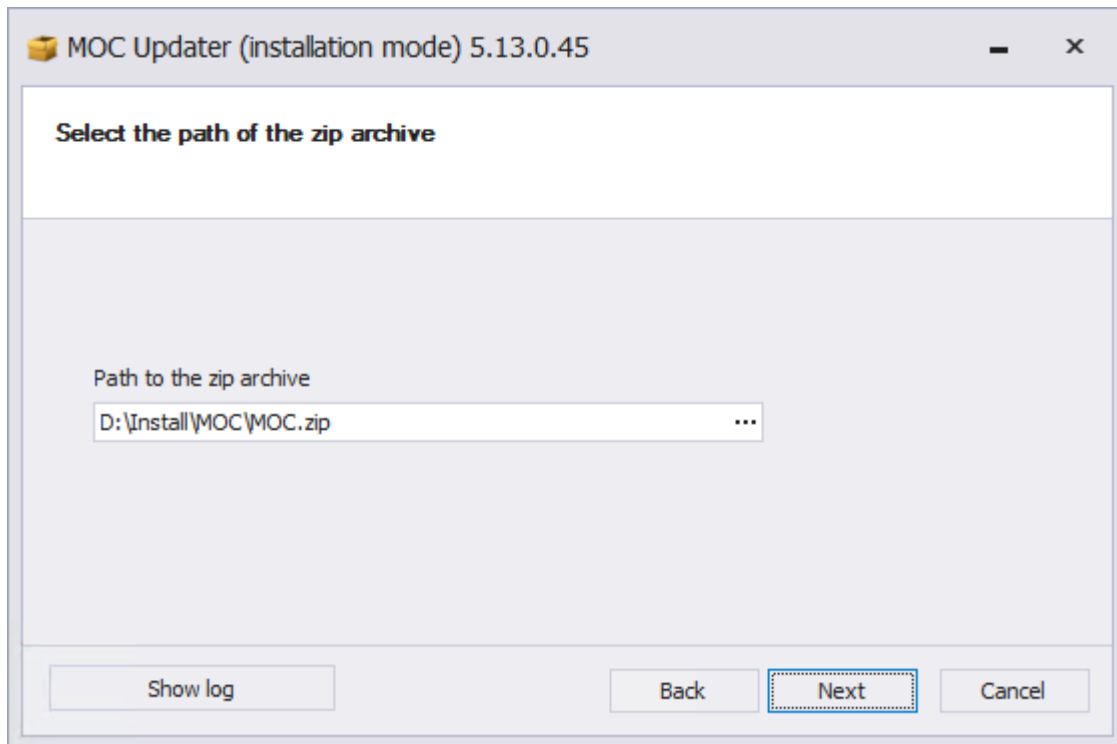

Next

Select the installation directory for the MOC Client.

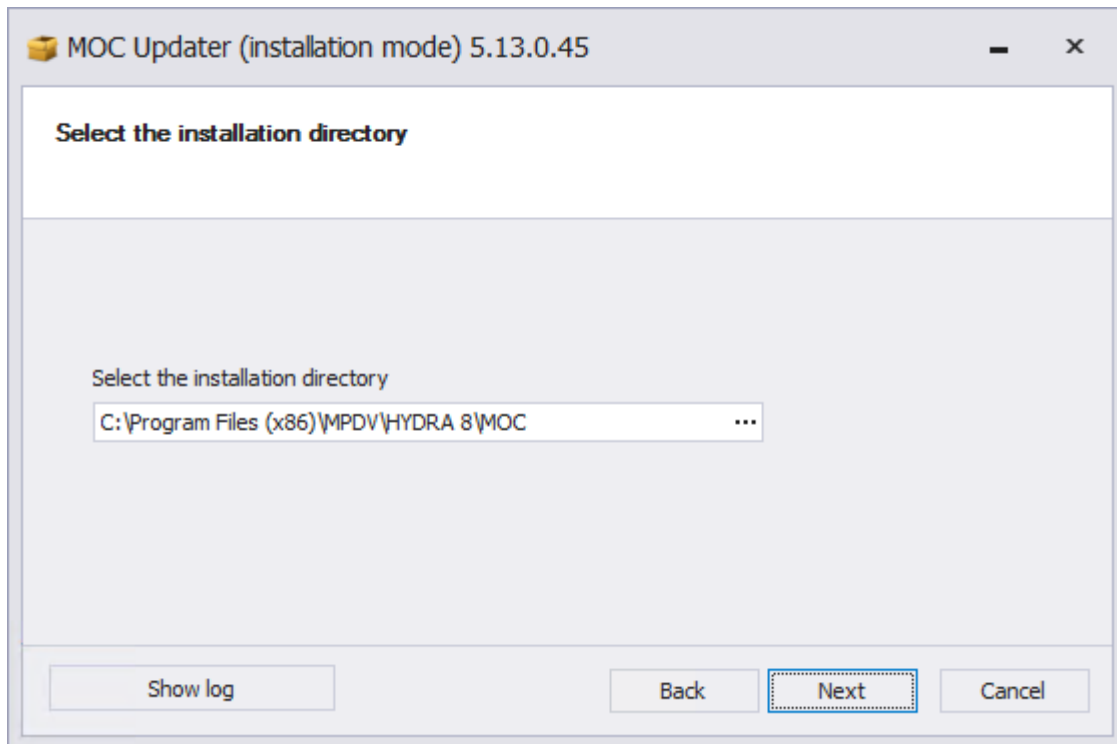


Next

During the installation links to MOC.exe are automatically created in the Windows start menu and on the Windows desktop.


When installing on a 64-Bit operating system links for both MOC versions (32-Bit and 64-Bit) will be created for all users on that computer by default.

If necessary, you can change the default settings now.

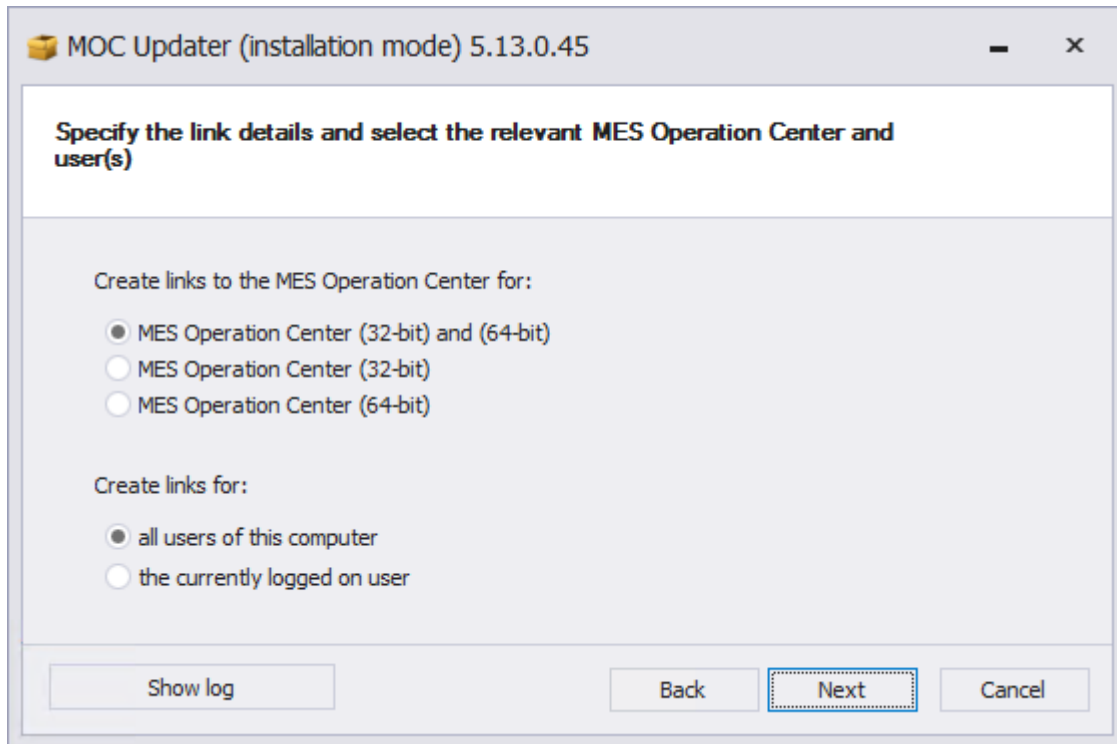


Next

Before proceeding with the installation check if the settings are correct.

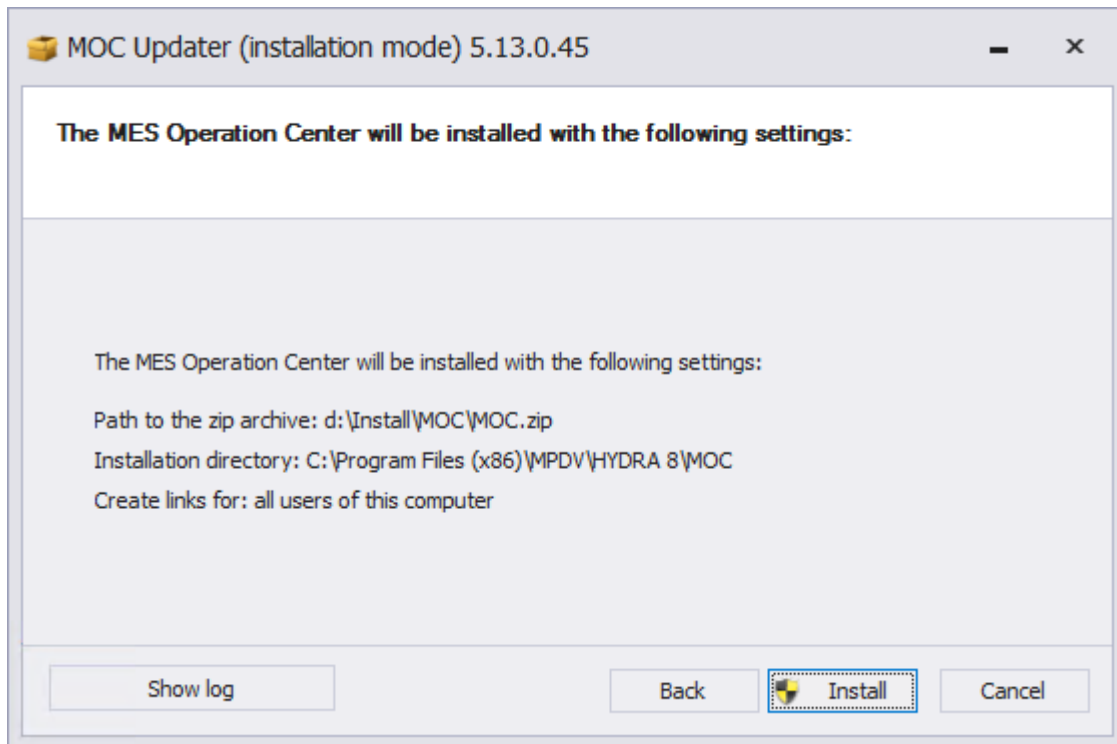

Install


Wait until the installation finished successfully.

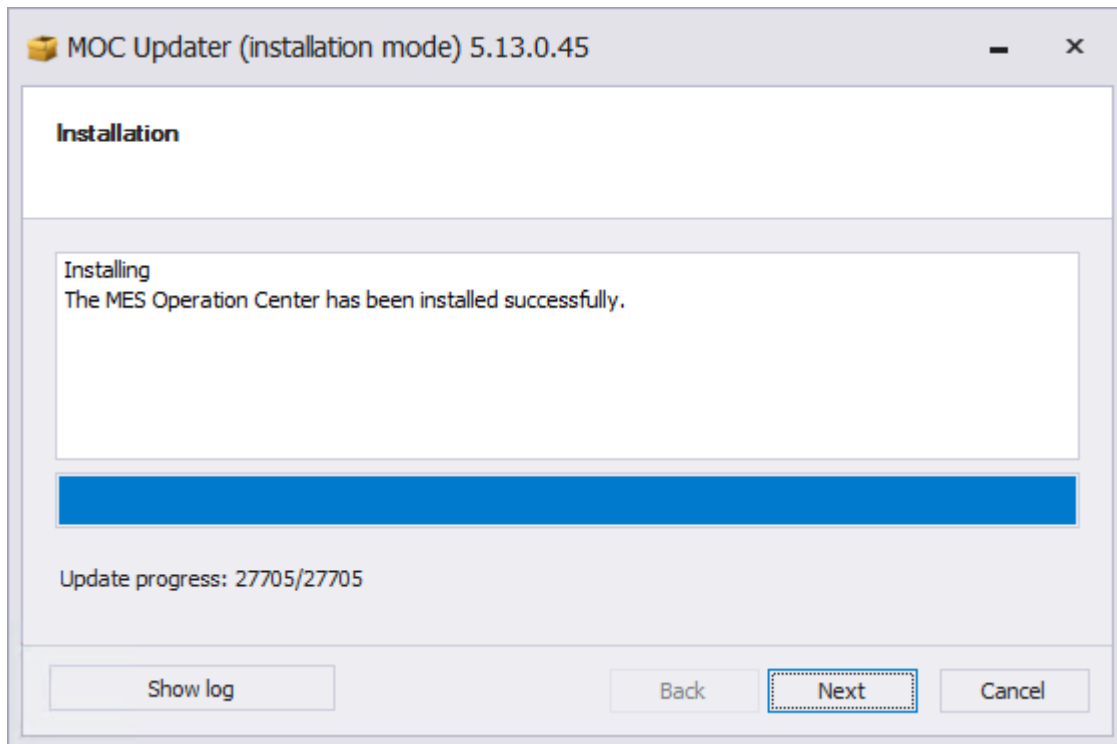

Next

Click "Finish" to complete the installation.

Unless you have unchecked the box "Start MOC" the MOC client will start automatically afterwards.

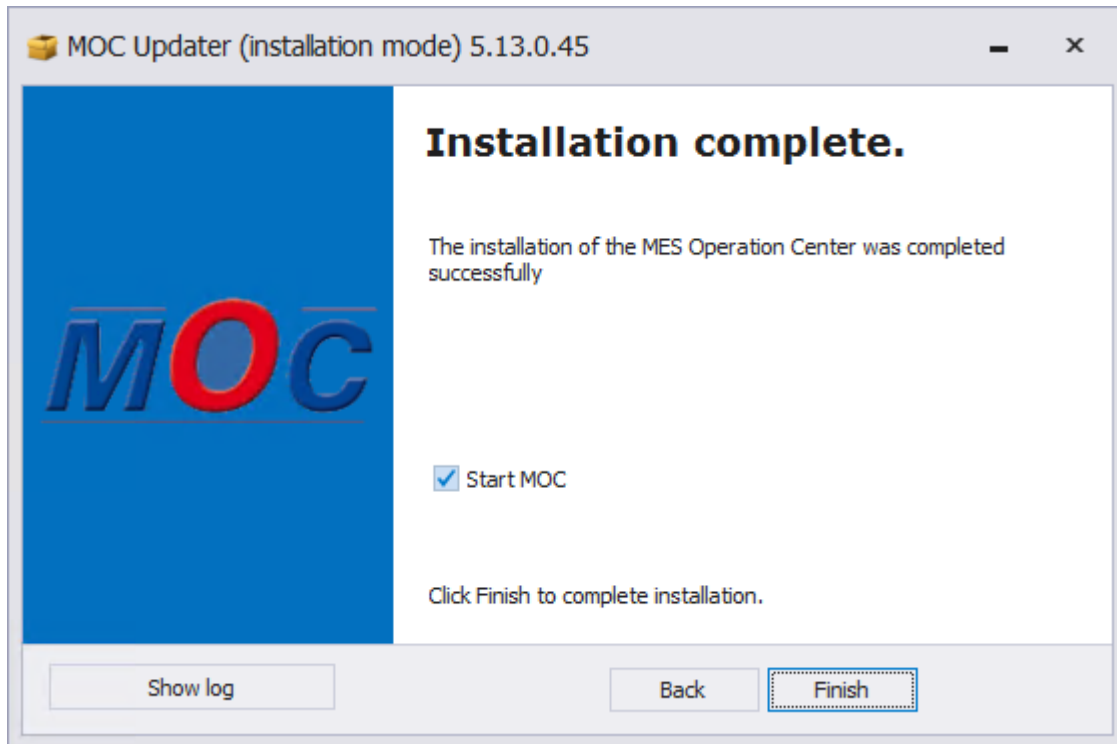

Finish



3.5 Silent install

You can also install without a user interface.


Please log on as a Windows user with permission to write (see 3.2) and open a command line.



Please note that the command line to request the MOC Updater is carried out with administration rights or make sure that the required rights are available.

Request the program *MOCUpdater.exe* as follows:

```
MOCUpdater.exe --MMhost "Maintenance Manager Adresse" --rootDirectory "C:\Program Files (x86)\MPDV\HYDRA 8\MOC" -silent
```

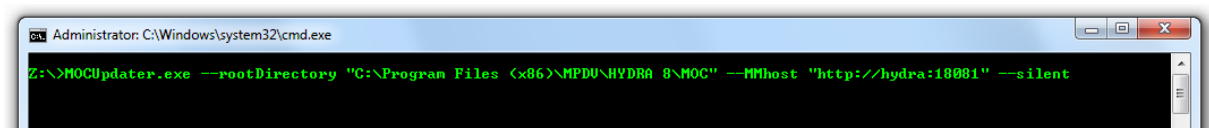


Please adjust the red parameter to the system where the MOC is going to be installed.

If you carry out the Silent Install from a Zip archive, then use the `--installFromZip`

`"C:\Path\to\MOC.zip"` argument. You must not specify a Maintenance Manager.

If no additional arguments are requested, then you use the default values from the `UpdateConfiguration.txt` for the installation.

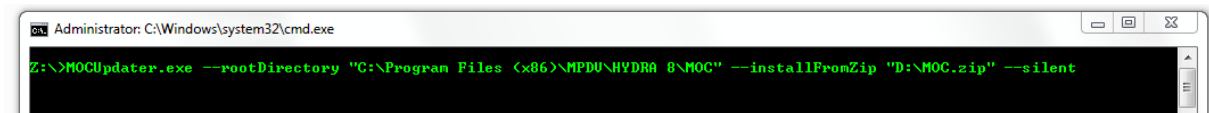

If the installation is successful, please exit the program.

If the installation has not been successful, a GUI is displayed with an error message.

You can at any time display the user interface during the installation process with a clicks on the symbol (tray icon) of the installation program.

If you want to start the MOC automatically after the installation, then add the following **argument**:

```
--startApplicationAfterUpdate
```

The MOC Updater supports the following parameters:

Option	Description
--MMhost	Address for the Maintenance Manager used for the installation process. e.g.: "http://MaintenanceManager:18080"
--installFromZip	Starts the installation with the Zip archive. e.g.: "Path\to\MOC.zip"
--startApplicationAfterUpdate	Restart of the MOC after successfully updating using the MOC Updater. For compatibility reasons the 32-Bit version will be started by default. Optionally you can choose which MOC version (32-Bit or 64-Bit) should be started by adding x86 or x64. e.g.: --startApplicationAfterUpdate x64
--rootDirectory	Target path for the MOC directory where the update process is carried out. e.g.: "c:\Program Files (x86)\MPDV\MOC\"
--UACmode	Off: No upgraded rights are requested. The logged user requires write permissions for the target directory. On: Upgraded rights are always requested. If no --UACmode is specified, the MOC Updater enquires if extended rights are needed. If the target directory is located in the program directory, then extended rights are assumed.
--silent	--silent ensures that the user interface is not displayed during the installation process.

<code>--shortcutsOnlyCU</code>	Specifies that the links on the desktop and in the Windows start menu for MOC.exe is only created for the currently logged user. Links are by default created for all users.
<code>--shortcutsOnlyMocVersion</code>	Specifies which MOC version (32-Bit or 64-Bit) will be linked in the Windows startup menu and on the Windows desktop. When installing on a 64-Bit operating system both versions will be linked by default. Optionally you can choose which MOC version (32-Bit or 64-Bit) should be linked by adding <code>x86</code> or <code>x64</code>. e.g.: <code>--shortcutsOnlyMocVersion x86</code>
<code>--uninstall</code>	Uninstalls MOC application including registration entries and links. You also have to specify the <code>--rootDirectory</code> argument with the MOC directory.

3.6 Deploy by Copy

The MES Operation Center can also be installed by copying the installation directory of an already existing installation - either as initial installation on a new Window client or as a copy into a different directory.

The last option is the preferred one if the MOC should connect to systems with different software releases (e.g. productive, development and test system).

The copy transfers all settings and therefore, an adjustment of the configuration file is not required. Please bear in mind when connecting to different systems the section.

Please note:

- When using the **PDV Online Visualizing** (e.g. the application "PDV Visualizing") you must perhaps manually register a visualizing component.

You can do this by issuing the command (Do check the path for the ocx file beforehand!):

```
regsvr32 "C:\Program Files (x86)\MPDV\MOC\MpdvVisualisationClient.ocx"
```

If for some reason you need to unregister the file, then this can be done with the following command:


```
regsvr32 /u "C:\Program Files (x86)\MPDV\MOC\MpdvVisualisationClient.ocx"
```

4 Configuration after Installation

4.1 Update without administration rights

Before a Windows user without administration rights can update its MOC client software you have to make sure that the following settings are done.


Assign permission "Modify" to the Windows group "Users" for the installation directory of the MOC (e.g.: "C:\Program Files\MPDV\HYDRA 8\MOC" or "C:\Program Files (x86)\MPDV\HYDRA 8\MOC" for 64Bit systems) including all its contents:

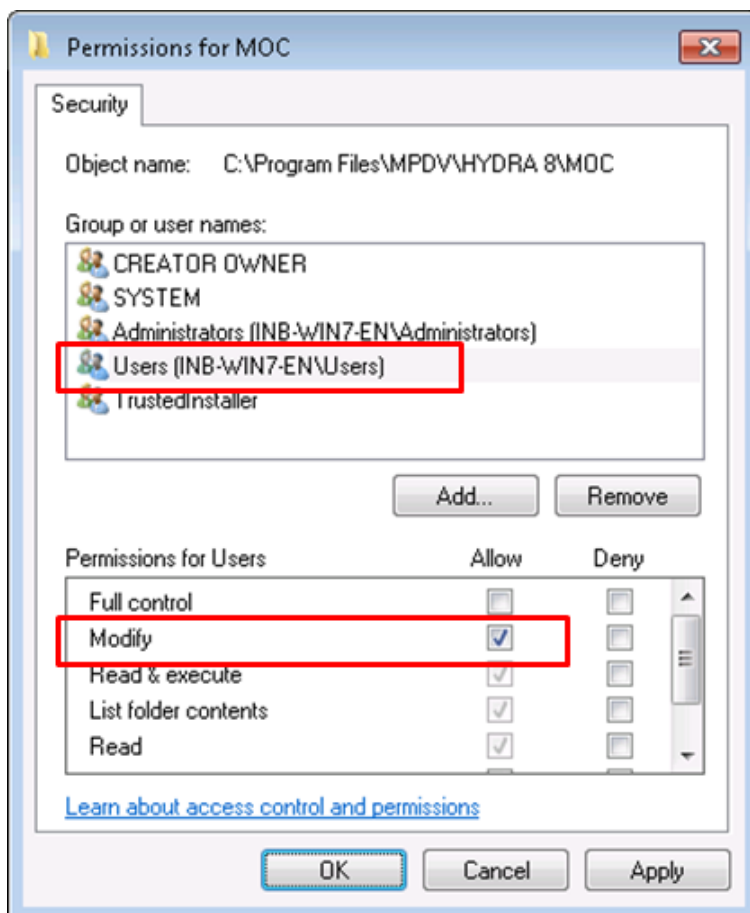

OK

The following procedure is only necessary with older HYDRA installations prior to SP11:

Assign permission "Modify" to the Windows group "Users" for the update directory of the MOC (e.g.: "C:\ProgramData\mpdv\moc") including all its content:

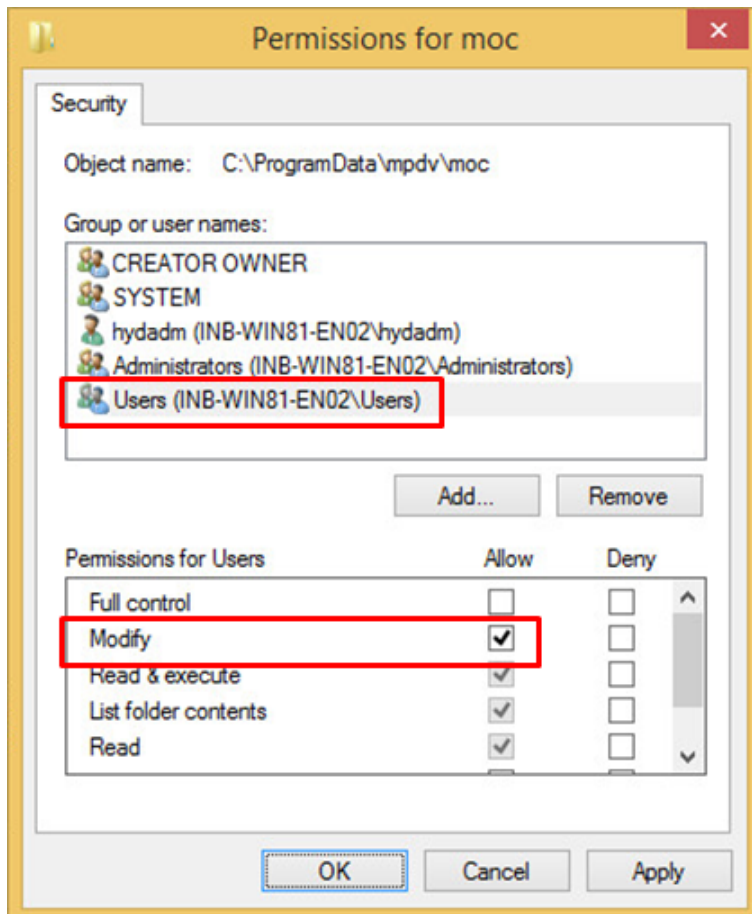


OK

When using the new HYDRA Maintenance Manager 2.0 (since SP11) MOC update files are stored in the %TEMP% directory of Windows, e.g.:

c:\Users\username\AppData\Local\Temp\MOCUpdater_Download_Dir_*

Login to Windows with the dedicated Windows user and then start the MOC client.

Disable „UAC mode“ in the configuration settings of the MOC:

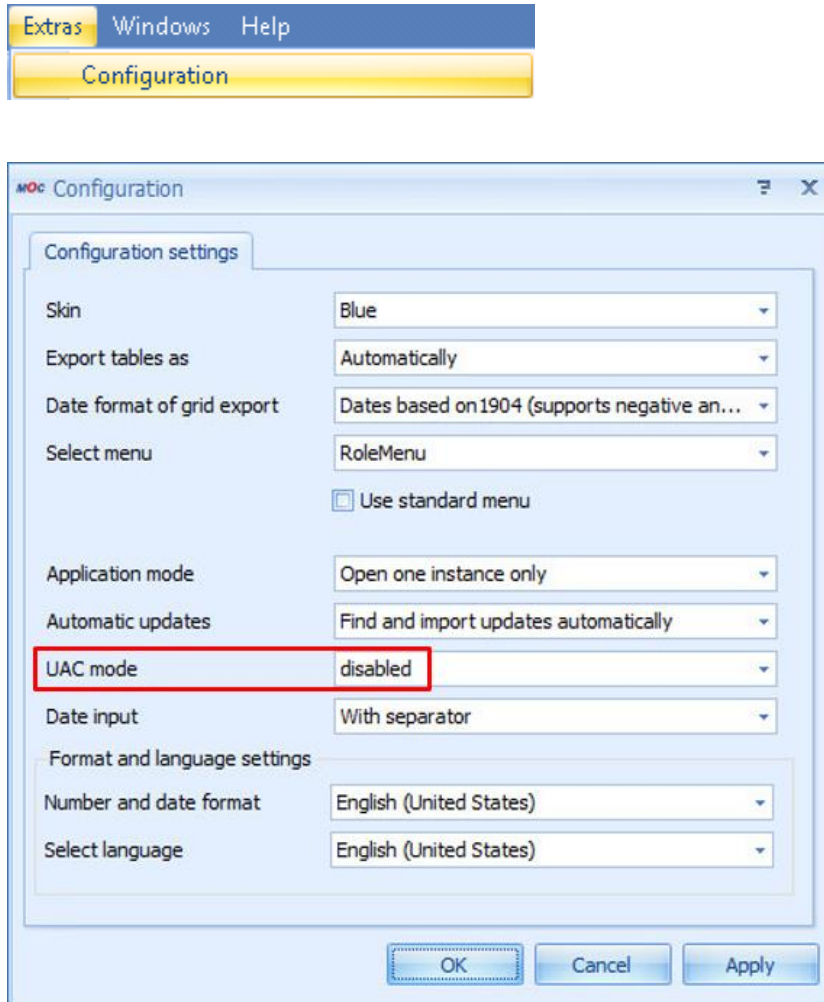

OK

Restart the MOC Client.

Note:

All configuration changes made in the "Configuration" menu are saved individually for the Windows user who starts the MOC client (see "UserDataDirectory" in the configuration file).

If you want to deactivate the “UAC mode” for all MOC users system wide you can create a “local” configuration file named “System.config” in the following directory on your HYDRA server:

HYDRADIR\jdir\MaintenanceManager\rt\client\MOC\local\conf\MOC\

e.g.:

d:\mip1\jdir\MaintenanceManager\rt\client\MOC\local\conf\MOC\

Some of the subdirectories like conf\MOC might not exist already.

Please create the missing directories if necessary.


The file “System.config” must contain the following lines:

```
<?xml version="1.0" encoding="utf-8"?>
<Settings Version="0.0.0.0">
  <Setting Key="UacModeForUpdate" Description="" LastChanged="2018-10-
26T09:53:33.4874813Z" ValueType="mpdv.MOC.UacUpdateMode" Version="0.0.0.0">
    <Value>
      <UacUpdateMode>DISABLE_UAC</UacUpdateMode>
    </Value>
  </Setting>
</Settings>
```

If there is already a file “System.config” available in that directory you need to insert the following lines into the existing file:

```
<Setting Key="UacModeForUpdate" Description="" LastChanged="2018-10-
26T09:53:33.4874813Z" ValueType="mpdv.MOC.UacUpdateMode" Version="0.0.0.0">
  <Value>
    <UacUpdateMode>DISABLE_UAC</UacUpdateMode>
  </Value>
</Setting>
```

When finished you need to perform a “Rescan MOC runtime” in the Maintenance Manager on your HYDRA server.

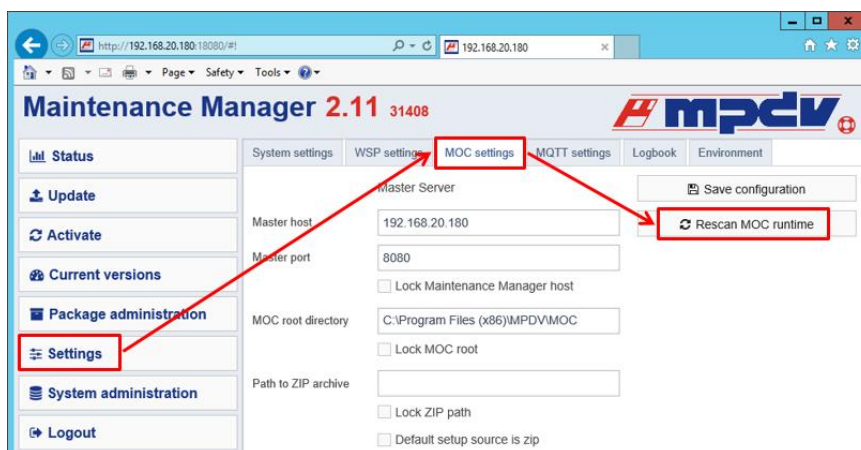

Afterwards all new MOC installations will have those new “local” settings included.

Already installed MOC clients need to be updated first.

For more detailed information about the MOC configuration levels (“user”, “local”, “custom” and “standard”) please see chapter “MOC Configuration Settings” of the MOC manuals.

Note:

For those new “local” settings to work properly you have to make sure that there are no individual “user” settings containing the configuration key “UacModeForUpdate” in the “UserDataDirectory” (e.g.: c:\Users\user\AppData\Roaming\MPDV\MOC\user\)

of your already installed MOC clients, e.g. in:
c:\Users\user\AppData\Roaming\MPDV\MOC\user\conf\Moc\System.config

“user” settings inside the “UserDataDirectory” do have a higher priority than “local” settings from the application directory and therefore they will override the “local” settings.

4.2 Subsequent configuration change

The global configuration settings of the MES Operation Center are contained in the file **MOC.ApplicationSettings.config** of the installation directory of the MOC, e.g.:

C:\Program Files\MPDV\HYDRA 8\MOC\MOC.ApplicationSettings.config

or C:\Program Files (x86)\MPDV\HYDRA 8\MOC\MOC.ApplicationSettings.config

Note: For older MOC installations (Version < 2.60) the file settings must be done in the file **MOC.exe.config** in the same directory.

Here you can subsequently carry out changes or corrections for the configuration, e.g. for:

MasterServer: Name or IP address of the master server providing a list of all available HYDRA systems or instances for the MOC to connect.

The master server is normally installed on the HYDRA server.

```
<add key="MasterServer" value="HYDRA01"></add>
```

MasterServerPort: Network port to reach the master server (Default: „8080“ = Apache Tomcat of the first HYDRA system or instances).

```
<add key="MasterServerPort" value="8080"></add>
```

ShowSplashScreen: Activates the splash screen during the start of the MOC (Default: True). Valid values: "True" or "False".

```
<add key="ShowSplashScreen" value="True"></add>
```

UserDataDirectory: A user specific directory where all individual setting of the Windows user are stored and which starts the MOC client. See also chapter „[5.2 Configuration](#)“.

```
<add key="UserDataDirectory" value="$ApplicationData\user\ "></add>
```

„\$ApplicationData“ is equivalent to the Windows path “%APPDATA%\MPDV\MOC”.

This results in a path: c:\Users\user\AppData\Roaming\MPDV\MOC\user\

This configuration may be helpful for the installation on a terminal server (e.g. Citrix or MS terminal server) or to operate several MOCs on a single PC.

Then you could enter the path as follows:

```
<add key="UserDataDirectory" value="c:\Users\user\AppData\Roaming\MPDV\MOC_Test\user\ "></add>
```

DefaultSettingScope: Determines the scope of the MOC settings (Default: "User"). Allowed Values: "Standard", "Custom", "Local", "User".

```
<add key="DefaultSettingScope" value="User"></add>
```

Do not change this setting without consulting MPDV Mikrolab GmbH.

PdvReloadMode: Specifies reload mode for PDV web services (Default: "Prompt"). Allowed Values: "Reload", "Abort", "Prompt", "PromptWithTime".

```
<add key="PdvReloadMode" value="Prompt"></add>
```

Do not change this setting without consulting MPDV Mikrolab GmbH.

The following parameter is not contained as default but can be added in order to stop an automatic search for updates:

DisableAutoUpdate: This global setting deactivates the automatic search for updates. It overrules user specific settings stored in the configuration files inside „UserDataDirectory“.

```
<add key="DisableAutoUpdate" value="True" />
```

This is a mandatory setting for an installation with Citrix XenApp (previously Presentation Server, before MetaFrame) or Microsoft terminal server (see below)!

4.3 Configuration tips when using different software releases for one client

You can install on a Window client any number of MOC instances in parallel to keep different MOC software releases for development, test and productive systems.

All MOC instances use per default the same settings to manage user configuration (user scope), downloads for updates and log files. For this reason the application is checked how far the following settings should be adjusted:

Note: The following information relates to standard path of a MOC installation and must be checked for each available installation.

4.3.1 Storage location for the log file

We recommend to separate different MOC instances in order to facilitate the failure analysis. Prepare a new file named „NLog.user.config“ or “NLog.local.config” with the following content in the main directory of the concerned MOC installation (e.g.: "C:\Program Files (x86)\MPDV\MOC"):

```
<?xml version="1.0" encoding="utf-8" ?>
<nlog xmlns="http://www.nlog-project.org/schemas/NLog.xsd" xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance" autoReload="true">
  <variable name="logpath" value="${specialfolder:folder=ApplicationData}\MPDV\MOC\log" />
</nlog>
```

Change the red colored path to show your intended new storage location (e.g. \${specialfolder:folder=ApplicationData}\MPDV\MOCTEST\log).

Ensure that the local user has write permission for that directory.

The file NLog.user.config should be used for changes which are only valid on this specific client PC, whereas the file NLog.local.config is intended to be used in an update package for distribution to all client PCs.

4.3.2 Download path for updates

The MOC Updater downloads per default from the central server into the central update folder. If different instances are managed in a Window client, which connect with different systems, then you should either deactivate automated updates or you should configure different target paths for the downloaded updates.

The required changes are executed in the file:

"C:\Program Files (x86)\MPDV\MOC\MOC.ApplicationSettings.config"

by adjusting the entries:

```
<add key="UpdatePath" value="C:\ProgramData\mpdv\moc\updates\files" />
```

and

```
<add key="UpdatePath" value="C:\ProgramData\mpdv\moc\updates\files" />
```

```
<add key="TempUpdatePath" value="C:\ProgramData\mpdv\moc\updates" />
```

Example:

```
<add key="TempUpdatePath" value="C:\ProgramData\mpdv\MOCTEST\updates" />
```

```
<add key="UpdatePath" value="C:\ProgramData\mpdv\MOCTEST\updates\files" />
```

4.3.3 Preparing the user directory

The local user directory stores settings of current MOC users. If the different MOC instances are **not** separated, then the relevant path must be configured.

The required changes are carried out in the file:

"C:\Program Files (x86)\MPDV\MOC\MOC.ApplicationSettings.config"

by adjusting the entry:

```
<add key="UserDataDirectory" value="$ApplicationData\user\" />
```

Please note: \$ApplicationData refers to the data directory for the MOC application. In Windows 7 this is the folder C:\Users\<user>\AppData\Roaming\MPDV\MOC\.

Allowed placeholders are:

- %HYDRAUSER%: the name of the registered HYDRA user
- %WINDOWSUSER%: the name of the registered Windows user
- %HYDRASYSTEM%: the name of the system the user is logged on to.

Example:

```
<add key="UserDataDirectory" value="C:\Users\<user>\AppData\Roaming\MPDV\MOCTEST\%hydrauser%" />
```

4.4 Citrix XenApp or MS terminal server

The automated search for software updates must be stopped for the installation of the MES Operation Center in Citrix XenApp (previously Presentation Server, before MetaFrame) or Microsoft terminal server.

The parameter „DisableAutoUpdate“ must be added to the configuration file (MOC.ApplicationSettings.config or. MOC.exe.config):

```
<add key="DisableAutoUpdate" value="True" />
```

The global setting overrules user specific settings stored in the configuration files inside „UserDataDirectory“.

An administrator must carry out the updates for the MOC software for all terminal server environments.

Ensure before the update that no MOC client is started before the terminal server.

4.5 HTTPS encryption

Starting with SP10 it is possible to encrypt the communication between MOC client and HYDRA server via HTTPS

Prerequisite is the correct configuration on the HYDRA server.

The following parameter must be changed in the MOC.ApplicationSettings.config file:

```
<add key="MasterServer" value="https://" [Name of the HYDRA Server] "></add>
```

```
<add key="MasterServerPort" value="[SSL Port of the HYDRA Server]"></add>
```

The configuration of HTTPS communication on the HYDRA server will be executed from a staff member of MPDV Mikrolab GmbH.


For more information please contact your responsible MPDV sales representative.

5 Uninstallation of the MES Operation Center


You can remove the MES Operation Center by requesting the uninstallation routine of the PC. Another option is to uninstall manually.

5.1 Uninstallation by requesting uninstallation routine

You can start the uninstallation routine with a right-hand click on the relevant entry in the list of the installed programs.

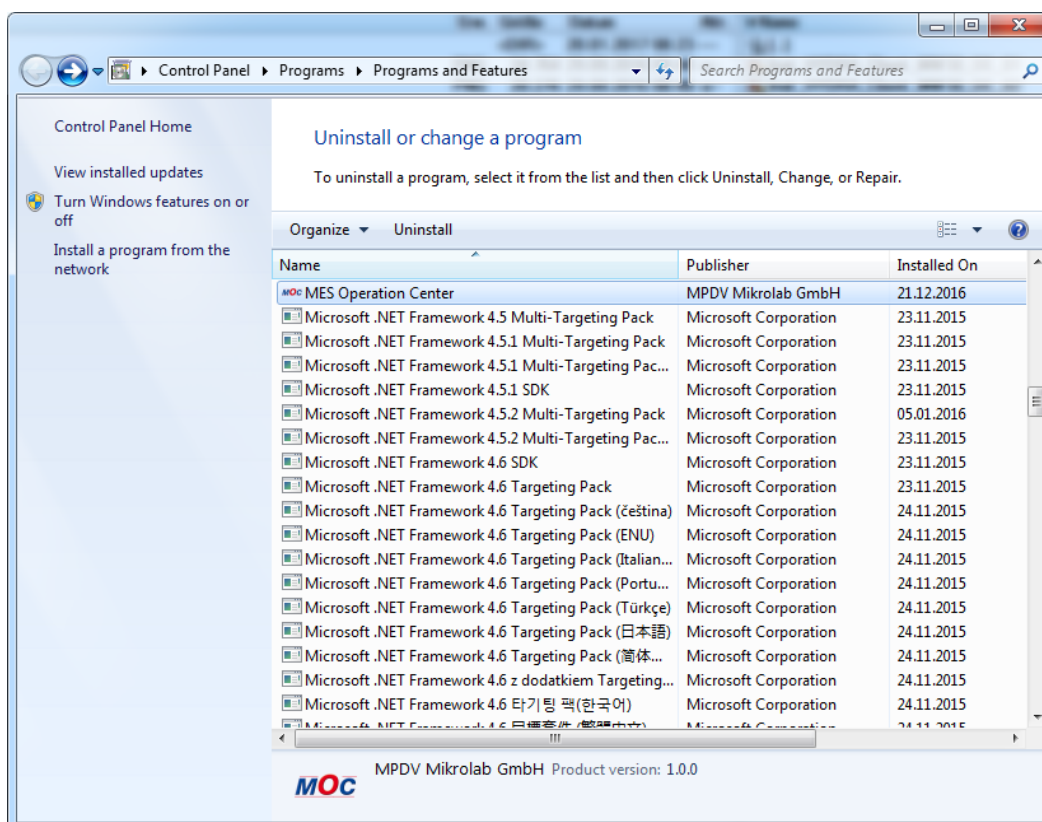


If you confirm the process in the following dialog, the uninstallation is started.

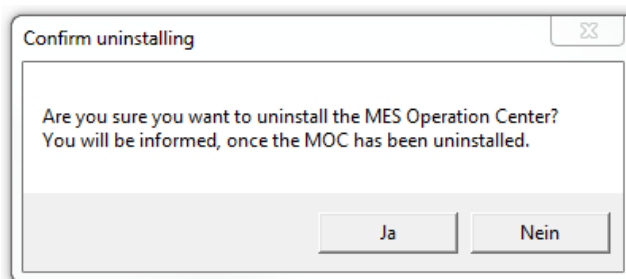

No information is shown on user interface during the uninstallation.

The following note appears after closing the process:

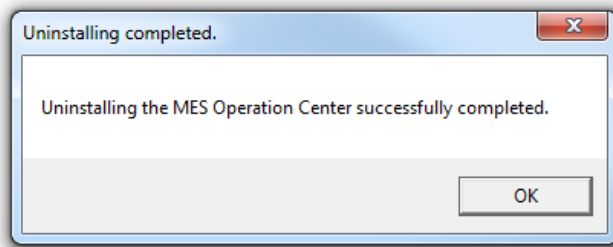

As you cannot rule out that there are further installations on the client PC that were installed with deploy by copy, no data is deleted in the working directories during the uninstallation routine.

If you wish to delete data, you must carry out the process manually.

See "Remove files of the installation/update program" and "Remove user settings" in chapter ["5.2 Uninstallation \(manually\)"](#).

5.2 Uninstallation (manually)

You can generally install the MES Operation Center by copying the installation directory of an existing installation.

For this reason, you can uninstall manually.

The required steps are described further along.

5.2.1 Remove MOC program files

The path for the program files are specified during the installation.

The folder is per default:

C:\Program Files (x86)\MPDV\HYDRA 8\MOC

Delete the target folder of the installation in order to remove the program files completely.

Note: If several MOC instances were installed in the current Windows system, then repeat this step for each instance.

5.2.2 Remove desktop links

During the installation of the MES Operation Center with the aid of the program MOC Updater, all links to the desktop and start menu of the current user are prepared.

Remove the links by deleting the reference in the folders:

C:\Users\<USERNAME>\Desktop

and

C:\Users\<USERNAME>\AppData\Roaming\Microsoft\Windows\Start Menu

5.2.3 Uninstallation of the visualization component

When using the **PDV Online Visualizing** (e.g. the application "PDV Visualizing") you must perhaps manually register a visualizing component.

See chapter "[3.6 Deploy by Copy](#)".

5.2.4 Remove files of the installation/update program

The update program creates backups for MOC program files where applicable.

These are located in the folder:

C:\Users\<USERNAME>\AppData\Local\MPDV\MOCUpdater\Backup

Delete the folder to remove all backup files.

5.2.5 Remove user settings

The MES Operation Center saves per default all settings of the current user in the folder:

C:\Users\<USERNAME>\AppData\Roaming\MPDV\MOC

Note: This folder can be changed by a special setting in the folder *MOC.ApplicationSettings.config*.

Remove all user settings, log files etc. by removing the folder.