

1 Software for CT-5xx Terminals

1.1 The Terminal CT-5xx



→ Screen / Display

→ Soft keys (S1 ... S4)



→ Function menu



→ Numeric key pad (0 .. 9)

→ Escape and enter key



1.2 Data input at the terminal

There are two ways of entering data. If a barcode reader is connected to the terminal, staff badges, machine numbers, etc. can be scanned. In addition, it is also possible to enter everything using the keyboard. This is necessary, if the barcode scanner is unable to read or the data to be scanned is not available as barcode. If possible, a sequencing list is offered as an alternative to manual input. From this list, the required input can be selected with ease.

1.2.1 Overview of input options

Input field	Input – Medium
OP number	 ¹  ²  ³ maximum of 16 characters
Status number	  
Staff badge number	  ⁴ 
Yield / total quantity	
Scrap quantity	
Scrap reason	 
Partitioning	
Target cycle	

Please note:

As of "CTLD V# 6.5.26 21.06.04" staff badge numbers may also be input using a connected LEGIC reader.

As in this case only a "serial interface (Comport)" is available, all other input options using bar code readers (OP number, status number) are no longer possible.

Special characters "-" or letters cannot be entered via the keyboard.

¹ = Input by barcode reader

² = Input by keyboard

³ = Selection by sequencing list

⁴ = Input by Legic reader

2 Terminal display

BIOS identification: included as of the versions ctld.exe 7.2.18 and cfg.exe 2.03

When starting the programs a message about the included device BIOS is output.

Message for old generations of the device:

Unit BIOS INFO

BIOS:ADNP1486

Message for new generations of the device:

Unit BIOS INFO

BIOS:ADNP1520

The terminal only works as a machine terminal.

Characteristics of a machine terminal:

- Only machine data collection (MDE) is possible for this machine.
- The assignment of keys has been predefined for data collection close to machines.

2.1 Description of display functions

Network access:

Shows whether there is currently a network connection (LAN access):

- . Currently, there is no network connection (no network access)
- # Network connection is currently available (network is accessed)
- = A queue is currently being transferred
- % The terminal is OFFLINE

Data is shown in the individual menus (e.g. machine menu) top left.

Brief information on machines:

Informs about the status of machines.

- Machine status
 - Current machine status of the machine (e.g. "STAFF SHORTAGE")
 - An active production lock is displayed, as follows.
 - (e.g. "Setup [PSP]")

- Machine quantities (for the current shift)
Yield and scrap quantity

Order information:

Shows the order logged on to the machine. If several orders are logged on to the machine, the "ESC" key can be used to show the next order.

- Order number
Order/operation currently logged on to the machine
- Article number
Article number of the displayed operation
- Order quantities
Yield + scrap quantity of the displayed operation

Information line:

Shows processing messages or notes on the data memories' current fill level and, possibly information on the index/number of operations logged on to the machine.

- Processing message or note.
(e.g. "invalid input", ..)
- Shows the fill level of the data memory
(e.g. "0002 / 0.5 %")

Important note:


As long as the circular buffer includes data, all other postings are carried out OFFLINE, i.e. validation checks are **not** performed.

- Possibly shows the index and number of registered operations
The operations view can be switched by clicking the "ESC" key.
(e.g. "02/03")

Please note:

This dialog is not shown if only one operation is active.

2.2 Function menu

Key	Soft key	Display	Description
Machine 	S1	STAT	Change status
	S2	ZYKL	Change target cycle
	S3	TLG	Change partitioning
	S4	---	free
Operation 	S1	A.AN	Log order/operation on
	S2	A.UN	Interrupt order/operation
	S3	A.TR	Partially upload order/operation
	S4	A.AB	Log order/operation off
Person 	S1	P.AN	Log person on
	S2	P.AB	Log person off
	S3	P.AG	A person's orders/operations
	S4	---	free
Info 	S1	MINF	Machine information
	S2	AINF	Information on orders/operations
	S3	AZNF	Additional information on orders/operations
	S4	PINF	Staff logged on

3 Standard functions

3.1 The machine menu

The below figure shows the main screen if the "machine menu" is enabled.

```
.      03.01.08 16:48:20
Mst:Gener. malfunction
G:   0          A:  0
OP: 531000000 0020
Art.:Material 4711 /80 /
Y:   200        S:  30

STAT CYCL PART
```

3.1.1 Change of the machine status

A new status is assigned to a machine by clicking the key <S1 = STAT> in the <Machine> menu. This is required, when the machine is being set up or a malfunction has occurred. The required data are:

- Machine,
- Status number,
- Staff badge number (optional).

When starting the function, the terminal outputs the following prompt:

[Change mach. status]

MachNo: <531>
MachStatus: 99__
MTxt: <Gener. malfunction
BadgeNo: _____

<=
Up
<↓
LIST

A machine status should be entered if the terminal automatically identifies the occurrence of a malfunction (see also Operating signal and Cycle time monitoring).

In the machines status "NOT ASSIGNED" the relay "machine lock" is activated if an applicable channel configuration is given in the machine label. By entering the malfunction reason once more, it is possible to confirm or finish the current malfunction (e.g. changing from setup to startup).

Please note:

- Machine statuses can also be entered by scanning a barcode from the machine status list, without having to start the function "change status" beforehand. Then the terminal requests inputting the staff badge number, provided this has been configured for the terminal.
- It is possible to switch from one machine status to the next, unless the terminal is in the "production" status.
- The number keys <1..9> can also be used to open a machine status dialog in the main screen.
- If in the function “**change status**” of the input field “**Mst:**“ the key <**S4=LIST**> is pressed, machine statuses can also be assigned from a list:

CT-54x terminal : selection of the machine status

STATUS LIST	01/03
2	SETUP
3	STAFF SHORTAGE
99	GENER. MALFUNCTION
Up Dn	

3.1.2 Modification of the target cycle

The machine's target cycle can be changed by clicking the key <S2 = ZYKL> in the <Machine> menu.

[Change CYCL]	
MachNo:	<531>
Act.cycle/1000:	<5100>
Targ.cycle/1000:	5400 _____
BadgeNo:	_____
<= Up <↵	

"Act.cycle/1000" corresponds to the actual time in seconds for 1000 machine cycles.

"Targ.cycle/1000" corresponds to the target time in seconds for 1000 machine cycles.

It might be required to confirm the modification by inputting the staff badge number, provided this has been configured for the terminal. The staff badge number may either be entered by using the barcode or keyboard.

3.1.3 Change of partitioning

The machine's partitioning can be changed by clicking the key **<S2 = TLG>** in the **<Machine>** menu.

[Change PART]

MachNo: <531>
Part: 1 _____
BadgeNo: _____

<=

Up

<↵

"Tlg"/"Part" stands for the tool partitioning of a machine cycle.

(i.e. the number of items produced by a machine stroke/production cycle)

It might be required to confirm the modification by inputting the staff badge number, provided this has been configured for the terminal. The staff badge number may either be entered by using the barcode or keyboard.

Please note: if several OPs are logged in, the target cycle and partitioning of the OP that has been logged on at last, will be taken over.

3.2 The order menu

The below figure shows the main screen if the "order menu" is enabled".

```
.      03.01.08 16:48:20
Mach.Stat:GENER. MALFUNCTION
Y:   0          S:  0
OP: 531000000 0020
Art:Material 4711 /80 /
Y:   200        S: 30
                                01/02
A.AN A.UN A.TR A.AB
```

Provided that more than one OP is logged on to the machine, the information line shows a respective note about the current index and the number of OPs logged in. Clicking the <ESC> key enables switching between OPs.

At the terminals data is generally posted onto operations of an order. The order number assigned by the PPS system and the operation number together form the BDE order number (field "OP:_").

The order or operation types that are possible in HYDRA can be found in the glossary about the BDE manual.

3.2.1 Log an OP on

A new operation is logged in by using the key **<S1 = A.AN>** in the **<order>** menu. This starts posting of the relevant run times and quantities to individual time accounts for the OP.

The required data are:

Order	number
Order type (optional) ⁵ ,	
Machine status (optional),	
Staff badge number (optional).	

[Log OP on]

MachNo: <531>
OP: _____
BadgeNo: _____
Mach.Stat: 3_____
MTxt: <STAFF SHORTAGE

<=
Up
<⏏
LIST

Information on the machine

When an operation is logged on, the machine which the OP is logged on to is entered in the “machine/workplace” field in the backlog of orders. If the operation was previously detailed planned for a (possibly different) machine, this previous machine is now overwritten. An implicit rescheduling of the OP thereby takes place.

3.2.1.1 Special case with OFFLINE logon

If an OP is logged on while there is no connection to the server, the necessary target data of the operation must also be input. In this case, the terminal also requests input of partitioning and target cycle after the actual dialog steps have been filled out.

⁵ optional: The input depends on the terminal configuration. The relevant configurations can be made via the HYDRA console (ADE menu: Master data → Terminal configuration → Terminal configuration; tab *Dialog control* in the editing dialog). Further information can be found in the BDE documentation entitled Cross-system functions and configurations in HYDRA.

The below-mentioned data are required additionally for an offline registration:

target cycle,
partitioning.

[OFFLINE - A.AN]

MachNo: <531>
Part: 1_____
Act.cycle/1000: <5100>
Targ.cycle/1000: 5400_____

<=
Up
<↵
LIST

3.2.2 Interrupt an OP

An operation is interrupted by using the key **<S2 = A.UN>** in the **<order>** menu. This function is used to stop the order related recording of times and quantities. The reasons for cancellation include quantity uploads, shift changes or the production-related interruption of an operation.

The procedure for interrupting an OP is the same as for logging it off (see section "3.2.4 log OP off"). However, an interrupted operation can be logged on again at any time.

[Interrupt OP]

Mach.No.: <531>
OP: 51100000010
BadgeNo.: _____
Total: _____
Scrap: _____

<=
Up
<↵
LIST

3.2.3 Partial upload of an OP

A partial upload can be performed for an operation by using the key **<S3 = A.TR>** in the **<order>** menu. This function enables a partial quantity of the order to be confirmed/uploaded, without interrupting or ending the running OP. This is only possible, if it is not an overhead cost OP. The quantities are assigned to the relevant OP as well as to the person sending the confirmation/upload.

These data need to be entered:

- Machine
- Order number,
- Staff badge number (optional),
- Yield/total quantity (optional),
- Scrap quantity (optional),
- Scrap reason (optional).

[Partial upl. OP]			
Mach.No: <531>			
OP: 51100000010			
BadgeNo: _____			
Total: _____			
Scrap: _____			
<=	Up	<↵	LIST

3.2.4 Log OP off

An operation is logged off by using the key **<S4 = A.AB>** in the **<order>** menu⁶. Thus, posting of run times and quantities is finished for the OP. Once being logged off, the OP can no longer be logged on. These data need to be entered:

Machine,
Order number,
Staff badge number (optional),
Yield/total quantity (optional),
Scrap quantity (optional),
Scrap reason (optional),
Interruption reason/machine status (optional),
Input "Pmk" → "memorize persons" (optional).

[Log OP off]

Mach.No: <531>
OP: 51100000010
BadgeNo: _____
Total: _____
Scrap: _____

<=
Up
<↵
LIST

⁶ **Please note:** This is only possible, if it is not an overhead cost OP.

3.2.5 Working with sequencing lists

This function is only available, provided that the relevant flag⁷ has been set in the terminal configuration.

This functional enhancement affects the functions **"log order on"**, **"log order off"**, **"interrupt order"** and **"partial upload"**.

With the sequencing list, the operator can chose from all prepared or interrupted orders when they log an operation on, or from all running BDE orders of the order concerned when they interrupt an operation or log it off. The advantage of sequencing lists is that no barcode scanner is required to input an order.

With the function **"log order on"**, all prepared orders are displayed for the current machine.

```

SEQUENCING LIST      01/04
OP: 531000000 0010
Art:Material 4711 /80 /
Targ.Qty:    20000 Y:      100
OP: 531000000 0030
Art:Thread 6890 18#09
Targ.Qty:    20000 Y:      100
[ ] Up [ ] Dn [ ]

```

⁷ ADE menu: Master data → Terminal configuration → Terminal configuration; tab *Dialog control* of the editing dialog

The functions **"interrupt order"**, **"finish order"**, and **"partial upload"** work according to the same principle. However, all running BDE orders are displayed there.

```
running OPs    01/02
OP: 531000000 0020
Art:Material 4711 /80 /
Targ.Qty:    20000 Y:      100
OP: 531000010 0020
Art:Thread 6890 18#09
Targ.Qty:    20000 Y:      100
[ ] Up [ ] Dn [ ]
```

The buttons **<S2 = "Up" = arrow ↑>** or **<S3 = "Dn" = arrow ↓>** move the highlighted bar from one operation to the next. If there are more operations below the frame of the window, then the display scrolls down automatically.

Clicking the **</Enter/↵>** key, selects the current operation and closes the dialog.

By clicking the **<ESC>** key, the sequencing list for the manual logon of orders can be exited.

The sequencing list is closed automatically after 20 seconds.

Sequencing lists are restricted to a maximum of 30 operations to keep access times at a low level. Sorting is based on the date field "calculated start date" in order for operations that are time-critical to appear on top. In case, HYDRA shop floor scheduling (HYDRA-HLS) is in use, this is the order of operations planned for the machine.

3.3 The personal menu

The below figure shows the main screen if the "Staff menu" is enabled.

```
.      03.01.08 16:48:20
Mst:GENER. MALFUNCTION
Y:   0          S:  0
OP: 531000000 0020
Art:Material 4711 /80 /
Y:   200        S: 30

P.AN P.AB P.AG
```

3.3.1 Log person on

By clicking the key <S1 = P.AN> in the <Person> menu, a person is logged on to a machine.

These data are required:

Machine

Staff badge number

When starting the function, the terminal outputs the following prompt:

```
[ Log person on ]
Mach.No: <531>
BadgeNo: _____

<= Up <=
```

- The staff badge number can either be entered using the keyboard or the barcode.
- A person can only be logged on, if an operation is already logged on to the machine.
- An advance logon to the next shift is possible for a configured time before the shift begins. This period of time is defined in the terminal configuration.

3.3.2 Log person off

By clicking the key **<S1 = P.AB>** in the menu **<Person>**, a person is logged off from a machine.

The following entries are required:

Machine number,
Staff badge number,
Yield/total quantity (optional),
Scrap quantity (optional),
Scrap reason (optional),

When starting the function, the terminal outputs the following prompt:

[Log person off]

Mach.No: <531>
BadgeNo: _____
Yield: _____
Scrap: _____
Reason: _____

<=
Up
<↵

3.3.3 A person's operations

By pressing the key <S3 = P.AG> in the <Person> menu, a person can check onto which operations he/she is logged on.

[A person's OPs]

BadgeNo: _____

<=
Up
<↵

When the staff badge number is entered, all operations to which the person is logged on is shown in the form of a sequencing list, irrespective of the machine to which the person is logged on.

Running OPs 01/02

OP: 531000000 0010
Art:Material 4711 /80 /
Targ.Qty: 20000 Y: 100
OP: 531000000 0030
Art:Thread 6890 18#09
Targ.Qty: 20000 Y: 100

Up
Dn

3.3.4 Special features in connection with "log OP on"

With regard to the logon of operations and personnel, the following two logon types/variants are possible:

- MA

Orders and personnel must be logged on and off separately from each other. The input of staff badge numbers in the "**Log OP on**" dialog is only used for validity checking. The person still has to be logged on separately by the "**Log person on**" dialog.

- MP

In this case, the OP and employee are logged on in a single process. The "**Log person on**" dialog is then only relevant, if additional employees should be logged on to this OP.

This configuration is performed in the terminal configuration of the HYDRA console.

3.4 The information menu

The below figure shows the main screen if the "Info menu" is enabled.

```
.      03.01.08 16:48:20
Mst: GENER. MALFUNCTION
Y:   0          S:  0
OP: 531000000 0020
Art: Material 4711 /80 /
Y:   200        S:  30

MINF AINF AZNF PINF
```

3.4.1 Machine information

The key <S1 = MINF> in the <Info> menu shows essential information on the machine.

```
MACHINE INFO 01/03
Mach.No: 531
Des: MNR-531
-- Status -----
Mst: STAFF SHORTAGE
Duration: 00:11:29 hrs

  Up  Dn
```

MACHINE INFO 02/03

Mach.No: 531

Des: MNR-531

-- Shift -----

Yield : 0

Scrap : 0

Cycles : 0

Up Dn

MACHINE INFO 03/03

Mach.No: 531

Des: MNR-531

-- Settings ----

Part : 1

Act.cycle/stroke : 5.100s

Targ.cycle/stroke : 5.400s

Up Dn

3.4.2 Order/OP info

By clicking the key **<S2 = AINF>** in the **<Info>** menu, information on the production result of the current operation can be shown. This dialog shows, among others, the scrap relating to orders, the recorded actual quantity since the beginning of the shift or OP logon.

The window remains open for approx. 20 seconds. Then the terminal goes back to the previous view. By clicking any key, the window can also be closed before this time has elapsed.

If no OP is logged on, the message "no order" appears and the information window is not shown.

```
ORDER INFO    01/03
OP: 531000000 0020
Art:Material 4711 /80 /
=====
Com1: ISO-901/10
Com2: Form 2/87c
OPDes: Final assembly 4711
  Up  Dn
```

```
ORDER INFO    02/03
OP: 531000000 0020
Art:Material 4711 /80 /
=====
Part      : 1
Targ.Cycle/stroke : 5.400 s
P duration : 15:00 hrs
  Up  Dn
```

```
ORDER INFO    03/03
OP: 531000000 0020
Art:Material 4711 /80 /
=====
Unit      : PCS
Target quantity : 20000
Yield     : 200
  Up  Dn
```

3.5.1 Additional information on the operation

By clicking the key <S3 = AZNF> in the <Info> menu, additional text information on the selected order/OP can be requested. This data might be transferred to HYDRA via the so-called info interface. It is therefore possible for the user to have any operation specific information displayed on the terminal.

```

Add. info on OP 01/50
OP: 531000020 0020
Art:Plug 4711 /80
=====
Inspection in compliance with
DIN 1020
-> Standard sheet 17-12-AB
Meas: 1024*124*2 cm
  Up  Dn

```

3.6.1 Display of the persons logged on

By clicking the key <S4= PINF> in the <Info> menu, all persons who are currently logged on to the machine can be displayed.

```

PERSONS logged on 01/02
Person: 999998
  Schulz, Eduard
Person: 999999
  Meier, Hans

MINF AINF AZNF PINF

```

4 Processing notes at the "machine terminal"

Terminal processing may be affected by way of the machine configuration for machines that are directly assigned to a terminal.


4.1 Downtime monitoring

The monitoring type is configured within the machine configuration of the HYDRA console. The following values are possible here:

- Z Cycle monitoring
- B Operating signal monitoring
- K No automatic monitoring


4.1.1 Monitoring of cycle time

- A malfunction can only be entered if the terminal requests it.
- When counter pulses occur, a switch to the "Production" status takes place.
- The cycle time is determined based on the OP's target cycle multiplied by the "extended cycle in %" that has been entered in the machine configuration at the HYDRA console.

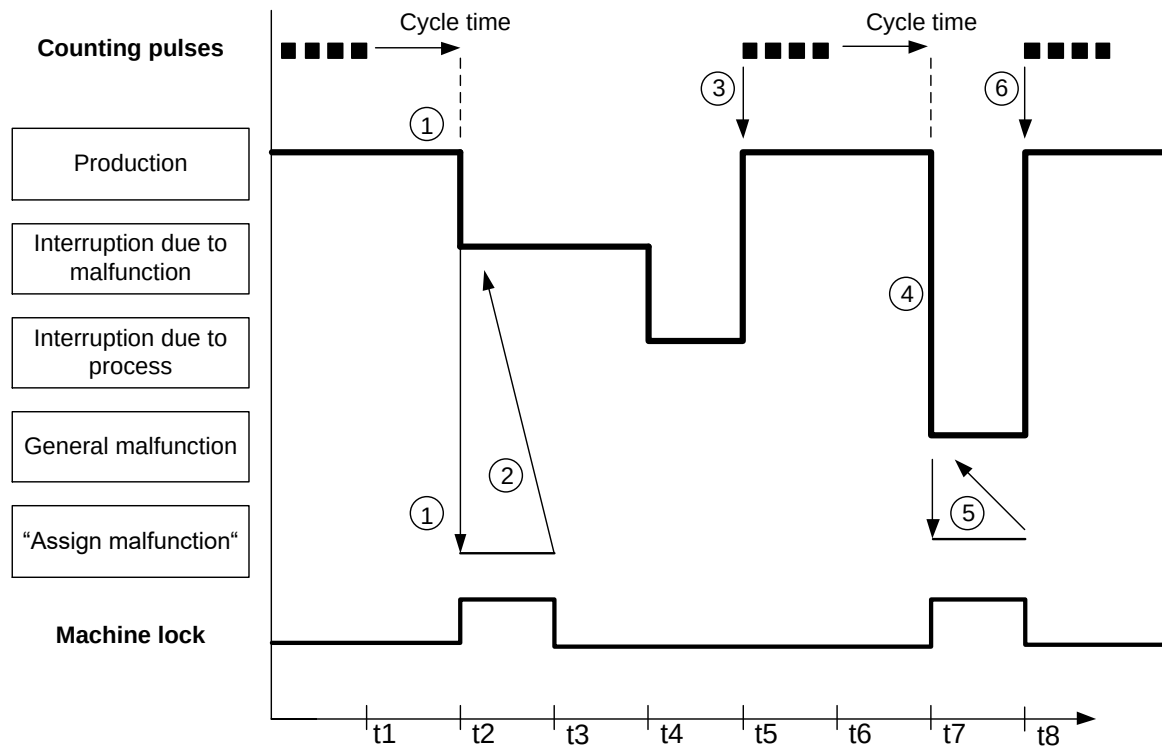

4.1.2 Operating signal monitoring

- A malfunction can only be entered if the terminal requests it.
- By setting the operating signal, status is changed to "Production".
- A malfunction must last for a definite time, before it is recognized and reported. This time is specified by the "minimum disturbance time" of the machine configuration at the HYDRA console.

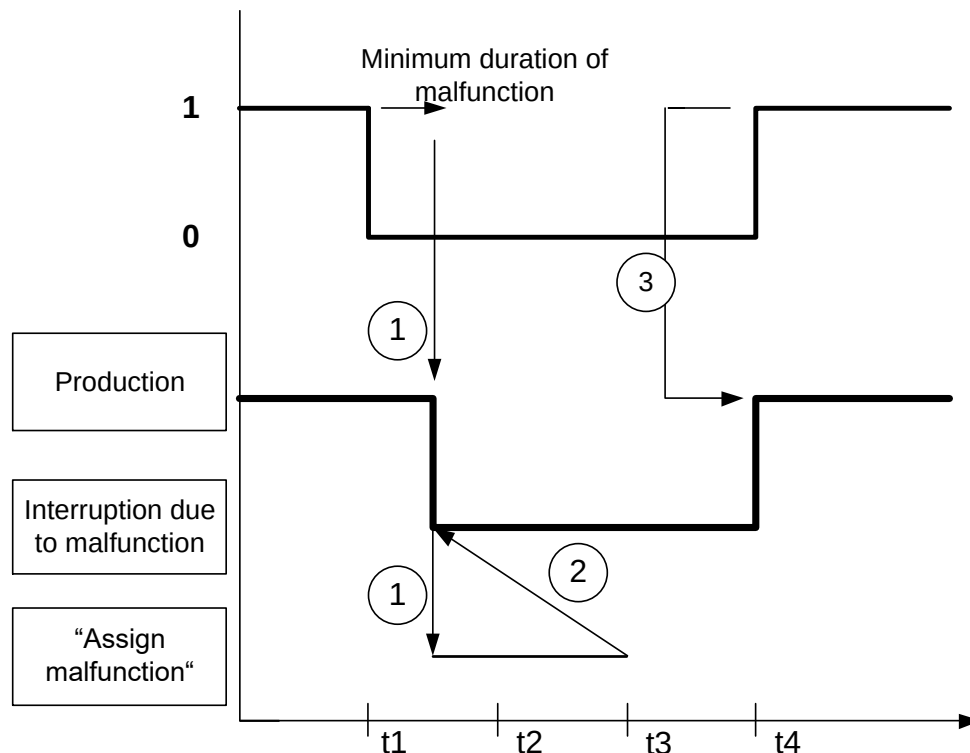

4.1.3 No automatic monitoring

- It is possible at all times to define a new machine status.
- The "Production" status must also be manually assigned.

4.2 Processing notes

4.2.1 Beginning of shift/ end of shift


A shift year model is assigned to a machine within the machine configuration at the HYDRA console. Due to the information given by this shift calendar, the terminal is able to recognize automatically beginning and end of shifts.

By this assignment, functions are enabled that ease data collection as well as operability::

- the OP that is logged on is automatically interrupted at the end of the shift.
- this OP is logged on again when the next shift starts.
- The period of time prior to the beginning of the shift for the function "log person on in advance" is configured within the terminal configuration at the HYDRA console. Within this time interval, a "person logging on" is saved and actually logged on with the next shift change.

Since data collection at terminals must not be interrupted and it is impossible for all terminals to send all postings simultaneously at the end of the shift, log records are buffered. In short intervals the buffer is now written into the server database. This process takes approximately 1 to 5 minutes and depends on the number of machines defined for a terminal. Postings made during that time are buffered as well.

The following diagram shows a time flow of logons and logoffs during a change of shifts.

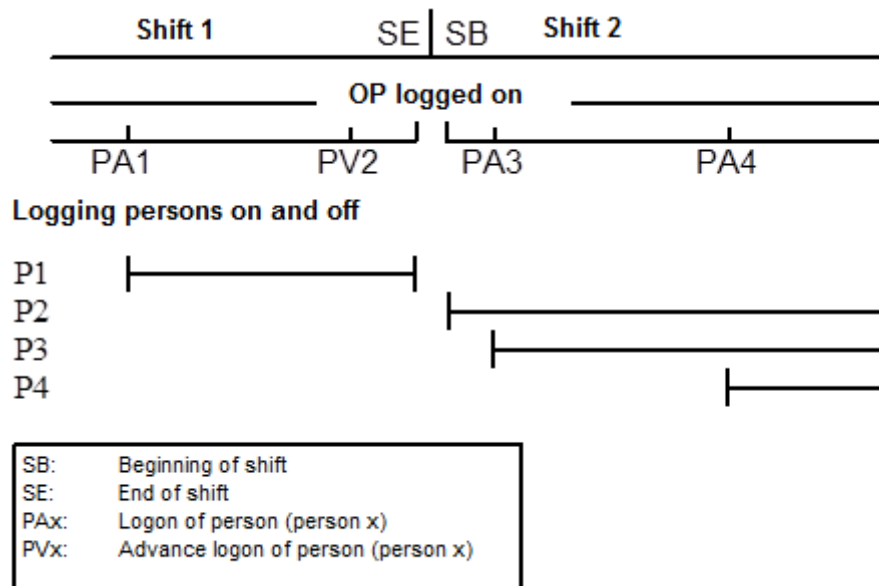

Description of the process

- 1) An OP was logged on during shift 1 and its production is also to be continued in the following shift 2.
- 2) Person 1 logs on to the machine.
- 3) Person 2 arrives shortly before the shift ends and logs on to the machine. Since the logon takes place within the 30 minutes of advance logon time, the terminal recognizes an advance logon.
- 4) The registered OP is automatically interrupted when the shifts end and all persons logged on are logged off.
- 5) The OP, which was interrupted beforehand, is logged on again when the shift starts. Moreover, the persons who logged on in advance are logged on as well.

4.2.2 Production lock

The production lock is set automatically for machine statuses that are configured so as to the production lock to be active, once this status has been assigned (compare MDE menu: master data --> machine configuration --> status assignment). This is shown by displaying the information "[PSP]".

If a production lock is set, this means that:

- The production lock function prevents the terminal from automatically switching to the production status, i.e. despite arriving machine pulses the current machine status remains.
- All items that are produced while the lock is enabled, are either recorded as yield or scrap. This depends on how the machine is configured.
- The production lock can be removed by clicking the **</Enter/↵>** key. Then the machine status switches to "production" with the first pulse that arrives. The production lock can also be enabled by using this key.

4.2.3 Machine lock

It may be defined for each machine status whether or not a machine lock is to be set. Setting a machine lock means that an output and thereby a relay are set. Which output or relay is affected is defined in the machine configuration of the HYDRA console.

4.2.4 Relay – target quantity reached

If the terminal recognizes that the recorded actual quantity has reached the target quantity of the current operation, then a relay will be set. Which output or relay is affected is defined in the machine configuration of the HYDRA console.

4.2.5 Typical lead time of the terminal

The terminal program has a typical lead time of 2-3 seconds. This means that the recorded machine status intervals at least have the duration of the minimum lead time.

5 Administration

The below section includes all relevant pieces of information required for the administration of a terminal.

This includes:

- implementation of the terminal,
- explanation of hardware test functions,
- local configurations and program parameters.

5.1 Implementation

CT-54x terminals are installed by the program "**cfg.exe**". The CT-54x terminal is booted from the installed read only memory medium.

The boot medium includes among others:

- The file "**cfg.exe**" for the configuration of the terminal and hardware test programs. -

The file "**run.bat**".

The read only memory medium "Tiny Disk" includes among others:

- the actual application program (in the directory: "**c:\ctxl**").
- the spool directory ("**c:\ctxlspool**") including all buffered log files
or the saved database configuration of the terminal for OFFLINE restarts.

5.2 The configuration tool "CFG.EXE"

The terminal now loads the terminal program from its local storage medium. Once booted, the following is shown at first:

```
*** CFG V# 1.1 *****  
1 = Configuration  
2 = Download  
3 = Hardware test  
*****  
x = Program start  
  
***** < 5> **
```

5.2.1 The "configuration" menu

```
*** Configuration **
1 = IP address
2 = IP router
3 = Host - IP
4 = Terminal number
5 = Set Intel
*****
6 = Show
***** < 5> **'
```

Description:

IP address	unique network address for CT-541
IP router	If CT-541 is included in a sub-network, the gateway or router may be entered here.
Host IP	IP address of the HYDRA server
Terminal number	unique terminal number of CT-541 matching the number of the terminal label on the HYDRA server
INTEL	Intel-Host. Server including processor architecture compatible with Intel
Show	Shows the current settings

Please note for all menus that the current value is displayed as default value. By clicking the **</Enter/↵ >** key, it is switched to the next field and the complete input is confirmed at the end. The process has to be repeated if wrong entries are made.

Once the configuration tool has been finished, the device is rebooted automatically, if required, to load the new configuration.

5.2.2 The "download" menu

```

*** Download *****'
 1 = Application
 2 = Add-ons
*****
 3 = Upload

***** < 5> **'
```

Description:

Application	Downloading of applications and required files from the HYDRA server.
Add-ons	If available, updates for drivers and operating systems can be downloaded from the HYDRA server
Upload	Uploading of log files, configuration and service data from the terminal to the HYDRA server (for service purposes only)

5.2.3 The "hardware test" menu

```
*** Hardware *****
1 = Barcode
2 = I/O test
*****
3 = Clock test
4 = Host ping

***** < 5> **'
```

Description:

Barcode	Test of the barcode interface (if available). Barcodes scanned by the barcode reader are shown.
I/O test	The meter reading of both inputs is shown. The two relays can be switched on and off.
Clock test	(not yet available → "for future use") The HYDRA server time is read in in regular intervals. An application needs to be downloaded first to carry out this test.
Host ping	The server address (HOST IP) that is currently set for the CT-541 terminal is pinged (constant ping) and the result is shown (x pings send, y pings received).

5.3 The file "RUN.BAT"

The basic entries of the file: "RUN.BAT" are:

```
@echo off
SET HY_USR=51
SET HY_DIR=.\\
SET HY_HOSTNAME=192.168.10.59
SET HY_INTEL=i
SET MINIMAL_WAIT=300
SET MAXIMAL_RCV_WAIT=120
SET TMOUT_C=10
SET TMOUT_S=10
SET TMOUT_R=120
SET TMOUT_F=10
echo. *****
tcpshell ctld %HY_INTEL%
echo. *****
```

All changes are made in the configuration tool "cfg.exe".

5.4 Add-ons file "ctld.txt"

Has been designed for the downloading of files. This function should only be used for files that are to be copied onto the terminal in addition to the standard files.

The files downloaded in this way have to be defined in the file "CTLD.TXT" within the directory "\CTL" on the server.

\\ctl\\ctld.txt (in the directory of the application)

If files are to be copied into specific directories, e.g. the file **xy.bat** is to be copied into the terminal's **LAN** directory, these files also have to exist in "**CTL\\ADDONS\\LAN\\xy.bat**". The relevant directory is always to be created in the directory "**Addons**".

Example: The file "**xy.bat**" is to be copied into the "lan" directory of the terminal and the file "**nn.bat**" into the Ctlight directory.

Entry in the file "**CTLD.TXT**"

Example for entries in the file **ctld.txt**:

lan\xy.bat

nn.bat

Please note:

Lan\xy.bat (The file xy.bat is copied into the LAN directory on the terminal)

nn.bat (The file nn.bat is copied into the Ctlight directory on the terminal)

The directory/file: **lctl\addons\lan\xy.bat** has to exist on the server

The directory/file: **lctl\addons\nn.bat** has to exist on the server