

1 Terminal Configuration

Overview

Menu	System administration → Terminals → Terminal configuration
Transaction code	tc
Function authorization	mdtc

Purpose

In the terminal configuration, you create all terminal settings that specify the data collection on the respective terminal.



For information on the use of access terminals of the manufacturer Kaba, which are connected via the communication software *B-COMM*, refer to the document [Kaba-Connector_ZKS.pdf](#).

Integration

The terminal configuration is performed centrally for the different areas of data collection, e.g.

- BDE/MDE terminal
- PZE/ZKS terminal
- CAQ terminal

Requirements

First create the terminal in the MOC, then install the terminal in production.

Selection criteria

The application provides the following selection criteria:

Terminal ... to ...

Only the selected terminals are displayed.

Active/inactive

Active or inactive terminals are displayed.

Toolbar



Terminal administration

The description of this dialog can be found in section [Field description for dialog "Terminal administration"](#).



VNC Viewer

This link starts the VNC viewer with the IP address of the currently selected terminal. The terminal can be operated by remote control if remote maintenance is enabled on the terminal. If the remote maintenance is not enabled on the terminal, it might take several minutes until the VNC Viewer opens and shows an error message. This is a VNC Viewer behavior that we cannot control.

Field description for tab "General"

General

Terminal

Terminal number for unique identification. It is entered in decimal form.

Active

Using this field, you specify if the terminal is logically active or inactive in this application. You can hide inactive terminals in the table. Deactivate the criterion "Inactive terminal" in the selection index tab. If an inactive terminal is restarted, this terminal is automatically reactivated if a terminal status is posted.

Designation

Comment field for a more detailed description. The entry is only meant for documentation or for customer-specific evaluations. For example, you can store the terminal manufacturer in this field.

Location

Comment field to specify where the terminal is located. The entry is only meant for documentation or for customer-specific evaluations.

Foreman's area

Identification of the area where the terminal is located. The entry is meant for documentation or for customer-specific evaluations.

Type

This entry specifies the terminal type using the terminal number and the terminal as hardware. This setting controls the assignment of the correct software, the correct software modes and the keyboard layout. If the entry is not correct, the program cannot be operated from the keyboard or a screen is shown that does not match the terminal. You can identify the terminal type from the purchase order. It is also printed on the front panel of the machine (e.g. CT 830).

The terminal type *PCC* is a shop floor server for PDV mass data. If you select this input type, the network port field is additionally displayed.

Terminal type *Palm* is used for the PDA for comparison to ZKS offline components. The terminal type *M6* or *VT4x* defines MBB subterminals for PZE that are connected to a type CT385 master terminal. If you select this terminal type, the input in the fields *Master terminal* and *Reader* is possible.

The terminal type *ST-300* defines subterminals for PZE that are connected to a type CT-385 master terminal. If you select this terminal type, the fields *Master terminal* and *Reader* are additionally displayed.

Language

You use this field to select the language that is used for the terminal texts. The field *Language* is only available for specific terminal types. For type *M6* or *VT4x* sub-terminals, the language is set for all sub-terminals in the terminal configuration of the master terminal.

Note:

The terminal installation of the customer specifies the languages that are available and can be selected. For any questions, please contact MPDV Sales or MPDV Project Management.

Terminal class

You can enter the terminal class required for Kaba Benzing and Dorma terminals in this field.

Configuration

Operated as

This option specifies the terminal functions. Specific options can only be configured in combinations.

BDE terminal

This is a **shop floor terminal**. A BDE terminal is only used for order data collection.

MDE terminal

This terminal is used for MDE processing (shift change, cyclic update, option of MDE recording of data via machine interfaces). You can only activate this option in combination with the option "BDE terminal".

The area function is available for terminals of series CT 56x, CT 7xx and CT 8xx. You can disable the function via the setting *Area function active* (see section *Field description for tab "MF functions"*).

Notes

The operation modes "BDE terminal" and "MDE terminal" have a different function key assignment for all BDE terminals except CT 76x and CT8xx (different label texts).

Ab CTWIN-Version 6.2.2.24 You can also operate the terminals configured with operation mode "BDE terminal" with machine/workplace assignment. It does not matter if the assignment is for single or group workplaces.

In this case, the assigned machines/workplaces are displayed on the terminal, but the MDE processing is not performed (shift change, cyclic update, option of MDE recording of data via machine interfaces).

The terminal only runs MDE processing if the "MDE terminal" configuration is active.

PZE/ ZKS terminal

The terminal is used to record labor time and/or for access control. Note: the combination BDE/MDE terminal and ZKS terminal is not possible. But the combination BDE/MDE terminal and PZE terminal is possible.

CAQ terminal

The terminal is configured for a combined operation of CAQ and BDE and/or MDE terminal. The function key **Inspect** is added to the terminal. Inspection orders are generated, logged on or logged off via shop floor data collection.

If the BDE/MDE operation modes are disabled, the terminal is configured for CAQ operation only and inspection orders are directly generated, logged on or logged off using the inspection requirement.

Cyclic loading time

The specified time interval is used to regularly reload terminal settings that might have been changed. This setting is only relevant for PZE terminals and so-called DOS terminals.

Cycle duration of status messages

This field specifies the time interval in hours and minutes. The terminal sends status messages to the HYDRA server at the specified interval.

IP address

The terminal's IP address. For CTP-340 type and Kaba Benzing terminals, the terminal GID and DID must be entered after the IP address, separated by a semicolon (Example: 192.168.10.213;0105). For all other terminals, the IP address set at the terminal is automatically passed to the server and displayed in this field.

Note:

For installations with multiple systems where multiple ILHydras are set up, each GID may only be used in one system. Consequently, a terminal's GID must be changed if the terminal is reassigned from one system to another.

DHCP

If active, the terminal is configured with a DHCP. The DHCP server assigns an IP address to the terminal.

Company number/system number

In this field, the system number that is defined in the HYDRA basic settings can be overridden for individual terminals.

Network port (can only be entered for PCC)

Communication port required for data transmission to the shop floor server PCC.EXE and for the processing of PDV mass data.

Barcode connection (can only be entered in CT541)

Specification of the barcode wand or scanner connection.

COMx: as per local configuration file (all CTxxx terminals, except for CT541)

COM0: no barcode unit connected (CT 541)

COM1: Barcode connected to COM1 (CT 541)

With terminal type CT541, the specification COMx has the same effect than COM0, because the terminal has no local configuration file.

Configuration flag 2

You can use this input field to control a customer-specific processing. This field should be empty by default.

Master terminal (only with terminal type ST-300, M6 or VT4x)

Select the master terminal where the MBB terminals of type ST-300, M6 or VT4x are connected as inferior sub-terminals.

Reader (only with terminal type ST-300, M6 or VT4x)

Number of reader in the sub-bus of the master terminal.

Field description for tab "Status"

Note: You cannot edit specific fields. These fields can only be edited using the administration function.

Status

Status of the terminal:

Last status message

Date and time of the terminal's last status message.

Status color

Color coding of the different statuses:

Red Missing status message for more than twice the status cycle duration + 1 minute

Yellow Missing status message for more than the status cycle duration + 1 minute.

Green Last status message sent less than status cycle duration + 1 minute ago

Gray So far no status message from the terminal (for new terminals)

White The status cycle duration is not set.
Status duration is not monitored.

Purple The terminal responded with a different IP address. This warning is displayed if two terminals are running with the same terminal number or if a terminal was given a different IP address. This check is not performed if the terminal was configured with DHCP (dynamic IP address). Via the option "Reset terminal no. /IP address alert" in the *Terminal administration*, you can reset this warning.

The status cycle duration is entered in tab "General" in field *Cycle duration of status messages*.

Note:

When you change from standard time to daylight saving time, the clocks are put one hour forward. As a result, terminals are displayed in yellow or red because the last status message was more than one hour earlier due to the time change. The display will be correct again after the next terminal status message.

Last restart

Date and time the terminal program was last restarted.

Reboot

You can use this option to trigger a reboot of the terminal. This setting is passed to the terminal when the next status message is sent. This option is automatically reset after a reboot of the terminal.

Next reboot on

Date and time when the terminal program will be rebooted next.

Delayed by ... minutes

If a restart is scheduled for several terminals, you can specify a time in field "Delayed by", which must elapse between the restarts of the different terminals. This reduces the network load.

Last loading of program

Date and time the terminal program was last loaded/installed.

Reload program

You can use this field to trigger a reloading of the terminal program. This identifier is automatically reset after a completed installation process.

Last offline mode on

Date and time when the terminal was offline.

Number of local data records

Number of local data records that have not yet been transferred from the terminal to the server. If the terminal is online, this value is 0. If the terminal was offline and returns to online mode, the number of local data records remaining is passed with each transfer.

Authorization**Last loading of authorizations**

Date and time access authorizations were last loaded.

Reload authorizations

You can use this option to trigger the loading of authorization data for the terminal(s). After successful loading, this option is automatically reset. You can only enable this option with PZE and ZKS terminals.

People with access authorization

Number of persons that are authorized to access at the terminal.

Other**Number of subsystems****Number of active subsystems****INI file download**

If this option is set, the terminal reloads the INI files from the server on the next restart. The terminal acknowledges the operation by resetting the option .

INI file upload

If this option is set, the terminal uploads the INI files to the server on the next restart. The terminal acknowledges the operation by resetting the option.

Request diagnosis files

This function can be used to request current status information from the terminal for diagnostic purposes. The files are stored on the server in subdirectories .\spool\spl2xxx (xxx = terminal number) of the HYDRA installation.

Logging of dialog data

Terminal

Program

Name of the terminal program.

Version

Version of the terminal program.

Remote maintenance

If remote maintenance is installed on Windows terminals, it is displayed in this field. Currently, only "VNC" remote maintenance is supported.

Activate remote maintenance

You can use this option to activate remote maintenance if installed remote maintenance software is detected on the terminal. The remote maintenance software on the terminal should be started no later than after the configured status cycle duration (cycle duration of status messages in tab "General"). The status cycle duration is entered in tab "General" in field *Cycle duration of status messages*.

IMPORTANT:

Activating remote maintenance can affect the terminal performance. After using remote maintenance, disable the option "Activate remote maintenance".

Status of remote maintenance

- D(isabled) The remote maintenance software is not started.
- Otherwise The remote maintenance software is started on the terminal. The terminal can now be remotely controlled using the VNC software.

Field description for tab "MF functions"

Processing

Area functions active

- ☒ Postings can be made for any workplaces, i.e. there is no fixed assignment of machines/workplaces to terminals. In the posting dialogs, the terminal normally prompts the user to enter the machine/workplace number. This way, you can also log operations on to machines/workplaces they were not scheduled for.
- ☐ There is a fixed assignment of machines/workplaces to terminals, i.e. you can only make postings for the assigned machines/workplaces.

Checking required

The terminals in HYDRA make *validation checks* when they are online. This option only controls the behavior of the terminals when they are offline, i.e. when the LAN is not active (e.g. in case of cable failure).

The BDE and MDE terminals in HYDRA can also work without server connection, because they are equipped with a storage unit.

- ☐ In offline mode, terminals buffer all postings and send them to the server when the connection is restored. If the data stored contains any validation errors, the data is no longer displayed on the terminal screen. This data is stored in a log file on the server.
- ☒ In offline mode, you cannot make any postings because the terminal insists on validation checks.

Merged operations

If you enable the option "Merged operations", you can merge several operations into one merged operation (MOP) on the terminal.

Order processing using merged operations is useful if:

- several smaller OPs are merged to form one operation (lower costs)
- several operations are produced using one machine at the same time. The system cannot make timely postings for the different OPs (e.g. during hardening in the metal industry or smoking in the food industry).

You can only enable this function if the license for creating merged operations is available and if the option "Process merged operations" is enabled in the basic settings. For further details, refer to the documentation *HYDRA Basic settings*. This function activates the merged operation function on the terminal and the indented options below this function.

Notes

If you want to be able to create merged operations for specific machines/workplaces, you must enable the option "Logon of several OPs" in the respective machine/workplace configuration.

MOP functions for the terminal are only available with terminal types CT56x, CT73x and CT83x.

Incl. entry of quantities

☒ When logged off or interrupted, the terminal additionally records actual quantities for the individual operations of the merged operation.

☐ When the merged operation is logged off, HYDRA records the target values as actual values.

Generation**Per person**

In case of a person-related merged operation, the person and the merged operation are firmly combined. You cannot log on additional persons to an existing MOP.

For each workplace, a placeholder OP is displayed for the MOP on the terminal: "MOP-<personnel number>".

Per machine

In case of a machine-related merged operation, several persons can be logged on to a merged operation. Using the function "Log merged operation on" on the terminal, you can combine several OPs into one merged OP (exactly one MOP per workplace is permitted).

Several persons can log on to this MOP – as it is the case with individual operations. If you interrupt or log off the MOP, all persons logged on are automatically logged off. Quantities are posted and times are distributed according to the HYDRA basic settings.

For each workplace, a placeholder OP is displayed for the MOP on the terminal: "MOP-<workplace/machine number>".

Notes

The processing "*Per machine*" is only available on the HYDRA Windows CTWIN terminal and only for so-called single workplaces (type=E). You may not use the option "*per machine*" in combination with the option "*Proportionate RPA posting in personnel postings*" in the HYDRA basic settings (tab *BDE*).

Data can NOT be edited in event maintenance. The data can only be corrected in posting maintenance!

Waiting period for advance logon of staff

Any logons of staff within the period of time specified (in minutes) *before end of shift* are "saved" as advance logon for the next shift. The same applies for the logon of operations to terminals using the setting *Log person on with order*: If an operation is logged on within this period of time before the end of a shift, the operation will be logged on immediately, but the person will be logged on for the next shift in advance.

This parameter is only evaluated for machines that are assigned directly. The value range is between 0 and 45 minutes. If the time for the advance logon is set to 0 minutes, no advance logon is possible.

Note:

If a person is "memorized" (i.e. the person is logged on with the next operation logon) when an operation is logged on, then the option "Memorize person" takes priority and the person is immediately logged on when the operation is logged on (no advance logon of staff).

Label printing

You can use the function "print part quantity" on the HYDRA Windows CTWIN terminal to print a docket during order processing at a machine including text and barcode. The following information can be printed on the docket: order number, article name, article number, machine and the partial quantity produced.

To activate the option, you require the license of the additional function. For further information, refer to the documentation *Partial quantity documentation*.

Ticket printing when goods receipt batches are recorded

OBSOLETE

Machine control

Connection

You use this option to activate a connected machine control

MSS as external I/O unit

Is set if the series CT-53x, CT-7xx and CT-8xx terminals are equipped with an external machine interface.

MSS file interface

Is set if a file interface is used to communicate with the machine interface. Note: This function requires the additional function HYD-DIM (file interface machines).

Internal I/O unit (CT-511/541)

Is set if series 51x or 54x terminals are used. These terminals have a limited internal machine interface.

None or HYDRA PCC

To be set for terminals

- without an external machine interface
- of the older 50x series with an internal machine interface.
- CT 51x terminals with barcode device
- with connection via PCC.

Interfacing

Master terminal

You use this option to activate the master terminal function for terminals of the series CT 76x or CT 8xx. In this mode, the terminal operates the DS 100 sub-terminals as remote input stations. For more details, refer to the documentation "Master terminal".

Engel interfacing

Connects to the *Engel Monitoring System* (EMS) made by Engel Schwertberg. In this mode, quantities are normally transferred via EMS. No other devices are needed.

Krauss-Maffei interfacing

Connects to the Krauss-Maffei system.

None

This terminal has no interfacing.

Other settings

Show machine/OP

For terminals of the series CT-76x and CT-8xx, you can select how the machines are displayed: as list (in tabular form) or as symbol.

Note:

If you make use of the additional MDE-LIN function, you can integrate the display of a line and the assigned aggregates. For more details: see the documentation for the CT-76x and CT-8xx terminals or the MDE-LIN documentation.

Time display

Defines whether times are displayed in normal minutes (HH:MM) or in industrial minutes (HH,II) (only possible with the relevant license).

Note:

The display on the MOC requires respective settings in the HYDRA basic settings. See also the documentation *HYDRA basic settings*, section *General tab*.

This setting has no effect on the formatting of data transferred via interfaces. For more information, please refer to the corresponding interface documentation.

Field description for tab "Dialog control"

You can use the settings listed below to configure separate dialogs for the different terminals. Note: Specific settings only apply for specific terminal types.

For the Windows-based CTWIN terminal, the following settings affect the dynamic dialog configuration of the terminals. If you disable an option here, the respective field is hidden in the terminal dialog. Example: In the dialog "Change machine status", the field "Badge number" is deleted so that no validation check is made for the person. Now, the option mentioned above, "Personnel verification for HYDRA-MDE functions", can no longer affect this dialog.

Please keep in mind that the AIP shop floor terminal does not support the processing that is required to hide fields using this configuration. This is true for the options marked with *.

Machine *

At shop floor terminals, you can make postings for any workplace. Unlike machine terminals, no machines are permanently assigned to the shop floor terminals. The disadvantage is, however, the increased amount of effort required for posting, because the machine number must be entered in the posting dialogs.

☒ In the posting dialogs, the terminal prompts the user to enter the machine number. This way, operations can also be posted for machines they were not planned for. You can disable this input, if you perform operation-related postings.

☐ The input of a machine number is suppressed to optimize the dialog steps. The operation is always logged on to the planned machine. PPS and technical planning work must be extremely accurate; it is not possible to replan on the terminal. The following dialogs are affected:

- Log operation on (dialogs beginning with A_AN or A_P_AN)

- Interrupt operation (dialogs beginning with A_UN)
- Log operation off (dialogs beginning with A_AB)
- Partial confirmation/upload (dialogs beginning with A_TR)

Machine status *

☒ When operations are logged on in the standard dialogs (dialogs beginning with A_AN or A_P_AN), the terminal prompts the user to enter a machine status so that HYDRA BDE can record times for different statuses (and with this, resource performance accounts) similar to terminals with MDE function.

☐ Entry of a machine status is not required. The reason for this is to optimize the dialog steps. The function can be used for single workplaces if only one status is used (e.g. production). It is best to use this option for data collection at group workplaces, because no status is recorded for these workplaces.

Order type *

In the standard dialogs

- Log operation on (dialogs beginning with A_AN or A_P_AN)
- Interrupt operation (dialogs beginning with A_UN)
- Log operation off (dialogs beginning with A_AB)
- Partial confirmation/upload (dialogs beginning with A_TR)

the terminals prompt the user to enter the order type when the order/OP number is entered manually. In case of barcode entries or posting via sequencing list, the terminal receives the information automatically.

☒ In the posting dialogs the terminal prompts the user to enter the order type. This way, the terminal requests different information depending on the order type (e.g. no quantity input for overhead cost orders)

☐ There is no need to enter an order type. The terminal then subsequently requests the dialog steps for production orders.

Order sequencing list *

Only relevant for terminals of the CT 5xx and CT 73x type series. In case of Windows-based terminals, the sequencing list is always available.

☒ A sequencing list is provided on the terminal when an OP is logged on.

☐ Sequencing list not available.

Log users on with order

☒ If a person logs an operation on, this person is automatically logged on to the machine/workplace with the operation. If the person cannot be logged on in the process, the operation is not logged on either.

☐ Operations and staff are logged on separately.

Entry of quantities based on orders*

You use this option to specify whether yield and scrap must be entered when an operation is interrupted or logged off and, as a result, whether operation related quantities are recorded. In addition, the options *Yield* (if the input of yield is enabled) and *Scrap quantities* (if the input of scrap is enabled) must be set to ☒.

Note:

With MDE terminals, the configuration for the recording of yield and scrap is made here, but it must be defined in more detail in the workplace/resource configuration.

Entry of quantities based on staff *

You use this option to specify whether yield and scrap must be entered when a person is logged off and, as a result, whether quantities based on staff are recorded. In addition, the options *Yield* (if the input of yield is enabled) and *Scrap quantities* (if the input of scrap is enabled) must be enabled.

Note:

With MDE terminals, the configuration for the recording of yield and scrap is made here, but it must be defined in more detail in the workplace/resource configuration.

Yield *

☒ Enables the manual input of yield on the BDE terminal.

☐ Yield is not entered manually.

Scrap quantities *

☒ Enables the manual input of scrap on the BDE terminal.

☐ Scrap is not entered manually. The respective field on the Windows CTWIN terminal is hidden in the following dialogs:

- Interrupt operation (dialogs beginning with A_UN)
- Log operation off (dialogs beginning with A_AB)
- Partial confirmation/upload (dialogs beginning with A_TR)
- Log person off (dialogs beginning with P_AB)

The field "Scrap reason" is also hidden.

Scrap reasons *

☒ The MDE/BDE terminal prompts the user to enter a scrap reason if an operation with a scrap quantity greater than 0 is interrupted or finished.

In addition, a validation check is made to identify if the scrap reason entered is defined in the HYDRA database. If not, the posting is rejected with a validation error (unknown scrap reason).

☐ Scrap reasons are not recorded. The respective field on the Windows CTWIN terminal is hidden in the following dialogs:

- Interrupt operation (dialogs beginning with A_UN)
- Log operation off (dialogs beginning with A_AB)
- Partial confirmation/upload (dialogs beginning with A_TR)
- Log person off (dialogs beginning with P_AB)

Interruption reasons *

You use the option "Interruption reason" to set a machine status when the order is interrupted or logged off.

☒ The MDE/BDE terminal prompts the user to enter an interruption reason if an operation is interrupted or finished.

In addition, a validation check is made to identify if this interruption reason (machine status) is defined for the machine in the HYDRA database. If not, the terminal function is not performed. The interruption reason is included in the interruption or completion record of the operation.

☐ The interruption reason for interrupted or finished orders is not recorded. In the dialogs

- Interrupt operation (dialogs beginning with A_UN)
- Log operation off (dialogs beginning with A_AB)
- Partial confirmation/upload (dialogs beginning with A_TR)

on the Windows CTWIN terminal, the relevant field is hidden.

"Log person off" query *

☒ When an operation is interrupted or logged off on the terminal, a prompt appears on DOS terminals asking whether all logged on persons should equally be logged off or not. On the Windows CTWIN terminal, the input field "Memorize person" is enabled for input and preset with "J" - Yes. If you confirm (enter "J"), the person is memorized until the next operation is logged on to this workplace. The person does not need to log on each time the operation changes.

☐ When an operation is interrupted or logged off, all persons logged on are logged off, and they are not automatically logged on again when a new order is logged on.

Notes

If a person logs on to a different workplace, then a check is run to identify if the person is memorized. If so, the "memorize person" is deleted if one of the following combinations is enabled for the person in the *HR master data* configuration, tab *Shop floor data*:

☒ Log on to several workplaces

☒ Automatic OP change

or

☐ Log on to several workplaces

☒ Automatic OP change

or

☐ Log on to several workplaces

☐ Automatic OP change

With change of shifts, the memorized persons are deleted.

Personnel verification for BDE functions *

This option affects the following dialogs:

- Log operation on (dialogs beginning with A_AN)
- Interrupt operation (dialogs beginning with A_UN)
- Log operation off (dialogs beginning with A_AB)
- Partial confirmation/upload (dialogs beginning with A_TR)
- Output batch change (dialogs beginning with CA_WL)
- Input batch postings (dialogs beginning with CE)

This option does not affect functions like Log person on/off, Log on/off merged operations or Change target quantity, for example.

☒ In these dialogs, the terminal prompts the user to enter the staff badge number in order to check the person's authorization or to log the person on immediately if the option *Log users on with order* is enabled.

☐ Entry of staff badge number is not required. No validation check is performed. It is no longer possible to use the function *Log users on with order*.

When group workplaces are used, the above-mentioned dialogs are used and the staff badge number is then a mandatory input field. For that reason, you must activate the input of staff badge numbers for group workplaces.

Personnel verification for HYDRA-MDE functions *

This option affects the following machine-related terminal dialogs:

- Change status (dialog M_MST)
- Change target cycle (dialog M_SZY)
- Change partitioning (dialog M_TLG)

☒ In these dialogs, the terminal prompts the user to enter the staff badge number in order to check the person's authorization. This field also activates the input of a staff badge number for the *Change status* function on BDE terminals (shop floor terminals).

☐ Entry of staff badge number is not required, no validation checks are run.

Operator position *

This function is only available on the Windows CTWIN terminal.

Enable this option, if you want to enter an operator position when you log on staff (dialog beginning with P_AN) or when you make a combined logon of order/staff (dialog beginning with A_P_AN; option *Log users on with order*).

Requirement: You have configured the operator positions that are available at the workplace.

The operator position entered is saved in the personal log record (record type B).

Wage/premium indicator *

This function is only available on Windows CTWIN or AIP terminals.

Enable this option if you want to enter a wage/premium indicator when you log on staff (dialog beginning with P_AN) or if you make a combined logon of order/staff (dialog beginning with A_P_AN; option *Log users on with order*).

Requirement: You have configured the premium indicators that are available at the workplace..


The wage/premium indicator entered is saved in the personal log record (record type B).

Field description for tab "HR functions"

You use the PZE terminal to record the labor times of employees, i.e. the times of clocking-in and clocking-out. In addition, employees can access information about their current account balances on the terminal.

The [Clocking authorizations](#) specify which employees may clock at which terminals.

Tab "Parameters"

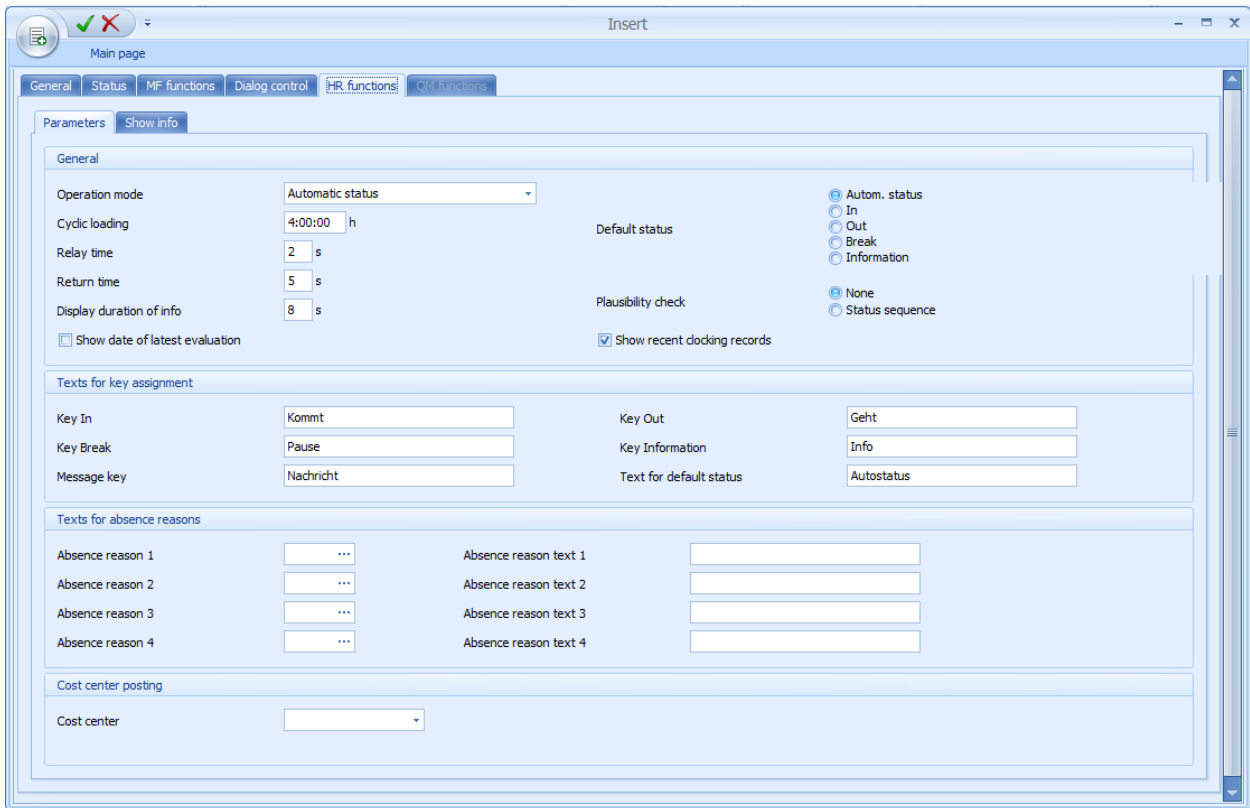

Operation mode

The operation mode specifies the terminal behavior. Three operation modes are available:

Automatic status

Automatic status. The system automatically identifies if the clocking is a clocking-in or a clocking-out using the current attendance status. It is not necessary to press the IN or OUT key on the terminal. The automatic can, however, be overridden by pressing the IN or OUT key. For example, this is useful if employees know that they forgot to clock. In case of postings of absence reasons (e.g. business trip), the system automatically identifies whether it is an advance clocking (OUT with reason) or a subsequent clocking (IN with reason).

If *Validation check for status sequence* is activated in this operation mode, then the status is queried online on the server for each clocking and displayed on the terminal.

Manual status switching

You manually switch between IN and OUT by pressing the respective key. In this operation mode, you can use the function keys to enter absence reasons (e.g. a business trip) via advance/subsequent clockings. If you have used a key, the terminal automatically switches back to *IN* or *OUT*. The terminal then uses the option pressed last.

Access terminal

Access terminal without PZE function. Access authorizations are checked using the configurations in the access control system (ZKS).

Cyclic loading

This option specifies the time for the cyclic loading of the terminal's access authorizations, messages and PZE properties. Durations entered that are less than one hour are automatically set to one hour by the terminal. On terminals manufactured by Kaba Benzing and on CTP-340 terminals, the value entered in this field is interpreted as the time of the day.

Relay time

This option specifies the time that the green or red access lights are displayed.

Return time

You use this field to specify the time that the terminal waits before returning to default status (auto status, for example) after a key is pressed.

Display duration of info

Time in seconds specifying how long the account status information is displayed on the terminal.

Plausibility check

If the plausibility check is defined for the status sequence, then the system checks with each clocking whether the clocking sequence is respected (IN after OUT, OUT after IN). In operation mode "Automatic status", this setting has a different meaning. After an automatic status clocking, the status is identified in the server and then displayed on the terminal. This check is only available for type CT-38x terminals.

Default status

The "Default status" field can be used to define, to which status the terminal automatically returns. For example, you can specify the default status "Break" for a break terminal (next to the cafeteria). The default status is only processed in operation mode "Automatic status". The text to be displayed on the terminal is entered in the field *Text for default status*.

In operation mode *Automatic status* and with activated plausibility check of the status sequence and default status "Break", the terminal identifies the current status of the person by means of an online query on the server and outputs "Beginning of break" or "End of break" depending on the respective status.

Show date of latest evaluation

If this option is enabled, the date of the person's latest evaluation is also displayed in the account balances information on the terminal. This function is not available for all terminal types.



A maximum of four accounts can be displayed on terminals of type CTP-340 or Kaba Benzing terminals. If you want to display the date of latest evaluation, you may only

configure three accounts for the display on the terminal.

Show recent clocking records

An employee's clocking records can be displayed for the current day and the previous day. The last clocking records (maximum 13 records) are displayed on the CT-36x and CT-56x terminals if the **BREAK** key is pressed while information is being displayed. On terminals of type CT-38x, there is a separate button for the display of account balances.

Texts for key assignment

These fields specify the text that is displayed after the respective key has been pressed. If no text is entered, the message "Key not occupied" is displayed. The meaning of the keys 1 to 5 is defined: IN, OUT, Break, Information display and Message. These texts cannot be changed.



There is no break key on CTP-340 type or Kaba Benzing terminals. You can configure one of the two absence reason keys as *Break* key. Enter the absence reason "PAU" and the text to be displayed for this key.

Text for default status

The text to be displayed for the selected default status may be defined here.

Texts for absence reasons

You can specify an [Absence reason](#) for the fields "absence reason 1" to "absence reason 4". Enter the text to be displayed on the terminal behind the absence reasons. If you do not use the option *Advance/subsequent clockings* for absence reasons, these fields remain empty.

If you want to enter more than 4 absence reasons on the terminal, you can use a list of absence reasons to this end (only with CT-36x and CT-38x). Configure the list of absence reasons using the entry "FGL" in one of the fields *Absence reason 1* to *Absence reason 4*. The list of absence reasons shows all absence reasons, which include the company of the person in the configuration of the absence reasons, or where the field *Company* is empty. If you select the function key and scan your badge, the list is displayed on the terminal. Select an absence reason from the list and confirm pressing OK. The absence reason is posted.



With terminals of type CTP-340, the configuration of absence reason key 1 is used for the blue key with the suitcase and the configuration of absence reason key 2 is used for the yellow hash key. The CTP-340 does not process the configuration of the absence reason keys 3 and 4.

Cost center

If you enter a cost center in this field, all clocking records performed on this terminal are posted to the specified cost center. For this field, you require the license PZW-KSB (cost center posting).

Tab "Show info"

Info from, to

The info key on the PZE terminal is enabled within the periods of time specified. Employees can then access their current time accounts on the terminal. Up to five periods can be entered.

Field description for tab "QM functions"

On the CAQ terminal, you can perform inspections and record measured values.

The inspection data collection is configured in tab "QM functions".

Area type

The selection field *Area type* assigns the higher-level data area to the terminal, which contains the inspection steps to be logged on (for example in-production inspection, goods receipt inspection, initial sample inspection, etc.). In the default configuration, this field is empty.

Area

This field specifies the area (production, goods receipt, goods issue, etc.), which contains the inspection steps to be logged on. In the default configuration, this field is empty.

Input for

Selects the failure analysis types from the catalog of failures:

Input only allowed if inspection station matches

This option enables the filtering of inspection steps that can be logged on to the inspection station specified.

Inspection station

You can only log on inspection steps that match the inspection station specified here. Enable the option *Input only allowed if inspection station matches* if the inspection station specified in this field must be respected.

Attributive inspection as pass/fail inspection

For attributive characteristics, the terminal displays the buttons Pass and Fail. The failure itself is not entered.



This configuration option is not relevant if AIP-QM terminals are in use.

Check all characteristics immediately when order is logged on

When the inspection order is logged on, all characteristics are set to status *Due* and must be inspected in the period of time specified for the respective inspection (lead time).



This configuration option is not relevant if AIP-QM terminals are in use.

Show measured values of this machine/inspection station only

The terminal can only display measured values that are assigned to the same machine where the inspection order is logged on.



This configuration option is not relevant if AIP-QM terminals are in use.

Identification of inspector before entering measured values (if not set)

If the inspector's identification number is not set in the Inspector ID field, the inspecting person must identify themselves with each measured value entered.

Only if inspector is unknown

No inspector identification is required if the inspecting person was registered with the inspection order.



This configuration option is not relevant if AIP-QM terminals are in use.

Inspector identification required before opening inspection dialog

The inspecting person must identify themselves before opening the inspection dialog. The inspecting person is then set for the complete inspection.

Only if inspector is unknown

No inspector identification is required if the inspecting person was registered with the inspection order.



This configuration option is not relevant if AIP-QM terminals are in use.

Input of quantities

You can use this option to manually confirm/upload quantities.



This configuration option is not relevant if AIP-QM terminals are in use.

Logging inspectors on and off

The inspecting persons must always log on and off with the inspection order.



This configuration option is not relevant if AIP-QM terminals are in use.

Automatic opening of defects recording

You use this option to specify the conditions that trigger an automatic recording of a failure.

CTWIN failure configuration			
Automatic opening of defects recording	☐ deactivated	☐ With tolerance errors	☐ With all defects displayed



This field is not relevant if AIP-QM terminals are in use.

Field description for dialog "Terminal administration"

You use the dialog *Terminal administration* (toolbar) to activate changed terminal settings.

Field description

Terminal from, to

Use these fields to specify the terminals where the settings are to be changed. The "from" and "to" fields are preset with the number of the terminal that was highlighted in the list when calling this function. The fields in the dialog show the settings for this terminal.

Activate terminal

This field is used to set the terminal to active or inactive. If you define terminals as inactive in the selection panel, the respective terminals are hidden in the table. The next time a terminal status is sent, the terminal is automatically reactivated.

Reboot

Use this option to trigger a reboot of the terminal(s). This setting is transferred to the terminal when the terminal sends the next terminal status. This option is automatically reset after a reboot of the terminal.

Next reboot on

You can specify a date (date and time) for the restart.



The point in time for the next restart and the option below "delayed by ... minutes" are only used if the "reboot" option is set.

Delayed by ... minutes

If you plan a restart of several terminals, you can use this input field to specify a time that delays the restarts of the individual terminals. This reduces the network load.

Reload program

You can use this option to trigger the installation of a new version of the terminal program. This field is automatically reset after the load process is complete. Because installation of a new version requires a reboot, the times specified in the option "Reboot" can be used to control when the load processes are scheduled.

Reload authorizations

You use this option to schedule the loading of authorization data in advance for the selected terminal(s). This option is only set with PZE and ZKS terminals and transferred to the terminal when the terminal status is sent the next time. This field is automatically reset after the authorizations have been fully loaded.

Reset terminal no. /IP address alert

If you activate this option, the terminal number/IP address alert is reset for the terminal(s).

Request diagnosis files

This function can be used to request current status information from the terminal for diagnostic purposes. The files are stored on the server in subdirectories .\spool\spl2xxx (xxx = terminal number) of the HYDRA installation.

Logging of dialog data

If a value between 1 and 5 is entered in the *Logging* field, the server logs the dialogs that the terminal sends. The entry 0 disables the logging.

Value	Server options	Meaning
0		No trace output
1	D+	Simple trace output
2	D+t	Simple trace output with time stamp

Value	Server options	Meaning
3	D+t -x	Trace output with time stamp and Explain is active
4	D+a	All trace options are active
5	D+a -x	All trace options are active and Explain is active
6 - 9	None	No trace outputs

The options are enabled/disabled with the next cyclic terminal status.