

1 Additional Batch Information

Usage


You use the function to view information about a batch in the AIP terminal. Additional batch information include:

- General batch information
- Quantities
- Batch attributes
- Alternative batch numbers

Dialog configuration

Dialog configuration (LOS INFOS)

Define the function key "batch information" by copying the layout *gui\l_anr.xml* to *gui\l_anr_ln.xml* and the key "BDE comments". Then the following entries must be changed in the configuration of the copied key:

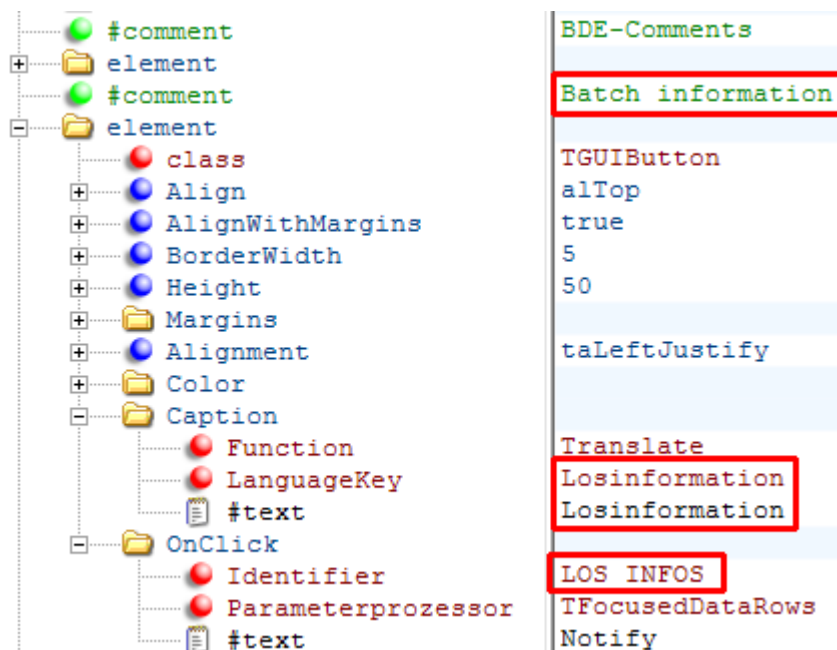

If you do not use tiles for the AIP2, define the function key in the file **ctaipbut.ini**:

[ANR-LN-Page3]

1=LOS_INFOS,L,Losinformation,Shipping Box Closed Information.png

The sections [LOS_INFOS_ATTR.LST] and [LOS_INFOS_QUA.LST] and [LOS_INFOS_ALTER.LST] are required for the layout configuration of *ctaisplay.ini*, irrespective of the used design.

```
[LOS_INFOS_ATTR.LST]
```

```
GRID_FONT=Arial
```

```
GRID_FONTSIZE=9
```

```
GRID_COLOR=clBlack
```

```
GRID_BACKGROUND=clWhite
```

```
KENNUNG=C20,100,L,attribute
```

```
ATTR_VAL=C20,80,L,Value
```

```
EINH=C20,80,L,unit
```

```
TXT=C20,80,L,
```

```
MATTYP=C40,140,
```

```
[LOS_INFOS_QUA.LST]
```

```
GRID_FONT=Arial
```

```
GRID_FONTSIZE=9
```

```
GRID_COLOR=clBlack
```

```
GRID_BACKGROUND=clWhite
```

```
KENN=C20,100,L,
```

```
ALIAS LEER1=(DUMMY1)=C1,30,L
```

```
MENGE=C20,80,R,
```

```
EINH=C4,40,R,
```

```
ALIAS LEER2=(DUMMY1)=C1,30,L
```

```
REST=C20,80,R,
```

```
[LOS_INFOS_ALTER.LST]
```

```
GRID_FONT=Arial
```

```
GRID_FONTSIZE=9
```

```
GRID_COLOR=clBlack
```

```
GRID_BACKGROUND=clWhite
```

```
ALT=C20,100,L,
```

```
CNR=C20,200,L,
```

System configuration

Further system configurations are not required in order to display additional batch information.