

Manual

Access Control Management Functions ZKS-VWF 8.2

Version 1.0.23049

Last changed on: 02.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Access Control Management Functions - Overview	4
2	Public Holidays.....	6
3	Access Time Models	8
4	Access Periods	10
5	Access Points.....	12
6	Access Groups.....	18
7	Opening Hours	20
8	Access Profiles.....	22
9	Access Authorizations.....	24
10	Badges	26
11	Access profile assignments.....	32

1 Access Control Management Functions - Overview

Purpose

This function package includes functions required for the configuration of access authorizations for the access control system.

Implementation notes

You use the function package if:

- you want to use the HYDRA access control system (ZKS) to assign authorizations for accesses.

Integration

Further function packages of the access control system are based on the configurations of this function package.

Features

- Badges
 - Editing badges including validity period
 - Assigning a picture to the badge
 - Printing badge lists including free selection of the fields to be printed
 - Possibility of keeping a badge history that allows tracing of badge assignments
 - Automatic synchronization of badges in case of modifications in the HR master data (e.g. name changes, leaving employees)
 - Assigning badges to responsibility areas to control which users may view and edit the badges and their data.
- Accesses
 - Configuration of accesses including assignment of hardware properties (reader address, opener contact, input for status monitoring...)
- Access groups
 - Collection of accesses to form access groups with identical settings and authorizations
- Access time models
 - Access time models to control access authorizations for weekdays and public holidays
- Public holiday calendar
 - Public holiday calendar presenting differences in each location
- Opening hours
 - Definition of the times when an access point can be opened and when accesses and access attempts are logged.

- Access profiles
 - Definition of access authorizations via access profiles that are assigned to the badges. Modifications can be made with little effort. You needn't modify the authorizations of every single badge.

2 Public Holidays

Summary

Menu	Master Data → Access Control → Public Holidays
Transaction code	acph
Function authorization	acph

This application allows for public holidays to be configured for the access control function. Different authorizations and access times may be defined for the public holidays and other special days that are defined here.

Field Descriptions

Location

Location where this public holiday applies. If this field is empty the public holiday applies for all locations. As public holidays normally depend on the (federal) state/region, the corresponding state may also be entered in this field. The location of an access point is entered in the assigned [access group](#).

Public holiday type

There are three different types of public holidays: “public holiday”, “important public holiday” and “other day off”. Different periods may be assigned to these three types within [access time models](#).

3 Access Time Models

Summary

Menu	Master Data → Access Control → Access Time Model
Transaction code	actm
Function authorization	actm

An access time model includes one or several [access periods](#) when [access points](#) may be opened or people are allowed to enter the corresponding room. Access time models are used as [opening hours](#) for [access groups](#) as well as for the definition of [access authorizations](#) in [access profiles](#).

The screenshot displays the 'Access time models' application window. It features a top toolbar with icons for data management (Request, Cancel, Print), functions (Insert, Copy, Edit, Delete), and settings (Access periods, Save, Help). Below the toolbar is a 'Selection' section with checkboxes for 'Currently valid', 'Valid in the future', and 'Valid in the past'. The main area is divided into two panes. The left pane shows a table of access time models with columns for 'Access time model', 'Valid from', 'Valid until', and 'Designation'. The right pane shows the details for the selected model, including fields for 'Access time model', 'Valid from', 'Valid until', 'Responsibility area', 'Last editing' (Modified by and Modified on).

Access time model	Valid from	Valid until	Designation
1	7/28/1999		00.00am - 23.59pm
2	3/16/2000		Perman. open 6am-8pm
3	3/16/2000		Canteen
4	3/23/2000		Worktime
5	3/23/2000		10am - 04pm

Access time model details:

- Access time model: 1
- Valid from: 7/28/1999
- Valid until:
- Responsibility area:
- Last editing:
 - Modified by: 12345
 - Modified on: 5/22/2001 9:54:37 PM

Field Descriptions

Valid from, valid until

Validity period of the access time model. If an access time model is to be changed as of a specific date, one has just to copy the existing access time model to the corresponding "valid from" date. The "valid until" date of the previous entry is then automatically set to one day prior to the new validity start date.

Toolbar



Copy

The below dialog opens to copy an access time model. The number, validity start date and the designation of the new access time model may be entered in this dialog:

Copy

Main page

From

Access time model 1 ...

Valid from 7/28/1999

Designation 00.00am - 23.59pm

To

Access time model 1 ...

Valid from 1/1/1900

Designation 00.00am - 23.59pm



Access periods

Displays and edits the [access periods](#) for the selected access time model.

4 Access Periods

Overview

Menu	Master data → Access Control → Access time models → Access periods
Transaction code	acts
Function authorization	acts

You can define the periods when entrances are permitted for single weekdays and public holidays within the access periods of an access time model.

The screenshot displays the 'Access periods' configuration window. The main area shows a table with columns: Access time model, Valid from, Valid until, Designation, Time, and To. The table contains one entry with 'Access time model' 1, 'Valid from' 7/28/1999, 'Valid until' 00.00am - 23.59pm, 'Designation' 0:00, and 'To' 24:00. The right-hand pane contains settings for the selected access time model, including Weekdays (Monday to Friday), Weekend (Saturday, Sunday), Public holidays (Public holiday, Important public holiday, Other day off), Settings (Badge required, Pincode required, Office unlocked), and Logging (No logging, Access attempts only, Access attempts and accesses).

Field descriptions

Time, to

Start and end time of the access period.

Monday, Tuesday, ..., other days off

Weekdays for which the access period applies. In addition to weekdays, you can define access periods for the three types of [public holidays](#).

Badge required, PIN code required

Use these two buttons to specify whether the badge and/ or the PIN code is to be queried within the period. If both options are disabled the door is permanently open. These two options only apply, if you use the [access time model](#) to assign [opening hours](#) for an [access group](#). The system does not integrate these options, if you assign access authorizations.



You can only modify these two fields if the license *Extended access control* (ZKS-EZK) is available.

Open access (Office unlocked)

You can only enable an open access (office unlocked) for the entrance during access periods where the *office unlocked* option is set in the [opening hours](#) of the [access group](#). During these periods, an authorized badge can permanently open and close the access. When this period ends, the system automatically disables an "office unlocked" option that might still be enabled. In the [access authorizations](#), you can configure if a badge should be authorized for the "open access"/"office unlocked" option.



The "office unlocked" field is only available if the licenses *Extended access control* (ZKS-EZK) or the *Connection of offline components* (ZKS-SOK) are available.

Logging

Use this option to specify

- if logging takes place within the access period or
- if access attempts or
- access attempts and actual entries are recorded.



Kaba Benzing terminals do not support this logging option. Kaba Benzing terminals always log all entries and entry attempts.

5 Access Points

Overview

Menu	Master data → Access control → Access points
Transaction code	acpo
Function authorization	acpo

The access configuration includes different settings for the access. The reader's address and to which terminal the access is connected is defined here, for example. This application also provides for the assignment of the access to an [access group](#).

Field descriptions for the “access point” tab

Active

Specifies whether or not the access is active. Entrance is not permitted at an inactive access point.

Offline component

Offline components are access readers without permanent connection to the HYDRA server. Authorizations and access logs are synchronized via palm. This option has to be checked for offline components to enable synchronization with the palm.

Trigger clocking

This option defines whether or not a clock-in is to be generated automatically when entering this access or a clock-out when exiting this access. An auto-status clocking is generated when passing this access.

Access type

Specifies whether it is an entry, exit, passage or entry without checking. Any badge may open the access, provided that no checking is performed at this entrance.

Access group

[Access group](#) to which the access is assigned. An access can only be assigned to one access group. Access points having the same access authorizations and opening hours may be combined in an access group.

Terminal

Number of the terminal to which the access is connected. A maximum of nine entries may be assigned to terminals of the type CT-385 and CT-365.

Reader

Number of the reader that opens the door. The combination of terminal and reader results in a unique "hardware address". For this reason, this combination has to be unique throughout the system. When it comes to time recording terminals to which additional readers are connected for access control, reader 1 is reserved for time & attendance and must not be assigned to an access point of this terminal.

The access may also be monitored without a reader, using an input of the machine interface. The "reader" field is empty in this case.

Field descriptions for the "settings" tab**Channel: opener (normally closed contact)**

Channel number of the terminal to which an opener is connected. The value "0" is entered if it does not exist. This processing is only relevant to readers by MBB Gelma and for access points that are connected to a machine interface. The opener of the reader is set automatically for remote readers of the ORIS type series (irrespective of this configuration).

Relay time: opener (normally closed contact)

Duration of the signal that is used for triggering the opener.

The maximum relay time takes nine seconds for remote readers of the ORIS type series. The terminal ignores larger entries and changes them automatically to nine seconds.

Channel opener 2 (normally closed contact)

Second channel for the opener to which a webcam or an electronic door opener can be connected, for example.

Relay time: opener 2 (normally closed contact)

Duration of the signal that is used for triggering the second channel for the opener.

Delay time: opener 2 (normally closed contact)

A delay time can be configured for the second channel of the opener. Therefore, it is possible to trigger an electronic door opener only once the door opener relay has actually been activated. The delay time can be entered in tenths of a second.

Channel shutter (normally open contact)

Channel number of the terminal to which a shutter is connected. Zero is entered if it is not available. The shutter is a door contact that is used to close the door after the maximum time that is configured for the "open" status has passed.



This channel is not set, once the permanent door opening has expired.

Relay time: shutter (normally open contact)

Duration of the signal that is used for triggering the shutter.

Channel status

Channel number of the terminal where the signal has arrived indicating whether the access is opened or closed or 0 if it does not exist.

Channel opening pushbutton

Number of the channel where a pushbutton for opening a door is connected. This allows for the authorizations of the badge to be checked when entering the room and to open it using a pushbutton when exiting the room. The opening/unlocking pushbutton can only be connected to a machine interface or an MBB reader.



If the pushbutton for opening a door is connected to a machine interface, the offset 20 used for machine interface channels is automatically replaced by the terminal program and set to offset 60. This makes sure that apart from reading the current status of the pushbutton via the electrical input of the machine interface, it is also identified if the button has been pressed briefly and released immediately since the last communication with the reader. Channel 69 displayed in the terminal program corresponds to the machine interface channel 9.

Channel sabotage

Channel number of the terminal where the monitoring signal "sabotage" has arrived or 0 if it does not exist. This channel indicates when the terminal or badge reader (subject to the model) is opened without permission.

Maximum duration allowed for "open" status

The alert "opened too long" is triggered if an access, which was opened with permission, is opened longer than the time specified here. If 0 is entered in this field the terminal assumes that the door frame contact is not connected and suppresses all alerts referring to the opening time of the access.



The maximum time for opening the door amounts to 99 seconds for remote readers of the ORIS type series and Kaba Benzing terminals. The terminal ignores larger entries and automatically sets them to 99 seconds.

Block badge after successful access (anti pass back)

Within the specified time it is impossible to open all entries of an access group that are connected to the same terminal with the same badge. A value that is greater than 0 has to be entered to enable this processing. This function is only provided by terminals of the type CT-385 (not by Kaba Benzing terminals).

Report access status

This selection defines whether or not the access point status is to be sent to the HYDRA server. Possible values are "none" or "open and closed". Provided that the "alert system" function (ZKS-ALS) has been licensed, the selection is extended by "alarms only" and "all". The options "open and closed" as well as "all" result in an enhanced server communication and should only be selected for entries that are less frequently opened or where the "open" status is to be monitored by the escalation management function.

Cycle duration for reporting the access status

The current access status is sent to the HYDRA server, once the specified time has expired.

Reload access configuration

The access configuration is downloaded from the HYDRA server to the terminal after the specified time has expired. If several entrances are connected to a terminal all access points are configured with the cycle duration of the access point assigned to the least access number.

Reload authorizations

Authorizations are downloaded from the HYDRA server to the terminal, once the time specified here has expired. If several access points of the same access group are assigned to a terminal this setting is only processed by the access with the lowest access number of the access group and also applies for the other access points.



The values of all channels to be configured (opener, closer/shutter, status, sabotage) range between 1 ... 2, 21 ... 49 or 91 ... 92. The channels 1 + 2 are internal reader relays, while the channels 21 ... 49 are set on a machine interface that might be connected (channel 21 = machine interface channel 1, ...) or that set the corresponding relays for Kaba Benzing

terminals of the type 9290. The channels 91 and 92 are internal inputs and outputs of Windows terminals. With DOS terminals internal terminal inputs and outputs can be addressed via the channels 1 and 2. 0 is to be assigned to a channel that is not to be used.

Field descriptions for the “advanced settings” tab

Trigger alarm

Defines whether or not the alarm is to be triggered on the configured channel. If this field is not activated the alarm is not triggered.

Channel alarm

Number of the terminal channel where the alarm is output. A siren might be connected to this channel, for example. The internal relays 1+2 at the terminal or machine interface outputs (entry 21-49, whereas 21 corresponds to the machine interface channel 1) may be triggered.

Delay time alarm

In case a delay time is entered, the “open w/o permission” status is no longer set. Instead of this, the access switches to the “opened too long” status after this delay time and the maximum time for opening the door have expired.

Acoustic alarm at reader

Defines whether or not an acoustic alarm is to be triggered if one of the statuses “opened w/o permission”, “opened too long” or “sabotage” is available. This function is only provided by readers of the type series ORIS and S6D at Windows terminals as of ctwin version 7.2.3.67 onwards.

Channel alarm system

Number of the terminal channel to which an alarm system is connected. Access attempts are generally rejected if the alarm system is activated and this input is set.



The fields of the “alarm configuration” are only available, provided that the “alarm system” license (ZKS-ALS) has been purchased.

Entrance to room zone

A [room zone](#) that is entered through the access point may be entered in this field.

Exit from room zone

A room zone that is exited through the access point may be entered in this field.

Floor

A separate access can be created for each floor when an elevator control is in use. Consequently, different authorizations may exist for each floor. The access points of an elevator control are connected to the same reader and, as a result of this, the same value is entered in the fields “terminal” and “reader”. The floor number must be unique at a reader.

Security gate with access points

If an access is entered in this field, the currently selected access as well as the entered access build a security gate. When it comes to a security gate, only one of the assigned access points may be opened at a time. The entries of a security gate have to be connected to the same terminal.



The fields in the groups “room zone monitoring”, “elevator control” and “security gate function” are only available if the license “room zone, elevator control/security gate function” (ZKS-RAS) has been purchased.

Channel signal (bag check)

Number of the terminal channel where a signal is output, when a bag check is to be made. A rotating flashing beacon may be connected, for example, to this channel.

Relay time: signal (bag check)

Time in seconds of the signal that is used to activate the rotating flashing beacon.



The fields in the “bag check” group are only available if the “personnel check” license (ZKS-PKT) has been purchased.

Channel biometry, validity period


A stand-alone biometric system can be connected to HYDRA access control at this channel. The entrance is only opened if an authorized badge is read within the specified “validity period” after the biometric hardware has set the input (contact).

6 Access Groups

Summary

Menu	Master data → Access control → Access groups
Transaction code	acgr
Function authorization	acgr

This application manages the access groups existing in the access control system. One or several [entries](#) may be assigned to an access group. [Opening hours](#) as well as [access authorizations](#) are assigned for each access group.

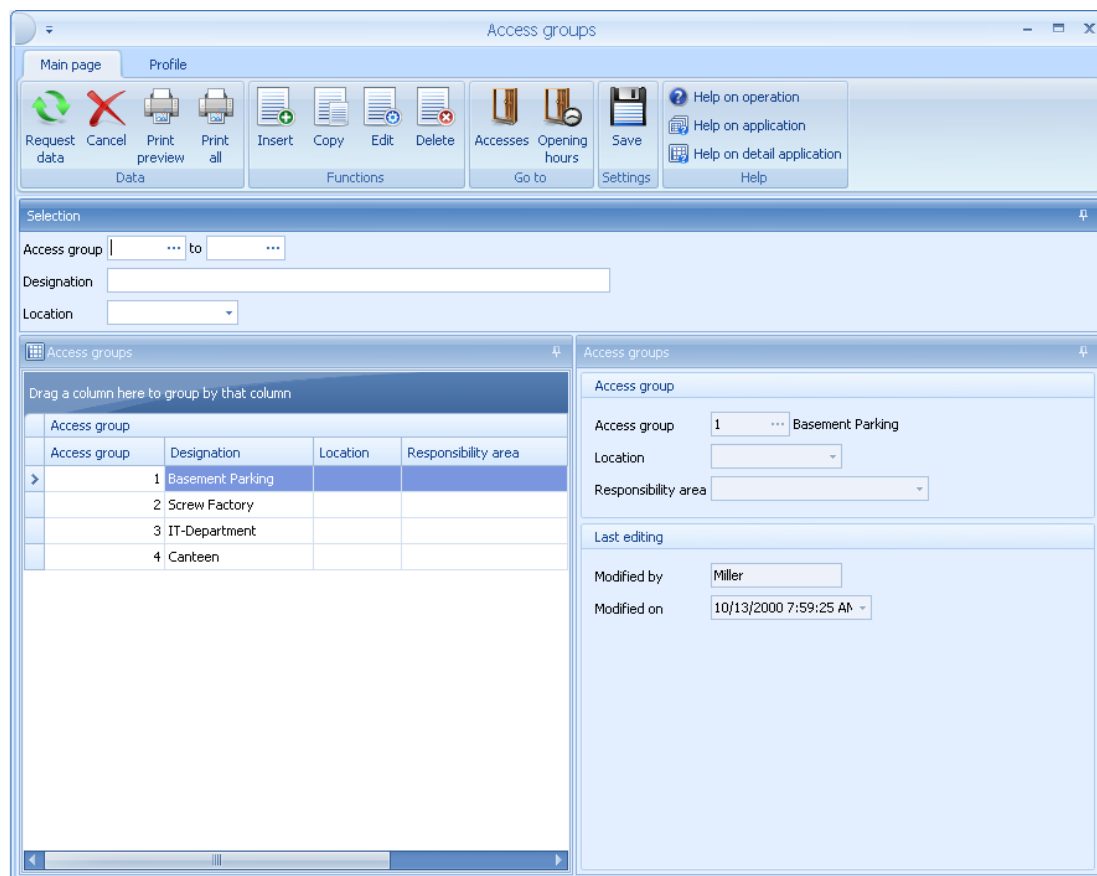

The screenshot shows the 'Access groups' application window. The window has a title bar 'Access groups' and a menu bar with 'Main page' and 'Profile'. Below the menu bar is a toolbar with icons for 'Request data', 'Cancel', 'Print preview', 'Print all', 'Insert', 'Copy', 'Edit', 'Delete', 'Accesses', 'Opening hours', 'Save', and 'Help'. The main area is divided into two panes. The left pane, titled 'Selection', contains a search bar for 'Access group' and 'Designation', and a table with columns 'Access group', 'Designation', 'Location', and 'Responsibility area'. The table lists four entries: 1 Basement Parking, 2 Screw Factory, 3 IT-Department, and 4 Canteen. The right pane, titled 'Access groups', contains a search bar for 'Access group' and 'Designation', and a 'Last editing' section with fields for 'Modified by' (Miller) and 'Modified on' (10/13/2000 7:59:25 AM).

Field Descriptions

Location

Location of the access group. The "location" field is an optional field. Public holidays are assigned using the "location" field, provided that different public holidays exist for different locations.



If the [access time model](#) 1 is available an [opening time](#) that includes this access time model is created automatically, when a new access group is created.

Toolbar



Accesses

Shows the [entries](#) for the selected accesses group.



Opening hours

Shows the [opening hours](#) for the selected access group.

7 Opening Hours

Summary

Menu	Master Data → Access Control → Opening Hours
Transaction code	acoh
Function authorization	acoh

Opening hours are times when an entrance is released after having checked access authorizations. It is impossible to open an entrance/access of this group outside of the opening hours for an access group. [Access time models](#) are assigned to [access groups](#) to define opening hours.

Opening hours

Main page Profile

Request data Cancel Print preview Print all Insert Copy Edit Delete Save Help on operation Help on application Help on detail application Help

Selection

Access group ... to ...

☒ Currently valid ☒ Valid in the future ☐ Valid in the past

Opening hours

Drag a column here to group by that column

Access group	Designation	Access time model	Designation
1	Basement Parking	4	Worktime
2	Screw Factory	4	Worktime
3	IT-Department	1	00.00am - 23.59pm
4	Canteen	3	Canteen

Opening hour

Access group 1 ...

Designation Basement Parking

Access time model 4 ...

Designation Worktime

Validity

Valid from 7/18/2010

Valid until

Last editing

Modified by 12345

Modified on 4/8/2011 1:39:07 PM

Field Descriptions

Access time model

[Access time model](#) to define the [access periods](#) when accesses to the access group are allowed.

Valid from, valid until

Validity period for opening times. If the end of the validity period is not defined, opening hours are valid without restrictions.



Only one opening time may be active for an access group. Different opening times may only be defined for an access group if these periods do not overlap.



If no opening hours are defined for an access group, doors of this access group cannot be opened.

When a new access group is created, an opening time with the [access time model](#) 1 is defined automatically, provided this model is at all available.

8 Access Profiles

Summary

Menu	Master Data → Access Control → Access Profiles
Transaction code	acpr
Function authorization	acpr

[Access authorizations](#) are defined by way of access profiles. When access profiles are created, they may be distinguished either by the location (e.g. administration, hall 1, warehouse, etc.) or by different activities (e.g. employees working in production, janitor, system administrator, etc.). Several access profiles may be assigned to a badge.

The screenshot shows the 'Access profiles' application window. The left pane displays a list of access profiles:

Access profile	Designation	Responsibility area	Last modified
1	Ward		Miller
2	Workers		Miller
3	Administration		Miller
4	Parttime Assistants		Miller
5	Boss		Miller
6	IT-Department		Miller
999	Basic Authorization		Miller

The right pane shows the details for the selected profile (1):

Access profile: 1
 Designation: Ward
 Responsibility area: [dropdown]
 Last editing:
 Modified by: Miller
 Modified on: 1/2/2000 2:10:10 PM




Access profiles provide the advantage that changes to the profile affect all badges that are assigned to it. Consequently, it is not required to revise each badge individually.

Toolbar



Copy

The following dialog opens to copy an access profile:

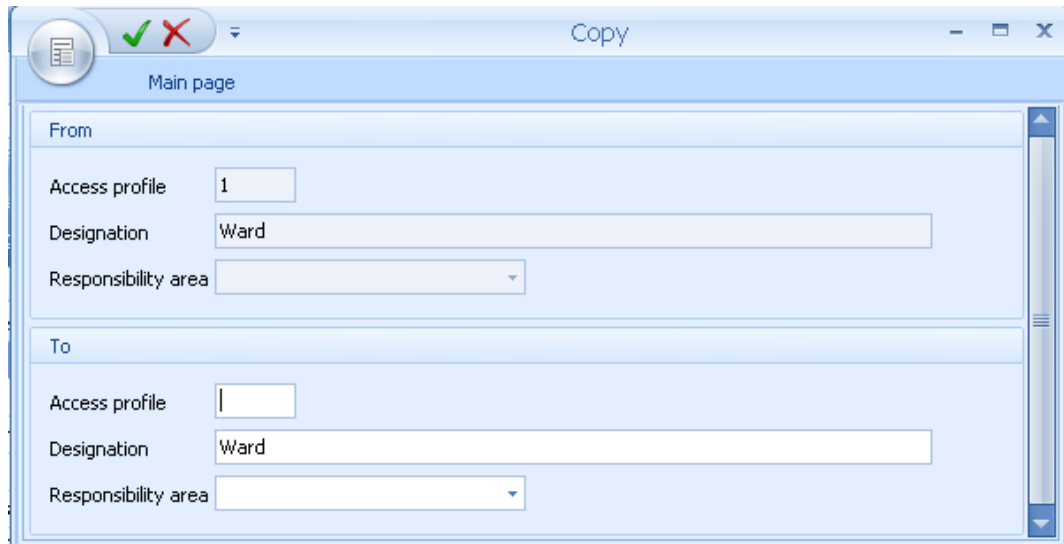

The image shows a 'Copy' dialog box with a title bar containing a document icon, a green checkmark, a red X, and a dropdown arrow. The main area is divided into two sections: 'From' and 'To'. Each section contains three fields: 'Access profile' (a text box with '1' in the 'From' section and an empty box in the 'To' section), 'Designation' (a text box with 'Ward' in both), and 'Responsibility area' (a dropdown menu in both). The dialog has standard window controls (minimize, maximize, close) in the top right corner.



Along with the access profile, the [access authorizations](#) of the selected profile are copied as well.



Access authorizations

Displays and configures [access authorizations](#) for the selected access profile.



Access profile assignment


Opens [access profile assignments](#) for the selected access profile.

9 Access Authorizations

Overview

Menu	Master Data → Access Control → Access Profiles → Access Authorizations
Transaction code	acau
Function authorization	acau

Access authorizations are defined for [access profiles](#) by assigning [access groups](#) and the corresponding [access time model](#).

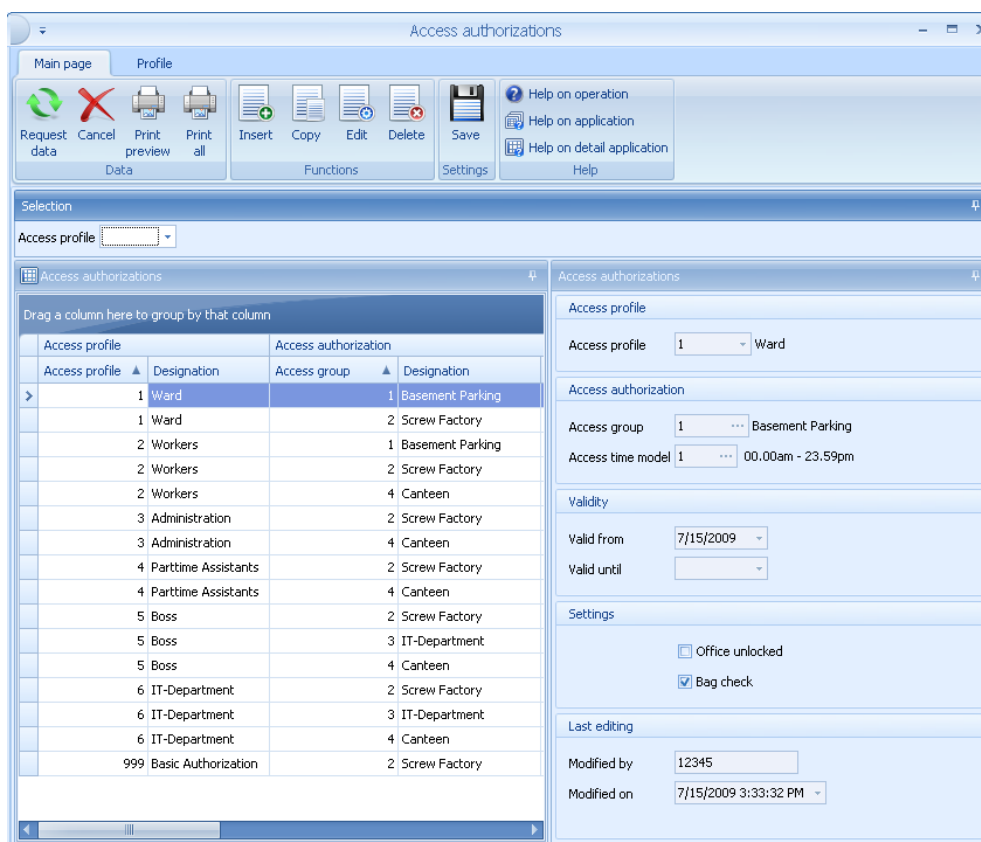

The screenshot displays the 'Access authorizations' window in SAP. The main table lists access authorizations with the following data:

Access profile	Designation	Access group	Designation
1	Ward	1	Basement Parking
1	Ward	2	Screw Factory
2	Workers	1	Basement Parking
2	Workers	2	Screw Factory
2	Workers	4	Canteen
3	Administration	2	Screw Factory
3	Administration	4	Canteen
4	Parttime Assistants	2	Screw Factory
4	Parttime Assistants	4	Canteen
5	Boss	2	Screw Factory
5	Boss	3	IT-Department
5	Boss	4	Canteen
6	IT-Department	2	Screw Factory
6	IT-Department	3	IT-Department
6	IT-Department	4	Canteen
999	Basic Authorization	2	Screw Factory

On the right side of the window, the following fields are visible:

- Access profile:** 1 - Ward
- Access authorization:**
 - Access group: 1 - Basement Parking
 - Access time model: 1 - 00.00am - 23.59pm
- Validity:**
 - Valid from: 7/15/2009
 - Valid until: (empty)
- Settings:**
 - ☐ Office unlocked
 - ☒ Bag check
- Last editing:**
 - Modified by: 12345
 - Modified on: 7/15/2009 3:33:32 PM

Field Descriptions

Valid from, valid until

The field for the validity start date of an access authorization has always to be filled out, but the field for the validity end date may be empty. In this case, the access authorization is valid without any restriction.

Office unlocked

This option specifies whether or not the badge may unlock the [accesses](#) of the entered [access group](#). Offices can only be unlocked during access time periods coinciding with the [opening hours](#) of the access group and for which the option "office unlocked" is enabled.

Bag check

This option defines whether or not a possibly configured bag check/search is to be carried out for people opening an access due to this access authorization. This option allows for a bag check to be suppressed for certain people.



The "bag check" field is only available if the "personnel checking" license (ZKS-PKT) is active.

10 Badges

Overview

Menu	Human resources management → Access control → Badges Master data → Access control → Badges
Transaction code	badg
Function authorization	badg

You use this application to manage the existing badges and the respective owners.

The screenshot shows the 'Badges' application window. The main area displays a table of badges with columns: Badge, Valid from, Valid until, Badge type, and Name. The table lists various badges and their details. To the right of the table is a 'Detail' section with tabs for 'Badge', 'Additional info', and 'Last editing'. The 'Badge' tab shows fields for Badge number, Badge type, Person, Company, Last name, First name, Pin code, and Responsibility area. Below these are 'Validity' fields for Valid from, Valid until, and a 'Block badge' checkbox.

Available user fields

Where	Object type/user field key	Source (type)
Table and detail view	KNR/SYSTEM	Badges (HR)

[How to configure user fields?](#)

[Which user field types are available?](#)



If you create a person, a badge is automatically created for this person, if a badge number has been entered in the [HR master data](#).

Field descriptions

Badge

The badge number can include numbers (0-9) and the letters A-F.

Badge type

Define the badge type. The following badge types are available:

Employee	An employee's badge
Replacement	An employee's replacement badge
Visitor	Visitor's badge
Free	Free badge that is currently not used. It can be assigned to a new person.



The badge types *Replacement*, *Visitor* and *Free* are only available, if the license *Advanced access control* (ZKS-EZK) or *Management of visitor badges* (ZKS-BAV) is available.

Person, company

In case of staff badges and replacement badges, you must assign the badges to a person and a company. Visitor badges are created with the personnel number 0.

Last name, first name

Enter the person's last name and first name. If you select a personnel number, the two fields are automatically populated with the person's names from the HR master data.

PIN code, Confirmation

If you enter a PIN code in the reader, the badge cannot be misused by unauthorized persons. This function is not available for all terminal types. For Kaba Benzing terminals, this PIN code must be numeric and requires four digits. If you change the PIN code, the digits are masked by asterisk and must be entered a second time in the field *Confirmation*.

Responsibility area

You use the responsibility area to control the users who have access to a badge.

Valid from, to

You can define a validity period for a badge. If you do not enter an end date, the validity of the badge is unlimited. You can restrict the validity time on the first and last day of validity using the time fields. The validity time is only processed by terminals of type CT-385. You can restrict the validity time, but you cannot create a badge for multiple time periods of one specific day.

Input with keyboard

This option specifies if you can enter the badge number instead of using the biometric data for identification. You can use this option if the biometric data cannot be read.



For security reasons, we recommend to use this option only in combination with additional PIN code entry.

Input with badge

This option specifies if you can read the badge via RFID instead of using the biometric data for identification. You can use this option if the biometric data cannot be read.

Block badge

You use this option to block a badge. Blocked badges are not allowed to enter any access points. They are used to document the previous function and user.

Comment, Comment 2

You can enter any information in the comment fields. For example, it might be useful to enter a comment for visitor badges (company and purpose of the visit).

Contact person

For visitor badges, you can store the personnel number of the contact person.

Number plate

You can store the number plate of the badge owner in this field.

Badge handout, Badge return

Point in time when the badge is issued or returned.

Picture recording

Point in time of the last image assigned to the person.

Badge printing

Point in time when the function *Badge printing* was last called for this badge.

Badge layout

In this field, enter the badge layout to be used for this badge.

Badge layout printed

This field shows the badge layout that was last used for this badge.

Additional info

In tab *Additional info*, up to 30 fields are available. Name, length and position of the user fields can be configured in the [Configuration of badge fields](#).

Toolbar



Edit all selected badges

Function authorization: badg.massedit

You can use this function to edit data of several badges at the same time. You can select up to 10 HR master data fields and assign a value:

The screenshot shows a window titled "Edit all selected badges". Inside the window, there is a tab labeled "Main page". Below the tab, there are ten rows, each consisting of a text label "Please select field" followed by an empty text input box. The window has a standard Windows-style title bar with a green checkmark icon, a red X icon, and a dropdown arrow on the left, and minimize, maximize, and close buttons on the right.



Badge handout

Function authorization: badg.handout

Opens a dialog to enter the point in time when the badge is issued. The point in time of the badge generation is preassigned.

**Badge return**

Function authorization: badg.return

Opens a dialog to enter the point in time when the badge is returned. Returned badges are automatically blocked and the validity end date is set to today if the end date is empty or the date is in the future.

**Badge printing**


Function authorization: badg.print

Opens a window to print the selected badges.

**Modify image**

Function authorization: badg.picture

To assign an image, the following dialog opens:

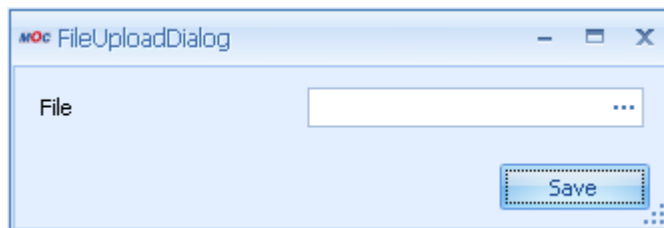**HR master data**

Calls the [HR master data](#).

**Access authorizations**

Shows the [Access profile assignments](#) for the selected badge.

**Access log**

Calls the [Access log](#) of the selected badge.

**Room zone overview**

Calls the [Room zone overview](#) of the selected badge.

**Badge layouts**

Function authorization: bala

Calls the configuration of the [Badge layouts](#).



Report designer

Function authorization: bala

[Design](#) of the selected badge layout. You must first request data, then you can call the function.

Integration

Synchronization of HR master data and badges

If you make changes in the HR master data, specific badge data are synchronized.

Company

Name and first name

PIN code

Picture

Additional information (configured HR master data and badge fields)

Date of joining and date of leaving

The system only synchronizes the additional information that has the same designations, data types and field formats.

Badges that were valid in the past are not changed. If you change name, company or an additional info field in the HR master, a new version is created in the badges, if required. Picture and PIN code are synchronized for all versions.

If the date of joining specified in the HR master data und the start of validity of a badge were identical, the start of validity changes if you change the date of joining. The same applies for the date of leaving in the HR master data.

For the date of joining and leaving, there are some restrictions. For example, you cannot change dates of the past and the validity time of badge versions must not overlap. The badge version is deleted if the start of validity of a badge is later than the end of validity after synchronization of the date of joining or leaving. Start and end of a badge validity can be moved, but not to an earlier point in time than the start of validity and not to a later point in time than the end of validity specified in the changed HR master data version.

And also vice versa, changed badge data is synchronized with specific data fields in the HR master data. For further details, refer to the documentation of the HR master data.

11 Access profile assignments

Overview

Menu	Human resources management → Access control → Access profile assignments Master data → Access control → Access profile assignments
Transaction code	acpa
Function authorization	acpa

You use [Access profiles](#) to define [Access authorizations](#). You then assign the access profiles to the [Badges](#). In doing so, you define the authorizations of the badges. You can assign several access profiles to one badge.

The screenshot displays the 'Access profile assignments' window in SAP. The main area contains a table with the following data:

Badge	Person	Com...	Name	Access profile	Designation
0149	10003645	0001	Hoffman, Paul	6	IT-Department
2005	10002854	0001	Baker, Jake	4	Parttime Assistants
2011	10002541	0001	Berry, Claire	5	Boss
1458	85741	BSP	Meyers, Joseph	2	Workers
2223	93856	BSP	Miller, Steven	6	IT-Department
2455	50014	BSP	Albert, Claudia	4	Parttime Assistants
2458	50201	BSP	Meyers, Harald	5	Boss
6541	96665	BSP	Hanson, Betty	6	IT-Department
8555	667	BSP	Smith, Christian	1	Ward
8556	885	BSP	Burger, Simone	2	Workers
3434	56456	BSP	Flint, Eric	999	Basic Authorization
4789	40789	BSP	Sheen, Edward	999	Basic Authorization
4563	40563	BSP	Green, Mary	999	Basic Authorization
0149	10003645	0001	Hoffman, Paul	999	Basic Authorization

On the right side of the window, the following fields are visible:

- Badge:** 0149 Hoffman, Paul
- Person:** 10003645
- Company:** 0001
- Access profile:** 6 IT-Department
- Validity:**
 - Valid from: 1/3/2010
 - Valid until: (empty)
- Last editing:**
 - Modified by: Miller
 - Modified on: 2/21/2011 2:40:34 PM

Selection criteria

If you use selection criteria for the fields of the badge (e.g. the personnel number), the system always uses the selection criteria of the badge version that is valid today.

Checking the responsibility area authorization

If you display the list of access profile assignments, the list shows the access profile assignments with a validity period that includes at least one badge version that authorizes the user to "show".

If you edit the access profile assignments, the system checks if at least one badge version is available in the validity period of the access profile assignment that authorizes the user to "Use". The user must also be assigned the option "Use" for the responsibility area of the access profile.

If you copy from/to a badge, the system only checks the responsibility area of the badges, and not the access profiles. If you use the function "Copy all selected entries", the system checks each individual access profile assignment. It is the same check than if you create individual access profile assignments.

Field descriptions

Valid from, valid until

You can use these two fields to limit the validity period of the access profile assignment. If you leave these fields empty, the validity of the assignment is not restricted.

Fields of the badge (name, personnel number,...)

The fields of the badge version that is valid today are shown.

Toolbar



Copy all selected entries

Function authorization: `acpa.masscopy`

Use this function to copy several access profile assignments at the same time:

You can use the checkboxes to enable each of the 4 fields *Badge*, *Access profile*, *Valid from* and *Valid until*. If you copy the entries selected in the table, the system only copies the fields that are enabled.



Edit all selected entries

Function authorization: `acpa.massedit`

Use this function to edit several access profile assignments at the same time:

You can use the checkboxes to enable each of the 3 fields *Access profile*, *Valid from* and *Valid until*. If you edit the entries selected in the table, the system only takes over the fields that are enabled.

