

1 PDV Functions - Process Visualization in AIP

Purpose

As a part of the basic HYDRA-PDV functionality, the AIP terminal program transfers inspection plans to the respective interface via MWP2 or a driver DLL. Vice versa, the AIP terminal then transfers incoming measured values to the HYDRA server.

The process visualization function allows to monitor the status of measurement channels at the AIP terminal.

1.1 Display of measuring channels

By pressing the "PDV" button in the "workplaces" section of the AIP terminal it may be switched to the respective display. The measuring channels of the machine selected in the basic screen are shown. The workplace may also be changed in the HYDRA-PDV view. An empty HYDRA-PDV dialog will be opened if no measuring channels are configured for the selected machine.

The value range of all displays corresponds to the tolerance range of the respective measuring channel configured within the inspection plan.

Different modes are available to display measuring channels. The mode may be chosen from the lower button bar.




Pointer display

Measuring channels are displayed as pointers. All of the up to 16 configurable measuring channels of a machine are also displayed at the same time.




Digital representation

Measuring channels are represented as digital values. All of the up to 16 configurable measuring channels of a machine are also displayed at the same time.

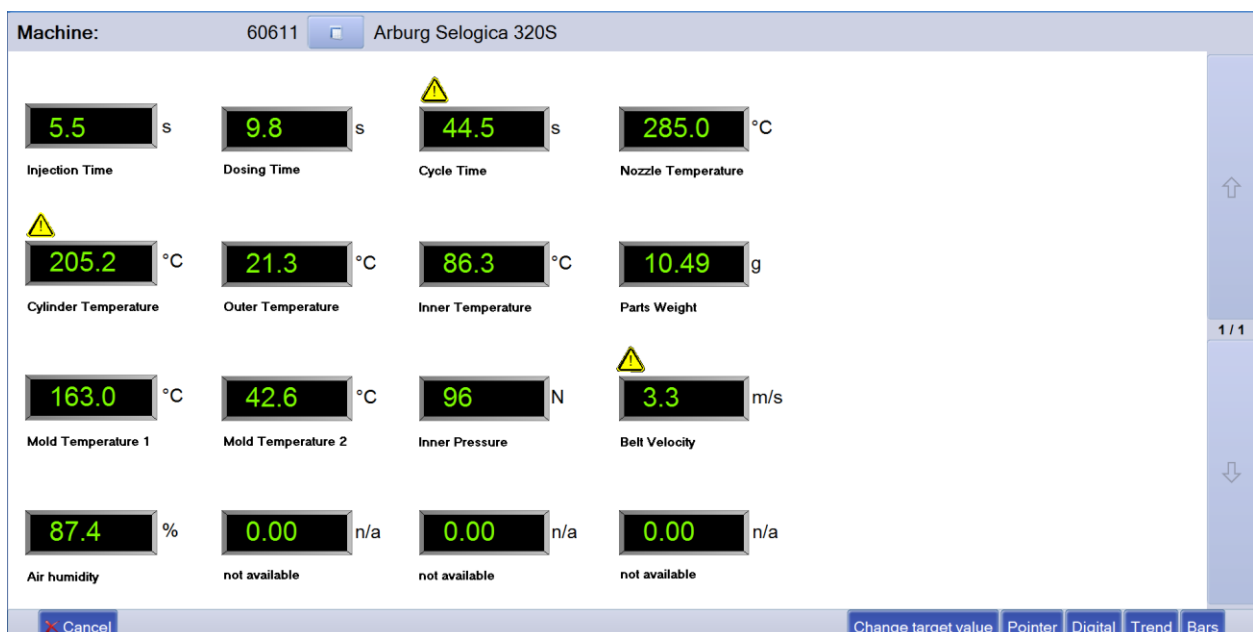


Trend display

The progress including a corresponding legend is shown for each process parameter in a graphic. The other process parameters can be reached by the arrow keys at the right margin of the screen.

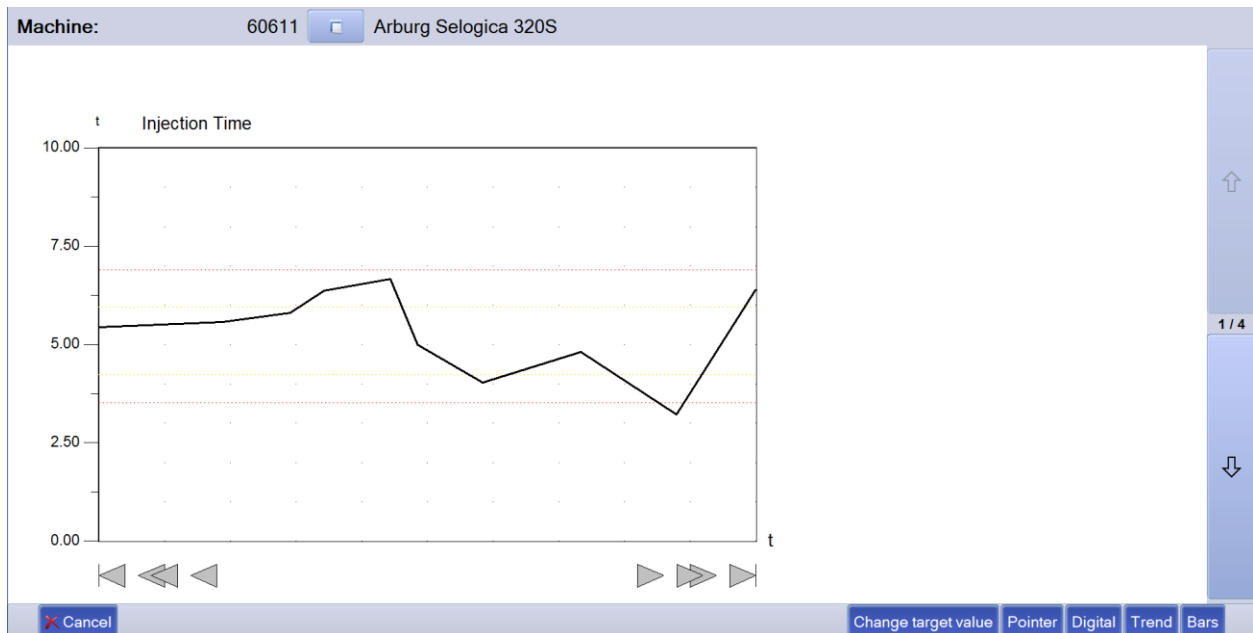

Bar display

Measuring channels are displayed as bars. All of the up to 16 configurable measuring channels of a machine are displayed at the same time:

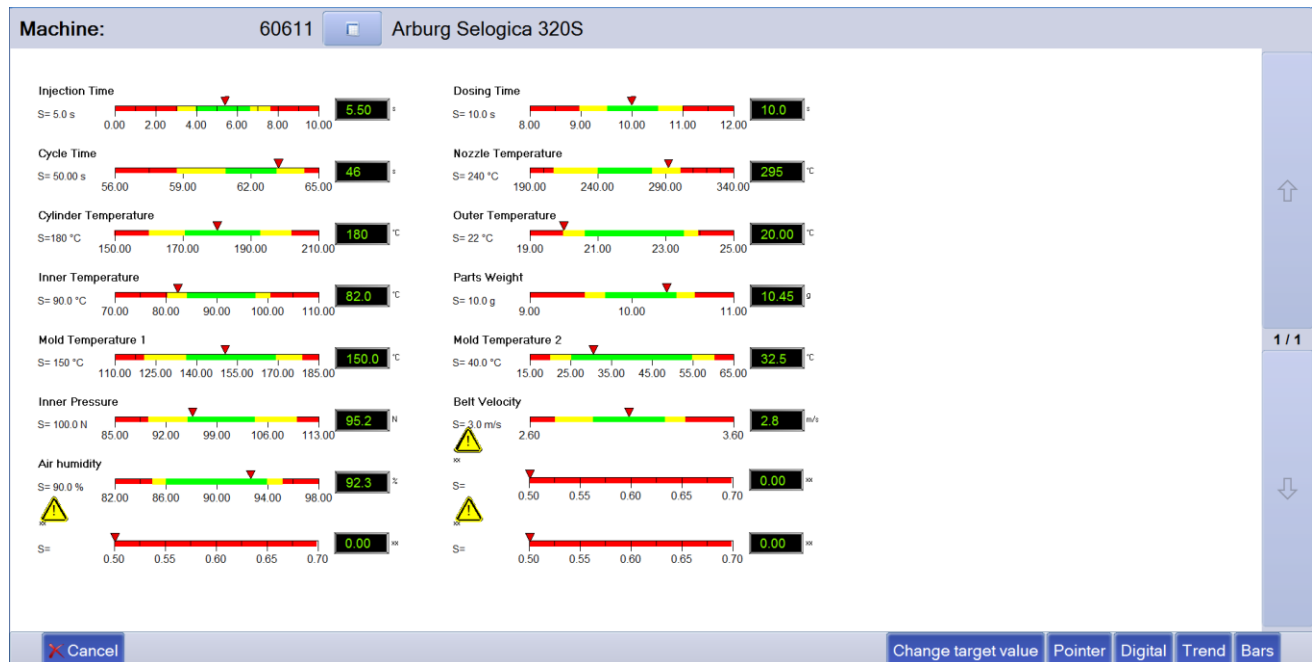

1.2 Change default value

Default values represent, among other things, a decisive factor when process data are displayed. They may be changed by clicking the “change default value” button.

Posting procedure

The required workplace has to be selected, before changing default values.

Starting of the “change default value” function

The “change default value” button is to be clicked. As soon as the function has been started, the user is navigated through the dialog. The workplace has already been defined.

Select process parameter

Change target value for process parameter at machine 60611

1 Choose process parameter 2 Change target values

Machine 60611 ARB-320S

Actual status UNDEFINED since 11.10.2010 14:00:00
Duration 15022:36:0

Filter

Cancel Go on

The required process parameter, the default values of which have to be changed is to be chosen from the available list.

Change default values

Change target value for process parameter at machine 60611

1 Choose process parameter 2 Change target values

Operation 0100 InjectionMolding

Prod.Order S6100328 Article SAL-OSI011-K-9001
Mirror housing left, crem

Process parameter ()

Upper tolerance limit
Upper process interv. limit
Target value
Lower process interv. limit
Lower tolerance limit

New target value

Actual target value

Staff Number

Cancel Back Change target values

The individual values that are to be changed are entered in the dialog that opens. This dialog shows the previous values as well as the new default values. The following values are concerned:

- **Upper tolerance limit**

- *Upper process action limit*
- *Target value*
- *Lower process action limit*
- *Lower tolerance limit*

Badge number

The badge number of the person changing the data is to be entered here.

Confirmation of “change default values”

The default values are updated in the system by confirming the dialog. They in turn affect HYDRA-PDV display at the AIP terminal.