

1 AIP2 -Local Configuration


1.1 Local Configuration ctaip.ini

The most important hardware and system settings are defined for each terminal in the CTAIP.INI file of the C:\MPDV\AIP2 directory.



Changes to the configuration file ctaip.ini are only enabled after rebooting the terminal software.

Layout configuration

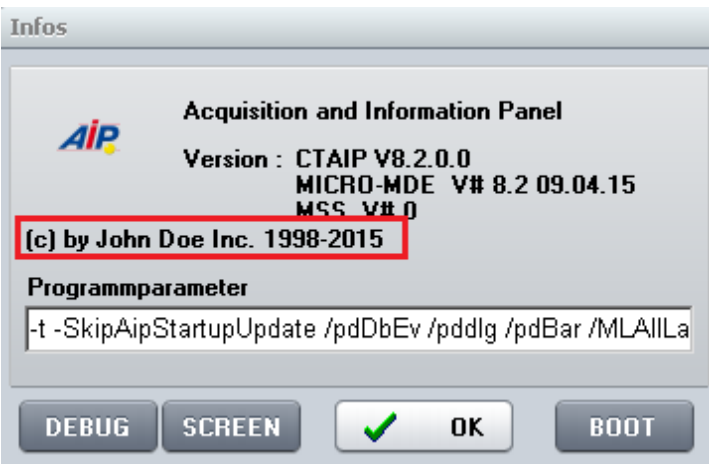Entry	Comment
Section [system]	
CompanyInfo=(c) by John Doe Inc. 1998-2015	Overwrites the copyright text in the "About" dialog 
parameters= ... -t +t	The virtual keyboard can be disabled/enabled, irrespective of the terminal type.
DEMO_ALL=ON	The information in the lower bar are normally hidden in demo mode. This option, however, causes all pieces of information to be displayed even in demo mode (version number and date, server, terminal number, online lights).
parameters= ... - SkipDynDlgExtraction...	Internal option preventing the extraction of dialog fields/buttons when updating dialog data. (Only applies if WF directory ".\spool\swf.\$\$\$" is available)
parameters= ... - SkipAipStartupUpdate...	Internal option preventing the configuration files (*.ini,*.cfg,*.cfi) of the module DLLs (packets*.dll) and application DLLs (functions*.dll) from being synchronized when starting the terminal.
VirtScreenSize=640	All windows are started with the indicated resolution

Entry	Comment
VirtScreenRatio=16:9	The display ratio remains if the configuration VirtScreenSize is used to reduce the window. The width-to-height (aspect) ratio can be changed using VirtScreenRatio. Consequently, the width-to-height ratio 16:9 can be tested with a 4:3 monitor and vice versa. The value can be configured as "16:9" or as floating point value (e.g. 1,77777). Note: Information screens are specifically scaled if monitor screens in portrait format (e.g. 9:16) are used. This special scaling can be disabled in hytnrcfg.ini: [Tnr Konfiguration 0]->PortraitAlignment=off
Section [SKIN]	Configurations for the terminal's skin (see ctaipplay.ini) The online configuration of the terminal can be reached by the info dialog (click MPDV icon). ALT+F1 opens the control elements for the skin. Please note: Only in the design/GUI of AIP 8.1 and/or the dynamic dialogs
Saturation=0	Skin configuration / Default = 0
Hue=0	Skin configuration / Default = 0
Name=mpdv	Skin to be used / Default = mpdv
Active=false	Skins can only disabled in ctaip.ini! Default = true

Entry	Comment
Section [system]	
Ustr=21	Distinct terminal number
Hostname=192.9.200.24	Internet address of the server
Offlinetimeout=600	The interval after which online access should be attempted the next time. The interval is specified in seconds
Showcursor=on	Show or hide mouse pointer in terminal application: on: mouse pointer active off: mouse pointer inactive
Loadfile=ctnet\win\aip2.txt	Configuration file to download the application from the server. The paths is relative to the installation directory of the system.
Watchdog=on	ON: Watchdog is activated OFF: Watchdog is not activated

Entry	Comment
Demo=off	'on': Offline demo mode; always off in the production environment!
parameters=-t	The -t parameter switches off the virtual keyboard.
TMOUT_C=xxx	Timeout for CONNECT to the server If not specified, default = 10 seconds → Increase to 20 seconds for routing
TMOUT_S=xxx	Timeout for SEND to the server If not specified, default = 10 seconds → Increase to 20 seconds for routing
TMOUT_R=xxx	Timeout for RECEIVE of the server If not specified, default = 120 seconds
TMOUT_F=xxx	Timeout for FILESERVER operations to the server If not specified, default = 10 seconds → Increase to 20 seconds for routing
Section [barcode]	Configuration of customized barcode prefixes.
BarKenn90=MNR4 ... BarKenn99=ANR3	BarKenn90 > defines the prefix (here: 90); The ID from the dialog (= acronym) is assigned.
Section [comports]	
com1=0 com2=MSS com3=BAR Com3=LEGIC Com4=RFLESER	Assignment of serial interfaces to connected devices: MSS – machine interface BAR, LEGIC, RFLESER – various reading devices
Section [MSS-INIT]	
MSS_DIALOG=10	If the terminal is switched off longer than 15 minutes, a dialog is displayed on terminal restart. The user must then decide whether the counter pulses, which were recorded when the terminal was closed, are posted or discarded. The dialog closes automatically with "Yes" after an entered time has elapsed; in this case the counting impulses are posted. This value configures the time in seconds the dialog is open. If the terminal is switched off for less than 15 minutes, no dialog is opened; the counting pulses recorded in the switch-off phase are accepted and posted without confirmation. Please note: The value can also be configured in hytnrcfg.ini. Entries in the hytnrcfg.ini file take priority.

Entry	Comment
MSS_FILEAGE_MIN=5 MSS_FILEAGE_OVERTIME=delete	Additional configuration for MSS_DIALOG If the backup file for counting pulses of the terminal is older than 5 minutes, no dialog is opened and the back up file deleted. Quantities recorded at the time when the terminal was closed are not used/posted. Please note: The value can also be configured in hytnrcfg.ini. Entries in the hytnrcfg.ini file take priority.
Section [ext. software]	
Button=Editor WindowName=Editor SearchParts=On	Configuration of the button in the top line: A previously started program can be brought to the foreground at the push of a button. Button: button caption WindowName: Name of the program (e.g. from the taskbar). SearchParts=On: Parts of WindowName are sufficient SearchParts=Off: WindowName must be entered completely. The option "SearchParts=On" is recommended for programs such as MSWord that change the title bar subject to the document that is currently being loaded.
ProgFileName=c:\Programme\wincmd\Wincmd32.exe	The program that is started if the program mentioned above cannot be called to the foreground.
AutoStart=on	This option starts the program (ProgFileName) when starting the terminal program.
Section [DLL]	
BusDLL=PCC.EXE	PCC.EXE must be entered here if the terminal is configured with the option "operated as HYDRA-MDE terminal". If necessary, the AIP2 enters this value independently upon starting the program.
Section [PDV]	
PDVProtokoll=ON	Enables PDV logging (prot_pdv.txt) (by default=OFF)
PDVIOPODir=c:\IOPSim\	Path for DNC
Section [CAQ]	
;Supported barcodes	
FieldWNRBarcodeOnly=Y	If this entry is set the tool number may only be entered using a scanner.
FieldNestBarcodeOnly=Y	If this entry is set the cavity number may only be entered using a scanner.
FieldNummBarcodeOnly=Y	If this entry is set the number may only be entered using a scanner.
FieldKNRBarcodeOnly=Y	If this entry is set the badge number may only be entered using a scanner.

Entry	Comment
BarcodeWNR=	This field specifies which acronym is entered into the tool number field by the scanner.
BarcodeNest=	This field specifies which acronym is entered into the cavity number field by the scanner.
BarcodeNumm=	This field specifies which acronym is entered into the number field by the scanner.

1.2 PNG – Files / Bitmaps

The use of PNC files is recommended by MPDV. By default PNG files have a size of 24 x 24 px.

1.2.1 File pict.zip

The file "pict.zip" is updated by the installation tool "inst32.exe" while downloading and includes all default PNG files.

The default PNG files can be overwritten in the file pict_cust.zip. Several PNG files have the extension ".small.png" (e.g. aip.small.png). These PNG files are used with a screen resolution of 640x480.


1.2.2 File pict_cust.zip

The file "pict_cust.zip" is loaded from the server directory (e.g. \<serverDir>\1\custom) when starting the program (as is the case for the hycust.mld).

Customized PNG files may be stored in this file and loaded by the AIP2 terminal. Default PNG files may also be "overwritten".


Please note: file sizes are not adjusted.

Customize header



The AIP icon displayed in the header can be replaced by storing a separate AIP.png file in the pict_cust.zip file.

This AIP icon will also be replaced in the "About" dialog.

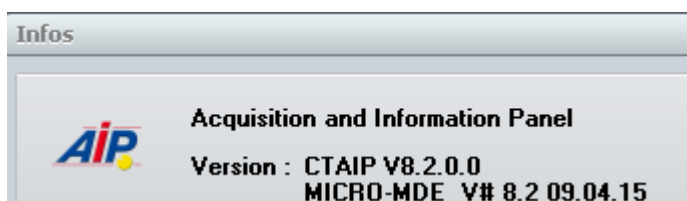


Customize footer



The MPDV icon displayed in the footer can be replaced by storing a separate company.png file in the pict_cust.zip file.

Customize PZE dialog

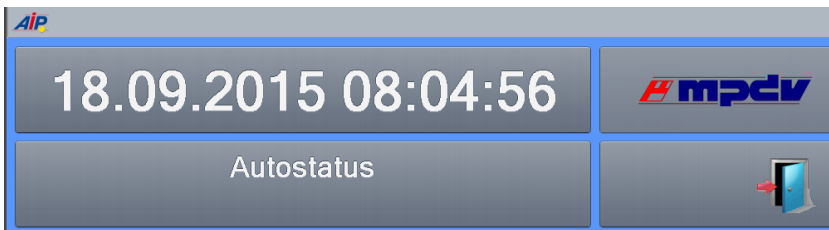

The MPDV icon displayed in the PZE dialog can be replaced by storing a separate pze_mpdv.png file in the pict_cust.zip file. In case the PZE terminal is operated with a screen resolution of 640x480, a customized pze_mpdv.small.png file has to be integrated in the pict_cust.zip file.

1.3 Multilingualism (*.mld files)

The below-mentioned files are required for the translation of the application. The table shows the priorities for the translation, ownership and the relevant storage locations.

Priority	File	Server directory	Owner	Description
1	ctaipkd.mld	./ctnet/win/aip2/custom	Customer	Customer-specific translations
2	hycust.mld	./1/custom/	MPDV	Customized translations by MPDV. The file is used by the AIP2, CTAIP and CTWIN terminal.
3	ctaip.mld	./ctnet/win/aip2	MPDV	Standard translation file