

1 AIP2 - Local Configuration File ctaipplay.ini

The layout is configured for specific terminals in the file ctaipplay.ini stored in the terminal directory C:\MPDVAIP2.

The layout is configured for specific terminals in the file ctaipplay.ini stored in the terminal directory C:\MPDVAIP2.

This file is basically used for the configuration of grids in AIP2.

The complete standard INI files are located on the server directory \mip\ctnet\win\aip2
Any deviations from the standard are created in the customer-specific directories provided for this purpose, e.g. \mip\1\custom\aip2\tgrp_901.



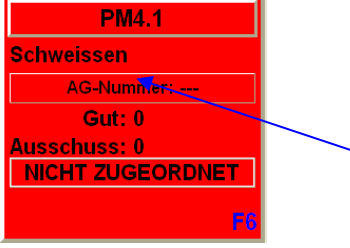
Create the corresponding, empty file (e.g. ctaipplay.ini) in this directory. Modified sections are copied to this file. Make the respective configurations in this file.

After restarting the terminal, files from the main directory \mip\ctnet\win\aip2 are merged with files from the customized directory \mip\1\custom\aip2\tgrp_901. Then the merged file is transferred to the local terminal directory C:\MPDVAIP2.




Changes to the configuration file ctaipplay.ini will not take effect until the terminal software has been restarted.

Entry	Comment
Section [OP info]	
Deaktiviert=AG_Bmk,AG_Fort	- indicated info pages are not shown - AG_Info (OP info) cannot be disabled - Entries affected by sorting are not disabled.
Sortierung=AG_TechInfo,*	- Order of info pages in the icon list - if the list ends with " ,* " the non-listed standard pages are added at the end. - Standard pages: AG_Info,AG_ZulInfo,AG_Bmk,AG_TechInfo,AG_Fort,AG_FertP ap
Section [main]	
Nachkommastellen=0	Decimal places for quantities in the order/machine overview
Repaint_time=60	Cycle for updating the view (for machine list and machine info)
PopupSize->EmptyQueue=300	Empty popup window size for quick queue
PopupSize->ReloadPze=200	Reload popup window size for PZE configuration
SymbolSubstDesignation=MBEZX	The specified field replaces the machine number in the icon view.

Entry	Comment
SymbolAdditionalInfo=MBEZK	Display of any field from the machine list in the icon view between machine number and operation number:  The configured field replaces the machine number for lines and aggregates. Please note: Only in the design/GUI of AIP 8.1
MaxExpressions=50	For the configurations used in the list layouts for coloring rows or cells, 20 entries can be made by default. e.g. EXAMINE_CELLBKCOLOR20=.. The MaxExpressions setting can be used to increase the number of entries. → EXAMINE_CELLBKCOLOR50=.. This maximum index applies to all EXAMINE configurations in all grids. Internally, a corresponding amount of memory is always reserved for each grid, even if no EXAMINE configuration is used. (from AIP 8.2.1.12)
Sections for list layouts	
[Personenliste]	List displayed when staff is logged on
[Bedienposition]	Predefined list of "operator positions"
[Maschinenstatusliste]	Predefined list of "machine statuses"
[Ausschussgruende]	Predefined list of "scrap reasons"
[Abweichungsgruende]	Predefined list of "deviation reasons"
[Auftragsliste]	Lower list in the main view
[Vorgabeliste]	Order sequencing list
[Schichtinfo]	List of shift info
[Maschinenliste]	Upper list in the main view
[Eingangslsliste] input batch list	List of input batches, e.g. when "logging on the OP" in batch mode
[Ausgangslsliste]	List of preceding batches when "changing output batches"
Syntax of table formatting	
GRID_FONT=Arial	Font type
GRID_FONTSIZE=9	Font size
GRID_COLOR=clBlack	Font Color
GRID_BACKGROUND=clWhite	Background color
GRID_FIXCOLS=0	Number of fixed columns

Entry	Comment
GRID_ORDER=MSZEIB GRID_ORDER=MSZEIB=-	Sorting in ascending order Sorting in descending order Sorting is executed according to the formatting of the column. Examples: ANR_DATB=C10,65,L, planned start ➤ Alphanumeric sorting (the date is provided in format MM/DD/YYYYY) ANR_DATB=dd.mm.yyyy,65,L,planned start ➤ Sorting by date If several criteria are indicated (separated by) only the first criterion can be sorted in descending order. All other criteria are sorted in ascending order. The following entry must be set in the configuration for the section so that the sorting is used in the display: ORDER=#USE#INI#ITEM# <u>Example for the section Sequencing List (Auto)</u> [WF@ANR] CMD=DLG=LIST;11 MOD=V MNR=<MNR> SECTION=Sequencing List (Auto) ORDER=#USE#INI#ITEM#
GRID_LIST_TYP=MNR GRID_LIST_TYP=ANR	The list type of the section is indicated with this entry, if fields are displayed that need to be loaded additionally. This entry also enables the search when starting. The entry has to be entered above the IDs to be reloaded!!! All identifiers to be reloaded can be found in the file headers.dat in the "spool" directory of the terminal. It consists of four lines: 10 ...: Fields that are always included in the machinery list *10 ...: Fields that can be reloaded for the machine list 11 ...: Fields that are always included in the order list *11 ...: Fields that can be reloaded for the order list
EXAMINE_CONTENTS_CHANGE=MGRP EXAMINE_COLOR_C1=cWhite EXAMINE_COLOR_C2=cSilver	The font color switches from cWhite to cSilver every time the MGRP value changes. Up to 8 colors can be defined.
EXAMINE_SCANEXPR1=MGRP=71 72 73 EXAMINE_SCANEXPR2=MGRP=96 97 101 EXAMINE_SCANCOLOR1=CIGreen EXAMINE_SCANCOLOR2=CIRed	The machine groups 71/72/73 are presented in green font color; the groups 96/97/101 are displayed in red font color. Up to 8 colors each can be defined.

Entry	Comment
EXAMINE_SCANBKEXPR1=BATTRIB=1 EXAMINE_SCANBKEXPR2=BATTRIB=2 EXAMINE_SCANBKCOLOR1=cIBlue EXAMINE_SCANBKCOLOR2=cILime	All lines with BATTRIB=1 are shown in blue background color; rows with BATTRIB=2 are displayed in lime. Up to 8 colors each can be defined.
EXAMINE_COLOR=TEXTCOLOR EXAMINE_BKCOLOR=HGRCOLOR	Specification of a column that includes the color value for the row (e.g.: 0-Black; 255-Red, 16777215-White)
EXAMINE_CELLBKLEVEL2=EGR:AUSP,EGR:AUSP,<1*cILime <=5*cIYellow >15*cIRed	Setting of the background color depends on whether the field value reaches different threshold values.
EXAMINE_ROWBKLEVEL1=SGR:REST,SGR:REST,<=0*cIRed <=5*cILime >15*cIYellow	Setting of the background color depends on whether the field value reaches different threshold values. The entire row is colored because of the threshold value.
Syntax of column definitions	
MNR=C8,80,R MGRP=N6,60,R AGR:AUS=N10.2,125,R MSDATB=dd.mm.yy,70,L MSZEIB=hh:mm,70,L SKDATB=dd.mm.yyyy,90,L SKZEIB=hh:mm:ss,80,L MSDAUER=ddd.iii,60,R	Alpha-numeric, 8 characters, 80 pixels, right-aligned Numeric, 6 characters, 60 pixels, right-aligned Decimal, 10 digits, 2 decimal places Displayed in the form "23.03.98", (left-aligned) Displayed in the form "08:24" Displayed in the form "23.03.1998" Displayed in the form "08:24:39" Displayed in industrial time unit " 22,982"
AGR:BMK11=hhh:mm:ss,80,R,TESTHEADER	TESTHEADER: new column caption
ALIAS KOPIE=MNR=N8,120,R,TITEL	ALIAS new name is being introduced KOPIE= new identification MNR= ID in data file N8,120,R, Formatting TITEL column caption in table
ALIAS AKA=MNR[1..3]=N8,120,R,ARRAY[1..3]	The first three characters from MNR are displayed.
ALIAS ATTR=MNR(2)=N8,120,R,PARAMETER(2)	The second part separated by „;“ is displayed. Example: „ 12;20;130 “ → „20“
ALIAS U=(R*6.2831)=N10.3,60,L,Scope	Conversion of a value Syntax: see below
ALIAS SOLLZ=[_INT((_DATETIME(SKDATE , SKZEIE)-_DATETIME(SKDATB , SKZEIB)))*86400)]=hh:mm:ss,60,R,SOLLZ ;target time of shift	Complex calculations relating to several fields Syntax: see below
GRID_BROWSEROW=0	only the active row is colored yellow
GRID_CELLPAINT=ON	Requirements for coloring rows column by column
GRID_REFRESH=5000	Cycle for updating the display [ms] → lists are not reloaded from the server! Recommended if a constantly changing value is calculated using an ALIAS function.

Entry	Comment
GRID_POSITION=ON	Display of the grid position  Limited/no support when scrolling using scroll bars and page scrolling
GRID_CELLPAINT=ON EXAMINE_CELLBKCOLOR=WTK:STA ,WTK:STA,0-clGreen 1-clBlue 2-clYellow 3-clRed can also be used with index: EXAMINE_CELLBKCOLOR1..8 EXAMINE_CELLBKCOLOR1..20	One single column is colored in every cell subject to a value. 1st value: ID of the column to be colored. 2nd value: ID of the reference column 3rd value: Configuration (color for possible values) Notes: - The reference column MUST be shown in the list, if required with length 0 - The values are converted into capital letters when being compared.
EXAMINE_CELLBKCOLOR=DMY,COLOR	Take over the color directly from the "color" column. The column <DMY> is shown in the color defined in the column <COLOR>
; Definition virt. column(1) EXAMINE_CELLVALUE1=CV1,REF1,S =DAT P=ZEI A=REST N=INFO ; Definition virt. column(2) EXAMINE_CELLVALUE2=CV2,REF2,1 0=MGRP 20=MNR 30=COLOR 40=MS TTXT ... ; Layout/Position virt. column(1) CV1=CELLVALUE,150,Z,Data ... ; Layout/Position virt. column(2) CV2=CELLVALUE,150,Z,M/C/T	Filling of a virtual "Case" column with values from different columns subject to the value of a reference column. 1rd value: Identification of the virtual "case" column 2rd value: Identification of the reference column 3rd value: Configuration Reference value + ,=' + display column Please note: the virtual "case" column needs to be configured as follows <Identifier>=<Key word>,<Width>,<Alignment>,<Caption> e.g. CV1=CELLVALUE,150,Z,YST
GRID_RANDOMSORT=ON	This options randomly sorts the list. Please note: If this option is active, any configured sorting will be ignored.
GRID_CLIPBOARD=<BUTTON>@<SELECT>@<DATA>	This option copies data from a table/grid into the clipboard.
Special entries	
[Maschinenliste] ALIAS StkProMin=IZYSM= N8,48,R,Stk/min	Activation of calculation & display of the produced pieces per minute

Entry	Comment
[layout pze]	Configuration of the PZE terminal
KundenBitmap=kunde.bmp	"Kundenbitmap=<File name>" file with customer logo When restarting the terminal, this file is copied from the server directory ".\ctnet\win\aip2\etc\" into the application directory ".\etc\".
DienstGangTaste=1,3	„DienstGangTaste=1,3“ → Default [empty] By entering the function key numbers (1...4), a check specifying if the person is allowed to go on a business trip is performed during the posting.
StdSchrift=Arial StdDateSize=30 StdStatusSize=26 StdSpdBtnSize=16 InfoSchrift=Courier New InfoSchriftSize=20 SmallStatusFontSize=16 DateTimeLayout=dd.mm.yyy hh:mm:ss	Configuration of the used font types/font sizes as well as the layout of the date and time display.

1.1 Formulas used in grid layout

Simple conversion of a value

Syntax: **ALIAS** <Alias>=<formula>=formatting

<formula>: [1/]<ID>[<Operator><Value2>]

<ID>: ID from list (The current value from the list is entered here in the formula)

<Operator>: + | - | * | / | ^

<Value2>: 2nd Operand

Extensive formulas:

Formulas that can also relate to several table fields can be recognized by braces.

Syntax: **ALIAS** <Alias>={<Formula>}

<Formula>: (<Operand1>[<Operator><Operand2>])

<Operand>: <Value> / <Function> / <Formula> / |KENN|

<Operator>: |+| - |*| / |^|

<Value>: Constant ('0'..'9', 'e', 'E', '.', '-')

|Kenn|: reads out a value from the table

<Function>: _<Fname>(<Operand>[,<Operand>[,...]])

_DATETIME (<Date>,<Time>)

<Date>: mm/dd/yyyy

<Time>: ssss (Seconds of the day (0..86400))

=> Real value as TDateTime

_INT (<Operand>)

```

    returns a value without decimal places
  _REAL(<Operand>)
    returns a value with decimal places
  _ROUND(<Operand>)
    returns rounded value without decimal places
  _MOD(<Operand1>,<Operand2>)
    ==> Operand1 mod Operand2
  _ABS(<Operand>)
    absolute amount of a figure
  _EXP(<Operand>)
    e raised to the power of X (e: basis of the natural logarithm)
  _LN(<Operand>)
    natural logarithm (Ln(e) = 1)
  _FRAC(<Operand>)
    proportion of decimal places
  _LOG(<Operand1>,<Operand2>)
    LOG(N,X): logarithm to base N of X
  _MAX(<Operand1>,<Operand2>)
    the greater value of two values
  _MIN(<Operand1>,<Operand2>)
    the lesser value of two values
  _SQRT(<Operand>)
    ==> Square root of Operand1
  _PI()
    ==> 3.14151926535...

```

Examples:

Calculation of the target time of a shift (ZEISS):

```

ALIAS SOLLZ={_INT((_DATETIME(|SKDATE|,|SKZEIE|)-
_DATETIME(|SKDATB|,|SKZEIB|))*86400)}=hh:mm:ss,60,R,SOLLZ

```

```

ALIAS TEST={_INT(|AGR:GUT|/|TLG|)},N3,30,R,Test

```

```

ALIAS test1={_LN(2.7182818)}=C8,80,L,Test1

```

New (V7.2.3.74): Utilization of intermediate variables in ALIAS functions:

```

ALIAS U_Brutto={|AGR:GUT|+|AGR:AUS|}=N8,40,Z,Brutto

```

```

ALIAS U_BPMN={_REAL(60000/|SZY|)*|TLG|}=N8,35,Z,BpmN

```

```

ALIAS TK_TEST={(*U_Brutto|+|*U_BPMN|)=N8,35,Z,TK*

```

Setting of the background color depends on whether the field value reaches different threshold values.

```

Syntax: EXAMINE_CELLBKLEVEL<i>=<Akro>,<Akro_ref>,
                                <Comp1><Val1>*<Col1>|
                                <Comp2><Val2>*<Col2>...

```

```

    <i>: Index 1..8
    <Akro>: Identification of the field to be colored
    <Akro_ref>: Identification of the reference column
    <Comp>: Limiting characters (<,>,<=,>=)
    <Val1>: Limit value (integer or Real or ID
              of a reference value for comparison purposes)
              alternative: (Akro) - column of limit value
    <Col1>: Color (Delphi name)

```

Threshold values are searched from the left to the right. If a "<" or a "<=" – criterion is met, the corresponding color is set and the evaluation/report is finished. If a ">" or ">=" criterion is met, it will first be checked whether or not the condition that follows is also met.

The direct comparison with "=" is not allowed. But the same function can be achieved by processing the comparisons relating to "<...", "<=" or ">...", ">=".

An identification put in parentheses may also be indicated instead of the limit value. During the comparison, the current field content including the specified ID is read out from the same row as the limit value.

All three fields (field to be colored, reference field and limit value field, if required) must be configured as fields to be displayed. The field width can be set to zero if one of these fields should not be visible.

The color value cWhite may be entered to prevent sections from being colored.

The values are compared as they are displayed. The actual values 0.5 and 1 are considered being equal if displayed values are to be rounded to integer values.

Coloring of the field only works if the option "GRID_CELLPAINT=ON" is set.

The option "GRID_BROWSEROW=0" should also be set in order for the coloring to be recognized even if the row is selected.

Examples:

```
EXAMINE_CELLBKLEVEL1=MNR,MST,<=1*c1Lime|<=2*c1Yellow|>2*c1Red
EXAMINE_CELLBKLEVEL2=FS,FS,<90*c1Lime|>=90*c1Yellow|>=100*c1Red
EXAMINE_CELLBKLEVEL3=EGR:GUT,EGR:GUT,<(SGR:GUT)*c1Lime|>=(SGR:GUT)*c1Yellow
```

1.2 Translations in grid layout

Column contents can be configured to be translated and displayed by entering e.g. the configuration <XYZ=T10,100,L> instead of <XYZ=C10,100,L> in the configured grid columns. A <#> character must be prefixed for these "resource strings" to provide for better classification. This modification can be used in every INI file (hytnrcfg.ini,...) where grid layouts are configured.

Please note: The data do not include any translated values. In order for them to be displayed in e.g. dynamic dialog fields, an explicit translation must be performed using the VB script function <vbsTranslateDataValues("<columns>" , "<data row>") >.

Column contents can be configured to be translated and displayed by entering e.g. the configuration <PSPERRE=U1,100,L> instead of <PSPERRE=C1,100,L> in the configured grid columns. The entry for the "resource string" that depends on the field has the following structure:

	„#<Acronym>#<Value>“	
e.g.	„#PSPERRE#J“	"production lock enabled"
	„#PSPERRE#N“	„ “ (blank character)

This modification can be used in every INI file (hytnrcfg.ini,..) where grid layouts are configured.

Please note: The data do not include any translated values. In order for them to be displayed in e.g. dynamic dialog fields, an explicit translation must be performed using the VB script function vbsTranslateDataFields("<columns>" , "<data row>") >.

1.3 Table of color values

Farbe	Name	Color value
	clWhite	\$FFFFFF
	clBlack	\$000000
	clBlue	\$FF0000
	clLime	\$00FF00
	clRed	\$0000FF
	clYellow	\$00FFFF
	clFuchsia	\$FF00FF
	clAqua	\$FFFF00
	clOrange	\$0080FF
		\$8000FF
		\$FF8000
		\$FF0080
		\$80FF00
		\$00FF80
		\$808080

1.4 Modifications to GRID configuration / clipboard

The AIP2 provides for the configuration of copying values from the table into the clipboard.

Data can be copied into the clipboard using the shortcut "Ctrl + C", by right clicking with the mouse or an optionally configured button.

The copied values are transmitted as string in the internal format.

- Date columns as "MM/DD/YYYY"
- Time in "seconds after midnight"
- Durations in "seconds"
- Quantities with a dot as decimal separator

Data is copied including a header into the clipboard. The columns of the header and the corresponding values are separated by <TAB>. Lines are completed with <CR> <LF>.

The configuration is as follows:

GRID_CLIPBOARD=<BUTTON>@<SELECT>@<DATA>@<HEADER>

<BUTTON>	Optionally, using "Y" a button can be shown in the top right margin of the table. This button copies the selected data into the clipboard.
<SELECT>	Optional configuration of one or several selection criteria. Selection criteria are separated and/or linked with " ". GRID_CLIPBOARD=. .@SELECT=X *@. . The default selection criterion is "X" (e.g. @SELECT@ becomes @SELECT=X@)
<DATA>	The data to be copied into the clipboard can be configured here. - <ALL> All columns of the line - <VISIBLE> Visible columns (Pixel>0) - <COL1 COL2 COL3 ...> configured columns For the configuration options <ALL> + <VISIBLE> the selection column is removed automatically from the columns to be copied if only one selection criterion is indicated. In case no selection criterion is stated, the selected line is copied into the clipboard according to configuration.
<HEADER>	As of CTAIP V# 2.0.3.35 "N" can be used to prevent the header from being displayed in the clipboard.

The following example shows the machine status list including multiple selection and copy button for the clipboard.

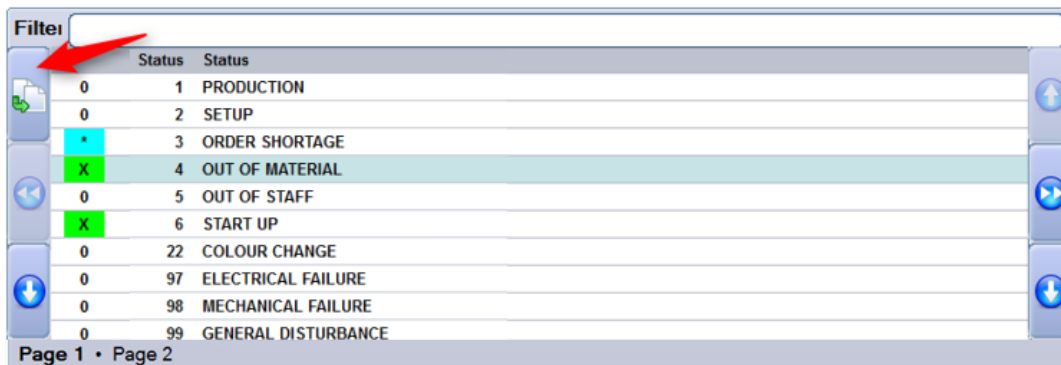


Fig. Configuration with button (red arrow) and multiple selection

```
[Maschinenstatusliste]
GRID_FONT=Arial
GRID_FONTSIZE=9
GRID_COLOR=clBlack
GRID_BACKGROUND=clWhite
GRID_CLIPBOARD=Y@KSTART=X | *@KSTART | MNR | MST | MSTTXT
GRID_CELLPAINT=ON
EXAMINE_CELLBKCOLOR=KSTART,KSTART,X-clLime | *-clAqua

ALIAS LEER1=(DUMMY1)=C1,10,L
KSTART=C1,30,Z,*
MST=N8,60,R,
DUMMY=C3,10,R
MSTTXT=C70,150,L,Status
ALIAS LEER2=(DUMMY2)=C1,475,L
```

The data selected in the screenshot have been copied into Excel using the above-described configuration for the clipboard.

	A	B	C	D
1	KSTART	MNR	MST	MSTTXT
2	*	40312MPL		3 ORDER SHORTAGE
3	X	40312MPL		4 OUT OF MATERIAL
4	X	40312MPL		6 START UP
5				

The modified configuration

```
[Maschinenstatusliste]
GRID_FONT=Arial
GRID_FONTSIZE=9
GRID_COLOR=clBlack
GRID_BACKGROUND=clWhite
GRID_CLIPBOARD=@@<VISIBLE>

ALIAS LEER1=(DUMMY1)=C1,10,L
MST=N8,60,R,
DUMMY=C3,10,R
MSTTXT=C70,150,L,Status
ALIAS LEER2=(DUMMY2)=C1,475,L
```

copies data of visible columns (pixel > 0) of the selected line into the clipboard

Filter

Status	Status
1	PRODUCTION
2	SETUP
3	ORDER SHORTAGE

	A	B	C	D	E	F	
1	LEER1	MST	DUMMY	MSTTXT	LEER2		
2	<LEER1>	2	<DUMMY>	SETUP	<LEER2>		
3							

1.5 Configuration of basic screens

The dialogs/screens are configured using dynamic dialogs. For this reason, the following dialogs are always required:

MMINFO → Section referring to machines in the single machine view

MAINFO → Section referring to orders in the single machine view

AIP

40610	40611	40612	40614	40623
Workplace/Machine	60612	Status	CONTROL DEFECTIVE	
Short description	ARB-320S	Start	18:00 22.10.2010	
Group	SGM2	Duration [hh:min]	42742:49	
Divisor	1	Yield	4562 PCS	
Target cycle [sec/cycle]	21	Scrap	21 PCS	
Actual cycle [sec/clock]	0	Cycles	4583	
		Note		

Icon view Lock prod. status Modify status Log on operation

Operation	S61003350100	Target qty.	105000 PCS
Article	SAL-FMO011-K-7036	Yield	4562 PCS
Article Designation	Mirror housing left, plat	Scrap	21 PCS
Remark 1		Target qty. since logon	--- PCS
Remark 2		Yield since logon	0 PCS
Plan. duration	612:30	Deviation [%]	---
		Completion	4%

Interrupt operation Log off operation

mpcv 07.09.15 16:50:06

MINFO → Description of the machine information

AIP

Machine 40312 Manual Workplace Deburring, Cleaning

Description	Registered persons	Status log
Workplace/Machine	40312	Status
Short description	WPL01	Status since
Group	FINISH	Duration [hh:min]
Divisor	1	Yield
Target cycle [sec/cycle]	0	Scrap
		Cycles

OUT OF MATERIAL

75320 02/28/2010

0000:00:00

1381 PCS

5 PCS

0



Close information

mpcv 07.09.15 16:52:28

AINFO → Description of the order information

Order S3000209 Operation 0200 Deburring

Description | Notes | SF-Comments | Documents | Tools, Resources | Components | Progress | Resource performance acc.

Operation S30002090200 Target qty. 1200 PCS
 Article SAR-VPO011-M-9005 Yield 660 PCS
 Article Designation Mirror housing right, bla Scrap 0 PCS
 Remark 1 Completion 55%
 Remark 2
 Planned duration 06:40

FURTHER INFORMATION:
 - EVERY 750 PIECE: QC ACCORDING TO FORMULAR 823273
 - PACKING / TRANSPORT STD-CONTAINER NO 4

Close OP information

mpcv 07.09.15 16:53:18

The heights of the individual components of the basic screens and, as a result, the positions of the button bar are configured in the *ctaipplay.ini* file using the below-mentioned parameters:

Section [MainView1]	Configuration of the basic screen
MachineGridHeight=415 OrderGridHeight=500 ButtonBarHeight=50	Height configuration of components for the basic screen (machines, order grid, button bar) The configured heights are scaled to the current height. Consequently, the total sum of entered heights does not play a role.
Section [MainView2]	Configuration of the single machine view
MachineGridHeight=50 MachineInfoHeight=415 OrderInfoHeight=355 ButtonBarHeight=50	Single-row grid to select the machine Information on the machine Information on the order Height of both button bars The configured heights are scaled to the current height. Consequently, the total sum of entered heights does not play a role.

1.5.1 Available fields for the dialog configuration of basic screens

A script function completing the fields according to the customer's requirements is not available .

In general, the fields of the machine list and the order list are available. "MNR." or "ANR." must be prefixed for identification purposes.

Known quantity fields are formatted to match the configured number of decimal places.

Some fields are calculated. The following fields are additionally available:

Identification	Description
ANR.SOLL_SEIT	Target quantity since login The value is determined locally at the terminal. This is only useful for MDE machines. However, the order must be logged on locally after restarting the terminal.
ANR.ABWEICH	Deviation [%] Comparison of "target quantity since logon" and "actual quantity since logon"
MNR.SZY	Target cycle Field is transferred including "internal decimal places". The number of characters displayed is determined by the field of the dialog configuration.
MDE.IZY	Actual cycle The machine's current actual cycle - only if MDE processing is active for the machine at this terminal.
MNR.MSZEIB	Start time of the current status
MNR.MSDATB	Start time of the current status
MNR.MSDAUER	Duration of the current status
ANR.BEARBZ	Planned duration
MNR.MSTTXT	Status text
MNR.TLG	Partitioning Calculated based on the orders running at the machine.
ANR.FERTIG	Progress bar
TNRSPERRE	Translated text for the production lock (corresponds to the configuration "TNRSPERRE=U1,150,L,Hinweis" in ctaipplay.ini) (the value J/N from the list can be found in MNR.TNRSPERRE)