

1 Batch Grouping

Summary

In production it might be necessary to process batches at once in one process (e.g. heating furnace, conditioning system, washing machine). To this end, the user logs on the affected batches within a group to AIP.

Usage

To the user the OP is not important to record times and after processing, users do not want to post every single output batch in the system. Therefore, this function basically facilitates the posting process for the user.

Prerequisite/configuration

The configuration is described [here](#).


The logical process and posting are described [here](#).

Batch grouping



If the terminal is offline, only a limited number of posting functions is provided based on the available data. If the terminal is offline, errors are not displayed e.g. if posting failed on the server.

Dialog

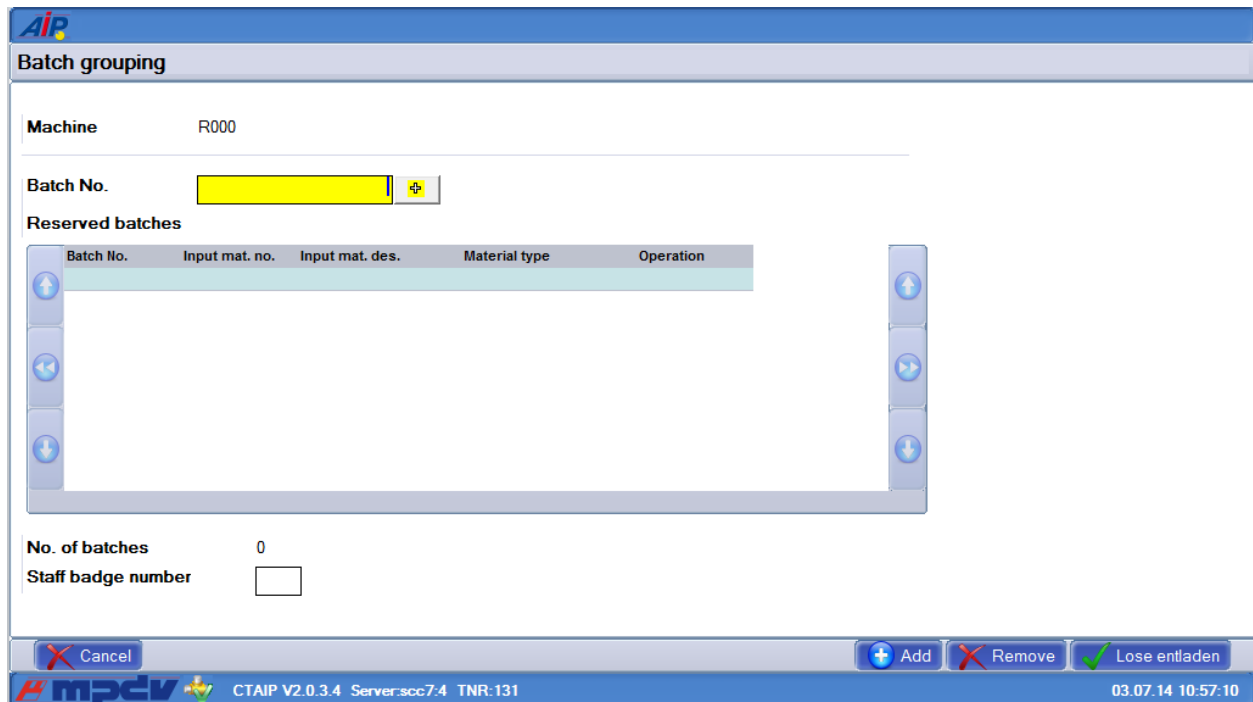

Description of display fields:

- **Machine**
Used workplace/machine
- **Batch number**
Entered number of the batch that is to be recorded for the group.
- **Staff badge number**
The user's staff badge number.
- **Result list "reserved batches"**
List of all individual batches included in the group with batch number, material number etc.

Function keys

- **Function key "cancel"**
This function key terminates the dialog and rejects data input.
- **Function key "add"**
An individual batch may be added to the group using this function key.
- **Function key "remove"**
A selected individual batch may be removed from the group using this function key.
- **Function key "unload batch"**
This function key cancels the group and output batches are changed automatically for all input batches and operations registered in the background.

Procedure

For the user the procedure is as follows:

- The user opens the "batch grouping" dialog in the basic screen of the terminal
- The user enters the batch (manually/by scanning) he/she wants to add
- The user presses "add" and confirms the entered batch.
- The entered batch is assigned to the group. The batch is reserved for the OP.
- The user enters further batches he/she adds to the group.
- The user closes the dialog unless he/she wants to add further batches.
- To cancel the group and/or when completing the process, the user opens the dialog and presses the "unload batch" key. Consequently, the relevant registered operation is logged off and finished for every included input batch and an output batch is completed.