

1 Advanced Batch Information

Summary

Various batch information needs to be made available to manufacturing processes.

Usage

The function is used to display the information stored to the batch. This refers to:

- General batch information
- Batch quantities
- Batch attributes
- Alternative batch numbers



The dialog is structured in workflows. These workflows can be started by clicking on the individual tabs or by clicking "next" in each individual workflow.

Prerequisite

Batch attributes have to be configured for the batch to be able to display them.

Alternative batch numbers can only be displayed if they are used in specific projects.

Show general batch information

Dialog



If the terminal is offline, only a limited number of posting functions is provided based on the available data. If the terminal is offline, errors are not displayed e.g. if posting failed on the server.

Batch information

1 Batch information

2 Quantities

3 Attributes

4 ...

Batch No. 1001234

Material

XX

Designation

Diffusor Rohr

Type

ROHR

Class

G

Operation

Machine

50500

Material buffer

MP_V_1168

Prod.date

04.03.2013 00:00:00

Status

F

Q-Status

O

M-Status

U

Note

beschichtet

Cancel
 Go on

CTAIP V2.0.3.4 Server:sc7:4 TNR:131
03.07.14 12:52:40

Description of display fields:

- **Batch number**
Entered number of the batch for which information is to be displayed.
- **Material**
Material number of the batch
- **Designation**
Material name of the batch
- **Type**
Material type of the batch
- **Class**
Batch class (yield, scrap, rework, open quantity)
- **Operation**
Operation that has produced the batch or which it is logged on to.
- **Machine**
Machine/workplace that has produced the batch or which it is logged on to.
- **Material buffer**
Material buffer that includes the batch.
- **Manufacturing date**
Manufacturing date of the batch
- **Status**
Batch status
- **Q-status**

Quality status of the batch.

- **M-status**

Material status of the batch.

Function keys

- **Function key "cancel"**

This function key terminates the dialog and rejects data input.

- **Function key "go on"**

This function key leads the user to the next configured workflow of the dialog (quantities, attributes, alternative batch numbers).


Procedure

For the user the procedure is as follows:

- The user opens the "batch information" dialog in the basic screen of the terminal.
- The user enters the batch (manually or by scanning) for which he/she wants to view batch information.
- The user applies the "batch information" workflow.

Show quantities

Dialog

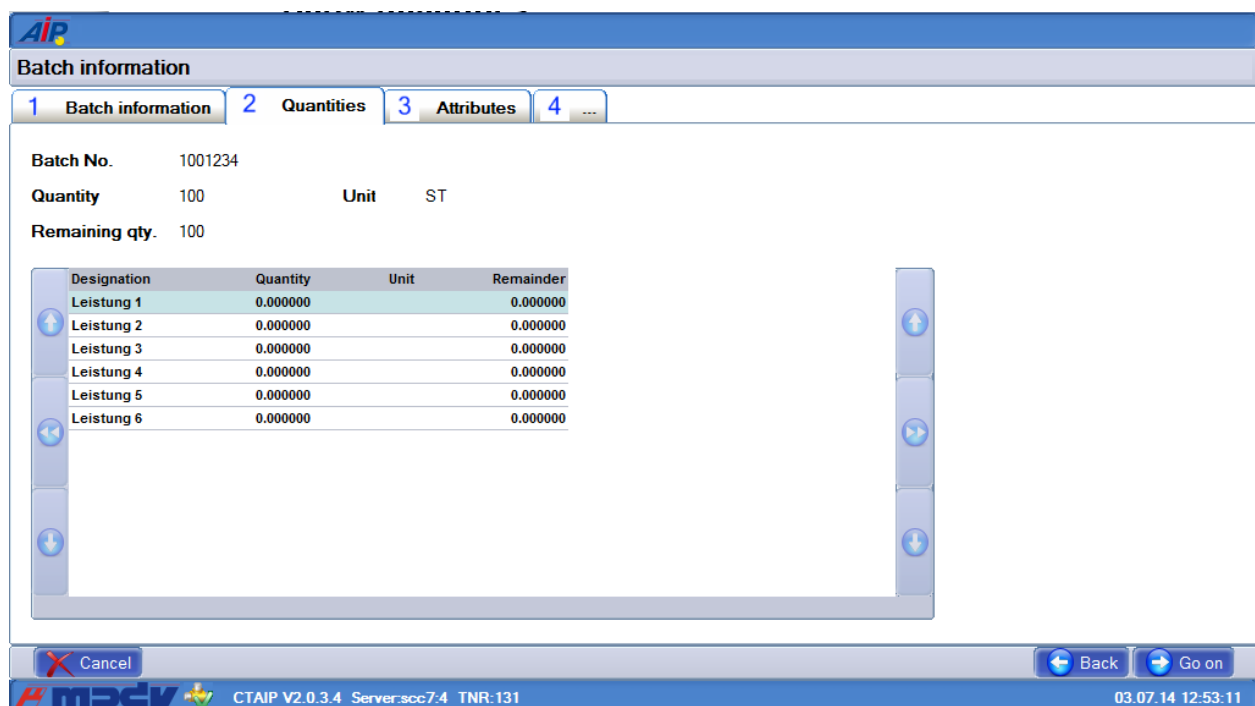

Designation	Quantity	Unit	Remainder
Leistung 1	0.000000		0.000000
Leistung 2	0.000000		0.000000
Leistung 3	0.000000		0.000000
Leistung 4	0.000000		0.000000
Leistung 5	0.000000		0.000000
Leistung 6	0.000000		0.000000

Description of display fields:

- **Batch number**
Entered number of the batch for which information is to be displayed.
- **Quantity**
Initial quantity of the batch.
- **Remaining quantity**
Current remaining quantity of the batch.
- **Unit**
Batch unit
- **Activity (1-6)**
Activity fields of the batch (to convert into other units)

Function keys


- **Function key "cancel"**
This function key terminates the dialog and rejects data input.
- **Function key "go on"**
This function key leads the user to the next configured workflow of the dialog (attributes, alternative batch numbers).
- **Function key "back"**
This function key leads the user back to the previously configured workflow of the dialog (batch information, quantities, attributes, alternative batch numbers).

Procedure

For the user the procedure is as follows:

- The user opens the "batch information" dialog in the basic screen of the terminal.
- The user enters the batch (manually or by scanning) for which he/she wants to view batch information.
- The user applies the "quantities" workflow.

Show batch attributes**Dialog**

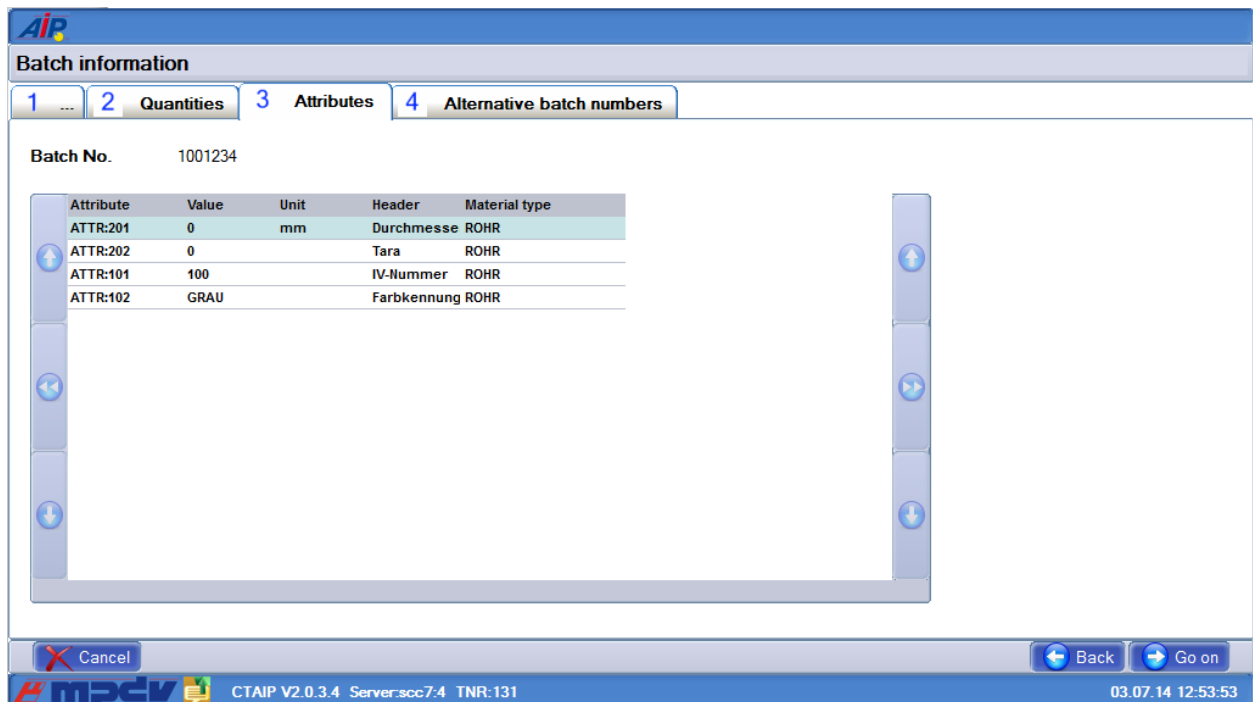

Batch No. 1001234

Attribute	Value	Unit	Header	Material type
ATTR:201	0	mm	Durchmesse	ROHR
ATTR:202	0		Tara	ROHR
ATTR:101	100		IV-Nummer	ROHR
ATTR:102	GRAU		Farbkennung	ROHR

Cancel Back Go on

CTAIP V2.0.3.4 Server.scc7:4 TNR:131 03.07.14 12:53:53

Description of display fields:

- **Batch number**
Entered number of the batch for which information is to be displayed.
- **Result list: attributes**
Shows the configured batch attributes for the material type of the batch including value and relevant captions. The displayed columns are configurable.

Function keys

- **Function key "cancel"**
This function key terminates the dialog and rejects data input.
- **Function key "go on"**
This function key leads the user to the next configured workflow of the dialog (attributes, alternative batch numbers).
- **Function key "back"**
This function key leads the user back to the previously configured workflow of the dialog (batch information, quantities, attributes, alternative batch numbers).

Procedure


For the user the procedure is as follows:

- The user opens the "batch information" dialog in the basic screen of the terminal.
- The user enters the batch (manually or by scanning) for which he/she wants to view batch information.

- The user applies the "attributes" workflow.

Show alternative batch numbers

Dialog

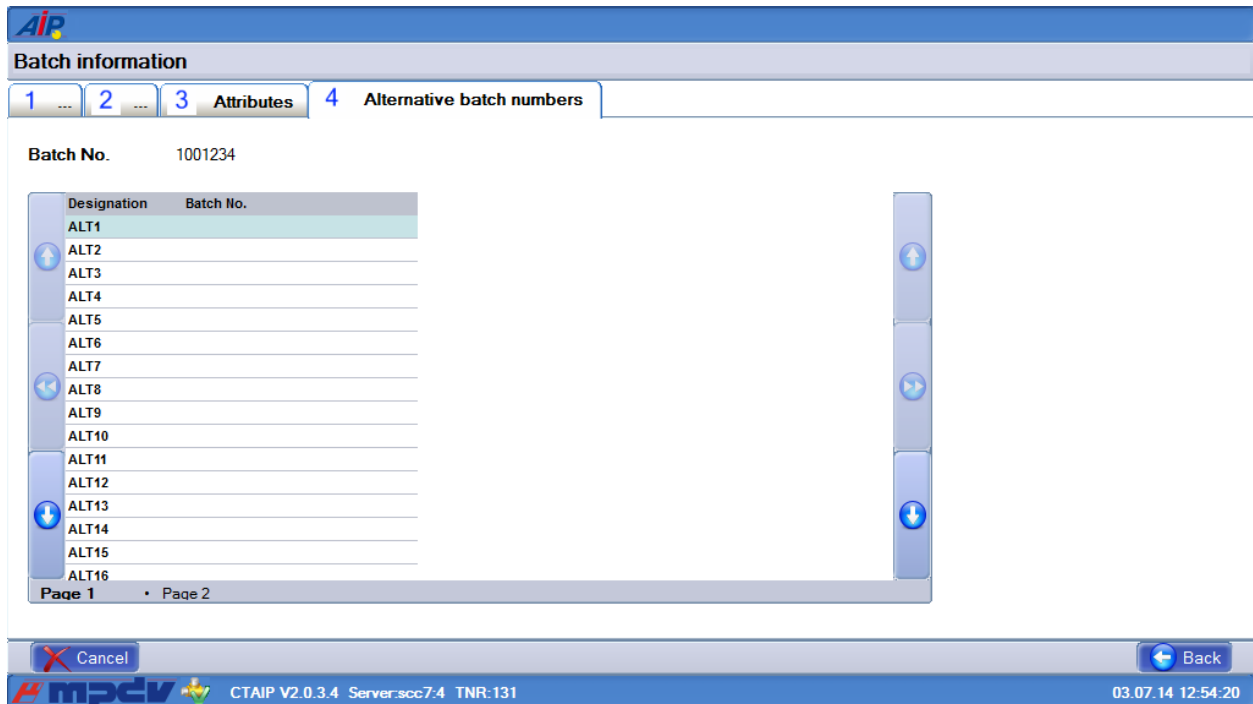

Batch information

1 ... 2 ... 3 Attributes 4 Alternative batch numbers

Batch No. 1001234

Designation	Batch No.
ALT1	
ALT2	
ALT3	
ALT4	
ALT5	
ALT6	
ALT7	
ALT8	
ALT9	
ALT10	
ALT11	
ALT12	
ALT13	
ALT14	
ALT15	
ALT16	

Page 1 • Page 2

Cancel Back

CTAIP V2.0.3.4 Server:scs7:4 TNR:131 03.07.14 12:54:20

Description of display fields:

- **Batch number**
Entered number of the batch for which information is to be displayed.
- **Result list: alternative batch numbers**
Shows the alternative batch numbers for the material type of the batch including relevant value. Alternative batch numbers are optional and entered for specific projects.

Function keys

- **Function key "cancel"**
This function key terminates the dialog and rejects data input.
- **Function key "back"**
This function key leads the user back to the previously configured workflow of the dialog (batch information, quantities, attributes, alternative batch numbers).

Procedure

For the user the procedure is as follows:

- The user opens the "batch information" dialog in the basic screen of the terminal.

- The user enters the batch (manually or by scanning) for which he/she wants to view batch information.
- The user applies the "alternative batch numbers" workflow.