

1 Information Dialog

The info dialog is opened by clicking/touching the MPDV symbol at the bottom-left of the screen. Particular special functions may be accessed from here:

Please note for info dialog and password dialog:

By default, the info/password dialog is automatically closed after 5 seconds.

The time that has to pass before one of the dialogs is closed automatically may be configured within the CTAIP.INI file. If nothing is entered, 5 seconds are specified by default.

If something is entered in the password dialog using the keyboard, the close timer is reset and starts anew; the same applies for the info dialog when returning from another dialog.


The AIP HR terminal also requires the password dialog to access the debug functions.

[system] Time till closing the About dialog in seconds

CloseAboutDialogSec=x

Time till closing the "password" dialog in seconds

ClosePasswordDialogSec=x

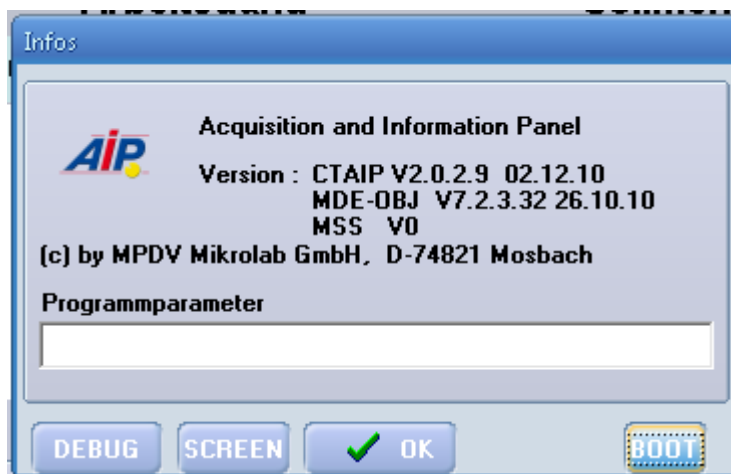

Meaning of the buttons:

The "BOOT" button


Allows for the terminal to be rebooted, without pulling the plug. To avoid misuse of this function, a password is required (which is made known during the system administrator training).

The “Master” button

Is only shown if it has been configured as the master terminal. It opens an overview of the connected DS100 devices. Communication to the devices can thereby be monitored.

The “DEBUG” button

Once the above-mentioned password has been entered, the “debug” button causes another menu to open:

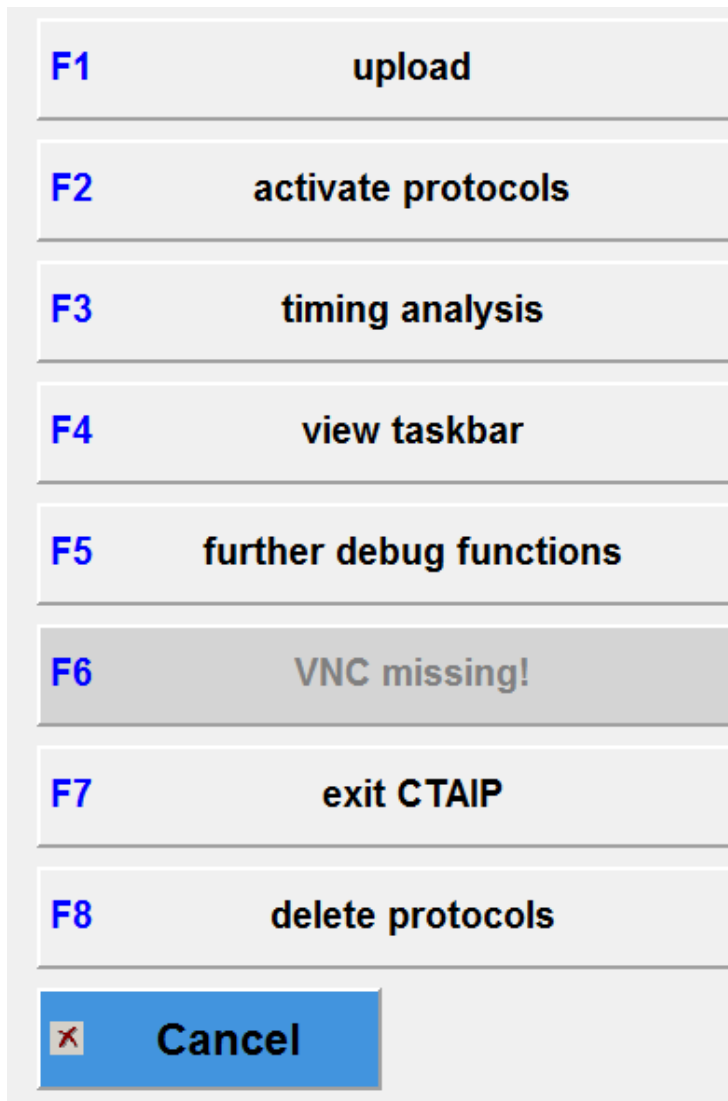**Upload**

The “Upload” function allows for local terminal data to be copied to the server. Once the data to be transferred has been selected (normally default settings can be kept), the transfer is started by clicking the “Start upload” button. This function enables the user to search for the cause of an unexpected behavior of the terminal.

A ZIP file is generated at the terminal. This file is copied as upload2xxx.zip file into the old SPL2xxx directory on the server (XXX stands for the terminal number). All *.ini, *.txt, *.cfg files from the ctaip directory and everything as of the spool directory including the CAQ sub directories is zipped.

Window during the ZIP process at the upload

Generate Upload	
ZIP-File:	737024 - upload2127.zip
File to Zip:	- c:\ctaip\spool\127.wf
Packed File:	23575 - c:\ctaip\spool\127.fl

Screen for the upload at the terminal, when an upload is being performed.

Generate Upload		Status since	Note
ZIP-File:	4264134 - upload2128.zip		
File to Zip:	- D:\demo\aipdemo\AIP-BDE+PZE\etc\aip_mpdv-P_PSP.scr		
Packed File:	2450 - D:\demo\aipdemo\AIP-BDE+PZE\etc\aip_mpdv-P_PEP.scr		
33021	Manual workplace Deburring, C	PRODUCTION	28.02.10 06:00
40312	Manual Workplace Deburring, C	OUT OF MATERIAL	28.02.10 20:55
406457A	Mounting Place 1	PRODUCTION	28.02.10 18:40
406457B	Mounting Place 2	PRODUCTION	28.02.10 15:44

Status log Logon merged operation

Article	Order	Operation	Target qty.	Yield	Scrap	N	T
SAR-VPO011-M-9005	S3000209	0200 Deburring	1200 PCS	660	0		

Configuration
more Infos
End create Local-Infos
Begin create File:#dirinfo.lst
End create File:#dirinfo.lst
Begin create ZIP-File

Partial confirmation Interrupt operation Log off operation

Registered persons			
Person	Name	First name	Advance logon
10002630	White	Susan	

Staff work time logging Staff logging

07/12/12 18:41:59

Activate protocols

The "Activate protocols" function enables various logs. Just as it the case for the upload function, these logs are used for the analysis of terminal problems.



As the functions provided in this dialog should only be used together with MPDV Support, the individual options cannot be explained here in further detail.

☐ **Standard-Log (protokol.txt)**

☒ **Message-Log (prot_msg.txt)**

☐ **Locale Events (protokol.txt)**

☐ **LocalUpdate-Log (prot_lupd.txt)**

☒ **DB-Messages (prot_ev.txt)**

☒ **Barcode-Log (prot_bar.txt)**

☐ **Queue-Log (prot_que.txt)**

☐ **Host log (err\hyu2<TNR>.pro)**

☐ **pdm_ev.txt**

☐ **PdmEV-Log**

☐ **PDV-Log (prot_pdv.txt)**

☒ **DDI Galog (prot_ddlg.txt)**

☒ **OK**

☐ **Cancel**

Timing analysis

The "Timing analysis" button is used to configure a log making the flow of various programs visible.



As the terminal becomes very slow if this function is enabled, it should only be activated on MPDV's request.

Further debug functions

The "Further debug functions" button enables touch screen access to some debug functions that otherwise can only be accessed by keyboard.



These are also functions which should only be used together with MPDV Support.

Start VNC

The "Start VNC" button calls the VNC remote control program, if this is installed by the Start menu of the terminal. Consequently, the terminal can then be operated from a PC within the local network.



Continuous long-term use of VNC is not advisable, as the program gradually fills the terminal's main storage. Consequently, the terminal program becomes slower and slower.