

1 Advance Logon of Input Batches

Summary

The process might require an input batch to be logged on in advance and set up accordingly on a machine, while the preceding input batch is still being used for a material.

This situation frequently occurs at very large machines processing, for example, roles or belts that are uncoiled as input batch at the beginning of the machine and coiled up as output batch at the end of the machine.

As the users are mostly busy with activities at the end of the machine at the time when the input batch actually needs to be changed, they cannot perform the input batch change and, as a result, they are provided with the opportunity to log the next input batch on already in advance for an order/OP.

Then the input batch can actually be changed by logging a new OP on or a project-specific call can be established.

General / usage

The function for logging input batches on in advance is used to be able to "set up" and "log on" the next input batch while an OP and input batch are still running. This next input batch is not yet running but assigned the "logged on in advance" flag.

An input batch may be logged on in advance for a currently running OP or a prepared OP.

Configuration

The settings required for using the function "advance logon of input batches" is described [here](#).

Procedure

The procedure for using the function "advance logon of input batches" or the logical process is described [here](#).

Dialog

Basic screen

The basic AIP screen shows the function key "Advance logon of input batch" (preregistration of input batch). The dialog for logging input batches on in advance may be used by clicking this function key.

The screenshot shows the AIP main interface. At the top, there's a 'Machines/workplace' table with columns: Machine/Workplace, Status, Status since, and Note. Below this is a 'Page 1 • Page 2' indicator and buttons for 'Lock prod.status', 'Modify status', and 'Log on operation'. The 'Operations on workplace' section has a table with columns: Article, Order, Operation, Target qty., Yield, Scrap, N, T. Below this are buttons for 'Comment', 'Modify target qty.', 'Inp. batch change', and 'Preregistration of input batch' (highlighted with a red circle). The 'Registered input materials' section has a table with columns: Position, Batch, Material, Material designation, and Remaining. At the bottom, there's a status bar with 'CTAIP V2.0.2.67 Server:win2008-10:3 TNR:999' and the date '26.03.13 12:23:25'.

Machine/Workplace	Status	Status since	Note
CPL Continue Pickling Line	PRODUCTION	26.03.13 08:00	
CRM Cold Rolling Mill	PRODUCTION	26.03.13 08:18	
CEL Electrolytic Cleaning Line	NO JOB	26.03.13 08:00	
CAF BAF	NO JOB	26.03.13 08:00	

Article	Order	Operation	Target qty.	Yield	Scrap	N	T

Position	Batch	Material	Material designation	Remaining
01	R835-022	A06A2100926	2.10MM X 926MM HR COIL - SAE1006(BS	18 mt

Advance logon of input batches (CE_VWL_MPL)


The user selects the workplace to which an input batch is to be logged on in advance in the basic screen. The below dialog (CE_VWL_MPL) opens by clicking the function key "Advance logon of input batches" (preregistration of input batch).

The screenshot shows the 'Preregistration of input batch' dialog box. It has a title bar '<CE_VWL_MPL>'. Inside, there are fields for 'Workplace' (CRM), 'Material' (CCSD1901223), 'Operation' (22999998010), and 'Input batch'. Below these is a table with columns: POS Input mat. no., Input mat. des., Cust. Batch nr., and Remainde Unit. At the bottom, there's a 'Staff badge number' field and buttons for 'Cancel' and 'Post batch'. The status bar at the bottom shows 'CTAIP V2.0.2.67 Server:win2008-10:3 TNR:999' and the date '26.03.13 12:22:46'.

POS Input mat. no.	Input mat. des.	Cust. Batch nr.	Remainde Unit
01	A06A2100926	R835-022	18 mt

If an operation is currently running/logged on to the workplace, this one will be selected by default. The input batch (that is to be logged on in advance) is entered/scanned for the selected BOM item. Advance logon of input batches is started by clicking the button "post batch".

At first the input batch is checked for validity (dialog CE_VAN). The material number of the input batch is checked against the material number of the component list or the BOM item. The input batch is logged on in advance, once the button “log input batch on in advance” has been clicked:

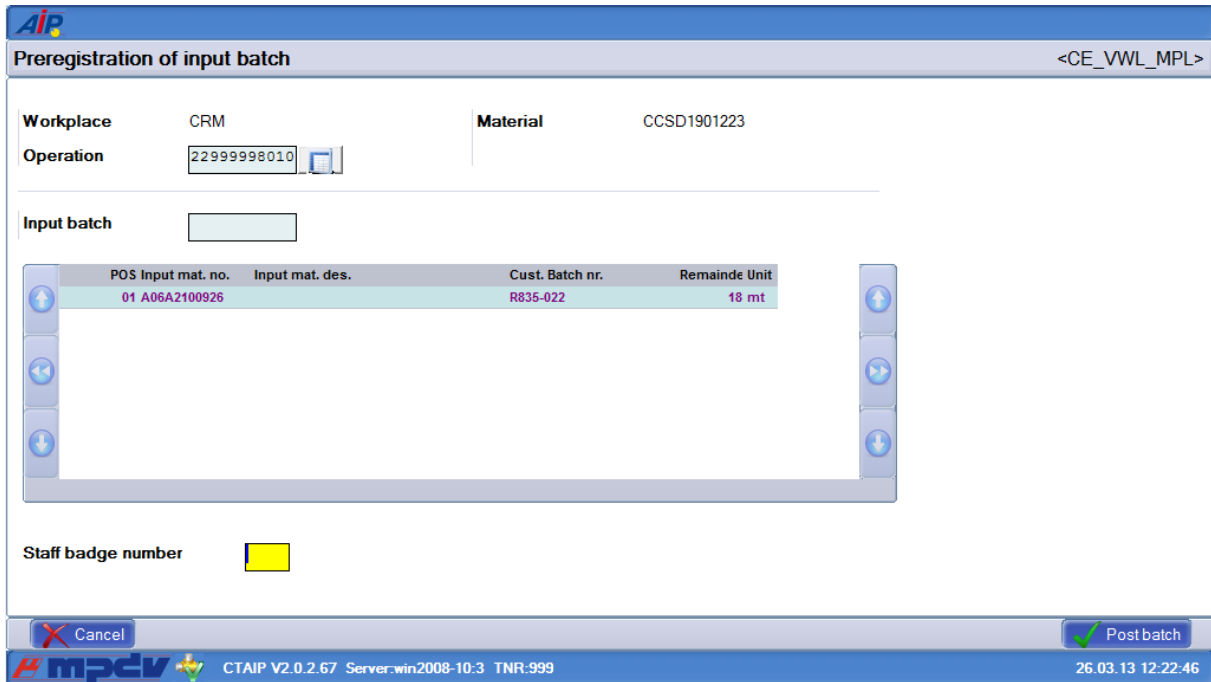

Preregistration of input batch <CE_VWL_MPL>

Workplace: CRM Material: CCSD1901223

Operation: 22999998010

Input batch:

POS Input mat. no.	Input mat. des.	Cust. Batch nr.	Remainde Unit
01 A06A2100926		R835-022	18 mt

Staff badge number:

Cancel Post batch

CTAIP V2.0.2.67 Server:win2008-10-3 TNR:999 26.03.13 12:22:46

Finally, the input batch that has been logged on in advance is displayed in purple in the BOM of the component.

The dialog can be closed with the “cancel” key.