

1 Separate/Rebuild Serial Numbers at AIP

Usage

The "separate/rebuild serial number" function is used to demount components listed by serial numbers from a component part and to mount a new component as a replacement during assembly processes. The serial number of the component part remains and is continued as a numeric value. All ingoing and outgoing serial numbers are to be identified.

Prerequisite

Various configurations have to be made in the system to use the dialog. Further details can be found in the document dealing with [description of the configuration to separate/rebuild serial numbers](#).

"Separate/rebuild serial numbers" dialog

The "separate serial number" dialog (A_SNR_D) consists of workflows providing extensive possibilities for data collection. By default, the dialog includes the following workflow steps:

Started by the workflow button "serial number data" → Dialog **SNR_DATA_D**

Including the dialogs:

Workflow step/detailed dialog	Technical name	Usage
separate serial number	A_SNR_D	This workflow step shows basic data of the serial number or the user can enter this data here.
Serial number data	SNR_DATA_D	Detailed dialog to enter additional data specific to serial numbers. The detailed dialog can only be started for a single serial number.
Serial number data - attributes	WF_SNR_ATTR_D	Starts the input of attributes for a serial number
Serial number data - document links	WF_SNR_DOC_D	Starts the input of document links for a serial number

Depending on the active workflow step, different function keys are provided.

Basically, data is collected in two steps:

- Separate/rebuild serial numbers

At first demounting of a component and mounting of a replacement from/in a component part listed by serial number is documented. The reconstruction is recorded in the system, which leads back to the "separate serial number" workflow step.

The dialog may either be closed or additional data (batch attributes and document links) is entered for the component part listed by serial number.

- Data collection for the serial number of the finished component part

Basically, data is collected for the serial number when the serial number is completed.

"Separate/rebuild serial number" dialog

Superordinate serial No.	
Demount serial No.	
Mount/change serial No.	

SNR	Batch	Material
		
		
		

Staff badge number

 Close	Capture	 Serial No. data	 Complete
---	---------	---	--

The following data is used in the dialog:

Superordinate serial number

The serial number of the component part from which a component is to be removed has to be entered (mandatory).

Demount serial number

The serial number of the component that is to be removed has to be entered (mandatory).

Mount serial number

The serial number of the component that is to be mounted has to be entered (mandatory).

Staff badge number

Entry of the staff badge number is mandatory.

The result list shows the components currently mounted in the serial number of the component part.

There is a number of function keys facilitating dialog handling, to input data for serial numbers or to complete a posting:

Designation	Usage
Close	Closes the dialog.
Complete	If the user confirms it, the dialog can be continued and remains opened to enter additional merged batches.
Serial number data	Detailed dialog to enter data specific to serial numbers. The detailed dialog can only be started for a single serial number and refers to already mounted serial numbers.

Procedure of the "separate/rebuild serial numbers" function


- The user opens the dialog "separate/rebuild serial numbers" by the function key in the basic terminal screen.
- The user enters the serial number (possibly by scanning) that is affected by separation/rebuilding.
- The result list shows all components mounted in this serial number (through the "merge serial numbers" function).
- The user enters the serial number of the component he/she wants to remove and/or takes it over (by double clicking).
- The user enters the new serial number he/she has mounted.
- Then the user presses the "capture" function key and the serial number is posted along with new component parts.
- The dialog remains opened until the user closes it explicitly. The entered "serial number" and result list remains and/or is still displayed.
- If several component parts need to be rebuilt, the dialog can still be used. Each exchanged component is entered separately.

Detailed dialog Serial number data - batch attributes

Batch attributes may be entered for the serial number in the "serial number attributes" workflow step of the "serial number data" detailed dialog.

The "attributes" function key allows entering attributes for a batch or for all serial numbers. The input dialog suggests all attributes that are assigned the "Capture attribute while generating batch" option in the [configuration of batch attributes](#) regarding the operation's material type.

The "go on" function key allows entering document links for serial numbers.

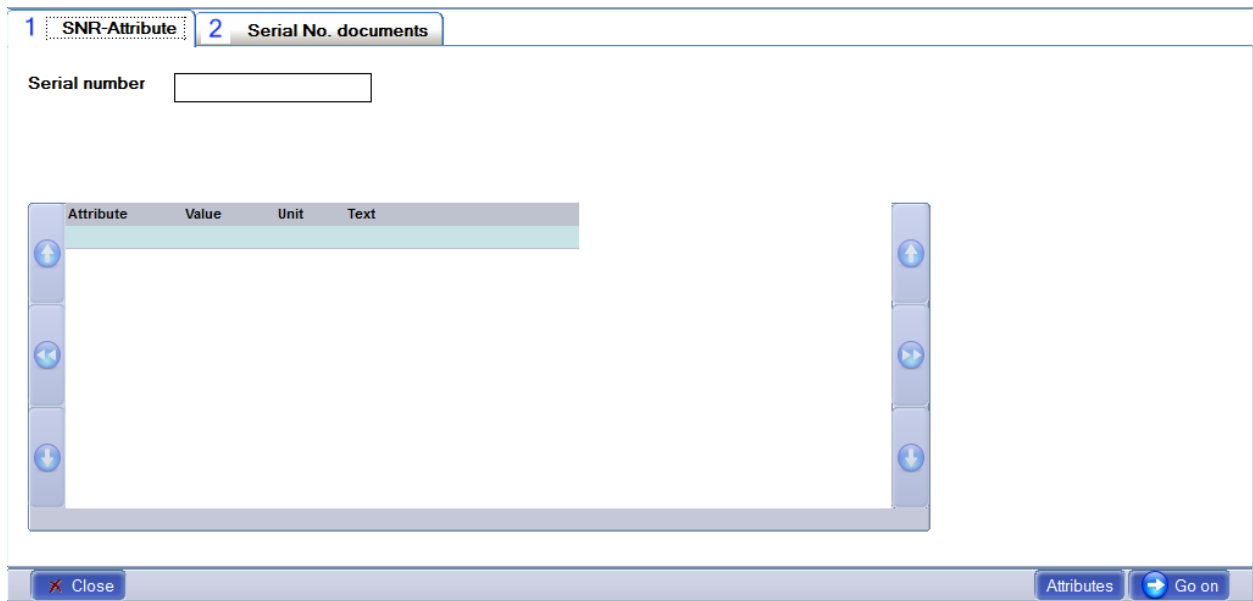

Detailed dialog "serial number data – document links (SNR_DATA_D)

The user may enter document links for each serial number (through [configuration](#)).

The procedure is as follows:

- The user presses the "serial number data" function key in the basic screen of the collection of serial numbers dialog.
- The user enters the document links. The entered/selected document links are displayed as assigned links in the result list.
- The user selects one of the following input options:
 - For each serial number

If this option is enabled, the entered document links are only saved for this serial number. The entered document links are stored and suggested the next time a serial number is recorded.
- Once the user has entered the document links for the serial number, he/she gets to the next workflow of the dialog or back to the basic screen by "go on".

AIP

Seriennummer trennen/umbuchen

1 SNR-Attribute

2 Serial No. documents

Serial number

Seriennummer-Dokumentenlink

Link/document

↑

↶

↓

↑

↷

↓

✖ Close

Add

Delete

↶ Back

✔ Complete

CTAIP V2.0.3.4 Server.scc7:4 TNR:131

04.07.14 07:53:58