

1 Collection of Serial Numbers at AIP

Usage

You use the "enter serial number" dialog to enter and track serial numbers in the production process.

Prerequisite

Various configurations have to be made in the system to use the dialog. Further details can be found in the document dealing with the [Description of the configuration to use collection of serial numbers](#).

"Collection of serial numbers" dialog

The "enter serial number" dialog (A_SNR_A) consists of workflows providing extensive possibilities for data collection. By default, the dialog includes the following workflow steps:

Workflow step/detailed dialog	Technical name	Usage
Collection of serial numbers	WF_A_SNR_A	This workflow step shows basic data of the serial number or the user can enter this data here.
Merged batch attributes	WF_SNR_ATTR	Entry of batch attributes for the merged batch
Merged batch documents	WF_SNR_DOC	Entry of document links for the merged batch
Serial number data	SNR-DATA	Detailed dialog to enter additional data specific to serial numbers. The detailed dialog can only be started for a single serial number.


Depending on the active workflow step, different function keys are provided.

Basically, data is collected in two steps:

- Data collection for serial numbers
Data is collected for serial numbers until a new merged batch can be completed.
Data collection restarts, once a merged batch has been completed.
- Data collection for merged batches

Basically, data is collected for the merged batch when the merged batch is completed; but it may also be started at an earlier point in time.

The following diagram illustrates the two acquisition cycles:

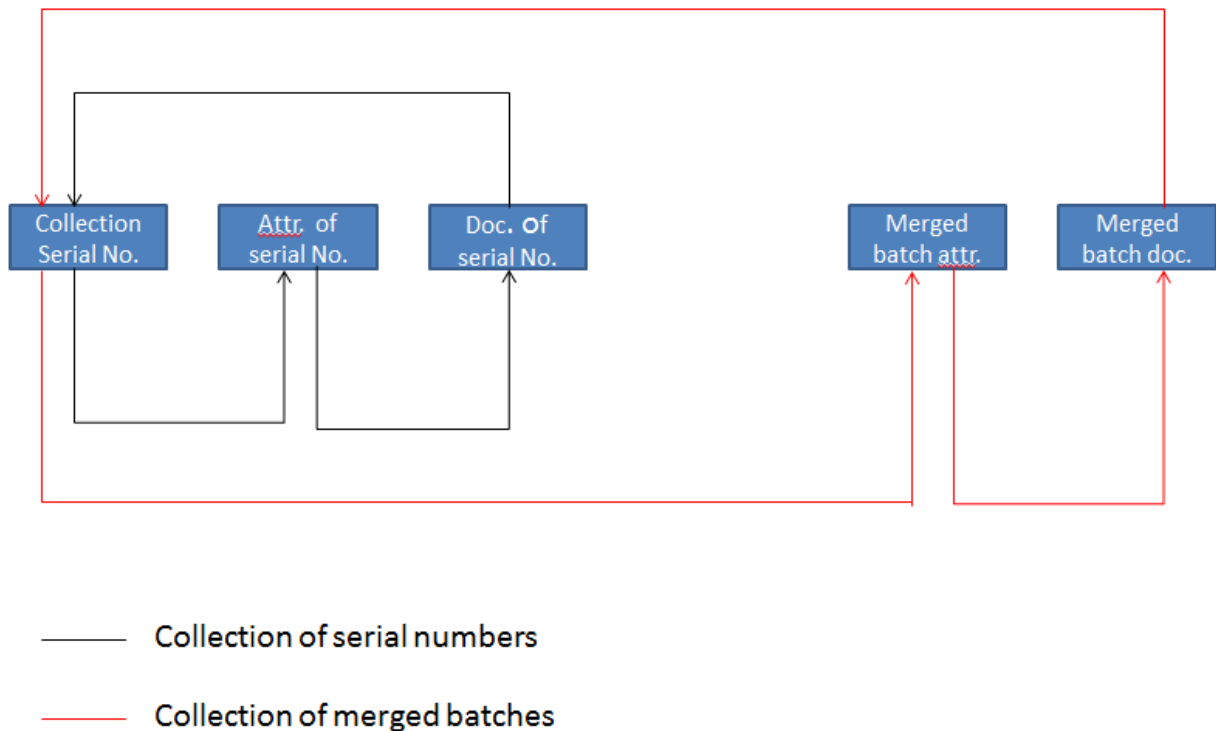

Workflow step: "collection of serial numbers"

The workflow step "collection of serial numbers" has been designed to enter data regarding one or several serial numbers.

The dialog shows the following data that cannot be modified:

Workplace

Current workplace as selected in the basic screen of the terminal.

Operation

Currently running operation as selected in the basic screen of the terminal.

Material

Material produced by the operation as laid down in the operation's article/item.

Merged batch

Merged batch number as defined by the system for the next merged batch to be completed.

The user may enter the following data:

Serial number

Subject to the type of serial number collection, the "serial number" field can be used to:

- enter serial numbers manually, instead of selecting them manually from the table of serial numbers
- scan serial numbers, instead of selecting them manually from the table of serial numbers
- If serial numbers have to be entered manually, they can be entered or scanned manually.

Staff badge number

Entry of the staff badge number is mandatory.

Quality

The user may define the quality. A reason has to be entered for the ratings "scrap", "open" and "rework".

Material buffer (*1)

The material buffer defined for the machine is suggested as the target material buffer.

Comment (*1)

A comment may be entered for the merged batch.

Transport unit (*1)

Suggests the transport unit that is identified as the default unit in the [assignment of material types to transport units](#) regarding the material type of the operation.

If nothing is assigned, "SYSTEM" is suggested.

Transfer (for each merged batch / all merged batches from now on)

For the fields labeled with (*1) it may be specified if they only apply for the merged batch that is currently being processed or for this and all future merged batches of this operation.

This definition applies until the operation is interrupted and/or logged off, even for different shifts.

The table of serial numbers shows the serial numbers of the registered input batch that have not yet been classified for this operation. The quality status (Q status) of serial numbers may be filtered, provided this status is set by quality data collection.

Single serial numbers can be selected by double clicking the table. Selected serial numbers are highlighted at the left-hand side of the table by an "X" with green background. There are also function keys for mass selections.

There is a number of function keys facilitating dialog handling, to input data for serial numbers or to complete a posting:

Designation	Usage
-------------	-------

Designation	Usage
Close	Closes the dialog.
Complete	The currently generated merged batch is completed for the entered/assessed serial numbers. The merged batch number is displayed on the terminal. If the user confirms it, the dialog can be continued and remains opened to enter additional merged batches.
Select all	All serial numbers displayed in the list of serial numbers are selected.
Unselect all	All serial numbers displayed in the list of serial numbers are deselected.
Invert selection	Subject to the current state of selection, the system changes it: • Selected serial numbers are unselected • Unselected serial numbers are selected
Serial number data	Detailed dialog to enter data specific to serial numbers. The detailed dialog can only be started for a single serial number.
Next	Leads to the next workflow step

Detailed dialog "serial number data - batch attributes"

Batch attributes may be entered for the serial number in the "serial number attributes" workflow step of the "serial number data" detailed dialog.

The "attributes" function key allows entering attributes for a batch or for all serial numbers. The input dialog suggests all attributes that are assigned the "Capture attribute while generating batch" option in the [configuration of batch attributes](#) regarding the operation's material type.

The "go on" function key allows entering document links for serial numbers.



The list only shows the recorded batch attributes; batch attributes that might already be available are not shown.

Workflow step - merged batch attributes

Batch attributes may be entered for the serial number in the "merged batch attributes" workflow step.

The "attributes" function key allows entering attributes for the merged batch that is currently being processed or for this and all future merged batches of this operation. The input dialog suggests all attributes that are assigned the "Capture attribute while generating batch" option in the [configuration of batch attributes](#) regarding the operation's material type.

The "go on" function key allows entering document links for the serial number.



The list only shows the recorded document links; document links that might already be available are not shown.