

1 Terminate Transport Order

Overview

License	MPL-TRA
---------	---------

Usage

The functionality described below enables transport orders to be terminated at the shop floor terminal AIP.

Prerequisite

In order to use this function at the terminal, the following [configuration](#) is required

Function at Terminal

The function is triggered manually by activating the button in the "Sequencing list" (TRANRLIST) screen.




If the terminal is offline, the posting function is available to a limited extent on the basis of the available data in the sequencing list. In the offline case, errors are not indicated if a posting fails at the server.

Terminate Transport Order

The Terminate transport order function can be used by the operator to terminate an active transport process. This means:

- The transport operation is terminated.
- The status of the transport operation changes from Running (L) to Finished (E).
- The object to be transported (batch or resource) changes to the "Free" status and is reposted in the target material buffer.

Posting screen:

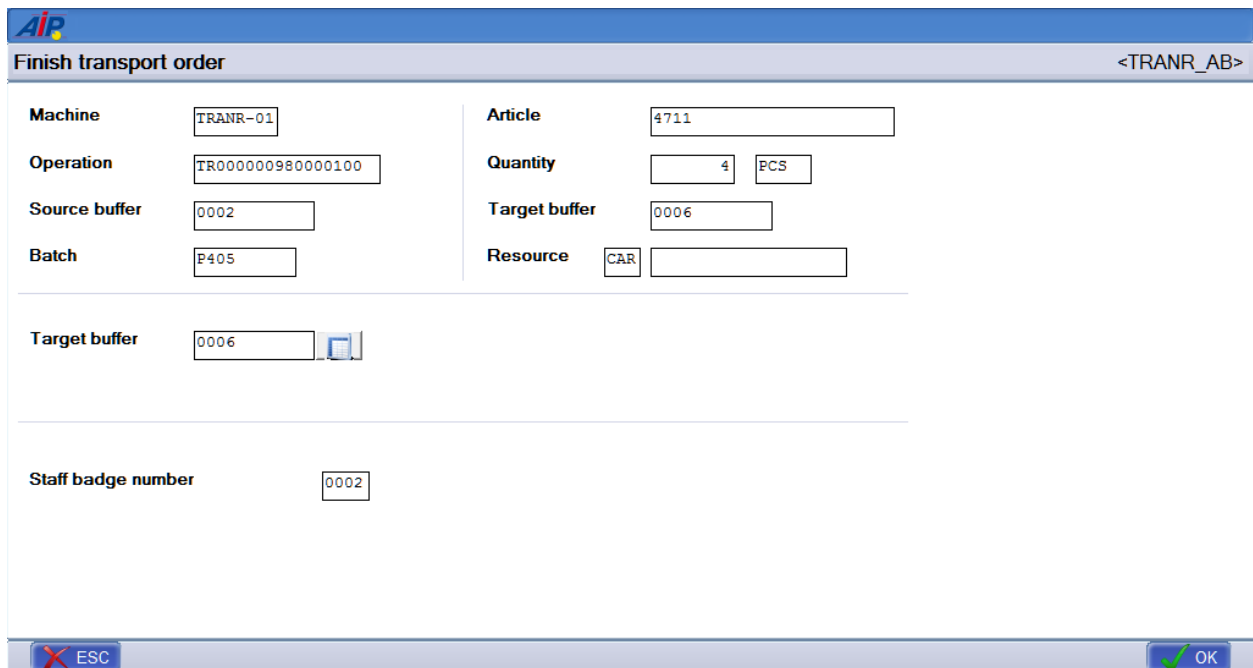

Machine		Article	
TRANR-01		4711	
Operation		Quantity	
TR000000980000100		4 PCS	
Source buffer		Target buffer	
0002		0006	
Batch		Resource	
P405		CAR	
Target buffer			
0006			
Staff badge number			
0002			

Fig.: Terminate transport order for batch

Description of the display fields:

Machine

Machine to which the transport operation is currently logged on.

Operation

Operation number of the transport operation

Article number

Article number of the transport operation. If a resource is transported, the article number is empty.

Batch number

In the case of batch-related transport, the assigned batch number is shown here.

Resource type

If a resource is transported, the resource type of the assigned resource is shown here.

Resource

If a resource is transported, the resource number of the assigned resource is shown here.

Source material buffer

Material buffer from which the transport is to be started.

Target material buffer

This is the material buffer to which a batch or resource is to be transported.

Staff badge number

When editing a transport order manually, the badge number of a person known to the system has to be entered. The value is taken from the pool list.

Description of the display fields:

Target material buffer

The target material buffer is automatically set to the target material buffer of the transport order and can then be changed manually. The object to be transported (batch or resource) is reposted in this material buffer.

The following items are verified upon logoff:

- The transport order must be in the Running status (L).

Results:

- Upon successful termination, the transport OP status changes to Finished (E) and the display is updated.