

1 Available Escalations

1.1 Failure analysis criterion generated for an inspection order (CPAUERR.INSERTED)

If a failure analysis criterion (failure type, failure location, failure cause, etc.) is created for an inspection order, the escalation is triggered.

Event	Identifiers	Description
CPAUERR.INSERTEDC PAUE	CPAUERR.RECTYP	Data type
	CPAUERR.BER	Area
	CPAUERR.PANNR	Inspection requirement
	CPAUERR.PAUNR	Inspection order
	CPAUERR.AFO	OP sequence
	CPAUERR.STPRNR	Sample number
	CPAUERR.WERTNR	Measured value number
	CPAUERR.ERRTYP	Type of failure analysis entry Possible types are: - FA (failure type) - FU (failure cause) - FO (failure location) - VU (party responsible/origin)
	CPAUERR.ERRNR	Number of failure analysis entry
	CPAUERR.ERRBEZ	Failure designation (*)
	CPAUERR.GEWICHTUNG	Weighting
	CPAUERR.BEM	Comment
	CPAN.FU:1 CPAN.FU:2 CPAN.FU:3 CPAN.FU:4 CPAN.FU:5	User field 1 Insp. requirement (*) User field 2 Insp. requirement (*) User field 3 Insp. requirement (*) User field 4 Insp. requirement (*) User field 5 Insp. requirement (*) Type: alphanumeric
	CPAN.FU:6 CPAN.FU:7 CPAN.FU:8 CPAN.FU:9 CPAN.FU:10	User field 6 Insp. requirement (*) User field 7 Insp. requirement (*) User field 8 Insp. requirement (*) User field 9 Insp. requirement (*) User field 10 Insp. requirement (*) Type: numeric

Event	Identifiers	Description
	CPAN.FU:11	User field 11 Insp. requirement (*)
	CPAN.FU:12	User field 12 Insp. requirement (*) Type: floating comma
	CPAN.FU:13	User field 13 Insp. requirement (*)
	CPAN.FU:14	User field 14 Insp. requirement (*) Type: date
	CPAN.ATK	Article number (*)
	CPAN.ATKIDX	Drawing issue number (*)
	CPAN.ANR	Order number (*) (of the inspection requirement)
	CPAN.MNR	Machine number (*) (of the sample)
	MNR.BEZX	Machine name (*)
	ARTIKEL.ATKBEZ	Article name (*)
	CPAUMM.OTG	Upper tolerance limit (*) (of the inspection order characteristic as absolute value) Before SP15, this information was also output in the identifier CMM.OTG.
	CPAUMM.UTG	Lower tolerance limit (*) (of the inspection order characteristic as absolute value) Before SP15, this information was also output in the identifier CMM.UTG.
	CPAUMM.MMBEZ	Name of inspection step characteristic (*)
	CPAUMW.MW	Measured value (*)
	CPAUMW.BEMERK	Comment for measured value (*)
	CPAUMW.PNR	Inspector ID (*) (of the measured value)
	CPAUMW.KNR	Inspector badge number (*) (of the measured value)
	CPAUMW.NUM:EINTTYP	Type of the number entry (*) (e.g. PPUNKT for inspection point)
	CPAUMW.NUM:EINTNR	Number of the number entry (*) (e.g. inspection point number)
	CPAU.AGNR	Operation number inspection step (*)
	PPKT:EQUIP	Equipment (*) (inspection point)
	PPKT:TPLATZ	Functional location (*) (inspection point)

Event	Identifiers	Description
	PPKT:TLOS	Partial batch (*) (inspection point)
	PPKT:CNR	Inspection point batch (*) (inspection point)
	PPKT:USERC1	User field C1 of inspection point (*) (inspection point)
	PPKT:USERC2	User field C2 of inspection point (*) (inspection point)
	PPKT:USERN1	User field N1 of inspection point (*) (inspection point)
	PPKT:USERN2	User field N2 of inspection point (*) (inspection point)
	NEST	Cavity number (*)

(*) These entries can be used as of service pack 15. If the HYDRA system was initially implemented with an older service pack version, the selection list of escalation variables (conditions) or the selection list of available placeholders (message text) do normally not include these identifiers. It is still possible to use these identifiers manually as message text or condition. You must run a database patch to include the identifiers marked with (*) in the selection lists.

Note:

The escalation message is limited to 1024 characters. It already includes the dialog data string the escalation is based on. The dialog data string contains about 700 characters without test of the escalation message. Therefore there are about 300 characters left for the actual test of the escalation message. If you integrate too many parameters in the escalation message, the dialog data string including the contents of the escalation message is cut after 1024 characters. A consequence can be that not all defined contents are integrated in the escalation message. To show all contents of an escalation message, create the CAQ option 1220. Call the application *Options* using the transaction code "qmaopt". Create the option as shown in the screenshot below.

General	
Option	1220
Option sub no.	
Option ID	0
Option, rec. type	
Option, area	
Option des.	Escalation with more than 1024 characters
Module	PA
Value	Y
Selection	Y/N
	☒ List
	☐ Subject to area
Addition	
	☐ Inactive

If you enable this option, the processing of the escalation events mentioned above can be slower than usual.

1.2 Measure generated (CMASSN.INSERTED)

If a measure is generated, the escalation is triggered.

Event	Identifiers	Description
CMASSN.INSERTED	CMASSN.MASSER	Identifier of the measure
	CMASSN.RECTYP	Data type
	CMASSN.RECREF	Assignment
	CMASSN.BER	Area
	CMASSN.KEY:1	Key field 1
	CMASSN.KEY:2	Key field 2
	CMASSN.KEY:3	Key field 3
	CMASSN.KEY:4	Key field 4
	CMASSN.KEY:5	Key field 5
	CMASSN.MASNR	Measure number
	CMASSN.MASTEXT	Measure text
	CMASSN.VERANT:TYP	Party in charge - type
	CMASSN.VERANT:NR	Party in charge - number
	CMASSN.STA	Status
	CMASSN.ZIELDAT	Target date - Date
	CMASSN.ZIELZEI	Target date - time
	CMASSN.ELEM	associated workflow element
	CMASSN.BEM	Comment
	PNR	Party in charge (only if the party in charge is taken from the HR catalog)

1.3 Formula calculation: Incorrect characteristic reference in calculated characteristics

(CPAUMW.CALCULATED_CRITERIAS_GET_VARIABLE_VALUE)

If the referenced source characteristic could not be found during the calculation of characteristics, an escalation is triggered.

Event	Identifiers	Description
CPAUMW.CALCULATED_CRITERIAS_GET_VARIABLE_VALUE	CPAUMW.RECTYP	Data type
	CPAUMW.BER	Area
	CPAUMW.PANNR	Inspection requirement number
	CPAUMW.PAUNR	Inspection order number
	CPAUMW.AFO	OP sequence
	CMERK.BFORMEL:TYP	Level of the characteristic calculation (see document calculation of formulas) V - single values S - samples C - characteristics
	CMERK.BFORMEL	Calculation formula of the characteristic
	ERR:TEXT	Error description
	VAR:NAME	incorrect variable

1.4 Error when the calculated variable value is set (CPAUMW.CALCULATED_CRITERIAS_SET_VARIABLE)

When the characteristics were calculated, a referenced source characteristic was found. If an error occurs when the calculated numeric value is used in the formula, an escalation is triggered.

Event	Identifiers	Description
CPAUMW.CALCULATED_CRITERIAS_SET_VARIABLE	CPAUMW.RECTYP	Data type
	CPAUMW.BER	Area
	CPAUMW.PANNR	Inspection requirement number
	CPAUMW.PAUNR	Inspection order number
	CPAUMW.AFO	OP sequence
	CPAUMW.STPRNR	Sample number (of the calculated value)
	CPAUMW.WERTNR	Single value number (of the calculated value)
	CMERK.BFORMEL:TYP	Level of the characteristic calculation (see document calculation of formulas) V - single values S - samples C - characteristics
	CMERK.BFORMEL	Calculation formula of the characteristic
	ERR:TEXT	Error description
	VAR:NAME	Name of the variable in question
	VAR:VALUE	Calculated value of the variable

1.5 Changed inspection severity (CDYHSTPR_DYPSCHARF_CHANGED)

If the inspection severity is changed, the escalation is triggered.

Event	Identifiers	Description
CDYHSTPR_DYPSCHARF_CHANGED	CPAUSP.RECTYP	Data type sample
	CPAUSP.BER	Area sample
	CPAUSP.PANNR	Inspection requirement
	CPAUSP.PAUNR	Inspection order
	CPAN.ANR	Order
	CPAU.AGNR	Operation
	CPAUSP.AFO	OP sequence
	CMERK.CMMNR	Characteristic number
	CMERK.MMBEZ	Characteristic name
	CPAUSP.STPRNR	Sample
	CPAUSP.DEVICE:TYP	Device type
	CPAUSP.DEVICE:ID	Device
	CPAUSP.DEVICE:STPRNR	Device sample
	DYPSCHARF:ALT	old inspection severity
	DYPSCHARF:NEU	new inspection severity
	CHANGE:DAT	Modified on (date)
	CHANGE:ZEI	Modified on (time)

1.6 Completing an inspection point (CPANUMP.COMPLETED)

If an inspection point is completed, an escalation is triggered. For example, you can configure that only the inspection result "NIO" ("=fail") triggers a notification (CPANUMPPKT:STA == "NIO").

Event	Identifiers	Description
CPANUMP.COMPLETED	CPANUMP.PPKT:RECTYP	Data type (*)
	CPANUMP.PPKT:BER	Area (*)
	CPANUMP.PPKT:PANNR	Inspection requirement (*)
	CPANUMP.PPKT:EINTTYP	Type of inspection point (*)
	CPANUMP.PPKT:EINTNR	Number of inspection point (*)
	CPANUMP.PPKT:STA	Status (*)


Event	Identifiers	Description
	CPANUMP.FU:1	direct user field 1 (*)
	CPANUMP.PPKT:FU:2	direct user field 2 (*)
	CPANUMP.PPKT:FU:3	direct user field 3 (*)
	CPANUMP.PPKT:FU:4	direct user field 4 (*)
	CPANUMP.PPKT:FU:5	direct user field 5 (*)
	CPANUMP.PPKT:FU:6	direct user field 6 (*)
	CPANUMP.PPKT:FU:7	direct user field 7 (*)
	CPANUMP.PPKT:FU:8	direct user field 8 (*)
	CPANUMP.PPKT:FU:9	direct user field 9 (*)
	CPANUMP.PPKT:FU:10	direct user field 10 (*)
	CPANUMP.PPKT:FU:11	direct user field 11 (*)
	CPANUMP.PPKT:FU:12	direct user field 12 (*)
	CPANUMP.PPKT:FU:13	direct user field 13 (*)
	CPANUMP.PPKT:FU:14	direct user field 14 (*)
	CPANUMP.PPKT:ABSVON	Completion of
	CPANUMP.PPKT:ABSVONK	Completion of card
	CPANUMP.PPKT:ANLURS	Cause for creation
	CPANUMP.PPKT:AUS	Scrap
	CPANUMP.PPKT:CHARGE	Batch
	CPANUMP.PPKT:EQUIP	Equipment
	CPANUMP.PPKT:MASCH	Machine
	CPANUMP.PPKT:MENGE	Quantity
	CPANUMP.PPKT:NACH	Rework
	CPANUMP.PPKT:PLATZ	Location
	CPANUMP.PPKT:PMASCH	Prod. machine
	CPANUMP.PPKT:PROBE	Sample
	CPANUMP.PPKT:TLOS	Partial batch
	CPANUMP.PPKT:USERC1	User field C1
	CPANUMP.PPKT:USERC2	User field C2
	CPANUMP.PPKT:USERD1	User field D1
	CPANUMP.PPKT:USERN1	User field N1
	CPANUMP.PPKT:USERN2	User field N2
	CPANUMP.PPKT:USERT1	User field T1
	CPANUMP.PPKT:VECODE	Usage decision
	CPAN.ANR	Order (*)
	CPAN.AGNR	Operation (*)
	CPAN.FU:1	direct user field 1 (*)
	CPAN.FU:2	direct user field 2 (*)

Event	Identifiers	Description
	CPAN.FU:3	direct user field 3 (*)
	CPAN.FU:4	direct user field 4 (*)
	CPAN.FU:5	direct user field 5 (*)
	CPAN.FU:6	direct user field 6 (*)
	CPAN.FU:7	direct user field 7 (*)
	CPAN.FU:8	direct user field 8 (*)
	CPAN.FU:9	direct user field 9 (*)
	CPAN.FU:10	direct user field 10 (*)
	CPAN.FU:11	direct user field 11 (*)
	CPAN.FU:12	direct user field 12 (*)
	CPAN.FU:13	direct user field 13 (*)
	CPAN.FU:14	direct user field 14 (*)
	CPAN.ATK	Article number (*)
	CPAN.ATKIDX	Drawing issue number (*)
	CPAN.ATKBEZ	Article name (*)

(*) These entries are not included in the selection list. It is still possible to use these identifiers manually as message text or condition.

Note:

The escalation message is limited to 1024 characters. It already includes the dialog data string the escalation is based on. If you integrate too many parameters in the escalation message, the dialog data string including the contents of the escalation message is cut after 1024 characters. A consequence can be that not all defined contents are integrated in the escalation message. To show all contents of an escalation message, create the CAQ option 1220. Call the application *Options* using the transaction code "qmaopt". Create the option as shown in the screenshot below.

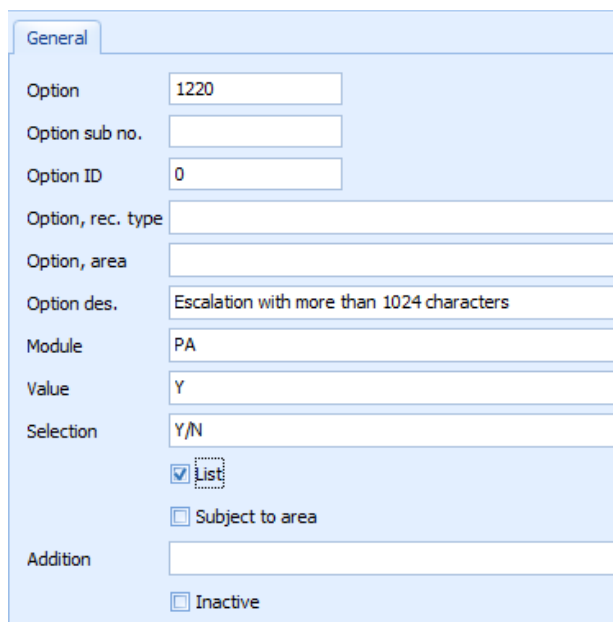

The screenshot shows the 'Options' application form with the following fields and values:

Field	Value
Option	1220
Option sub no.	
Option ID	0
Option, rec. type	
Option, area	
Option des.	Escalation with more than 1024 characters
Module	PA
Value	Y
Selection	Y/N
	☒ List
	☐ Subject to area
Addition	
	☐ Inactive

If you enable this option, the processing of the escalation events mentioned above can be slower than usual.