

1 Access Control Escalations

1.1 Summary

Using the escalation management alarms and access attempts may be sent by e-mail, SMS or as message to the console of certain users.

Within access control the following events can be sent using the escalation management:

ZNR.OPEN_TOO_LONG

The entrance has been opened too long. This alarm also indicates the badge number that has opened the entrance.

ZNR.OPEN_TOO_LONG_END

The access, which was opened too long, has been closed again.

ZNR.OPEN_WITHOUT_PERMISSION

The entrance has been opened without permission (e.g. by way of a key or tool).

ZNR.OPEN_WITHOUT_PERMISSION_END

The entrance, which was opened without permission, has been closed again.

ZNR.READER_SABOTAGE

The access reader has been opened (this message only appears when the reader has got a sabotage contact).

ZNR.READER_SABOTAGE_END

The access reader has been closed again (this message only appears when the reader has got a sabotage contact).

ZNR.READER_FAILURE

Communication between the HYDRA-ZKS terminal and the access reader has broken down.

ZNR.READER_FAILURE_END

The connection between the terminal and the reader has been re-established.

ZNR.ACCESS_POINT_OFFLINE

The access has not sent a status within the given status time. Thus, the access status is not known.
The connection between the server and the HYDRA-ZKS terminal has broken down.

ZNR.ACCESS_POINT_OFFLINE_END

The access has sent a status again.

ZNR.ACCESS


The entrance has been opened by an authorized badge.

ZNR.ACCESS_ATTEMPT

The entrance could not be opened by an unauthorized badge.

1.2 Configuration of ZKS escalations

Something has to be entered in the [configuration of the escalation](#) to be able to report an escalation from the HYDRA-ZKS module:

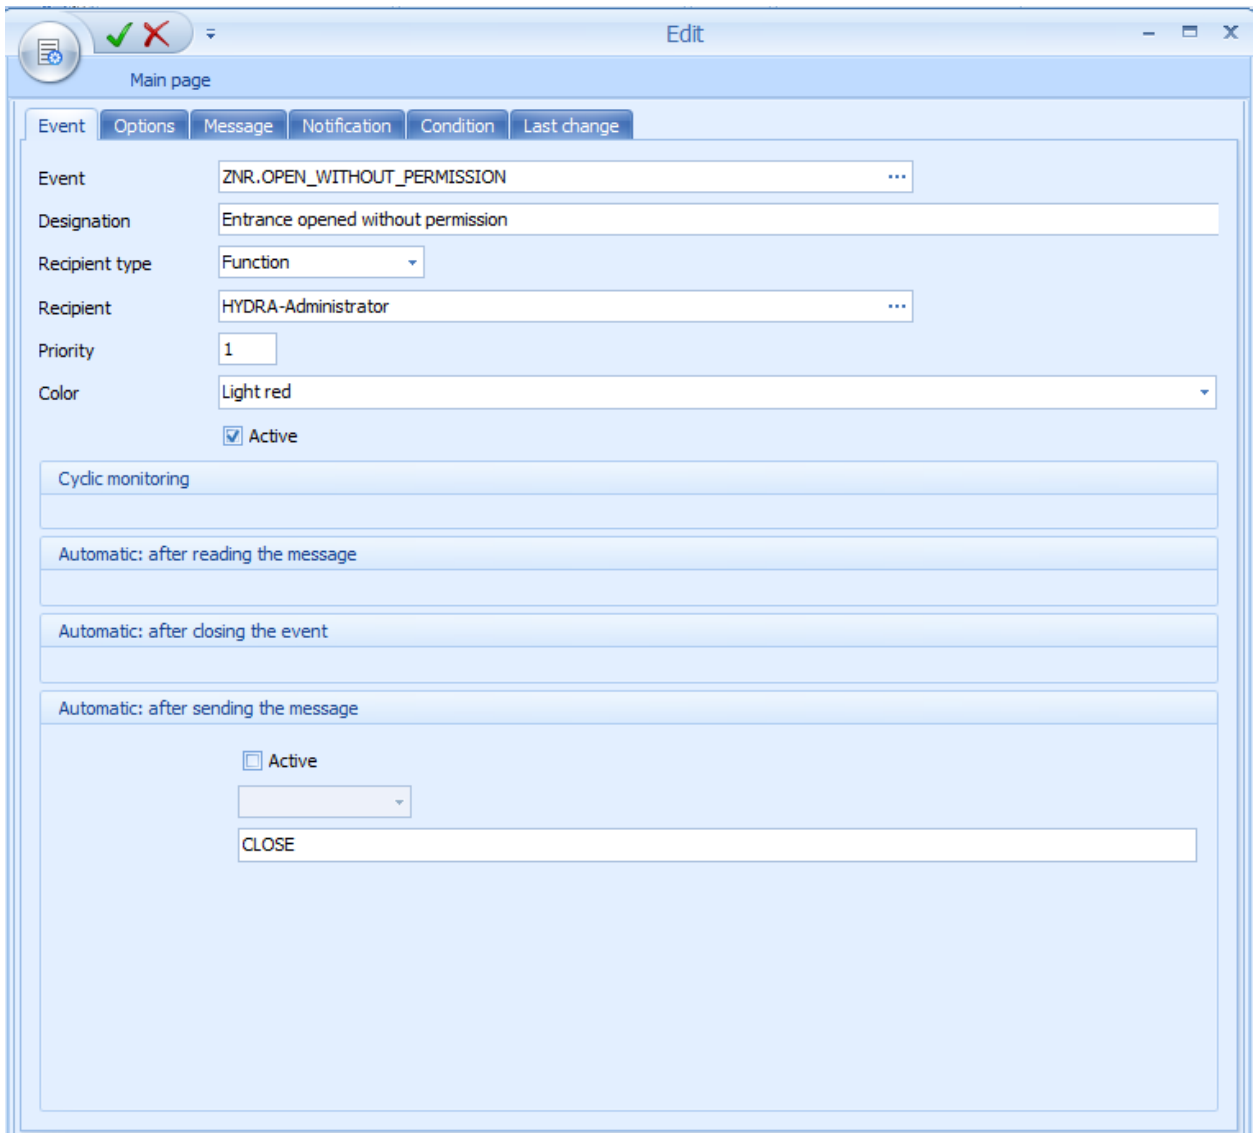

The screenshot shows a software window titled 'Edit' with a 'Main page' header. It contains several tabs: 'Event', 'Options', 'Message', 'Notification', 'Condition', and 'Last change'. The 'Event' tab is selected. The form fields are as follows:


- Event:** ZNR.OPEN_WITHOUT_PERMISSION
- Designation:** Entrance opened without permission
- Recipient type:** Function
- Recipient:** HYDRA-Administrator
- Priority:** 1
- Color:** Light red
- Active:** ☒

Below these fields are four sections for automatic actions:

- Cyclic monitoring:** (empty)
- Automatic: after reading the message:** (empty)
- Automatic: after closing the event:** (empty)
- Automatic: after sending the message:**
 - Active:** ☐
 - Dropdown:** (empty)
 - Text:** CLOSE

The event can directly be reported to a person or a group of persons ([function group](#)). If the message is to be forwarded by e-mail, the IP address of the mail server and the [person's](#) e-mail address (company) have to be defined in the [basic settings](#). To be able to send the event to a console, the assignment between personnel number and user needs to be established in the [user management](#) function.

The text is entered with placeholders for variable data in the message tab:

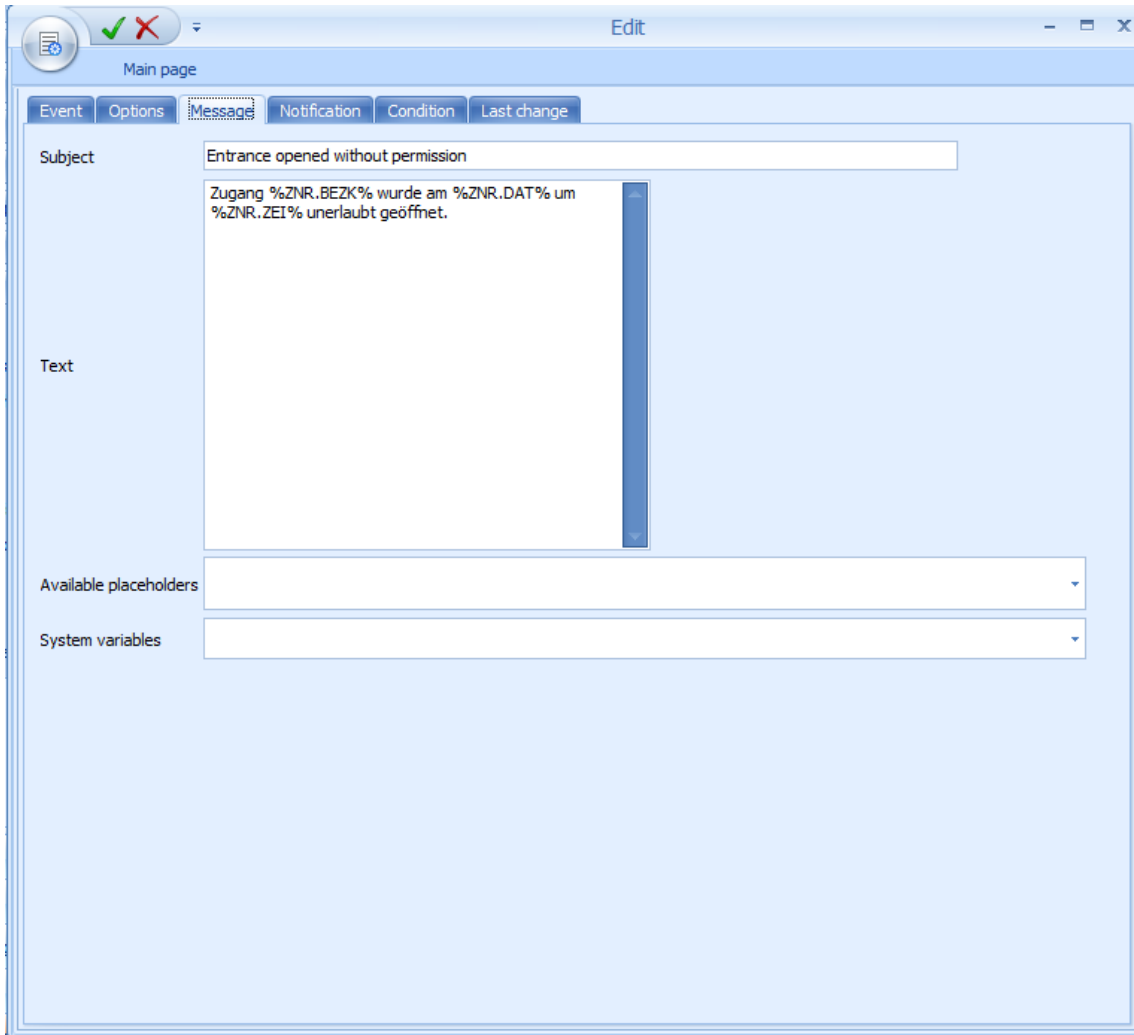

How the message is sent is defined in the “notification” tab.


Notifications about access attempts may have different reasons. The ZPR.ZVG variable determines that only certain access attempts are displayed. Several configurations with different conditions have to be created for the respective event in order to get different messages for different causes.

The following reasons for access attempts are possible:

ZPR.ZVG	Description
2001	Unauthorized badge
2002	No badges loaded
2003	Beyond time zone
2004	Beyond opening hours

2005	Wrong pin code
2006	Wrong company number
2007	Bag check
2008	Alarm system activated
2010	Duplicate posting within lock time
2013	Missing pin code
2014	Badge beyond validity period
2015	Finger print does not match
2020	Other entry of security gate/safety lock is open
2030	Already present in room zone
2031	Not present in room zone
2032	Room zone completely occupied

The following screenshot shows the exemplary condition to send a message if an employee tries to enter a room zone twice:

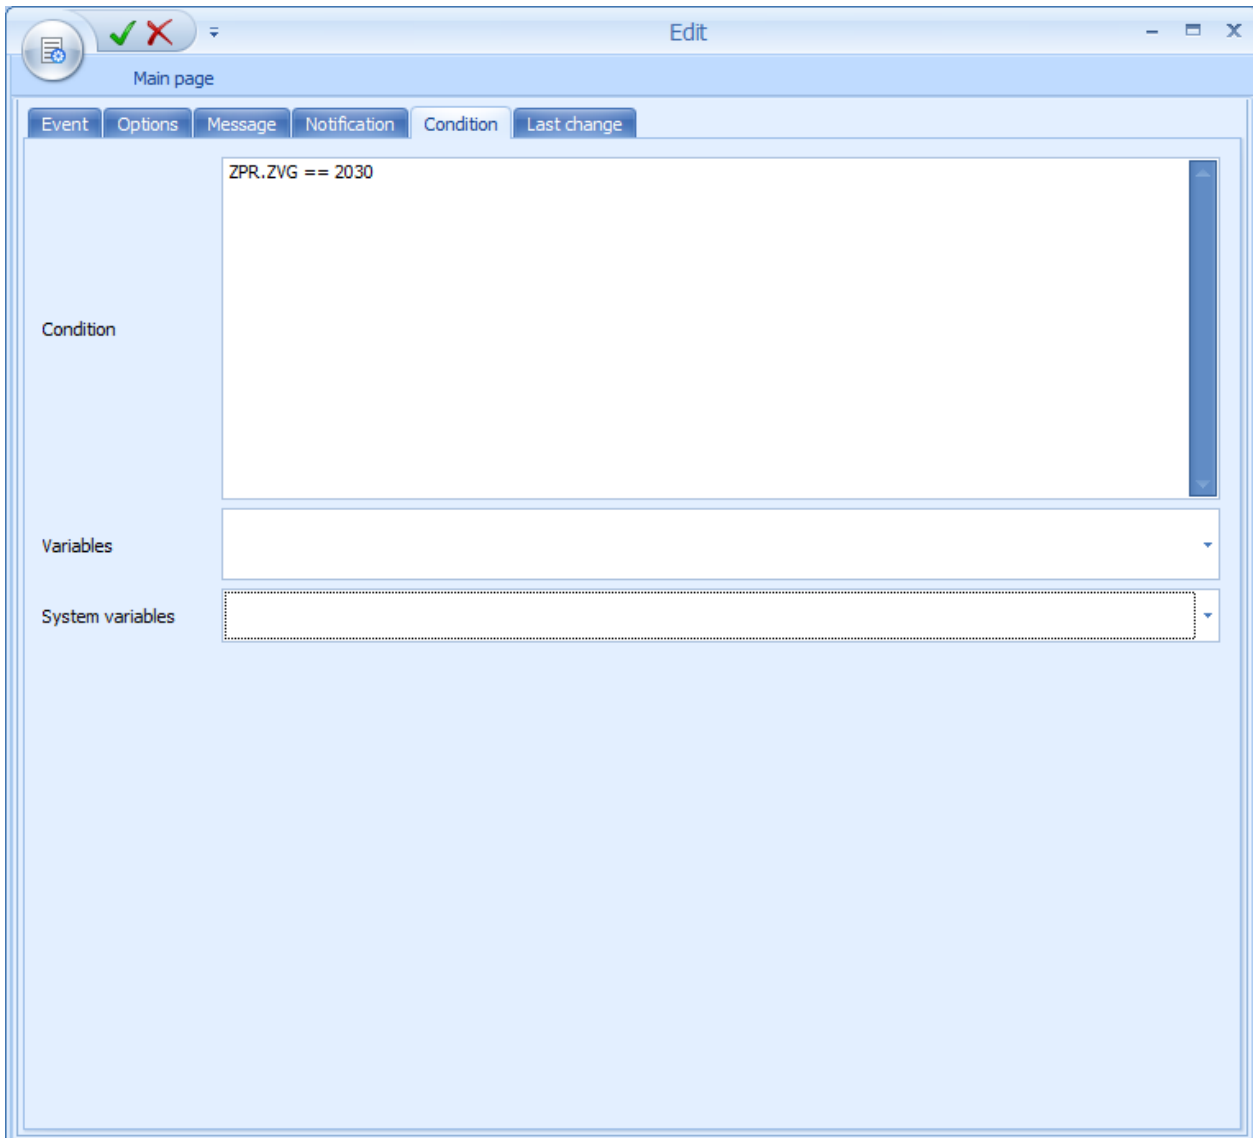

The screenshot displays the MPCV software interface for configuring access control escalations. The window title is "Edit". The main area has tabs for "Event", "Options", "Message", "Notification", "Condition", and "Last change". The "Condition" tab is selected, showing a text input field with the condition "ZPR.ZVG == 2030". Below this, there are sections for "Variables" and "System variables", each with a dropdown menu. The left sidebar contains a "Main page" button and a list of items: "Condition", "Variables", and "System variables".