

1 Batch Consumption

Usage


Material is used and represented in the system by:

- material postings to regulate inventories with/without ERP and without tracing
- batch-related material postings to trace back the recorded parts/materials

Subject to the type in use, consumption can be recorded differently in the system.

Procedure

These types of consumption recording are used in MES:

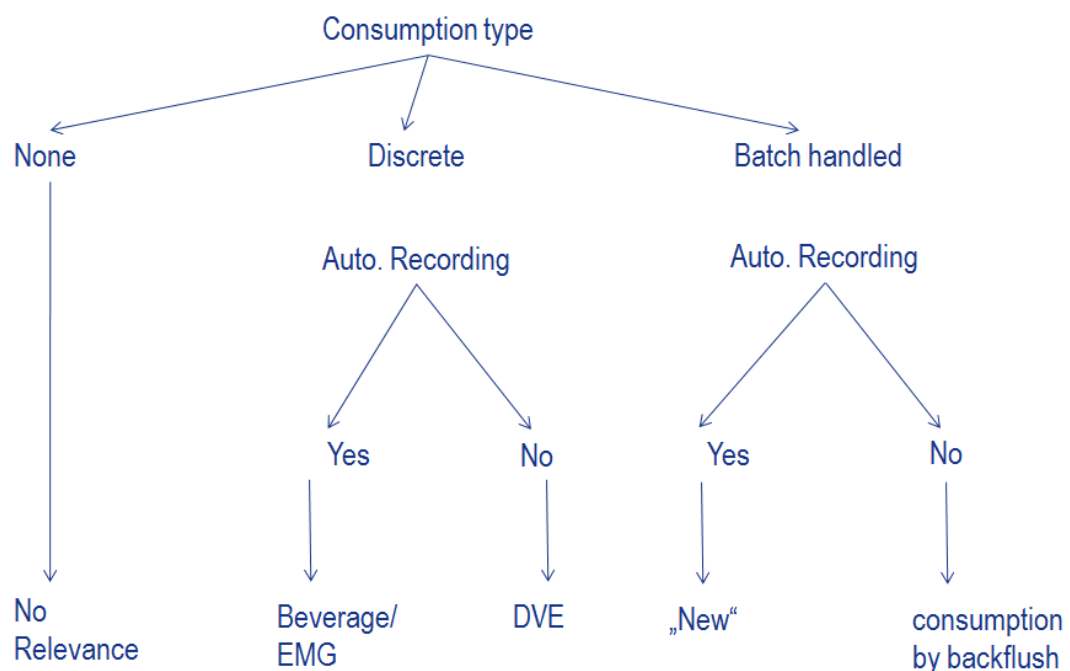

Discrete consumption recording:

Discrete consumption recording is used every time when a discrete amount of consumption can be entered for the used components by the user or a counter. Data is only entered for the component/material number. Data may be collected:

- automatically (configuration of a consumption meter per material)
- manually (the user enters material consumption manually)

Batch-related consumption recording:

Batch-related consumption recording is used every time when batches are used for the components for which a consumed quantity can be entered by the user or a meter. Data is collected regarding the input batch. Data may be collected:

- manually (dialog to log off the input batch and to enter batch consumption manually)
- in a retrograde manner/backflush (automatic calculation of batch consumption by generating the output batch quantity)
- automatically (automatic collection of batch consumption by a consumption meter)

Discrete consumption - manual



How to enter discrete consumption is described [here](#).

Discrete consumption - automatic

General

Automatically recorded consumption is collected by a meter configured at the machine. Data is collected for a material type of materials included in the component list.

Configuration

These configurations have to be set in the system if material consumed discretely is to be indicated/counted by a meter:

- Component of the OP:
The "consumption type" has to be set to "D = discrete".
- Material type of the material:
The option "inventory management" has to be set to "N = No".
- Meter for the material type of the material:
Configure meter like MDE meters.
Option "compensation with material" = yes
Option "material type" = material type of the material that is consumed

Posting/result

A goods issue is generated for automatically recorded consumption in the system.

Manual batch consumption

General

Manual batch consumption is entered by the input batch change function. The user enters the consumed quantity when logging the used input batch off.

Configuration

These configurations have to be set in the system if material is to be consumed manually as input batch:

- Component of the OP:
The option "consumption type" has to be set to "L = Backflush/with batch reference (retrograde)".
- Material type of the material:
The option "inventory management" has to be set to "E = Yes, when logging input batch off".

Posting/result

The consumed quantity is deducted from the remaining quantity of the input batch and the batch shows the reduced "remaining quantity" and the initial quantity.

A goods issue is generated for consumption in the system.



How to enter batch-related consumption is described here.

Retrograde batch consumption

General

Retrograde batch consumption is calculated continuously as the output batch quantity increases. When logging the input batch off, the remaining quantity of the input batch is reduced by the calculated consumption quantity. Usually, the user does no longer enter a quantity when logging the used input batch off.

Configuration

These configurations have to be set in the system if material is to be consumed in a retrograde manner as input batch:

- Component of the OP:
The option "consumption type" has to be set to "L = Backflush/with batch reference (retrograde)".
- Material type of the material:
The option "inventory management" has to be set to "R = Yes, backflush (retrograde)" or "G = Yes, backflush (only with YIELD batch), retrograde".

Posting/result

The quantity calculated in a retrograde manner is deducted from the remaining quantity of the input batch and then the batch shows the reduced "remaining quantity" and the initial quantity.

A goods issue is generated for consumption in the system.

Automatic batch consumption



The function is only available if the modification [batchconsumptionextension](#) is enabled.

General

The automatically recorded batch consumption is collected continuously as the meter quantity increases. When logging the input batch off, the remaining quantity of the input batch is reduced by the automatically recorded consumption quantity. Usually, the user does no longer enter a quantity when logging the used input batch off.

Configuration

- Component of the OP:
The option "consumption type" has to be set to "L = Backflush/with batch reference (retrograde)".
- Material type of the material:
The option "inventory management" has to be set to "R = yes, backflush (retrograde)".
- Meter for the material type/BOM item of the affected material:
Configure meter like MDE meters.
Option "compensation with material" = yes
Option "material type" = material type of the material that is consumed
or
Option BOM item = BOM item of the material that is consumed



If the BOM item is used within meter configuration, it is important that within the OP's component list the material is always used as the same BOM item (from ERP work plan).

Posting/result

The automatically recorded quantity is deducted from the remaining quantity of the input batch and then the batch shows the reduced "remaining quantity" and the initial quantity.

A goods issue is generated for consumption in the system.