

1 PDV Histogram

Overview

Menu	Quality management → Process analysis → PDV histogram
Transaction code	histp
Function authorization	histp

Usage

The "histogram" report shows the distribution of measured values for a characteristic/process parameter. The data basis may be restricted by using versatile filters.

Integration

Histograms can be evaluated based on the (PDV) inspection data recorded in the areas

- PDV inspection planning relating to articles
- Production
- Machine capability
- PDV continuous monitoring

Consequently, the "PDV histogram" report is a general analysis tool.

Requirements

Depending on the selected area, different filter fields have to be completed in order to display the histogram.

For the "PDV continuous monitoring" area these are the fields:

- Type "PDV continuous monitoring" ("specifications" tab)
- Machine ("machine" tab)
- Date of first measured value from ... to ... ("machine" tab)
- Process parameters

Selection criteria

"Specifications" tab

Area

Selection list of the configured areas of the previously filtered area type. By default, the following areas are available.

- PDV inspection planning relating to articles
- Production
- Machine capability
- PDV continuous monitoring

"Inspection plan" tab**Inspection plan number**

Inspection plan number

Inspection plan index

Inspection plan number

"Inspection requirement" tab**Inspection requirement number**

Inspection requirement number

Article number

Article number

Order

Order

"Inspection step" tab**Inspection step number**

Inspection step no.

Operation

Operation

"Machine" tab

Machine

Machine

Date of first measured value from ... to ...

Date for the evaluation period

"Characteristic" tab

OP sequence

Machine

Characteristic no.

Characteristic no.

Process parameters

Process parameters


Toolbar




Histogram settings

Opens a dialog to configure histogram settings. The corresponding details are described in the respective detail application.

"Histogram" detail applications

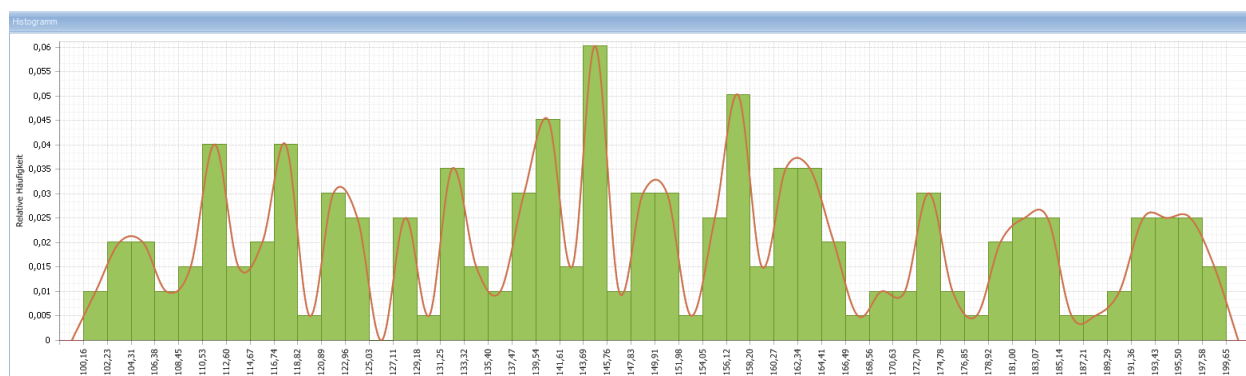

The histogram is always based on the entire set of available measured values matching the selected filter criteria. The appearance of the histogram is determined by the number of classes and by elements additionally displayed. The contents of this application are defined by opening the dialog to configure the "histogram". Changes made via this dialog are saved according to the user's requirements.

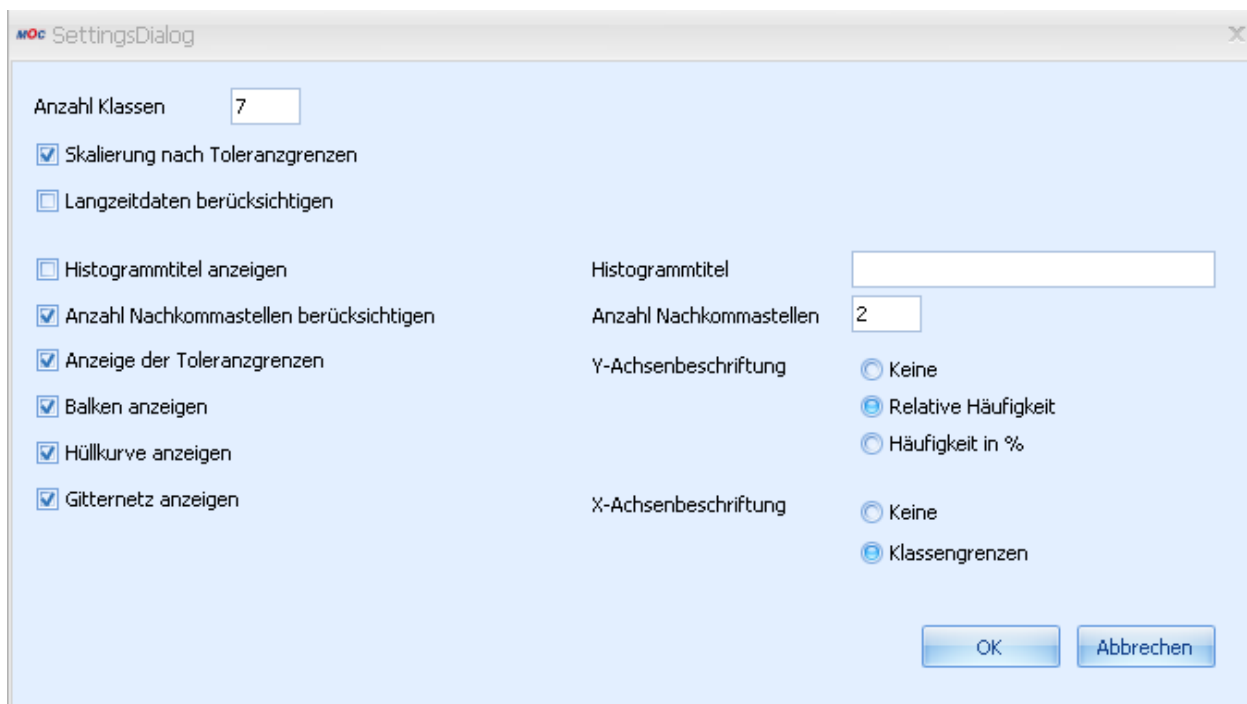

The screenshot shows a 'SettingsDialog' window with the following configuration options:

- Anzahl Klassen:** 7
- ☒ Skalierung nach Toleranzgrenzen
- ☐ Langzeitdaten berücksichtigen
- ☐ Histogrammtitel anzeigen
- ☒ Anzahl Nachkommastellen berücksichtigen
- ☒ Anzeige der Toleranzgrenzen
- ☒ Balken anzeigen
- ☒ Hüllkurve anzeigen
- ☒ Gitternetz anzeigen
- Histogrammtitel:** (empty text field)
- Anzahl Nachkommastellen:** 2
- Y-Achsenbeschriftung:**
 - ☐ Keine
 - ☒ Relative Häufigkeit
 - ☐ Häufigkeit in %
- X-Achsenbeschriftung:**
 - ☐ Keine
 - ☒ Klassengrenzen

Buttons: OK, Abbrechen

The paragraphs that follow explain the essential configuration options.

Number of classes

Specifies the number of histogram classes according to which the measured values are distributed. If represented within the tolerance limits (option "scale by tolerance limits") one histogram class each is outside of the tolerance limits.

Scale by tolerance limits

Enabled: The classes are in between the tolerance limits with one "outlier class" each to the left and to the right.

Disabled: The classes include the range of all measured values (no separate classes for values outside of the tolerance limits).

Consider long-term data

Includes the archived data from the medium-term data area.

Show histogram title

If a special title is to be displayed it may be entered by enabling this option.

X-axis labeling

The x-axis shows the corresponding values of the class limits if the "class limits" option is set. The number of decimal places displayed may be set by the two configuration options for decimal places.

Consider the number of decimal places

Takes into account the defined number of decimal places in the x-axis labeling.