

1 Paths

Overview

HYDRA menu	System administration → System settings → Paths
FEDRA menu	System administration → System settings → Paths
Transaction code	path
Function authorization	path

Purpose

You use the application to create or change paths in the system. A path configuration is a character string that identifies a file, a directory or a resource (depending on the platform) in a computer system, e.g. device files in Unix.

The system uses the paths to access the files stored in the specified location or to store files according to the specified path.

Integration

The path configuration is a central functionality used by multiple functions in the system.

Field descriptions

Path

Identification of the storage location

Protocol

Access schema used for file transfer:

file Network access to the files via UNC file names.

You must ensure that a network share (= Windows share) exists for the folder where the files are stored.

ftp Access via File Transfer Protocol

Condition: An FTP server must be installed.

hydra Access using HYDRA file transfer to transfer files to and from the HYDRA server.

The protocol *hydra* is not supported in the MES Operation Center (MOC). It is recommended not to use this protocol even if the data is on the HYDRA server. Use the protocol *file* or *ftp*.

http Support of http links to display web contents

ftps The protocol *ftps* is only supported in the MES Operation Center (MOC).

smtp The protocol *smtp* is only supported in escalation management (ESK) in combination with the SMS gateway (ESK-SMSGW).

exe Display of documents with a defined application. The content of the document name is transferred to the application as parameter.

The "exe" support requires specific minimum versions of the MFPlugin on the client (1.2.STD.15028), of the Windows terminals (ctaip, 2.0.2.14) and of the BAPI lib/b_path.dll or lib/b_path.so (7.2.1.13).

unc Support of unc links to display documents.

The "unc" support requires specific minimum versions of the MFPlugin on the client (1.2.STD.15028), of the Windows terminals (ctaip, 2.0.2.14) and of the BAPI lib/b_path.dll or lib/b_path.so (7.2.1.13).

Note: To open the linked document, the relevant application is used according to the file extension. With this configuration, the Windows link is used. You cannot override this setting.

Different settings may be made according to the operating system and the network configuration used.

Host

The server's network name or IP address

smtp SMTP mail server

file If Tomcat and the system are installed on a shared server and the path is *not* used by the terminal applications (CTWIN, AIP), you can also enter the logical name "localfile" as local delegate access.

unc Specification of file server name (e.g.: **docserver**)

Note: Two backslashes (\\) are automatically put in front of the file server name when the absolute path is later generated.

Port

Number of communication port

file	Not used
ftp	FTP port 0 = default port
hydra	x = 0: Current connection between the console or HYDRA terminal and the server. x < 0: Connect using user number x. x > 0: Connect on port x.
http	x > 0 port is included in web link
ftps	FTPS port number. 0 = default port (client only)
smtp	SMTP port number. 0 = default port
exe	Not used
unc	Not used

URL path

This is the path where the files are stored, expressed as a URL without specification of the server (host). Slashes (/) are automatically converted to backslashes (\) by the clients, if necessary.

Placeholders / or <<MDT>> are not supported by the JAVA server (→ client).

file	Specification of the Windows file share and any subdirectories
ftp	Specification of the FTP path
hydra	The URL path can also be specified relative to the installation location in the system. For example, /mydata refers to a subdirectory mydata of the system installation.
http	Path of the web link
ftps	Specification of the FTPS path (client only)
smtp	Target adress (to:)
exe	Specification of program. Parameters for the program must not be entered here. Specify the complete path including program name here (e.g. c:\windows\system32\write.exe).
unc	Path name of file storage. Example: \documents\ncdoks\ Note: Correct backslashes (\) must be entered here.

User / password

The user name and password used for file access are entered here. You can use passwords up to a maximum length of 20 characters. You can use Latin letters, numbers and the common special characters. Please note that the MOC may not support certain special characters, for example the pipe or the quotation marks. You can test whether the characters of the password are valid by entering the password in another input field with plain text display, saving it and then taking it out again.

- file User name and password used to access the Windows file share.
- ftp User name and password used to log on to the FTP server.
- hydra Not used
- http It depends on the browser in use whether the user/password option is supported or not.
For security reasons, login details should not be used for http paths in general.

Please note:

The Internet explorer does neither process nor support the user/password option.

- ftps User name and password used to log on to the FTPS server (client only)
- smtp Not used
- exe Not used
- unc Not used

Comment

Text input field to describe the details entered above.

Overview of permitted configurations

Protocol	Comment	Client	AIP, CTWIN
file	Access via network share	✓	✓
file (host=local file)	Access to local file path	✓	✗
ftp	FTP server required	✓	✓
ftps	FTP server with SSL required	✓	✗
hydra	Proprietary protocol	✗	✓
http	Server upload not possible.	✓ 1)	✓
smtp	For escalation management (ESK) only	✗	✗

1) Presentation of http links defined as production resources and tools from the order information dialog

1.1 Sample configurations

Display of intranet links on the AIP terminal (when using HYDRA)

Use

case:

Depending on the article, the AIP should open and display different intranet pages. The complete path in this example would be:

<http://<host name>/folder1/folder2/folder3/ATK12345>

The first part of the path (host and further folder structure, displayed in blue) remains unchanged. Only the last part changes (folder structure with article, displayed in orange).

Requirements:

The ERP system/the customer transfers the last part (orange) including folder structure and article and the respective path name. These path specifications are included in the Production resources and tools (PRT) of the operation. Example:


The screenshot shows a configuration window for the AIP terminal. It has a title bar with 'Main page' and standard window controls. The window is divided into several sections:

- Operation:** Contains a 'MES order number' field with the value 'S30002000200'.
- Resource:** Contains a 'Resource type' dropdown set to 'DOC', a 'Resource' field set to 'Intranet', and empty fields for 'Designation', 'Comment 1', and 'Comment 2'.
- Quantity:** Contains a 'Required quantity' field set to '0'.
- File:** Contains a 'Path' field set to 'PATH' and a 'File name' field set to 'folder3/ATK12345'.

Configuration:

Configure the following items in the system:

- Path definition including the fixed section of the path of field *URL path* (blue section).

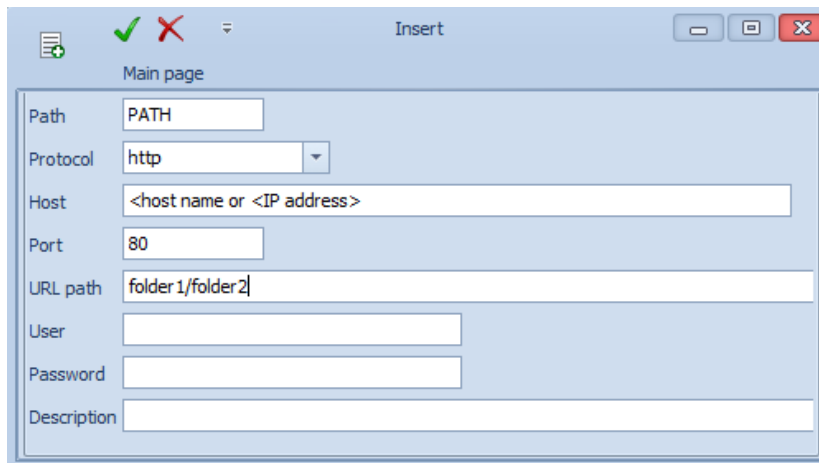

Main page

Path: PATH

Protocol: http

Host: <host name or <IP address>

Port: 80


URL path: folder1/folder2

User:

Password:

Description:

- If you do not want to open the link in the internal viewer on the AIP, but in an external viewer, you can store the following definition in the hytnrcfg.ini:

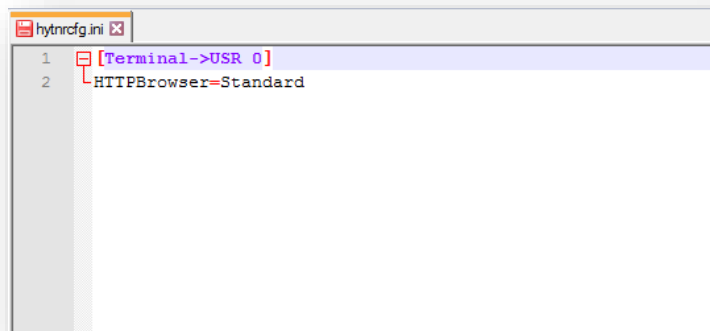

```
1 [Terminal->USR 0]
2 HTTPBrowser=Standard
```

With this configuration, the link opens in the program set as standard in the host, e.g. the Internet Explorer.

Note:

After the configuration, you must restart the AIP terminal.