

1 Resource status

Overview


HYDRA menu	Master data → Resources → Resource status
FEDRA menu	Detailed Scheduling → Master data → Resource status
Transaction code	ressta
Function authorization	mdressta.*

This document describes the application "Resource status" on the client.

Purpose

Each resource has exactly one status at a time. You can configure any statuses for a resource. This way, it is possible to integrate a customer-specific status model.

Examples of status values:

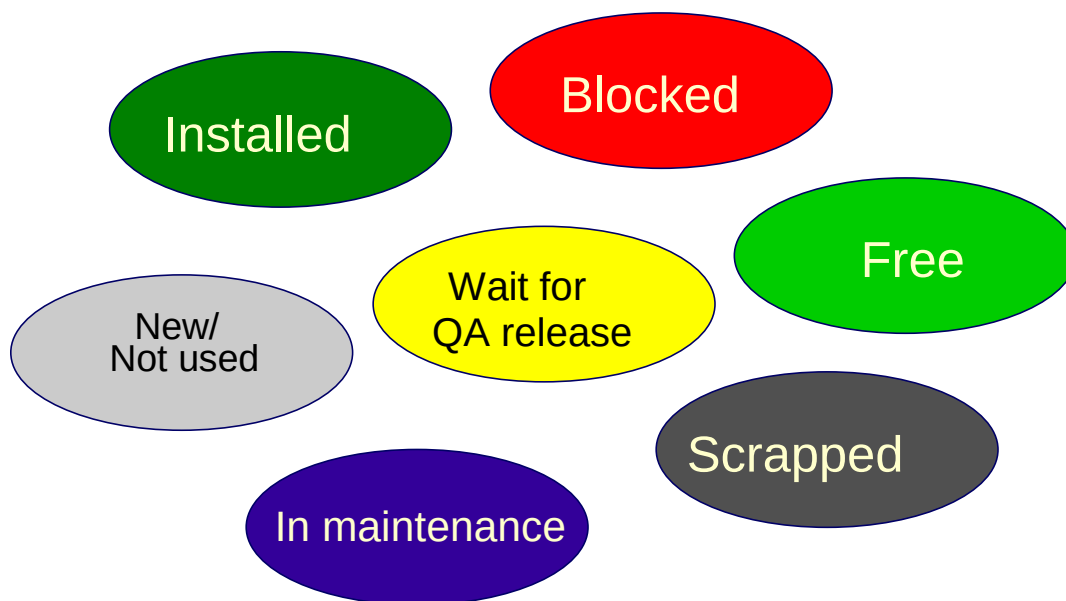

You configure statuses for different resource types. You can define any status text you require. Different configuration attributes define the processing performed with the different statuses. For example, you can specify whether a resource can be logged on if a specific status is available.

In the *Status assignment*, you can optionally assign a storage location that is used in the *Set status* function. With status "Repair", you can then automatically assign the storage location "Tool shop", for example.

To set a status, use the function *Change status* in the applications *Resource overview* or *Resource stock*. You can assign a status immediately or for a future point in time. Setting or modifying a status is logged, so that the "resource history" shows the point in time when the status was changed.

Notes

With order logon, the resources are set to *Active* = Yes. The resource status does not change. The option *Collection* in the *Status assignment* configuration specifies whether a resource can be logged on or not. When the operation is logged off, the resource is reset to *Active* = No. Again, the resource status does not change.

The definition of a status transition model is not available in the status configuration. This means that the status can be changed as required, unless it is changed automatically by the system. At this point, we recommend to specify the relevant method.

The *active* flag is not relevant for resources of the type MNR. Even if an order is logged on to a machine, the resource status of the resource of type MNR remains *inactive*.

Optional assignment using resource families:

You can not only define a status using the resource type, you can also use resource families to assign a status. Configuration becomes more flexible this way. If you enter a value in field *Resource family*, this configuration is enabled. Important: All statuses must either be assigned using resource families OR resource types; otherwise this can lead to ambiguities!

Integration

You require the statuses to collect and document status changes. The defined status settings specify how a resource can be used. Example: If a resource is not allowed to log on, the operation in production cannot be logged on.

Selection criteria

In the selection panel, you can filter by higher-level or assigned resources. The application provides the following selection criteria:

Resource type

Type of resource

Resource family

Family the resource is assigned to.

Status

Status of the resource

Designation

Name of the resource status

Field descriptions

Resource type

Resource type for which the status is defined.

Resource family

Optional, if you want to define the status in relation to resource families.

Status

Status number; unique within the resource type or resource family.

Designation

Status name

Color

Color used to display the status in the *Resource overview*.

Note: The consistent use of the status/color combination with different resources is the responsibility of the customer.

Authorization

Authorization level for assigning a status on the terminal (a value between 0 and 9). In the HR master data, every person is assigned an authorization level for the resource status change. If the authorization level stored in the master data is lower than the authorization level defined here, you cannot assign the status via the terminal.

Note: Users who want to use the function *Change status* on the HYDRA client, require the relevant function authorization. With this function authorization, the status of a resource can always be changed; the authorization level on the client is *not* relevant.

Storage location

If a storage location is specified, then this value is automatically set in the function *Set status* (except if the storage location is explicitly set during status assignment, then this manually assigned storage location is used).

With status "Repair", you can then automatically assign the storage location "Tool shop", for example.

Assignment

This option controls whether the resource is displayed as locked or not locked in the *Graphic planning* (only if the additional function HLS-BSR is used).

Assignment = resource is displayed as locked

No assignment = resource is displayed as not locked

Collection

S = Resource is blocked for collection. In this case, a resource and also the operation cannot be logged on.

F = Resource is released for data collection and can be logged on.

Processing

Production identifier specifying the processing

F = Release:

This status is set with the automatic status monitoring, if the resource should be "released" again.

DNC:

When you create a new resource, the status with this identifier is only set as initial status, if no status with processing "I = initial status with creation" is configured for the resource type.

B = Status when logging OP off

This option is no longer supported since WRM 8.1.

O = Status when uploading optim. program (DNC)

This status is set for the upload of an optimized program.

U = Status when uploading (DNC)

This status is set for the upload of a program.

S = Automatic blocking status

If this status is set, the resource is locked.

L = Deleted (**from DNC 7.2**)

This status shows that the resource is no longer used, meaning it is deleted logically.

I = Initial status with creation (**from DNC 7.2**)

When creating a new resource, the status with this flag is assigned as an initial status. If this status is not available, then the released status is assigned to the resource.

Please note:

- For each resource type or resource family, you can only assign 1 status with one of these characteristics.
- When a resource is being directly logged off (no standard function), no status is set; in this case, the resource is only set from *active* to *inactive*.

Display of resource with this status on terminal

Display of the resources with this status on the Windows terminal.

Note: This configuration is only used in the DNC administration for resources of type DNC.


Deleted (from WRM 8.2)

If this option is checked, the resource has been (logically) deleted.

The identifier is used in the *Resource overview*.

Toolbar

The following functions can be called from the toolbar of the application.

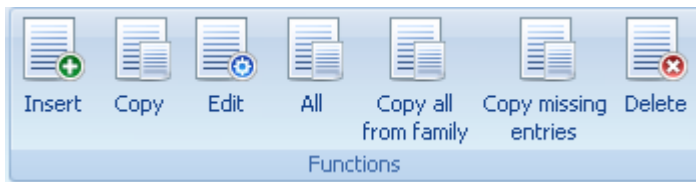

Insert

Function authorization: mdrsstta.create

Opens the editing dialog to create a new entry.



Edit

Function authorization: mdrsstta.edit

Opens the editing dialog to change an existing entry.



Copy

Function authorization: mdrsstta.copy

Opens the editing dialog to copy an existing entry.



Delete

Function authorization: mdrsstta.delete

Opens the confirmation dialog to delete existing entries.



All

Function authorization: mdrsstta.copy

Opens the editing dialog to copy all entries of a resource type or a resource family.



Copy all from family

Function authorization: mdrsstta.copy

Opens the editing dialog to copy the statuses of a family.



Copy missing entries

Function authorization: mdrsstta.copy

Opens the editing dialog to copy the missing status assignments of a resource type.

