

1 Configuring the machine image for the AIP

Purpose

You can display the image of the workplace in the AIP shop floor software (in the following "machine image"):

- In the machine info (AIP 8.1 and AIP 8.2)
- In the main view (only AIP 8.2).

Requirements

The following image formats are supported: jpg, gif, png, tif, bmp, ico, emf, and wmf. File the images (files) in a directory that may be accessed from the AIP terminal via the path ID "HYDRA" within the path configuration.

Log your Windows user on to the AIP and access the directory. Your user must have the respective authorization to access the directory.

Procedure

1. Store the file to be displayed in a central directory that you can access from the AIP. Make sure that the Windows user in the AIP has the respective authorization to access the directory.
2. Configure the logical path "HYDRA" in the [Path configuration](#).

- Path: "HYDRA" (cannot be changed)
- Protocol: "file" (cannot be changed)
- Host: IP address or host name of the server where the graphic files are stored.
- Port: usually 0
- URL path: Enter the URL path as absolute path. Refer to the network directory where the graphic files are stored.

In case of a HYDRA server, store the files in the directory <HYDRADIR>/<system>/grafik/bde (<HYDRADIR> is the directory where HYDRA is installed, <system> is the HYDRA system number).



Precede the URL path by a double backslash.

- User/password: Enter the user and the password of the Windows user to access the server. In case of a HYDRA server, it is usually the user *hydadm*.

Sample path configuration


The graphic files are stored in the directory of the HYDRA server:

d:\hydra2\2\grafik\bde


Network share for the directory d:\hydra2 in the HYDRA server:

hydra2

Configuration:

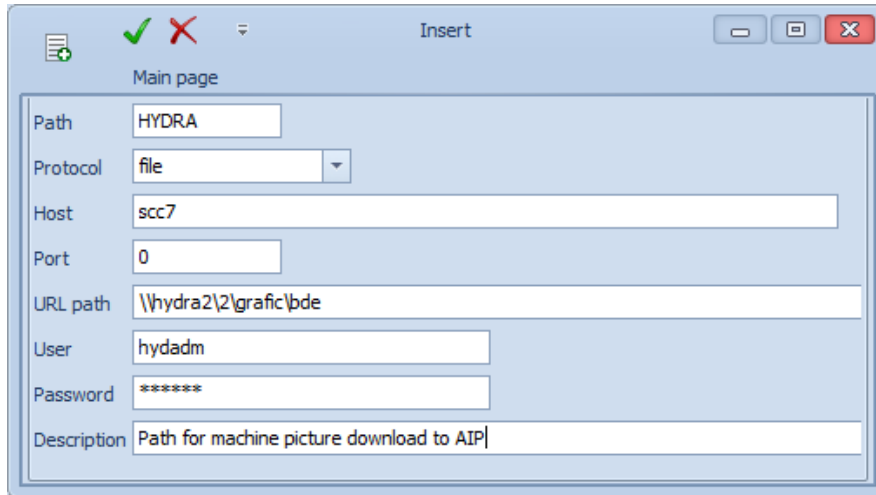

3. Enter a valid file name in the field "File name" of the application [Workplace and resource configuration](#) (tab Workplace configuration).

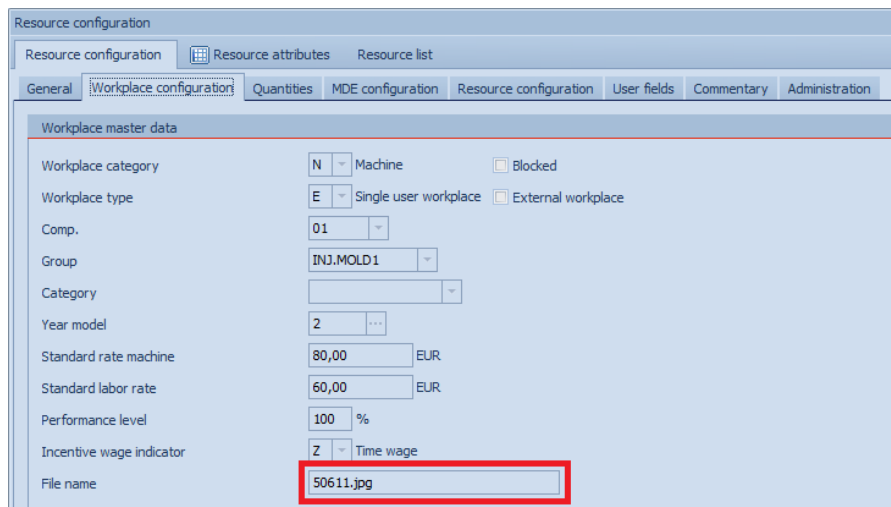


4. Restart the terminal software.

Result

The machine info in the AIP displays the machine image.



With AIP 8.2, the main view displays the machine image:

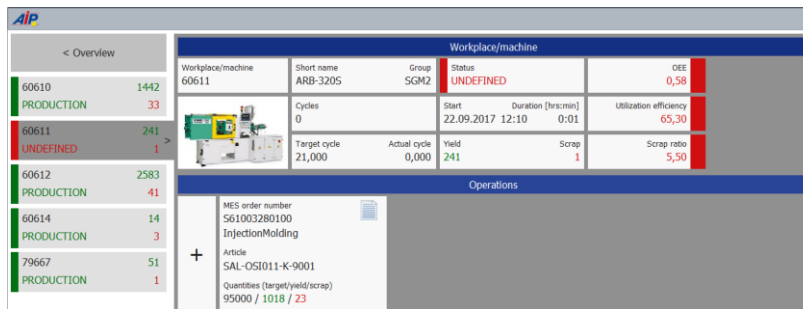

Troubleshooting

If the main view of the AIP 8.2 does not display the machine image after restart, restart the AIP 8.2 a second time.

If the image is still not displayed, try the following:

- The following entry must be available in the log file prot_ev.txt, e.g.

```
16-10-16 13:32:57.763[+Loc]12260:URLDownload:
file,hydadm,hydadm,SCC7,0,\\hydra2\2\grafik\bde\60610.jpg,c:\ctaip\spool\60610.jpg,
16-10-16 13:32:59.320[+Loc]12260:URLDownload: => Res=0
```

In the row "URLDownload", the return code is displayed that the communication software has returned during download. The return code must be 0 (**Res=0**). The log file is written in the subdirectory c:\ctaip\spool (if the terminal software is installed in c:\ctaip).



The logging of the log file must be *explicitly* enabled in the terminal software. Only then, the entry is displayed in the log file prot_ev.txt: ☒ **DB-Messages (prot_ev.txt)**

- You must have entered an absolute URL path in the MOC path configuration.
- The user that accesses the directory of the HYDRA server from the terminal software must have sufficient (read) access to this directory.

Only one image is downloaded from the HYDRA server. If you want to change the image, you must first delete the file in the spool directory of the terminal. Or you can enter the image using a different name in the Workplace/resource configuration.