

1 Configuration of the AIP Document Management

Purpose

You use the AIP Document Management to store documents, information, etc. for any objects.

Currently, the document management supports the following objects by default:

Object	Description
Batch	Documents assigned to a "batch"
Maintenance	Documents assigned to a "maintenance"
MaintenanceReset	Documents assigned to a "maintenance reset"

Requirements

To use the AIP document management, you require the following components in the specified versions:

Program	Version	Description
ctaip.exe	2.0.3.13	Terminal program
./etc/mpdv-aip.zip	xx.05.2014	Terminal scripts (aip_mpdv-DOCLINK*.scr)

Configuration to call the document management

You can call the document management from a dialog/workflow if you configure a button with the following attributes:

Field / attribute	Value
Function	DLG=DOCLINK
License	DOC-LINK
Return code	9
ID	Configuration of the document object to be stored, e.g. - BATCH batch - MAINTENANC maintenance
ID index	VIEW Optional, to lock the functions "Add, Modify, Delete" in the dialog <i>Assign documents</i> - DOCLINK.

Reset maintenance

To create the button in the dialog *Reset maintenance* (RES_WART), tab "Reset maintenance" (WF_RES_WART_CHK), perform the following steps in the HYDRA server:

- a. UNIX systems: Run the following commands in a server prompt in the HYDRA directory. Make sure that you have loaded the environment variables of the required HYDRA system (request: hysys.scr).
 - b. Windows systems: Run the following commands in a DOS prompt in the HYDRA directory. Make sure that you have called the DOS prompt for the required HYDRA system from the folder "HYDRA system administration".
2. Back up the existing dialog configuration:

- a. UNIX systems:

```
hydlgcfg.out DLGCFG.TYP=% DLGCFG.DLGUSR=% DLGCFG.DLG=% DATEI=dialog.dlg
```

- b. Windows systems:

```
hydlgcfg.exe DLGCFG.TYP=%% DLGCFG.DLGUSR=%% DLGCFG.DLG=%%  
DATEI=dialog.dlg
```

3. Use the command listed below to load the configuration for the button "Document management".



If you want to lock the functions "Add, Modify, Delete" in the dialog *Assign documents*, add the value VIEW to the parameter DLGBTN.KENNIDX in the command:

```
DLGBTN.KENNIDX=VIEW.
```

- a. UNIX systems:

```
hymw.out -u9999 -  
c"DLG=DLGBTN.INSERT|DLGCFG.DLG=WF_RES_WART_CHK|DLGCFG.TYP=AIPDEF|DLGCFG.  
DLGUSR=0|DLGBTN.NR=3|DLGBTN.KENN=MAINTENANC|DLGBTN.KENNIDX=|DLGBTN.TASTE  
=|DLGBTN.TXT=Dokumentenzuordnung|DLGBTN.INFO=Dokumentenzuordnung|DLGBTN.  
ICON=TABLE.PNG|DLGBTN.FKT=DLG=DOCLINK|DLGBTN.RCODE=9|DLGBTN.AKTIV=  
|DLGBTN.LIZ=DOC-  
LINK|DLGBTN.POSX=310|DLGBTN.POSY=400|DLGBTN.X=100|DLGBTN.Y=30|DLGBTN.USR  
DEF:1=AUTO|DLGBTN.USRDEF:2=|DLGBTN.USRDEF:3=|DAT=today|ZEI=now|"
```

- b. Windows systems:

```
hymw.exe -u9999 -  
c"DLG=DLGBTN.INSERT|DLGCFG.DLG=WF_RES_WART_CHK|DLGCFG.TYP=AIPDEF|DLGCFG.
```

```
DLGUSR=0 | DLGBTN.NR=3 | DLGBTN.KENN=MAINTENANC | DLGBTN.KENNIDX= | DLGBTN.TASTE
= | DLGBTN.TXT=Dokumentenzuordnung | DLGBTN.INFO=Dokumentenzuordnung | DLGBTN.
ICON=TABLE.PNG | DLGBTN.FKT=DLG=DOCLINK | DLGBTN.RCODE=9 | DLGBTN.AKTIV=
| DLGBTN.LIZ=DOC-
LINK | DLGBTN.POSX=310 | DLGBTN.POSY=400 | DLGBTN.X=100 | DLGBTN.Y=30 | DLGBTN.USR
DEF:1=AUTO | DLGBTN.USRDEF:2= | DLGBTN.USRDEF:3= | DAT=today | ZEI=now | "
```



The command integrates the button in the default dialog (type AIPDEF, dialog user 0). If you use terminal-specific dialogs in the system, you must adjust the command to the terminal-specific dialogs. If required, you may contact MPDV.

4. Activate the new dynamic dialogs:

a. UNIX systems:

```
hydialog.scr AIPTNR 0
```

b. Windows systems:

```
sh.exe hydialog.scr AIPTNR 0
```



This command activates the default dialogs. If you use terminal-specific dialogs in the system, you must also activate these dialogs.

5. Restart the terminals.

Layout configurations of the document management




This section describes the contents of the configuration file "doclink.ini". The configuration file is usually supplied with the AIP 8.1 or AIP 8.2. In general, no changes are required here.

You configure the display of the dialog *Assign documents* in the file "doclink.ini" in the section "DOCLINK.LST":

```
[ DOCLINK.LST ]
GRID_FONT=Microsoft Sans Serif
GRID_FONTSIZE=9
GRID_COLOR=clBlack
GRID_BACKGROUND=clWhite
GRID_ORDER=SORT

GRID_CELLPAINT=ON
EXAMINE_CELLBKCOLOR=DOCTYPE,TYPE,URL-clAqua|TEXT-clLime|FILE-clSilver|FILELINK-clYellow

SORT=N10,80,R,1kSORT
DOC_ID=C10,80,Z,1kDOC_ID
OBJECT=C10,120,Z,1kOBJECT
TYPE=C10,0,Z,1kTYPE
DOCTYPE=C10,120,Z,1kDOCTYPE
BEZ=C150,150,L,1kBEZ
URL=C150,650,L,1kURL
```

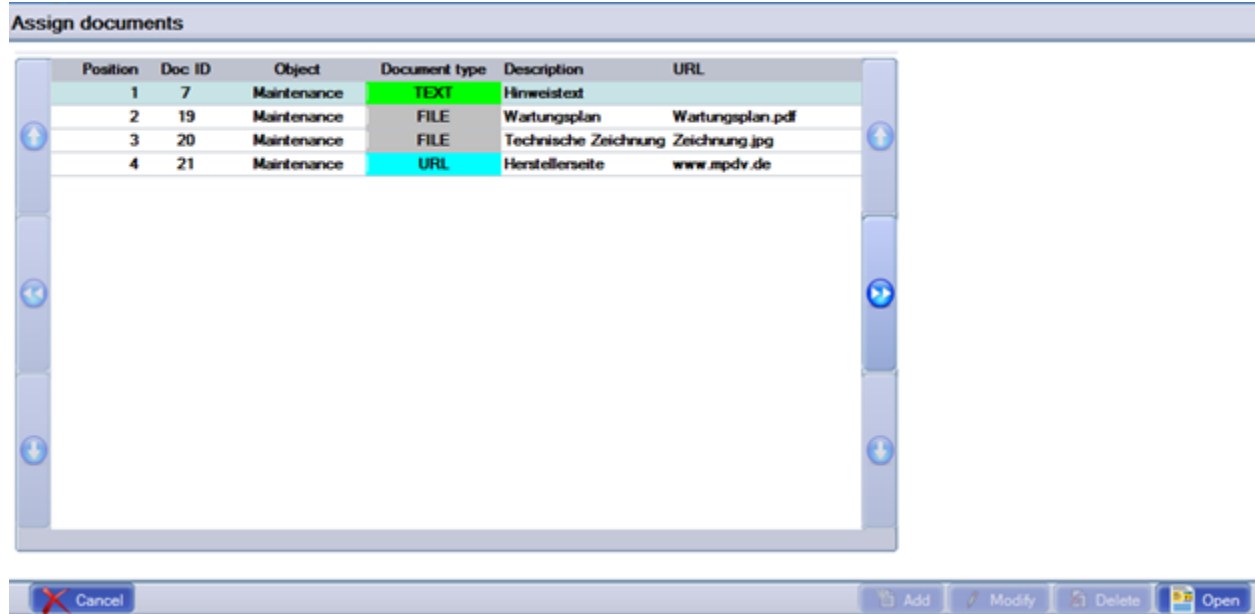


You configure the display of the link types that you can select in the file "doclink.ini" in the section "DOCLINK.LST":

```
[ DOCLINKTYPE.LST ]
GRID_FONT=Microsoft Sans Serif
GRID_FONTSIZE=9
GRID_COLOR=clBlack
GRID_BACKGROUND=clWhite
GRID_ORDER=TYPE

GRID_CELLPAINT=ON
EXAMINE_CELLBKCOLOR=DMY,TYPE,URL-clAqua|TEXT-clLime|FILE-clSilver|FILELINK-clYellow

DOCTYPE=C35,300,Z,1kDOCTYPE
DMY=C1,30,Z
TYPE=C25,200,Z,1kTYPE
```

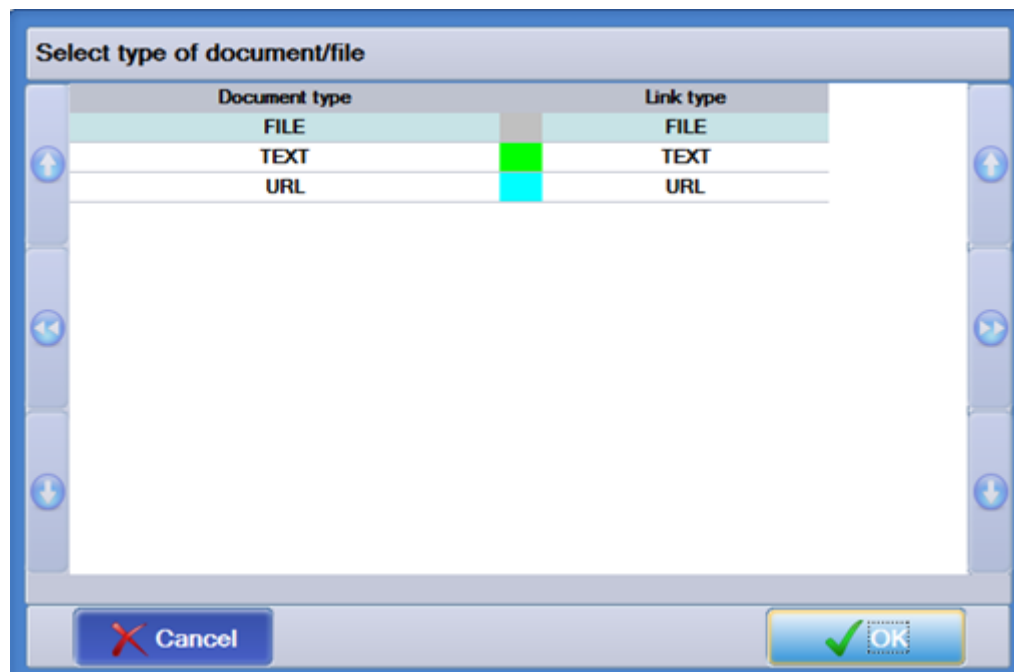

You require the following mapping to link the terminal configuration and the server processing. Note the following:

- The identifiers of the terminal configuration are written in upper case letters.
- The identifiers of the server configuration use the CamelCase notation.
- The identifiers are fixed and may not be changed.

You use the file "doclink.ini" in the section "DOCLINK->OBJECT" for the configuration, e.g.:

```
[ DOCLINK->OBJECT ]
BATCH=Batch
MAINTENANC=Maintenance
MAINTENANCERESET=MaintenanceReset
```

Further application configurations

Resetting a maintenance

Using the configuration "RECORDING=ON", you can activate the recording of document assignments after a "Maintenance reset". This configuration is **not** active by default.

You perform this configuration in the file "doclink.ini" in section "[MAINTENANCERESET 0]" for all terminals and in section "[MAINTENANCERESET 2xxx]" for a HYDRA user (2000+terminal number):

```
; Activation
[MAINTENANCERESET 0 ]
RECORDING=ON
POPUP=ON

[MAINTENANCERESET 2090 ]
RECORDING=ON
POPUP=ON
```

Using the configuration "POPUP=ON", you can configure a confirmation prompt for all terminals/for a HYDRA USER in the respective section. This prompt must be answered/closed by clicking "Yes" to call the document management.