

1 Create / Cancel Group Batch


Usage

The function can be used to combine several batches into a group of batches at the AIP terminal and to cancel this grouping at a later point in time.

Dialog configuration

Dialog configuration (CNR.BATCH_GROUP_A)

Define the function keys "generate group of batches" and "cancel group of batches" by copying the layout *gui\l_anr.xml* to *gui\l_anr_ln.xml* and by copying twice the key "BDE comments". Then the following entries must be changed in the configuration of the copied keys:

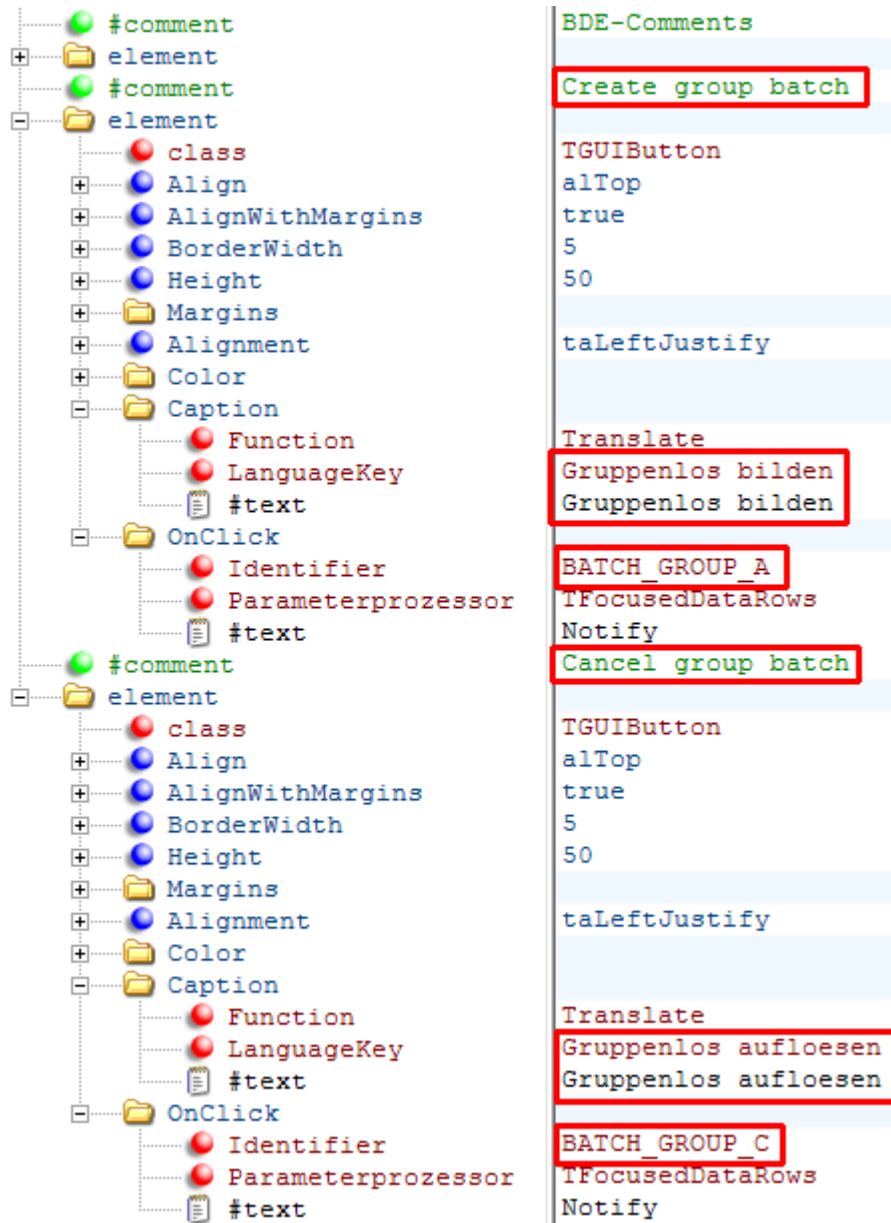

If you do not use tiles for the AIP2, define the function keys in the file **ctaipbut.ini**:

[ANR-LN-Page4]

...

1=BATCH_GROUP_A,L,Gruppenlos bilden,Losgruppe_bilden.png

2=BATCH_GROUP_C,L,Gruppenlos auflösen,Losgruppe_auflösen.png

The sections [BATCH_GROUP_A.LST] and [BATCH_GROUP_C.LST] are required in the layout configuration of *ctaisplay.ini*, irrespective of the used design:

```
[BATCH_GROUP_A.LST]

GRID_FONT=Arial

GRID_FONTSIZE=9

GRID_COLOR=clBlack

GRID_BACKGROUND=clWhite


CNR=C20,100,L,Batch

ATK=C20,100,L,Material

ATKBEZ=C40,140,Designation

HZTYP=C40,150,L,Material Type

RESAUNR=C12,100,L,Order

RESAGNR=C4,50,L,OP

; for set then position

;U_POSITION=C8,60,R,Position
```

```
[BATCH_GROUP_C.LST]

GRID_FONT=Arial

GRID_FONTSIZE=9

GRID_COLOR=clBlack

GRID_BACKGROUND=clWhite


CNR=C20,100,L,Batch

ATK=C20,100,L,Material

ATKBEZ=C40,140,Designation

HZTYP=C40,150,L,Material Type

RESAUNR=C12,100,L,Order

RESAGNR=C4,50,L,OP

; for set then position

;U_POSITION=C8,60,R,Position
```

System configuration

Further system configurations are not required in order to group/cancel batches.