

1 Grouping of Batches


Usage

The function is used to apply several batches of a group in AIP processes.

Dialog configuration

Dialog configuration (BATCH_GROUP_B)

Define the function key "generate batch group" by copying the layout *gui\l_anr.xml* to *gui\l_anr_ln.xml* and the key "BDE comments". Then the following entries must be changed in the configuration of the copied key:

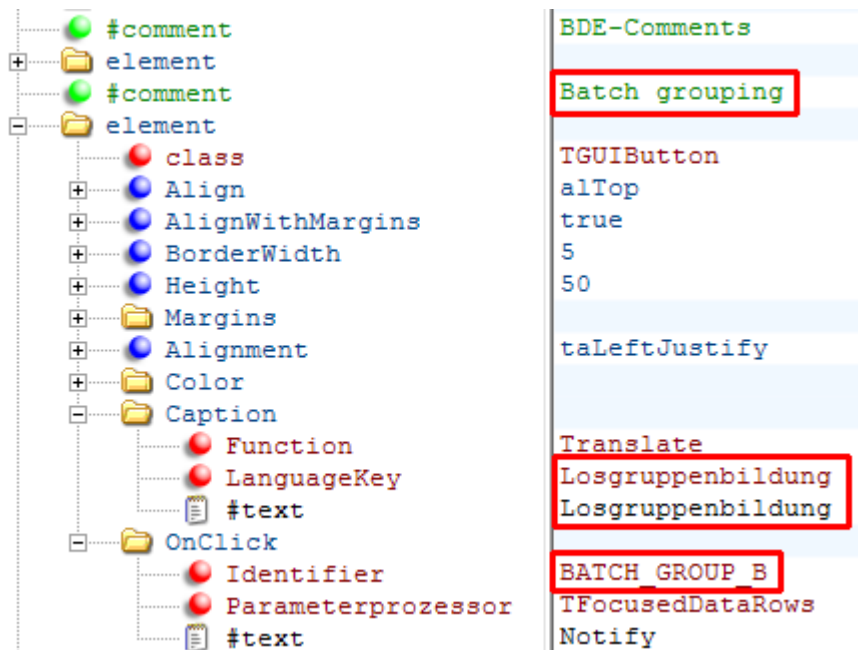

If you do not use tiles for the AIP2, define the function key in the file *ctaipbut.ini*:

```
[ANR-LN-Page4]
```

```
...
```

```
3=BATCH_GROUP_B,L,Losgruppenbildung,Losgruppierung.png
```

The below-mentioned section is required in the layout configuration of *ctaipplay.ini*, irrespective of the used design:

```
[BATCH_GROUP_B.LST]
```

```
GRID_FONT=Arial
```

```
GRID_FONTSIZE=9  
  
GRID_COLOR=clBlack  
  
GRID_BACKGROUND=clWhite  
  
  
CNR=C20,100,L,  
  
ATK=C20,100,L,  
  
ATKBEZ=C40,140,  
  
HZTYP=C40,150,L,  
  
RESANR=C12,100,L,Operation
```

System configuration

Further system configurations are not required in order to group batches.

An appropriate OP must exist in the system to be able to use the batches in the dialog and in order for an OP to be logged on in the background.



The relevant OP can be identified via:

- a special batch reservation (across all orders)
- the order network (sequence of OPs in an order)