

1 Configuration: Advance Logon of Input Batches

Configuration: display of third list on the AIP (INI configuration)

Set the parameters/values below in the INI configuration to display the input batches logged on in advance in the third list on the AIP:

- INI name: MPL
- Section: MPL_VANCNR
- Key/Value: TNR_VANCNR =Y

INI configuration	
Section	MPL_VANCNR
Key	TNR_VANCNR
Value	Y
	☒ Active
Commentary	Display preregistered batches in the 3rd list



When you have made the settings in the INI configuration, restart the terminal. The INI configuration is only activated when the terminal is restarted.

Configuration: logon of input batches with OP logon on the AIP (INI configuration)

Set the parameters/values below in the INI configuration to log on the input batches logged on in advance at the same time with an OP on the AIP.

- INI name: MPL
- Section: MPL_VANCNR
- Key/Value: USE_VANCNR =Y


INI configuration	
Section	MPL_VANCNR
Key	USE_VANCNR
Value	Y
	☒ Active
Commentary	Use preregistered batches when logging an operation



When you have made the settings in the INI configuration, restart the terminal. The INI configuration is only activated when the terminal is restarted.

Configuration of keyboard layout on AIP2

To define the function key "Advance logon of input batches", copy the layout *guiV_anr.xml* to *guiV_anr_In.xml* and copy the key "BDE comments". Change the following entries in the configuration of the copied key:

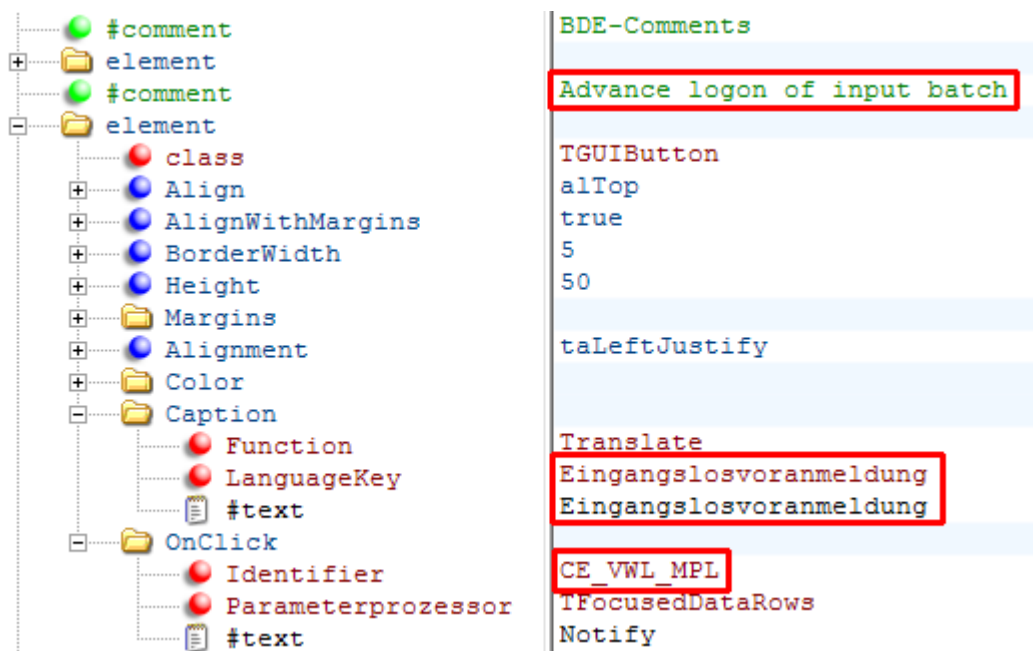

If you do not use the AIP2 tile view, define the function key in the file *ctaipbut.ini*:

```
[ANR-LN-Page2]
```

```
1=A_INFO.Dialog1,L,BDE-Kommentar,Attach Notes.png
```

```
2=A_SMG,L,Sollmenge ändern,Shipping Box Open Move Down Up.png
```

```
3=A_ELW,R,Eingangsloswechsel,CE_WL.png
```

```
4=CE_VWL_MPL,R,Eingangslosvoranmeldung,CE_WL.png
```

```
5=%BART:CAQ=J%CAQ_DC_T,R,Prüfung durchführen,Generators.png
```

Configuration: Highlighting the input batches logged on in advance on the AIP (ctaisplay.ini)

To highlight the input batches logged on in advance in color in the list of input batches, material list and BOM on the AIP, make the following entry in the configuration file "ctaisplay.ini". Store the file on the server.

Entry in Ctaisplay.ini:

Sections: [list of input batches], [material list] and [PRT list (KOMBI)].

...

EXAMINE_SCANEXPR1=CST=X

EXAMINE_SCANCOLOR1=clPurple

...

Make sure that each key is only available once in a section.

If you want to store several rules, you can integrate this using sequence numbers at the end of the keys:



EXAMINE_SCANEXPR1=ART=T|Z

EXAMINE_SCANCOLOR1=clBlue

EXAMINE_SCANEXPR2=ATKDIFF=F

EXAMINE_SCANCOLOR2=clGreen

EXAMINE_SCANEXPR3=ATKDIFF=J

EXAMINE_SCANCOLOR3=clRed