

Manual

AIP Add-On Online Language Switching AIP-AOS 8.1

Version 1.1.23049

Last changed on: 01.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Online Language Switching	4
2	How to Switch Languages.....	5
3	How to configure language switching	7

1 Online Language Switching

Purpose

The function package is useful if you use shop floor terminals (AIP) that are operated in different languages.

Integration

The AIP online language switching function enables to display data according to the licensed and installed language packs (localization). The component is available for the following HYDRA applications: BDE (Shop Floor Data Collection), MDE (Machine Data Collection), WRM (Tool and Resource Management), DNC, MPL (Material and Production Logistics), TRT (Tracking & Tracking), PDV (Process Data Collection) and CAQ (Quality Management).

Features

The Acquisition Information Panel (AIP) has been upgraded by a function for online language switching for AIP input dialogs and displays. Switching between the defined languages refers to the static texts included in dialogs and displays and to data contents, provided that they support different languages and are maintained in different languages.

2 How to Switch Languages

Purpose

Use the function to switch languages online via the AIP terminal.

Integration

You can switch languages for the licensed and installed language packs ("localization").

Requirements

You have purchased the license for the used language pack(s) ("localization").


You have configured the online language switching (see section *How to configure* language switching).

If you also want to show translated database contents (MDBI texts, e.g. status texts), you have to maintain these texts in the database.

Terminal functions

The bottom taskbar of the AIP terminal shows the flag of the currently selected language. The flag has a green frame to indicate that you have opened the AIP start screen. In this case, you can change the language. If you open another screen/dialog the frame around the flag turns red to indicate that language switching is currently not possible.

If you click the flag a menu appears where you can choose the available languages:

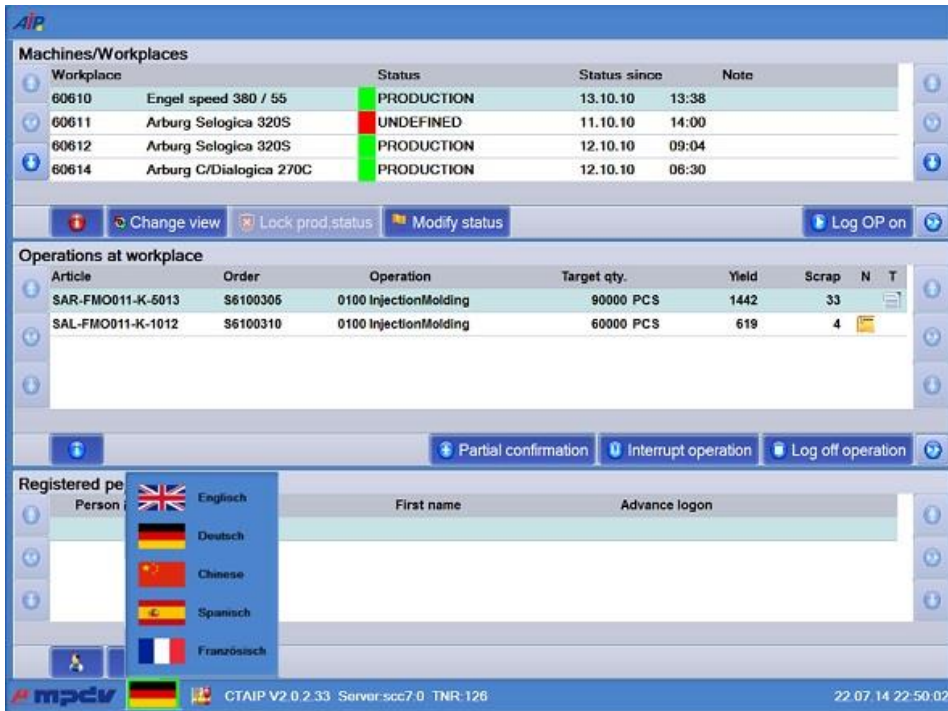

Workplace	Status	Status since	Note
60610 Engel speed 380 / 55	PRODUCTION	13.10.10 13:38	
60611 Arburg Selogica 320S	UNDEFINED	11.10.10 14:00	
60612 Arburg Selogica 320S	PRODUCTION	12.10.10 09:04	
60614 Arburg C/Dialogica 270C	PRODUCTION	12.10.10 06:30	

Article	Order	Operation	Target qty.	Yield	Scrap	N	T
SAR-FMO011-K-5013	S6100305	0100 InjectionMolding	90000 PCS	1442	33		
SAL-FMO011-K-1012	S6100310	0100 InjectionMolding	60000 PCS	619	4		

Registered person:  Englisch,  Deutsch,  Chinese,  Spanisch,  Französisch

CTAIP V2.0 2.33 Server.soc7.0 TNR:126 22.07.14 22:50:02

The menu shows all configured languages. You can switch between a maximum of five languages.

However, languages are only switched if the code page set for the Windows environment supports the selected language. Consequently, you cannot switch between Chinese and German. But you can switch between German, English, Spanish and French at one terminal, as code page 850 supports all these languages.

You can switch between Chinese and English at a terminal that is operated with code page 936. However, German is not available in this case, as umlauts cannot be displayed.



If the terminal is offline, you cannot switch languages. An error message is displayed.

3 How to configure language switching

Use the file **hytnrcfg.ini** to configure language switching.

Example:

```
[multiple_language 0]
alt_lang1=2;lkEnglish
alt_lang2=1;lkGerman
alt_lang3=4;lkFrench
alt_lang4=15;lkChinese
```

Add an entry *alt_lang<x>* with consecutive number for each language to the section *[multiple_language 0]*. The language index of the required language follows after the equal sign. Then you find the name to be displayed or the corresponding language key, separated by semicolon.

The displayed flag is stored in the archive *pict.zip* and has the file name *LangFlag_<y>.png*; *y* stands for the corresponding language index.

You can switch between a maximum of five languages.