

Manual

AIP Functions for the HR Sector AIP-HRF 8.1

Version 1.0.23049

Last changed on: 01.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	AIP Functions for the HR Sector - Overview.....	4
2	AIP Functions for the HR Sector	5
2.1	PZE - Time & Attendance.....	5
2.1.1	Terminal display	5
2.1.2	Operation of the PZE terminal	6
2.1.3	Error messages	13
2.2	ZKS – Access control	14
2.3	LLE – Terminal info on group incentives.....	14
2.4	PZE - shift plan.....	15
2.5	PEP - personnel schedule	16
2.6	Terminal status display.....	17
2.7	PZE - Subsequent entry of clocking / request clocking	18
2.8	List of absence reasons	20
3	Administration of the AIP-HRF terminal	21
3.1	Implementation of the AIP-HRF terminal	21
3.2	Saving clocking records in offline mode.....	22
3.3	Configuration of CT-38x	23
3.4	Integration of a customer logo	24

1 AIP Functions for the HR Sector - Overview

Fields of application

The AIP functions included in this function package enable recording of clock-in, clock-out and break times at the time & attendance terminals as well as the input of absence reasons for delayed clock-in, early clock-out or other work time interruptions. Further functions include the provision of information on account balances, the clocking records made, workforce requirements planning or information on group incentives at the terminal.

Implementation notes

You use the function package if you would like:

- to record your employees' clocking times
- to enter your employees' absence reasons
- to provide your employees with information on the terminal

Integration

The data recorded via the AIP terminal can be displayed or evaluated in different MOC applications.

Functions

- Time & attendance
- Access control
- Terminal information on group bonus
- Workforce requirements planning

Further licenses have to be purchased to be able to use the above-mentioned functions.


2 AIP Functions for the HR Sector

2.1 PZE - Time & Attendance

The PZE terminal has been designed to record the employees' working times. In addition to recorded clocking-in, clocking-out and break times, employees can also view information on current account balances, the performed clocking records and general messages.

2.1.1 Terminal display

The PZE terminal screen is divided into different areas showing information and allowing for functions to be selected:

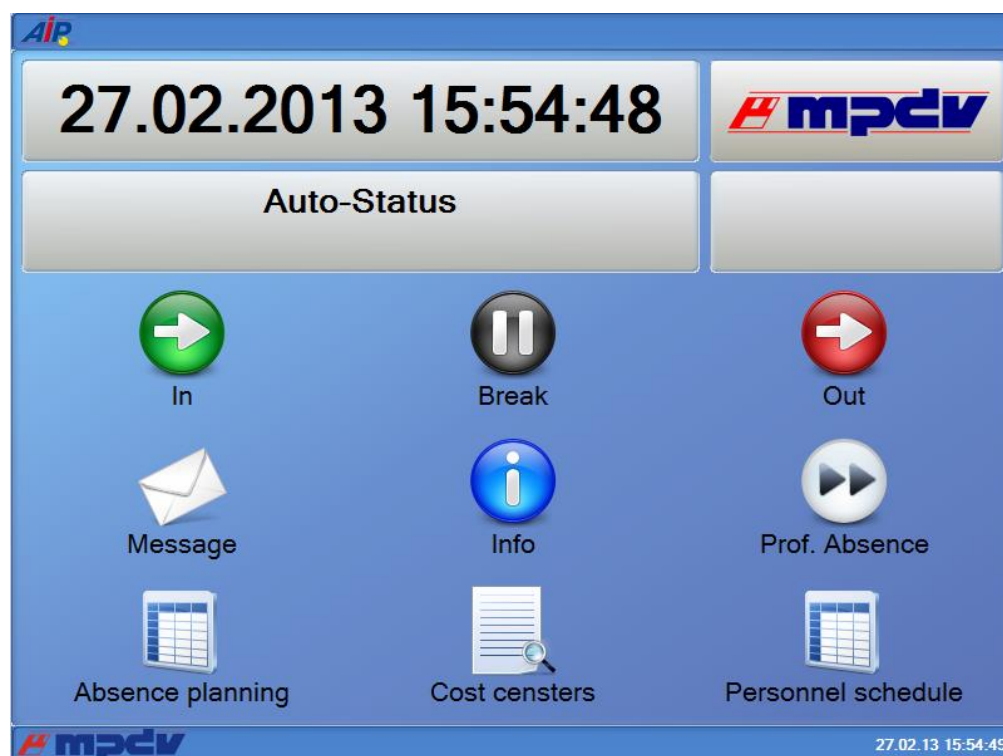

2.1.2 Operation of the PZE terminal

The clocking type is defined by pressing one of the different function keys (In, Out, Break or Absence reason) at the time & attendance (PZE) terminal. The currently active clocking type or function is displayed associated with a text in the status window. An employee performs a clocking by checking the terminal status first, pressing the relevant function key (In, Out, etc.) and putting the company badge in front of the reader. In addition to this, the information keys (info, message) show information specific to employees (time accounts: e.g. flextime, flexible time, remaining leave, etc.) and messages (e.g. "Mr. Miller please contact payroll office", etc.).

Before each clocking or action, the user has to check whether or not the required function is active. Otherwise, the function has to be enabled by clicking the relevant key.

The selected function is now carried out by reading the badge.

The performed action including the badge number and a green check are displayed if posting was successful.




Function	Description
Clock-In	Beginning of working time
Clock-Out	End of working time
Break	Beginning or end of the break
Absence reasons	It is also possible to add reasons for delayed clocking-in, early clocking-out or interrupted working time, e.g. business trips or visits to a doctor.
Cost centers	Moreover, cost center postings can be carried out in order to assign the recorded working time to a cost center.



Break times do not necessarily have to be clocked in. As they are automatically set off against the break times pre-defined in the system.

2.1.2.1 Auto status

Provided that the terminal is configured for the operation mode "Auto status (AST)", the system decides automatically if it is a clocking-in or clocking-out. If auto status is enabled, the status window shows the text "auto status".

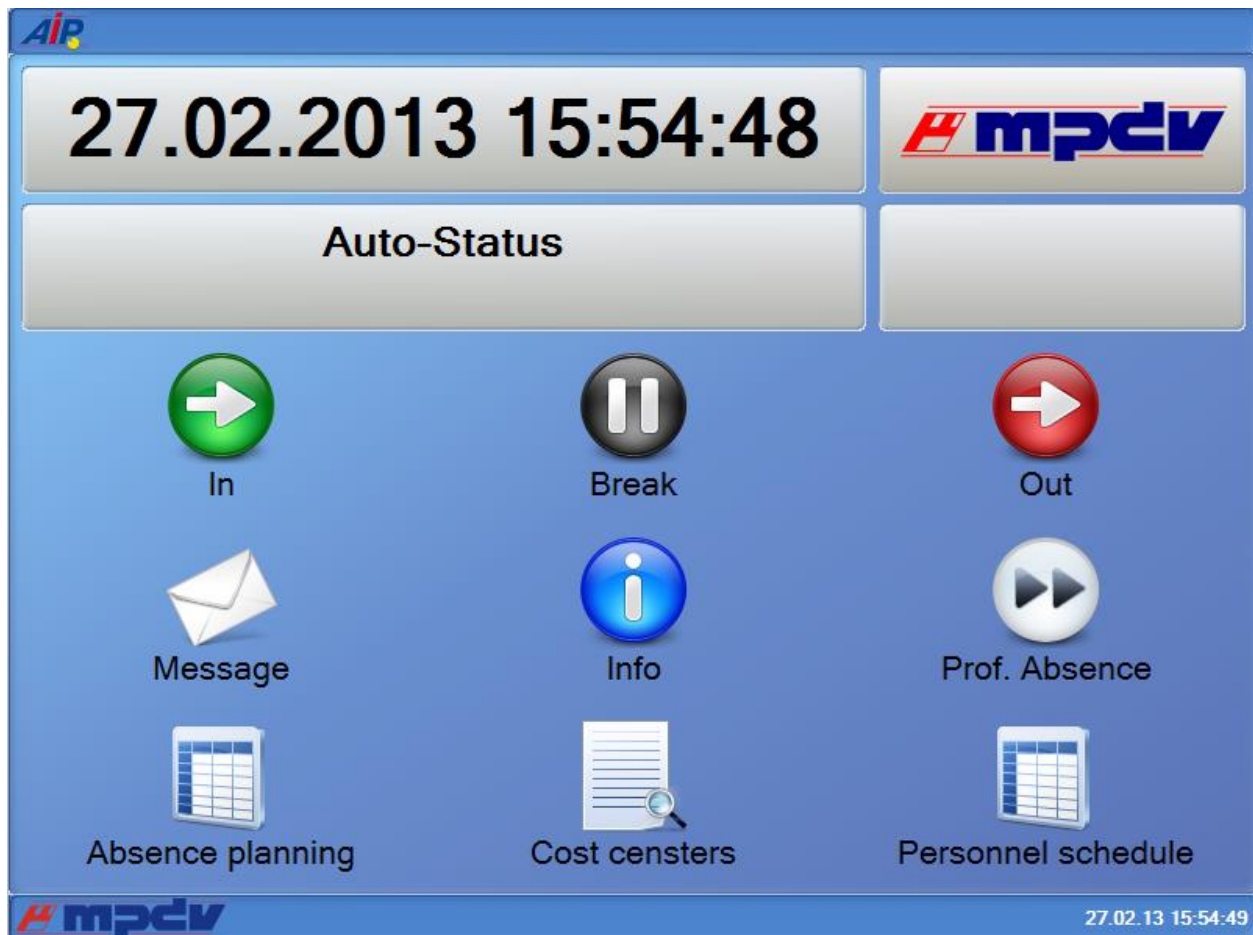

If required, the employee can override the automatically specified status by explicitly pressing the "clock-in" or "clock-out" button.

2.1.2.2 Absence reasons

Absence reasons can be posted in the PZE terminal, i.e. as advance or subsequent postings. In this context advance posting means that the absence reason is entered prior to the actual absence. A subsequent posting means the absence reason is entered after the actual absence.

The three function keys at the bottom or the absence reason keys of the PZE terminal are used for inputting absence reasons. Absence reasons are represented by this icon: 


How to enter an absence reason

- Press one of the absence reason keys.
- Swipe your staff badge.

If the terminal is in the operation mode "auto status", HYDRA decides automatically whether the absence reason posting is an advance or subsequent posting. If the terminal is in the operation mode "clock-in" it is a subsequent posting. If it is in the operation mode "clock-out" it is an advance posting.

Working with the absence reason list

- Press the function key "absence reason list" .
- Swipe your staff badge.
- Select the relevant absence reason and confirm by "OK".

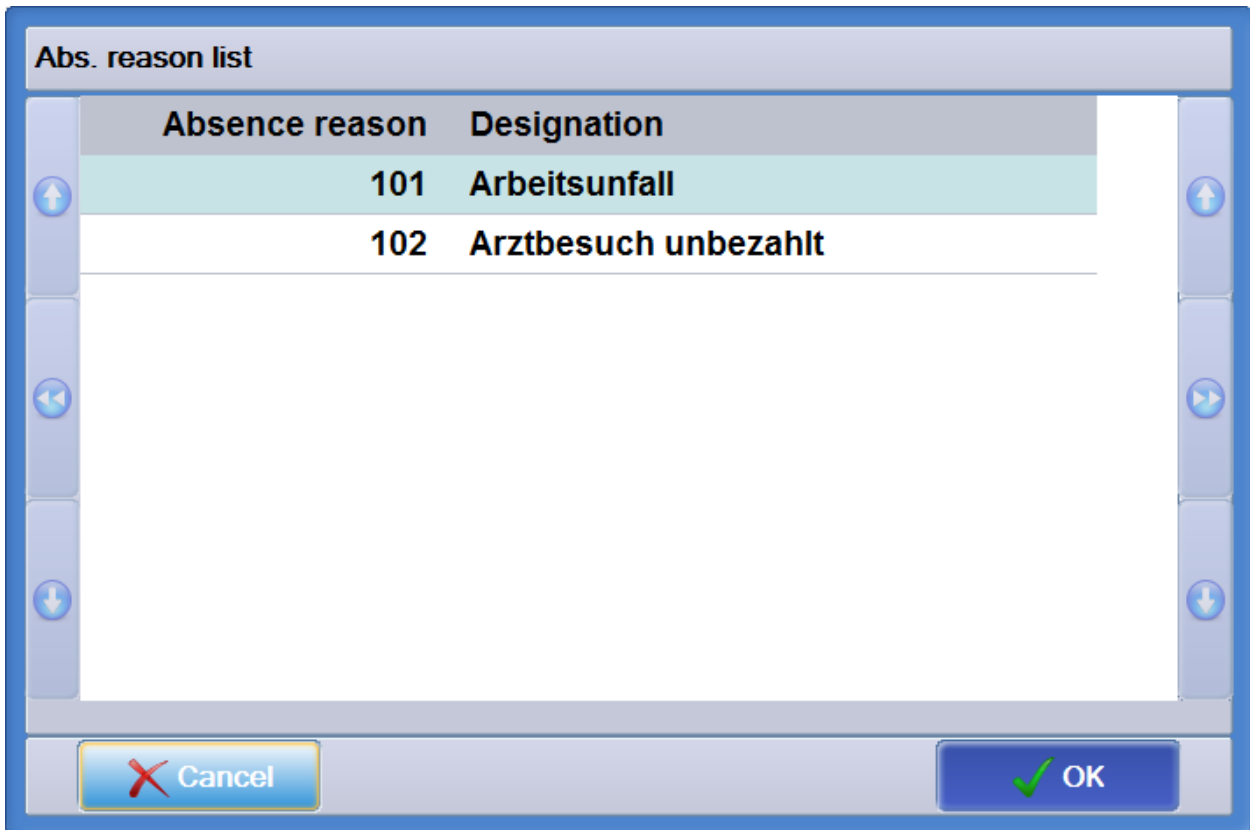

Absence reason	Designation
101	Arbeitsunfall
102	Arztbesuch unbezahlt

If the terminal is in the operation mode "auto status", HYDRA decides automatically whether the absence reason posting is an advance or subsequent posting. If the terminal is in the operation mode "clock-in" it is a subsequent posting. If it is in the operation mode "clock-out" it is an advance posting.


The HYDRA "absence reason authorization" specifies which absence reasons an employee may choose from.

2.1.2.3 Cost center postings

Cost center postings can also be performed at PZE terminals. Cost centers are represented by the icon




This processing is identical to the collection process for absence reasons. However, advance and subsequent postings are not distinguished in this case.

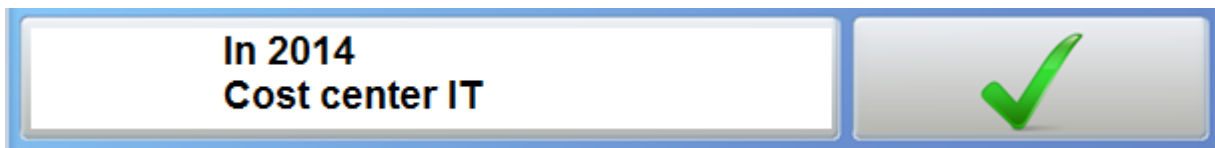

The screenshot shows a "clocking-in" to cost center "IT" by an employee with badge number "2014".

Working with the cost center list:

- Press the function key "cost centers" .
- Swipe your staff badge.
- Select the relevant cost center and confirm by "OK".

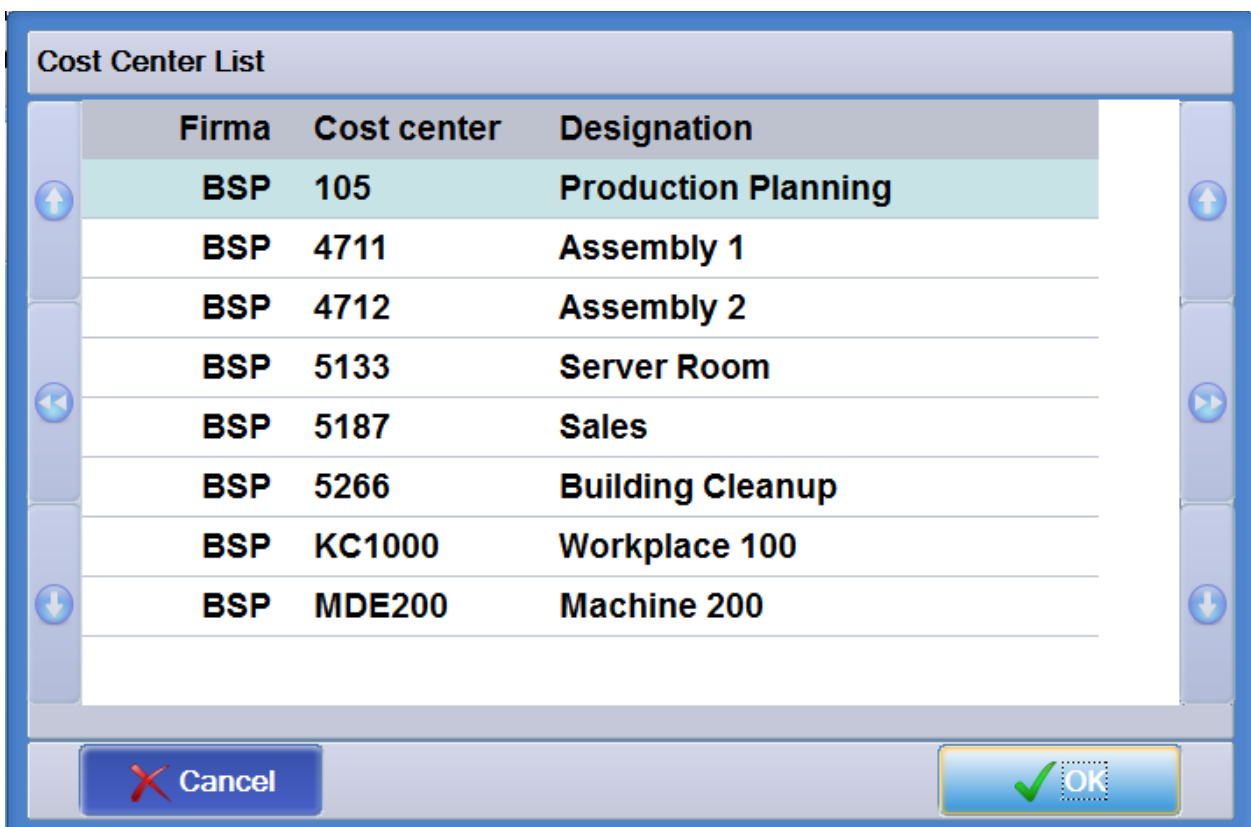

The cost center list provides all cost centers created for the employee's company in the cost center master.

2.1.2.4 Display of account balance information

After pressing the info key and swiping the staff badge, a dialog appears showing the person's current account balances:

The screenshot shows a terminal interface with a blue border. At the top, a header bar contains 'Information [2006]' on the left and '[#0010]' on the right. Below this is a table with two columns: 'Designation' and 'Value'. The table contains five rows of data. To the left and right of the table are vertical bars with four circular navigation buttons each (up, down, left, right). At the bottom of the dialog, there are two buttons: 'Load clockings' on the left and a button with a green checkmark and 'OK' on the right.

Designation	Value
Flextime	13:45
Overtime	0:00
Leave Account	18.50
Monthly account	-1:35
Date	03.03.2013

The HYDRA account master data specify which HYDRA time accounts are displayed on the terminal.

The employee may view today's clocking records and the ones from the previous day by clicking the function key "load clocking records". This key is only available if it is enabled in the terminal configuration.


Clocking information [2006]			[#0013]	
Designation	Date	Time		
In	01.03.2013	06:37:29		
Flextime	01.03.2013	13:21:44		
In	04.03.2013	07:24:06		
Out	04.03.2013	11:56:20		
In	04.03.2013	12:32:40		
Out	04.03.2013	17:46:52		
In	05.03.2013	06:08:37		
Out	05.03.2013	12:07:35		
In	05.03.2013	12:29:14		

Page 1 • Page 2

OK

2.1.2.5 Display of messages

Messages automatically appear on the terminal when clocking-in or clocking-out. By clicking the "message" key, employees can reopen their messages, such as "Please contact payroll office".

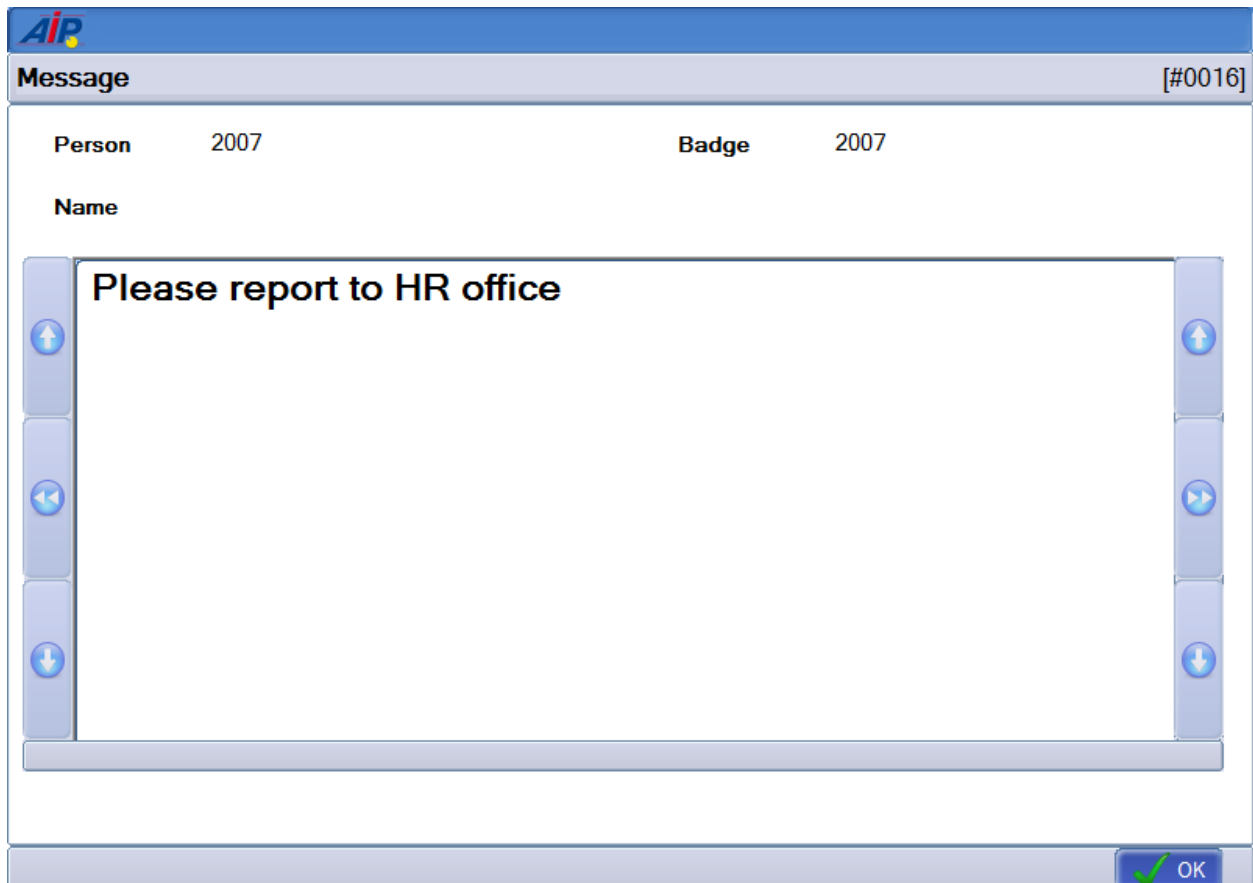

Whether or not the messages are to appear automatically when clocking-in or clocking-out, can be specified upon entering the relevant message in the MOC.

2.1.3 Error messages

The following error messages (showing a red prohibition sign ) may appear in the messages dialog:

Message	Description
"Double posting"	→ The person attempted to post the same function within two minutes. This check is only performed if no other employee has clocked this function in the meantime.
"No access authorization"	→ The person does not have access authorization for this terminal.

"No business trip authorization"

The person is not authorized to clock business trips (see figure).

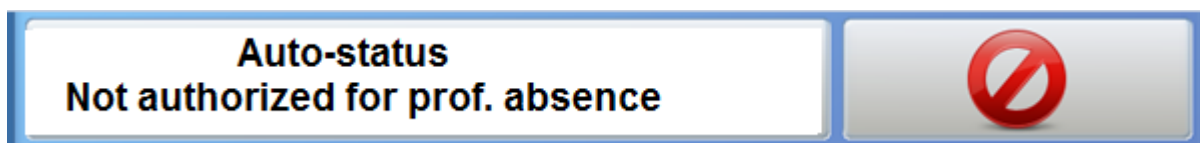


Fig. Example of an error message "No business trip authorization".

All other messages are displayed in the "general message line" at the bottom of the screen.

Other error messages are:

Message	Description
"No message has occurred"	➔ There is no message for the specific employee.
"Wrong company number"	➔ No correct company badge.
"Wrong status order OUT after OUT"	➔ No clocking-out possible (only with enabled status check)
"No memory space. No connection to the server"	➔ Local memory capacity for clocking records exhausted (in OFFLINE mode). If there is no connection to the server, the terminal locally saves approx. 10000 clocking records before this message appears.

2.2 ZKS – Access control

The terminal does not provide specific dialogs for access control. A green LED indicates if access is granted. A red LED shows that access has been rejected at the ZKS terminal.

The [Access log](#) as well as the [Access status](#) are provided as lists in the MOC.

2.3 LLE – Terminal info on group incentives

If the license to calculate LLE group incentives is available, the PZE terminal displays not only the info on the account balances, but additionally an information on the activities performed in the premium group.

Flextime	:	00:00
Flexible time	:	154:00
Leave account	:	27.00
05 B3P	102% :	12:30
04 350	118% :	7:30
04 B3P	122% :	112:30


The rows in gray show the data of the MOC application "Personal group participation" for the current and the previous month. The following columns are displayed:

Column		Explanation
1	Month	In the example: 05 and 04
2	Premium group	In the example: B3P, 350
3	Performance level	Performance level of the premium group in the month. In the example: 102%, 118%, 122%
4	Personal group participation	Hours of the person in the premium group in the month.

You can change or disable the info display as part of the customization of the incentive wage module.

2.4 PZE - shift plan

Employees may have their shift plan for the next days displayed on the terminal by clicking an absence reason key at the PZE terminal. Shift plans are displayed by the dynamic dialog P_PSP. The below screenshot shows the shift plan of an AIP terminal:

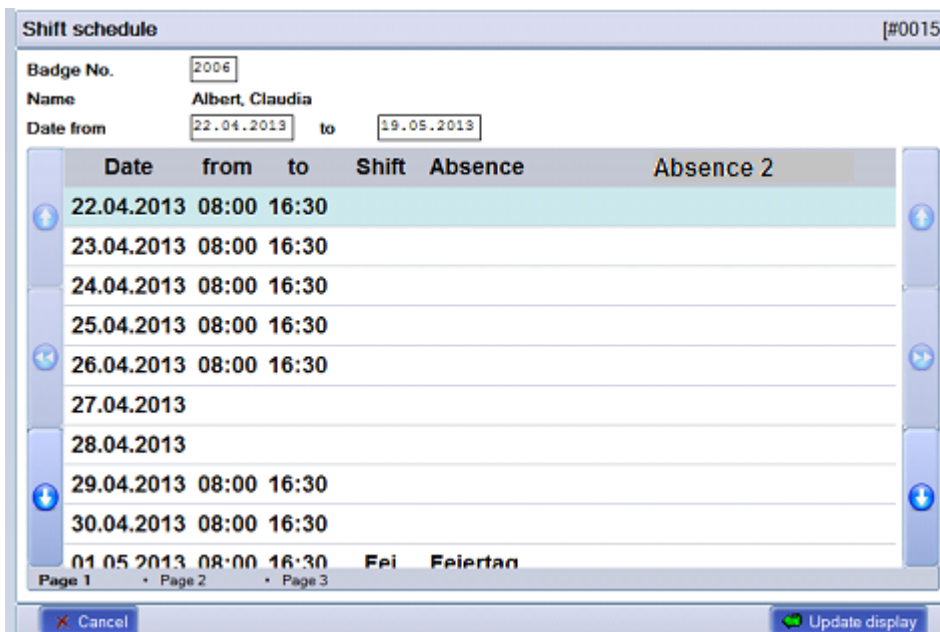

Shift schedule [#0015]

Badge No. 2006

Name Albert, Claudia

Date from 22.04.2013 to 19.05.2013

Date	from	to	Shift	Absence	Absence 2
22.04.2013	08:00	16:30			
23.04.2013	08:00	16:30			
24.04.2013	08:00	16:30			
25.04.2013	08:00	16:30			
26.04.2013	08:00	16:30			
27.04.2013					
28.04.2013					
29.04.2013	08:00	16:30			
30.04.2013	08:00	16:30			
01.05.2013	08:00	16:30	Fei	Feiertag	

Page 1 • Page 2 • Page 3

Cancel Update display

2.5 PEP - personnel schedule

Employees may have their staff schedule for the next days displayed on the terminal by clicking an absence reason key at the PZE terminal. Staff schedules are displayed by the dynamic dialog P_PEP. The below screenshot shows the staff schedule of an AIP terminal:


Personnel schedule
[#0015]

Name Mayer, Hugo
Date from 27.02.2013
Date till 26.03.2013

	Date	from	to	Shift	Workplace	Function
↑	04.03.2013	06:00	14:00	F	Line 7	Maschine operator
	05.03.2013	06:00	14:00	F	Line 7	Maschine leader
	06.03.2013					
	07.03.2013					
↶	08.03.2013	14:00	22:00	Lea		
	09.03.2013	14:00	22:00	Lea		
	10.03.2013	14:00	22:00	S	Line 7	Maschine operator
↓	11.03.2013	14:00	22:00	S	Line 7	Maschine leader
	12.03.2013	14:00	22:00	S	Line 7	Maschine leader
	13.03.2013					

Page 1 • Page 2 • Page 3

Cancel
Update display

2.6 Terminal status display


The terminal status is shown at the bottom of the screen.



Status	ICON	Description
Online		The terminal is ONLINE. Server communication is enabled. All saved data records have been transferred.
Offline		The terminal is OFFLINE. Server communication is interrupted. Online functions, such as the info display are not possible. However, clockings can still be recorded. These clocking records are transferred to the server, once data connection has been re-established.
Event - communication		The terminal is sending data to the server.
Event - communication		The terminal reads files from the server or writes data to the server.
Update		The terminal is sending stored data records to the server.
Demo		The terminal is in DEMO mode, i.e. server communication is disabled.

2.7 PZE - Subsequent entry of clocking / request clocking

The employee can use an absence reason key (**_STP**) on the PZE terminal to subsequently enter a clocking. You use the dynamic dialog P_STP to subsequently enter the clocking. The below screenshot shows the dialog to enter a clocking on the AIP terminal as an example:

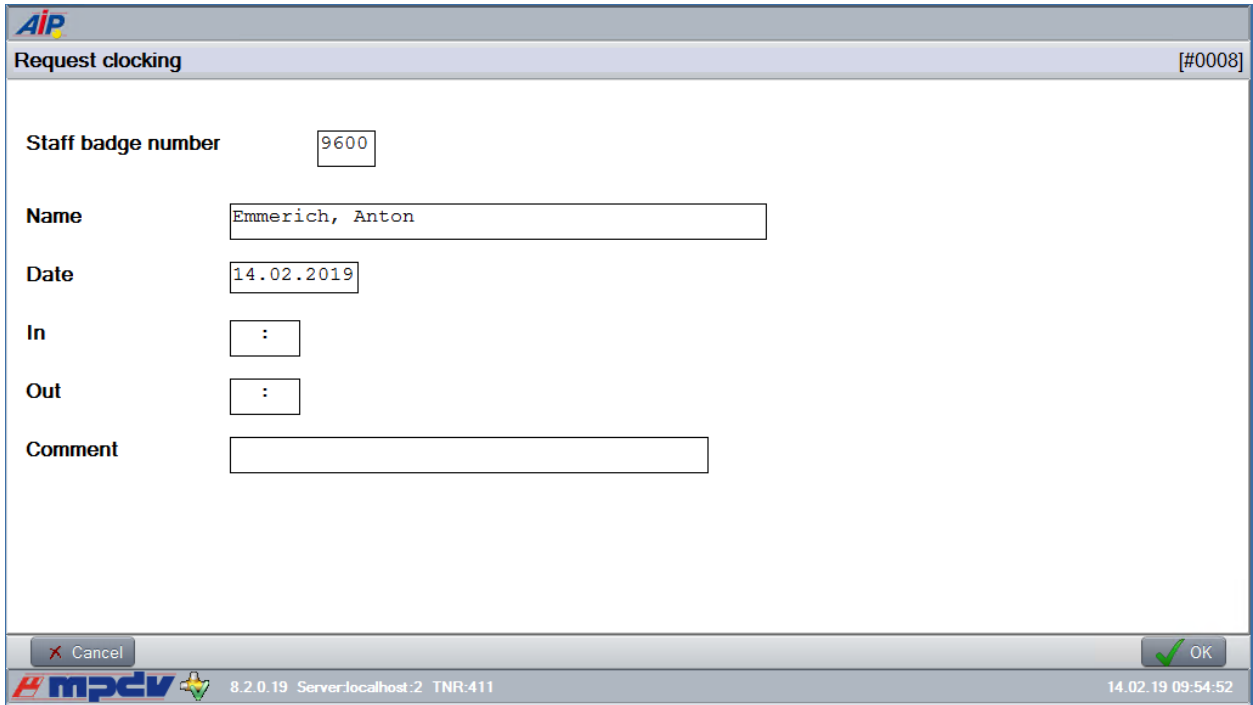

The clocking entered is then displayed in the *Labor time maintenance* as follows:



The license AIP-HRF only activates the **display** of the dialog P_STP on the terminal. To **process** the subsequently entered clocking in form of an escalation and to book this clocking, you require the license PZE-EPP in version 8.3.

When you subsequently enter a clocking, you can create an escalation. The details of the escalation and its configuration are described [here](#).

Staff badge number

This field is automatically populated on the PZE terminal when you have pressed the key and scanned the badge. If the badge number is read on the BDE terminal, the field is empty when the dialog opens. It is populated when the badge is read.

The *Staff badge number* is a mandatory field.

Name

This field displays the name of the person. On the PZE terminal, this field is directly populated when the dialog opens. The badge number read is used to fill this field. On the BDE terminal, the name is displayed after the badge number has been entered or read.

Date

The date of the current day is preset. The user can change the date.

In

The field *In* is empty and has the format "HH:MM". The user can enter a time between 0:00 and 23:59 hours, but the field can also remain empty.

Out


See *In*.

Comment

A field to enter an optional comment (40 characters).

2.8 List of absence reasons

If you want to enter more than 4 absence reasons on the terminal, you can use a list of absence reasons to this end (only with CT-36x and CT-38x). Configure the list of absence reasons using the entry "FGL" in one of the fields *Absence reason 1* to *Absence reason 4*. The list of absence reasons shows all absence reasons, which include the company of the person in the configuration of the absence reasons, or where the field *Company* is empty. If you select the function key and scan your badge, the list is displayed on the terminal. Select an absence reason from the list and confirm pressing OK. The absence reason is posted.

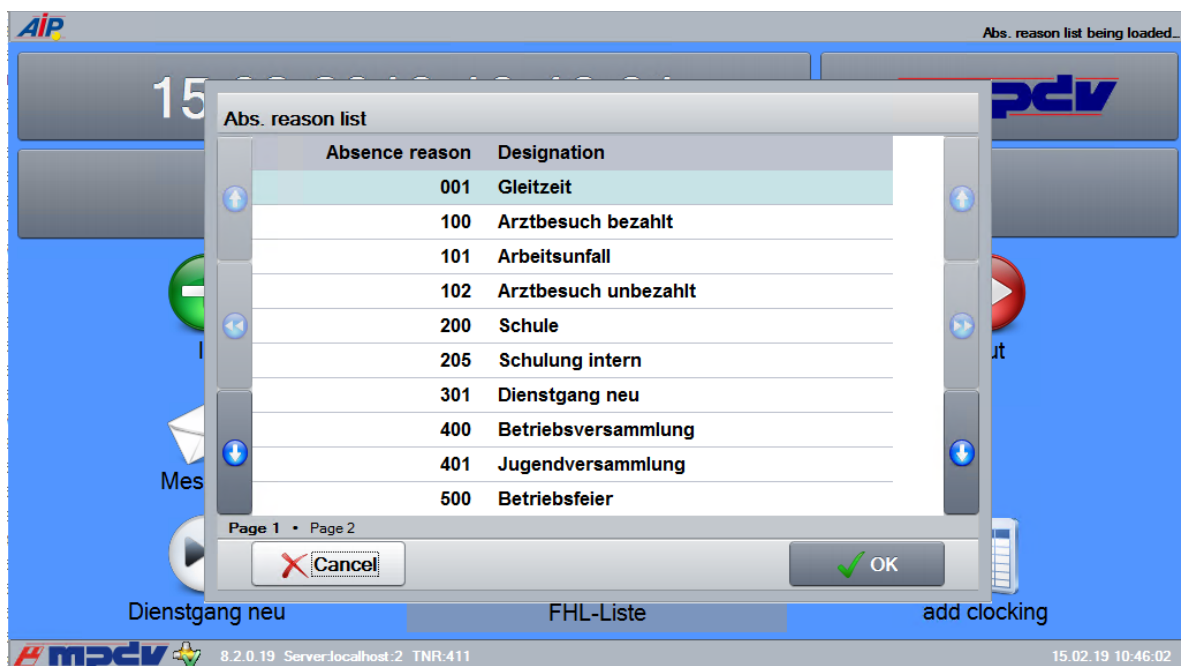

With terminals of type CTP-340, the configuration of absence reason key 1 is used for the blue key with the suitcase and the configuration of absence reason key 2 is used for the yellow hash key. The CTP-340 does not process the configuration of the absence reason keys 3 and 4.

3 Administration of the AIP-HRF terminal

The next section deals with the implementation and "local" configuration of the PZE terminal CT-380.

3.1 Implementation of the AIP-HRF terminal

The booting process for the LAN terminal CT 362 after implementation or an external failure of current supply (e.g. power failure) is identical to booting a PC. The following selection menu appears, once the network software had been loaded:

[A] Hardware-Test >>	09.08.10 09:28:09
[B] Load Application	13
[C] Configuration	
[D] Files delete >>	
[E] Tools >>	[S]
[F] Program - Start	Autorun active
V# 7.0.0.6 21.06.2010	
Watchdog Off	
C:\WINDOWS WIN-V#: 5 DOS-V#: 1	

The described function can be executed after pressing the relevant buttons (white background).

An external keyboard is required for the function [C = Configuration]. These functions are only required for implementation or system administration purposes and should only be carried out or started by MPDV staff or the person responsible for the system.

PLEASE NOTE:

When deleting log files (queues), all stored clocking records that have not yet been transferred are deleted as well.

If nothing is entered, this screen is closed after approx. 20 seconds and the terminal program is loaded. The basic view appears.

3.2 Saving clocking records in offline mode

If there is no connection to the server, the terminal locally saves approx. 10000 clocking records.

3.3 Configuration of CT-38x

The configuration of the PZE terminal is described in the document dealing with the PZE basic package.

This section deals with terminal-specific "local" configurations.

The excerpt from the file "**ctaip.ini**" includes all entries for:

- HYDRA user configuration and network configuration
- Interface configuration of the terminal

required for the configuration of the PZE terminal CT-380.

[system]	{ HYDRA - User and network configuration }
usr=203	{ HYDRA - user number (unique within the HYDRA system) }
host name=192.9.200.4	{ HYDRA - Host name = IP address of the server }
offline timeout=30	{ minimum OFFLINE time of the terminal }
loadfile=ctnet\win\ctaip.txt	{ DOWNLOAD - file for SW update }
showcursor=off	{ Mouse on / off }
[comports]	{ interface configuration of the terminal }
COM1=<COMTYP>	{ COMPORT - interface COM1 }
COM2=< COMTYP>	{ COMPORT - interface COM2 }
COMn=<COMTYP>	{ COMPORT - interface COMn }

Possible <COMTYP> are: BAR, LEGIC, RFLESER, PLG, MSS, MBB-S6, MBB-DP1.

The excerpt from the file "**ctaipplay.ini**" includes all entries required for the configuration of the layout of the PZE terminal CT-380. By default this file is downloaded from the server with every software update. Consequently, the PZE layout is unique for all PZE terminals in the entire company.

[layout pze]	{ PZE - Layout configuration }
StdSchrift=Arial	{ font type on buttons and in the message dialogs }
StdDateSize=30	{ font size of the date/time dialog }
StdStatusSize=26	{ font size of the message dialogs }
StdSpdBtnSize=16	{ font size on buttons }
InfoSchrift=Courier New	{ font type in the info dialog }
InfoSchriftSize=20	{ font size in the info dialog }
datetimelayout=dd.mm.yyy hh:nn	{ date/time layout }
...	

3.4 Integration of a customer logo

A customer logo instead of the MPDV logo may also be displayed in the top right corner of the PZE terminal. The customer logo has to be provided in the png format (Portable Network Graphic). The file name *pze_mpdv.png* must be used for terminals with a resolution of 800x600 pixels or higher. For terminals with a resolution of 640x480 pixels the file name should be *pze_mpdv.small.png*. The logo size should not exceed 220x90 or 175x75 (for smaller resolution).

Then, this file has to be packed as ZIP archive with the file name *pict_cust.zip* and stored in the directory <x>\custom on the server. X stands for the system number. When starting the terminal program, the AIP terminal downloads the ZIP archive and shows the customer logo.