

Manual

Entry/Information Functions for NC Programs / Setting Data

AIP-DNC 8.2

Version 1.0.23049

Last changed on: 01.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Overview of Entry/Information Functions for NC Programs /Setting Data.....	4
2	DNC Functions of AIP	5
2.1	General information / basic view of DNC	5
2.2	Update	8
2.3	Show DNC resource.....	8
2.4	DNC documents.....	8
2.5	Upload.....	9
2.6	Download	9
2.7	Lock DNC resource or change status.....	10
2.8	Release DNC resource	10
3	AIP2 -Local Configuration	12
3.1	Local Configuration ctaip.ini	12
3.2	PNG – Files / Bitmaps	16
3.2.1	File pict.zip	16
3.2.2	File pict_cust.zip.....	16
3.3	Multilingualism (*.mld files)	17
4	AIP2 - Central Configuration File hytnrcfg.ini.....	18
4.1	Layout configuration.....	21

1 Overview of Entry/Information Functions for NC Programs /Setting Data

Purpose

The DNC module makes functions available that are used to manage DNC programs, to download programs onto a machine or to upload revised programs onto a machine.

Implementation considerations

You use the function package if you:

- Want to upload a resource onto a machine or download a resource from the machine.
- Want to display a machine's DNC resource.
- Would like to see documents allocated to a DNC resource.
- Would like to block, release or change the status of a DNC resource.

Features

The Acquisition Information Panel (AIP) offers a wide array of functions for DNC operation and for handling setting parameters to BDE/ MDE terminals, industrial PCs or PCs:

- Shows the NC or the setting data records in a list with numerous options to make selection easier
- The ability to select a data record and to transfer it to the machine control system (download)
- Function with which to transfer a selected or a new data record from the machine control system to HYDRA (upload)
- Status functions (e.g. blocking, releasing) with which to maintain and manage NC programs at the terminal
- Visualization of NC records and setting parameters at the terminal in conjunction with the function to display tooling sheets (DNC-AEB)

2 DNC Functions of AIP

2.1 General information / basic view of DNC

The HYDRA-DNC module provides functions to manage DNC programs, to download DNC programs onto a machine or to upload changed programs from a machine.

Provided that the module is active, it can be opened in the “workplace” section using the “DNC” button. The DNC function is started for the machine selected in the basic dialog. However, the DNC dialog cannot be opened if a machine is selected that is not assigned to a DNC family.

The opened dialog (DNC basic dialog) shows the below-mentioned data.

Operation

Operation number and designation of the operation that is logged on and selected in the basic dialog.

Order

Order number of the operation logged on and selected in the basic dialog.

Article

Article/item number of the operation logged on and selected in the basic dialog.

Workplace

Workplace/machine number and short description.

Selection

By default, selection is made “by DNC family”. The configured filter fields displayed..

But it is also possible to define another type of selection that is specific to the machine within the hytnrcfg.ini file (the entries to be made are written in brackets).

Selection by order (KEYTYP=A)

The “search term” fields, etc. are hidden. The filter field is activated instead within the table. DNC resources are already loaded and displayed while the dialog is being opened. The information line below the grid is hidden.

Selection by program (KEYTYP=P)

The table is empty at first. The “search term” field refers to the “DNC element”. Filtering refers to the DNC element.

DNC family

The DNC family which the currently selected machine is assigned to is displayed here. Please note: A machine should only be assigned to one DNC family. Any of the assigned DNC families will be displayed here if the machine is assigned to more than one DNC family.

“Released” status only

If this checkbox is checked only DNC resources are displayed that are currently assigned to the “released” status.

Memorize

If this checkbox is checked the entered search term is saved, when the dialog is closed. In case nothing is entered in the input field, the value “empty” is saved.

Table

The table of the “manage DNC elements” dialog is already filled while the dialog is being opened, provided that selection is based on programs or orders. In case the “by DNC family” option is selected, the list will only be loaded already while opening the dialog if at least one filter field is filled out.

The “manage DNC elements” dialog shows all available DNC resources:

Maintain setup parameters (SP)

Operation 0100 InjectionMolding

Prod.Order	S6100305	Article	SAR-FMO011-K-5013
------------	----------	---------	-------------------

Workplace 60610 ENG21

Selection	by SD family	SP Family	IM_SET
-----------	--------------	-----------	--------

☐ only status 'released' Search term: ☐ Memorize

Filter	Setup parameter	ESD Familie	File size	Resource status
	ESD-SA-4026-127A	IM_SET	2267	RELEASED
	ESD-SA-4026-127B	IM_SET	2267	RELEASED
	<New>	IM_SET		

Filter: [Article]>SAR-FMO011-K-5013 [Tool]>SG-4026-127 [Machine]>60610 [(Humidity)]

SP record:

Staff Number:

Buttons: Cancel, Refresh, Search, Add, Edit, Delete, Lock, Unlock

07/12/12 23:54:12

Filter fields

The four filter fields are shown here if the selection is based on the “by DNC family” option . Depending on how the DNC family is configured, the fields will be assigned to default values of order and machine. Provided that the “memorize” checkbox is checked, the entered filter criteria will already be assigned the next time the dialog is opened. If, however, a default value is configured for a field in the DNC family, this assignment takes priority.

The filter fields may be entered unless the “read-only” option has been configured. All filter fields can be entered if no OP is logged on. In this case, the input is not mandatory. A configuration in the hytnrcfg.ini dialog can prevent the fields from being released.

[Tnr Konfiguration 0]

DNCFreeSearchReadOnly=On

If the DNC dialog is started from the order sequencing list, filter fields react as it is the case if operations are logged on, as the selected order is transferred as reference.

DNC element

When an entry is selected in the list, the respective DNC element is taken over to the input field. As an alternative, the DNC element may also directly be written into the input field.

The functions that can be started using the buttons down right generally refer to the DNC element displayed in this input field.

Badge number

The staff badge number has been designed for checking authorizations for the functions that are displayed down right in the toolbar and that are described in the following:

-  - Update/refresh
-  - Show DNC resource
-  - Show assigned documents: DNC documents
-  - DNC upload machine → AIP

-  - DNC download AIP → Machine
-  - Lock DNC resource/change status
-  - Release locked DNC resource

2.2 Update

This function updates  the list. The value entered in the “search term” input field is taken into account in this context. The file size of DNC resources available at the AIP is entered in the corresponding column. Furthermore, the status of the DNC resource is displayed.

When loading the list by touching/clicking the corresponding button, it is checked whether or not filter fields configured as “read-only” for the upload are available (configuration of user fields of the DNC family). These fields have to be filled out in order for the list to be loaded.

2.3 Show DNC resource

The file content of the DNC resource is displayed. This function is only available, provided that the DNC-VIS license has been purchased.

2.4 DNC documents

The “DNC documents” function is only available if the “DNC-AEB” license is active (HYDRA-DNC 7.2).

The terminal loads the list of documents assigned to the resource and displays them.

By selecting an entry in the list and clicking/touching the “open document” button, the file is downloaded to the terminal and displayed in an internal or external viewer – depending on the respective file extension.

2.5 Upload

The “upload” function reads a resource from the machine and copies it into the configured target directory. For this purpose, the element has to be released for the upload.

An upload may always be performed if a DNC family is filtered and a <new element> is selected afterwards. At first a dialog appears where element and file name may be entered. Moreover, other filter criteria may be entered. The four lower fields of the upload dialog may be used for this purpose. Configuration of these fields is read out from the DNC family of the resource selected in the DNC dialog.

The fields may be configured as user fields at the client.

A field is only visible if at least one of the options “filter”, “mandatory field at upload”, “pre-assignment at upload” or “read-only” is set.

The field is initialized with default values if the “pre-assignment at upload” option is configured.

The field is grayed out, provided that the “not alterable/read-only” button is set. But the field remains unchanged if the “mandatory field at upload” option is set at the same time.

A new line is displayed in the list after the upload.

The upload is documented as event in the resource history. Two events are entered with the upload. They are to be distinguished by the dialog IDs:

- N: Beginning of the upload; the resource record is entered or changed.
- F: The file pertaining to the record has arrived the target directory.

The two events normally occur in very short intervals. In case the “F” event is missing, the transmission of the file has been interrupted unexpectedly. A download only transfers the file. The record is not changed. Consequently, only one event is entered in the history for the download.

2.6 Download

The “download” function collects a resource from the configured directory and copies it to the machine. Before starting the download, users have to identify themselves by their badge number. It is checked whether or not they are authorized to download programs.

The download process is documented as event in the resource history.

2.7 Lock DNC resource or change status

The resource status may be changed in this dialog.

The status change may be documented as event in the resource history.

Change status of DNC element ESD-SG-8014-127

SP record	ESD-SG-8014-127
SP Family	IM_SET

Actual status	999
New status	11

Filter

Status	Status designation
11	K-MAINTENANCE
12	OUTSOURCE-K2
13	SCRAPPED
99	BLOCKED

Page 1 • Page 2

Page 1 • Page 2

Comment

Staff Number

9999

☐ Memorize

✕ Cancel

✓ Change status

07/13/12 00:00:42

2.8 Release DNC resource

When a resource is released its status switches to the status assigned to the processing flag "F". Consequently, the status does not have to be selected or entered.

The status change is documented as event in the resource history.

Release of locked resources:

Release SP element ESD-SG-8014-127A

SP record	ESD-SG-8014-127
SP Family	IM_SET

Actual status	999
----------------------	-----

Comment

Staff Number

9999

☐ **Memorize**

Cancel

Release SP record

07/12/12 23:59:25

3 AIP2 -Local Configuration


3.1 Local Configuration ctaip.ini

The most important hardware and system settings are defined for each terminal in the CTAIP.INI file of the C:\MPDV\AIP2 directory.



Changes to the configuration file ctaip.ini are only enabled after rebooting the terminal software.

Layout configuration

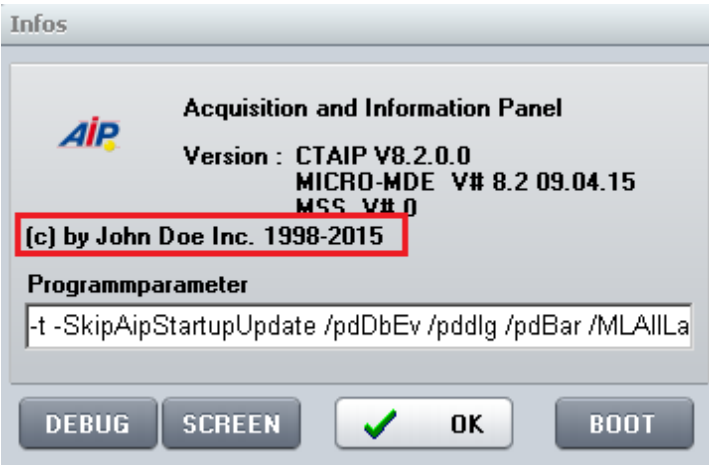Entry	Comment
Section [system]	
CompanyInfo=(c) by John Doe Inc. 1998-2015	Overwrites the copyright text in the "About" dialog 
parameters= ... -t +t	The virtual keyboard can be disabled/enabled, irrespective of the terminal type.
DEMO_ALL=ON	The information in the lower bar are normally hidden in demo mode. This option, however, causes all pieces of information to be displayed even in demo mode (version number and date, server, terminal number, online lights).
parameters= ... - SkipDynDlgExtraction...	Internal option preventing the extraction of dialog fields/buttons when updating dialog data. (Only applies if WF directory ".\spool\swf.\$\$\$\" is available)
parameters= ... - SkipAipStartupUpdate...	Internal option preventing the configuration files (*.ini,*.cfg,*.cfi) of the module DLLs (packets*.dll) and application DLLs (functions*.dll) from being synchronized when starting the terminal.
VirtScreenSize=640	All windows are started with the indicated resolution

Entry	Comment
VirtScreenRatio=16:9	The display ratio remains if the configuration VirtScreenSize is used to reduce the window. The width-to-height (aspect) ratio can be changed using VirtScreenRatio. Consequently, the width-to-height ratio 16:9 can be tested with a 4:3 monitor and vice versa. The value can be configured as "16:9" or as floating point value (e.g. 1,77777). Note: Information screens are specifically scaled if monitor screens in portrait format (e.g. 9:16) are used. This special scaling can be disabled in hytnrcfg.ini: [Tnr Konfiguration 0]->PortraitAlignment=off
Section [SKIN]	Configurations for the terminal's skin (see ctaipplay.ini) The online configuration of the terminal can be reached by the info dialog (click MPDV icon). ALT+F1 opens the control elements for the skin. Please note: Only in the design/GUI of AIP 8.1 and/or the dynamic dialogs
Saturation=0	Skin configuration / Default = 0
Hue=0	Skin configuration / Default = 0
Name=mpdv	Skin to be used / Default = mpdv
Active=false	Skins can only disabled in ctaip.ini! Default = true

Entry	Comment
Section [system]	
Usr=21	Distinct terminal number
Hostname=192.9.200.24	Internet address of the server
Offlinetimeout=600	The interval after which online access should be attempted the next time. The interval is specified in seconds
Showcursor=on	Show or hide mouse pointer in terminal application: on: mouse pointer active off: mouse pointer inactive
Loadfile=ctnet\win\aip2.txt	Configuration file to download the application from the server. The paths is relative to the installation directory of the system.
Watchdog=on	ON: Watchdog is activated OFF: Watchdog is not activated

Entry	Comment
Demo=off	'on': Offline demo mode; always off in the production environment!
parameters=-t	The -t parameter switches off the virtual keyboard.
TMOUT_C=xxx	Timeout for CONNECT to the server If not specified, default = 10 seconds → Increase to 20 seconds for routing
TMOUT_S=xxx	Timeout for SEND to the server If not specified, default = 10 seconds → Increase to 20 seconds for routing
TMOUT_R=xxx	Timeout for RECEIVE of the server If not specified, default = 120 seconds
TMOUT_F=xxx	Timeout for FILESERVER operations to the server If not specified, default = 10 seconds → Increase to 20 seconds for routing
Section [barcode]	Configuration of customized barcode prefixes.
BarKenn90=MNR4 ... BarKenn99=ANR3	BarKenn90 > defines the prefix (here: 90); The ID from the dialog (= acronym) is assigned.
Section [comports]	
com1=0 com2=MSS com3=BAR Com3=LEGIC Com4=RFLESER	Assignment of serial interfaces to connected devices: MSS – machine interface BAR, LEGIC, RFLESER – various reading devices
Section [MSS-INIT]	
MSS_DIALOG=10	If the terminal is switched off longer than 15 minutes, a dialog is displayed on terminal restart. The user must then decide whether the counter pulses, which were recorded when the terminal was closed, are posted or discarded. The dialog closes automatically with "Yes" after an entered time has elapsed; in this case the counting impulses are posted. This value configures the time in seconds the dialog is open. If the terminal is switched off for less than 15 minutes, no dialog is opened; the counting pulses recorded in the switch-off phase are accepted and posted without confirmation. Please note: The value can also be configured in hytnrcfg.ini. Entries in the hytnrcfg.ini file take priority.

Entry	Comment
MSS_FILEAGE_MIN=5 MSS_FILEAGE_OVERTIME=delete	Additional configuration for MSS_DIALOG If the backup file for counting pulses of the terminal is older than 5 minutes, no dialog is opened and the back up file deleted. Quantities recorded at the time when the terminal was closed are not used/posted. Please note: The value can also be configured in hytnrcfg.ini. Entries in the hytnrcfg.ini file take priority.
Section [ext. software]	
Button=Editor WindowName=Editor SearchParts=On	Configuration of the button in the top line: A previously started program can be brought to the foreground at the push of a button. Button: button caption WindowName: Name of the program (e.g. from the taskbar). SearchParts=On: Parts of WindowName are sufficient SearchParts=Off: WindowName must be entered completely. The option "SearchParts=On" is recommended for programs such as MSWord that change the title bar subject to the document that is currently being loaded.
ProgFileName=c:\Programme\wincmd\Wincmd32.exe	The program that is started if the program mentioned above cannot be called to the foreground.
AutoStart=on	This option starts the program (ProgFileName) when starting the terminal program.
Section [DLL]	
BusDLL=PCC.EXE	PCC.EXE must be entered here if the terminal is configured with the option "operated as HYDRA-MDE terminal". If necessary, the AIP2 enters this value independently upon starting the program.
Section [PDV]	
PDVProtokoll=ON	Enables PDV logging (prot_pdv.txt) (by default=OFF)
PDVIOPODir=c:\IOPSim\	Path for DNC
Section [CAQ]	
;Supported barcodes	
FieldWNRBarcodeOnly=Y	If this entry is set the tool number may only be entered using a scanner.
FieldNestBarcodeOnly=Y	If this entry is set the cavity number may only be entered using a scanner.
FieldNummBarcodeOnly=Y	If this entry is set the number may only be entered using a scanner.
FieldKNRBarcodeOnly=Y	If this entry is set the badge number may only be entered using a scanner.

Entry	Comment
BarcodeWNR=	This field specifies which acronym is entered into the tool number field by the scanner.
BarcodeNest=	This field specifies which acronym is entered into the cavity number field by the scanner.
BarcodeNumm=	This field specifies which acronym is entered into the number field by the scanner.

3.2 PNG – Files / Bitmaps

The use of PNC files is recommended by MPDV. By default PNG files have a size of 24 x 24 px.

3.2.1 File pict.zip

The file "pict.zip" is updated by the installation tool "inst32.exe" while downloading and includes all default PNG files.

The default PNG files can be overwritten in the file pict_cust.zip. Several PNG files have the extension ".small.png" (e.g. aip.small.png). These PNG files are used with a screen resolution of 640x480.


3.2.2 File pict_cust.zip

The file "pict_cust.zip" is loaded from the server directory (e.g. \<serverDir>\1\custom) when starting the program (as is the case for the hycust.mld).

Customized PNG files may be stored in this file and loaded by the AIP2 terminal. Default PNG files may also be "overwritten".


Please note: file sizes are not adjusted.

Customize header



The AIP icon displayed in the header can be replaced by storing a separate AIP.png file in the pict_cust.zip file.

This AIP icon will also be replaced in the "About" dialog.

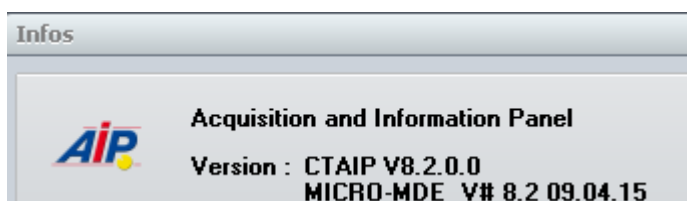


Customize footer



The MPDV icon displayed in the footer can be replaced by storing a separate company.png file in the pict_cust.zip file.

Customize PZE dialog

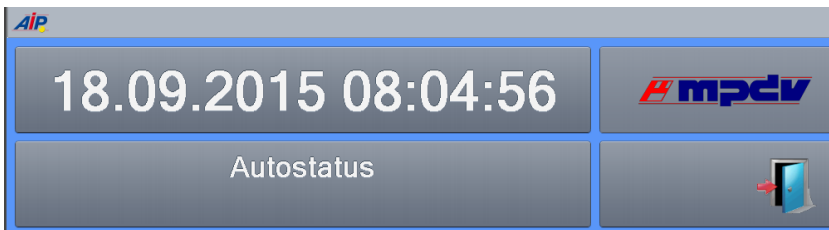

The MPDV icon displayed in the PZE dialog can be replaced by storing a separate pze_mpdv.png file in the pict_cust.zip file. In case the PZE terminal is operated with a screen resolution of 640x480, a customized pze_mpdv.small.png file has to be integrated in the pict_cust.zip file.

3.3 Multilingualism (*.mld files)

The below-mentioned files are required for the translation of the application. The table shows the priorities for the translation, ownership and the relevant storage locations.

Priority	File	Server directory	Owner	Description
1	ctaipkd.mld	./ctnet/win/aip2/custom	Customer	Customer-specific translations
2	hycust.mld	./1/custom/	MPDV	Customized translations by MPDV. The file is used by the AIP2, CTAIP and CTWIN terminal.
3	ctaip.mld	./ctnet/win/aip2	MPDV	Standard translation file

4 AIP2 - Central Configuration File hytnrcfg.ini

You can use this file as central place to store different configurations for all or for separate terminals.

For each section, a general version is available

[section 0].

The entries included in this section can be overwritten by entries in a terminal-specific section

[section <TNR-USER>]

<TNR-USER> = UserNo = terminal number + 2000 e.g. 2010,2101,..) for exactly one terminal/UserNo



The file hytnrcfg.ini is loaded from the server on every terminal start.

Section / Entry	Comment
	→→→
[Tnr Konfiguration 0]	
FollowExternStatus=on	Transfer of machine statuses when reloading machine list. Useful if status change is set by PDM or another terminal
[Terminal->Installation 0]	
InstallFonts=on	If set to "off", fonts are not installed during restart. ON=DEFAULT
OnlyInstallFontsAfterDownload=false	If "InstallFonts=on": If true, then fonts are only installed directly after a download. If false, then fonts are installed every time the terminal is restarted. (false = DEFAULT)
[Terminal->USR 0]	

Section / Entry	Comment
AttachedApplication=First	Displaying documents of OP info: With this configuration, the system first checks whether or not an application is linked in Windows that matches the file extension of the document. This application is then used to display the document. If no link is available, the viewers configured in ctaip.ini (→ [ext. software]) and internal viewers are used. If an extension is completely unknown, the system tries to display the document as text . Different settings are possible: First → search for linked application first AfterUserViewer → If a UserViewer is configured, this one overrides the linked application (also applies to ExcelViewer, WordViewer and PowerpointViewer) Last → Only if no ctaip.ini assignment is found for the file extension, then the system searches for a linked application (default). Off → The system does not search for a linked application.
HTTPBrowser=standard	Display of documents (via OP info): If documents are configured with a path of schema "http", the file is not downloaded to the terminal, but the link is transferred to a browser. The default browser for the terminal is htmview3.exe, as this one can be operated by touchscreen. If this entry is set, the default browser configured in Windows is used.
SupressErrorMessage=70012	Suppress message "material is not planned"
MSS_DIALOG=10	If the terminal is switched off longer than 15 minutes, a dialog is displayed on terminal restart. The user must then decide whether the counter pulses, which were recorded when the terminal was closed, are posted or discarded. After a configurable period of time, the dialog closes automatically with "Yes" (Yes, posting of pulses). This value configures the time in seconds the dialog is open.
MSS_FILEAGE_MIN=5 MSS_FILEAGE_OVERTIME=delete	If the backup file for counter pulses on the terminal is older than 5 minutes, then no dialog is opened and the backup file deleted. Quantities recorded at the time when the terminal was closed are not used/posted.
[SignatureRecording->User 0]	
ManualBadgeInput=true	This configuration specifies whether or not the field <i>User</i> can be edited on the terminal (by default: no editing) true → activates keyboard input for field <i>User</i> on the terminal

Section / Entry	Comment
Transparency=255	The display of the signature dialog can also be transparent. 255 → Signature dialog is 0 % transparent (not transparent) 1 → Signature dialog is 99% transparent (maximum transparency) (Default = 155)
ShowPosition=TR	You can change the place of the signature dialog: TL Top – Left TM Top – Middle TR Top – Right ML Middle – Left MM Middle – Middle (Default) MR Middle – Right BL Bottom – Left BM Bottom – Middle BR Bottom – Right
USE_SERVICE_ACCOUNT=1	0 (default) SSO: ServiceAccount is not used (requirement: the terminal must be started with the domain "user" (SSO)). Note: ServiceAccount=1 can only be used if all users are in the "root" domain. SubDomain users are not supported.
SIGNATURE_1_USER_TYPE=REPORTING_USER_READONLY	REPORTING_USER_READONLY The user identification using the Windows user is activated. The Windows user is then preassigned in field <i>User</i>. The <i>User</i> field is read-only. Requirement: The "SSO" option must be enabled for all reporting users. Otherwise, successful authentication is not possible. REPORTING_USER_CHANGEABLE The user identification using the Windows user is activated. The Windows user is then preassigned in field <i>User</i>. The <i>User</i> field can be edited. Requirement: The "SSO" option must be enabled for all reporting users. Otherwise, successful authentication is not possible.

Section / Entry	Comment
SIGNATURE_1_LOGON_TYPE=HYDRA	"" / Not set / "EMPTY" There is also an alternative login procedure. HYDRA The user identification using the Windows user is locked. You must enter a user for identification. Requirement: All reporting persons must have been created as users and the option "SSO" must not be enabled for the users. Otherwise, successful authentication is not possible. ACTIVEDIRECTORY The TAB for the user identification via <i>User</i> is locked. The Windows user must be used for identification purposes. Requirement: The "SSO" option must be enabled for all reporting users. Otherwise, successful authentication is not possible. MIXED_BUT_UNIQUE The setting of option "SSO" specifies whether the user login or the Windows login is used. "SSO" enabled → Windows only "SSO" disabled → user only
SIGNATURE_2_LOGON_TYPE=HYDRA	Identical to SIGNATURE_1_LOGON_TYPE (see above)
ExtendedSignatureRecording=true	Used for signatures on the terminal with quality data collection.
[MDE/Blade Configuration 0]	
CONVERT-TO-ANSI- FILE=<list1 list2>	Configuration of the files that are provided from the AIP to the MDEB2 blade in ANSI format when a combined operation is available. The following lists are transferred by default if the entry is not available. counters.lst schicht.lst mnr.lst mstat.lst anr.lst pnr.lst If you want to transfer further lists, you must specify the standard lists and the additional lists.

4.1 Layout configuration

Entry	Comment
Section and/or [terminal configuration 0] [terminal configuration 2XXX];	(general configuration) (2XXX terminal-specific configuration)
AUTO-CONFIRM-UHR-ERROR-MESSAGE=TRUE	This setting specifies that in case of an error that occurred reading the clock (e.g. when activated after standby

Entry	Comment
	mode), the time is transferred without confirmation dialog and the terminal time is later synchronized with the server time via PDM command.
SUPPRESS-MAXIMUM-NUMBER-OF-MACHINES-WARNING=ON	Suppresses the warning after restart of terminal if more than 32 machines are assigned to the terminal (static/dynamic). (Default=OFF)
CalcTargetYieldSinceLogon=2	CalcTargetYieldSinceLogon=1 The duration is calculated from the total runtime since login (all statuses) minus the configured shift breaks. CalcTargetYieldSinceLogon=2 The duration is calculated from the total runtime since login (all statuses). Defined breaks are not used and are not deducted. (default value)
Section [QRD-PRINTER->TICKET 0] ;(general configuration) [QRD-PRINTER->TICKET 2xxx] ;(2XXX configuration for a specific terminal)	
COMPLETE-ABSENCE-OF-LOCAL-MNR-DATA-FOR-EVENT=< Events >	Reloads the machine row for the configured <Events>, if it is not available locally ➔ This configuration might be required for a group workplace without machine assignment.
COMPLETE-ABSENCE-OF-LOCAL-ANR-DATA-FOR-EVENT=< Events >	Reloads the order row for the configured <Events>, if it is not available locally ➔ This option has been implemented to access order data in the master data, e.g. when logging on orders.
COMPLETE-...-EVENT=< Events > COMPLETE-...-EVENT=#ALL# COMPLETE-...-EVENT=A_AN A_P_AN	Explanation on the configuration of <Events> ➔ Using <#ALL#> the row (ANR/MNR) that is not available is reloaded for any event. ➔ <A_AN A_P_AN> restricts reloading of information to specified events. The ID <DLGFAM> is preferred to the ID <DLG> in order to identify the <Event>.
Section [AIP2 Initialization 0]	
XML-GUI=OFF	Disables the new AIP2 design and uses the AIP 8.1 design.
CTWIN-STYLE=ON	Activates the GUI that is similar to CTWIN on the AIP2. The two button bars are shown below the two lists just like on the AIP 8.1.
CTWIN-BUTTON-LAYOUT=ON	If the option CTWIN-STYLE=ON is additionally set, the two button bars are displayed at the bottom of the screen.
AUTOMATIC-CHANGE-TO-START-DISPLAY=30	As of AIP 8.2.2.28: If this option is set, the display automatically changes to the main view after the configured time if no other interaction was performed in the meantime. The changing display is configured via the option <i>Show machine/OP</i> in the <i>Terminal configuration</i>, tab <i>MF functions</i>. - List: - Change from the detail views or function menus (operation, person, resource, etc.)

Entry	Comment
	○ Change to the main view with "tiles" • Icons: ○ Change from the detail views or function menus or from the main view with tiles ○ Change to the icon view of workplaces The configuration is specified in seconds. Do not specify less than 10 seconds. An automatic change to the start screen is not made if an input dialog is open.