

Manual

Collection / Visualization Functions for energy-related data

AIP-EMG 8.2

Version 1.0.23049

Last changed on: 01.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Overview of Collection / Visualization Functions for Process Data.....	4
2	AIP2 Operation.....	5
2.1	Special Control and Display Elements on the AIP2	5
2.2	General description of the posting process on the AIP2	8
3	PDV Functions - Process Visualization in AIP	11
3.1	Display of measuring channels.....	11
3.2	Change default value	14
4	AIP2 -Local Configuration	17
4.1	Local Configuration ctaip.ini	17
4.2	PNG – Files / Bitmaps	21
4.2.1	File pict.zip	21
4.2.2	File pict_cust.zip	21
4.3	Multilingualism (*.mld files)	22
5	AIP2 - Central Configuration File hytnrcfg.ini	23
5.1	Layout configuration	26

1 Overview of Collection / Visualization Functions for Process Data

Purpose

The AIP features contained in this function package make it possible to display energy-related data directly in production using shop floor terminals or data entry PCs.

Implementation considerations

You use the function package if you:

- Want to monitor the values entered via energy-related data collection online at the terminal.
- Would like to visualize the system values in pointer instruments or trend lines.
- Would like to display system layouts using online measured values.

Integration

AIP offers the ability to connect to the data server used for input via the visualization components and to display the values entered there online.

Features

Displays the input process values as a pointer or bar chart

- Illustrates the trends using the latest input values
- Dialog controlled option to change target values manually
- Creates individual layouts independently or as a part of the HYDRA customizing process using the process visualization editor (MDS-PVE).
- Displays separate system layouts using the integrated measured values display and graphic display elements (additional license).

Additional licenses are needed in order to use the functions listed above.

2 AIP2 Operation

2.1 Special Control and Display Elements on the AIP2

Tables

Uniform selection lists are used in AIP 8.2 posting dialogs:

Filter	
Status	Status
1	PRODUCTION
2	SETUP
3	ORDER SHORTAGE
4	OUT OF MATERIAL
5	OUT OF STAFF
6	START UP
22	COLOUR CHANGE
97	ELECTRICAL FAILURE
98	MECHANICAL FAILURE
99	GENERAL DISTURBANCE

Page 1 • Page 2

If information is available for more than one page, the page numbers are displayed below the table. The current page is highlighted in bold letters. If the user clicks/touches a page, the display directly changes to this page.

If more pages are available than the page numbers displayed, the following buttons can be displayed on the left or right hand side depending on the context (available as of SP10/2016):

-  : If you click this button, the system jumps to the first page of the next page navigation. This means: If *Page 1 ... Page 9* were displayed for the page navigation, the system jumps to *Page 10*.
-  : If you click this button, the system jumps to the first page of the next page navigation. This means: If *Page 10 ... Page 18* were displayed for the page navigation, the system jumps to *Page 9*.
-  : If you click this button, the system directly jumps to *Page 1*.
-  : If you click this button, the system directly jumps to the last page.

You can select an operation using the mouse, touch screen, keyboard (arrow keys: '↑' or '↓'), scanner or by entering it manually.

The content of tables or lists depends on the respective context. Example: When you log on an operation, those operations are available that are included in the sequencing list or planned for the respective workplace or group. When you interrupt an operation, only running operations are available for selection.



Scrolling page by page (up or down) in the table.



Scrolling to the left or right. Only those buttons are activated that make sense for the current situation (context sensitive). This figure shows that scrolling to the left has been deactivated.



Optionally you can display a “table filter” (customization). This is an automatic filter that, once it has been entered, directly affects the table without having to update it. This process is realized through full-text search for (defined) columns. The search is *case-insensitive*.

Virtual keyboard

Using the virtual keyboard, you can enter data manually via touch screen or a connected mouse. The virtual keyboard is displayed automatically as soon as the focus is on an input field. The keyboard layout, which is installed and activated in the Windows language settings, specifies the layout of the virtual keyboard.



Moving the virtual keyboard



Hiding the keyboard for 10 seconds



Switching between the alphanumeric and numeric keyboard



Selecting the keyboard layout (language)



Changing the scaling/size of the keyboard



To move the keyboard, you must configure the driver accordingly (configuration in the control panel of the terminal/PC)!

If you do not want to display the virtual keyboard in general, you must enter the parameter `-t` in the entry `parameters=` of the configuration file `ctaip.ini`.

Date display

AIP supports a country-specific date format in dynamic dialogs. The option "short date" has to be selected in the "regional settings" of the Windows "control panel" of the terminal/PC. Please note:

- Years are always four characters long.
- Months and days are always 2 characters long.
- Allowed separators are: '-' (minus), '/' (backslash) and '.' (dot).
- Blanks must not be included in the "short date" format, i.e. the <BLANK> separator is not allowed.
- The date separator "." (dot) is only allowed in connection with the DD.MM.YYYY format.
- The date format, which might possibly be configured in dynamic dialogs, is ignored.

Examples

- | | |
|-----------------------|------------|
| • English(USA) | MM/DD/YYYY |
| • Danish | MM-DD-YYYY |
| • Customer-specific 1 | YYYY-MM-DD |
| • Customer-specific 2 | YYYY/MM/DD |
| • Customer-specific 3 | MM/YYYY/DD |

Note

If the date format used is other than the permitted formats, a note appears when the program is started and the date format is set to MM/DD/YYYY.

In the status bar, the year format is shortened and displayed only with two characters.

2.2 General description of the posting process on the AIP2

Many AIP posting dialogs are divided into several views (sub-dialogs). These views (sub-dialogs) cover the entire screen so that only one dialog is visible at a time. In a “workflow concept” the user is navigated through the posting dialog step by step. In the following, this process is described using the example *Interrupt operation*. Other posting dialogs are operated in the same way.

The action *Interrupt operation* is performed. To start this action, you click the button *Interrupt* when you have selected an operation:

Interrupt

The dialog *Interrupt operation* opens and the first view (sub-dialog) is displayed. The header displays the function that is currently being executed (here: *Interrupt operation*).

The screenshot shows the 'Interrupt operation' dialog for 'S61003050100 InjectionMolding at workplace 60610'. The dialog is divided into three steps: 1. Enter quantities, 2. Choose status, and 3. Confirmation. The first step is active.

Annotations:

- 1st view (sub-dialog):** The views are run through one after the other.
- Posting that is currently being performed:** Points to the 'Interrupt operation' header.
- Quantities already recorded (yield, scrap):** Points to the 'Yield' and 'Scrap' input fields.
- General OP data:** Points to the 'Operation 0100 InjectionMolding' section.
- Active input field:** Points to the 'Yield' input field.
- Virtual keyboard:** Points to the numeric keypad.

Operation 0100 InjectionMolding

Prod.Order	S61003050100	Target qty.	90000 PCS
Article	SAR-FMO011-K-5013	Yield	1442 PCS
	Mirror housing right, blu	Scrap	33 PCS
		Completion	1%

Yield **Scrap**

Virtual keyboard:

7	8	9	←
4	5	6	-
1	2	3	→
0	,	.	

Reasons for scrap:

0	DIMENSIONAL DEVIATION
0	DIRT
0	OTHERS
0	SCRATCHES
0	SETTING ERROR
0	TOLERANCE EXCEEDED

Buttons: Cancel, Go on

Footer: mpcv, UK flag, 04.12.15 15:10:28

In the first dialog *Enter quantities*, the user can enter the produced yield or scrap quantities. Subject to the active input field, the virtual keyboard is shown or hidden automatically.


Quantities can be entered using the virtual or real keyboard. The user can go to the next field using the tabulator key (which can also be found on the virtual keyboard). When the user has entered all values in the first view, the next view (sub-dialog) can be opened by clicking **Next**.

The **Cancel** button is displayed in all sub-dialogs. Click this button to cancel/close the entire process at any time.

To open the next view (**Select status** in the example), click the **Next** button or another tab (in our example: **Select status** or **Confirmation**). Please note in this context, that no view can be skipped when they are navigated upwards (view 1 → view 2 → view 3). This means: When you are in the first view (*enter quantities*) and you click the third view (*confirmation*), the second view (*select status*) will be displayed first.

Vice versa, when navigating downwards (e.g. from the *confirm* view to the *enter quantities* view), each view can directly be opened by clicking the required tab. In this case, views can actually be skipped. Using the **Back** button, views are opened one after the other (upwards).

As long as the dialog has not been confirmed, the data entered can be changed at any time by scrolling back and forth.

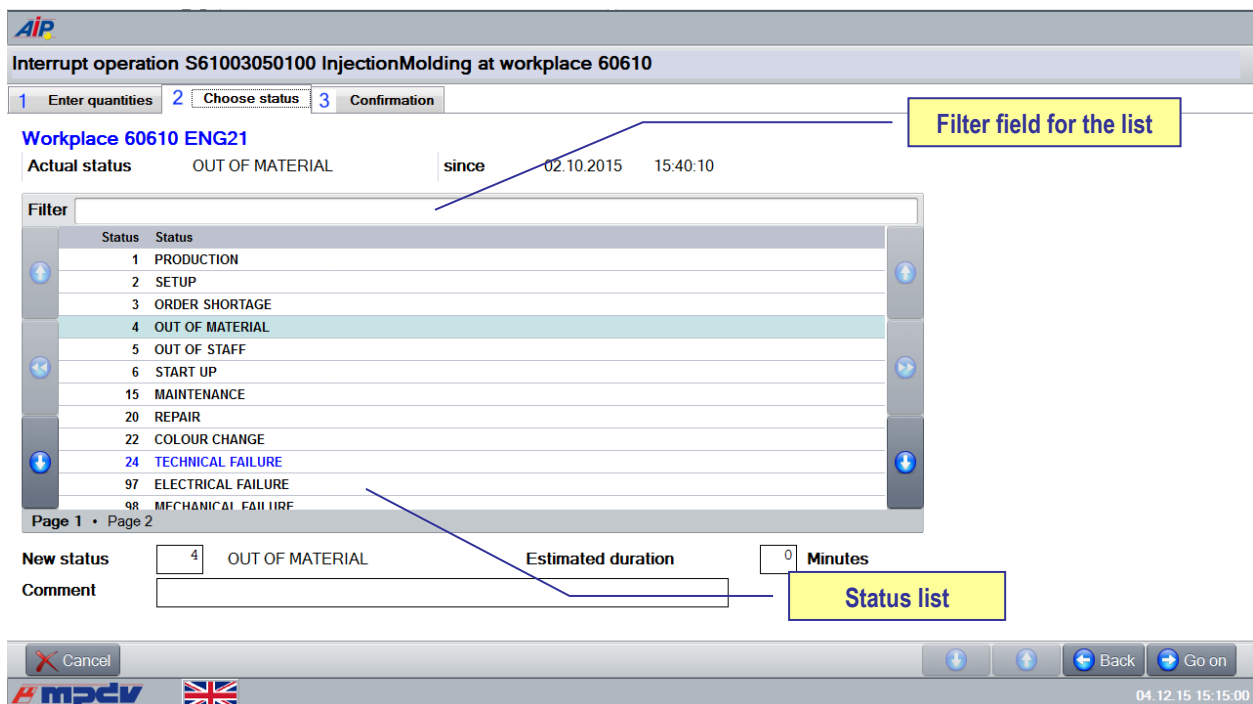

In the second view *Select status*, you select the workplace status that is set, when the operation has been interrupted. You can select the status from the status list displayed. This list can be restricted using the *Filter* field. Once the required values have been entered, the next view/sub-dialog can be opened by clicking **Next** (in our example it is the last view).

Interrupt operation S61003050100 InjectionMolding at workplace 60610

1 Enter quantities 2 Choose status 3 Confirmation

Operation 0100 InjectionMolding

Prod. Order	S6100305	Target qty.	90000 PCS
Article	SAR-FMO011-K-5013 Mirror housing right, blu	Yield	1442 PCS
		Scrap	33 PCS
		Completion	1%

Workplace 60610 ENG21

New status OUT OF MATERIAL

Entered quantities

Yield	5
Scrap	0

Staff Number

Buttons: Cancel, Back, Interrupt OP

04.12.15 15:15:45

The sub-dialog *Confirmation* shows a summary of all values entered in the dialog. If the user agrees with the entered data, the **Interrupt operation** dialog can be confirmed, once the badge number has been entered. Then the dialog is sent to the server and posted.

If an input field of the dialog is not completed properly (e.g. a mandatory field is empty), the field is highlighted in red in the respective view and gets the focus. The user can then directly correct the value.



If a workflow dialog is opened, you can click the ESC key to directly exit the dialog. This exit is also possible, if the virtual keyboard is displayed. As a consequence, you cannot use the ESC key to close the virtual keyboard.

3 PDV Functions - Process Visualization in AIP

Purpose

As a part of the basic HYDRA-PDV functionality, the AIP terminal program transfers inspection plans to the respective interface via MWP2 or a driver DLL. Vice versa, the AIP terminal then transfers incoming measured values to the HYDRA server.

The process visualization function allows to monitor the status of measurement channels at the AIP terminal.

3.1 Display of measuring channels

By pressing the "PDV" button in the "workplaces" section of the AIP terminal it may be switched to the respective display. The measuring channels of the machine selected in the basic screen are shown. The workplace may also be changed in the HYDRA-PDV view. An empty HYDRA-PDV dialog will be opened if no measuring channels are configured for the selected machine.

The value range of all displays corresponds to the tolerance range of the respective measuring channel configured within the inspection plan.

Different modes are available to display measuring channels. The mode may be chosen from the lower button bar.




Pointer display

Measuring channels are displayed as pointers. All of the up to 16 configurable measuring channels of a machine are also displayed at the same time.




Digital representation

Measuring channels are represented as digital values. All of the up to 16 configurable measuring channels of a machine are also displayed at the same time.

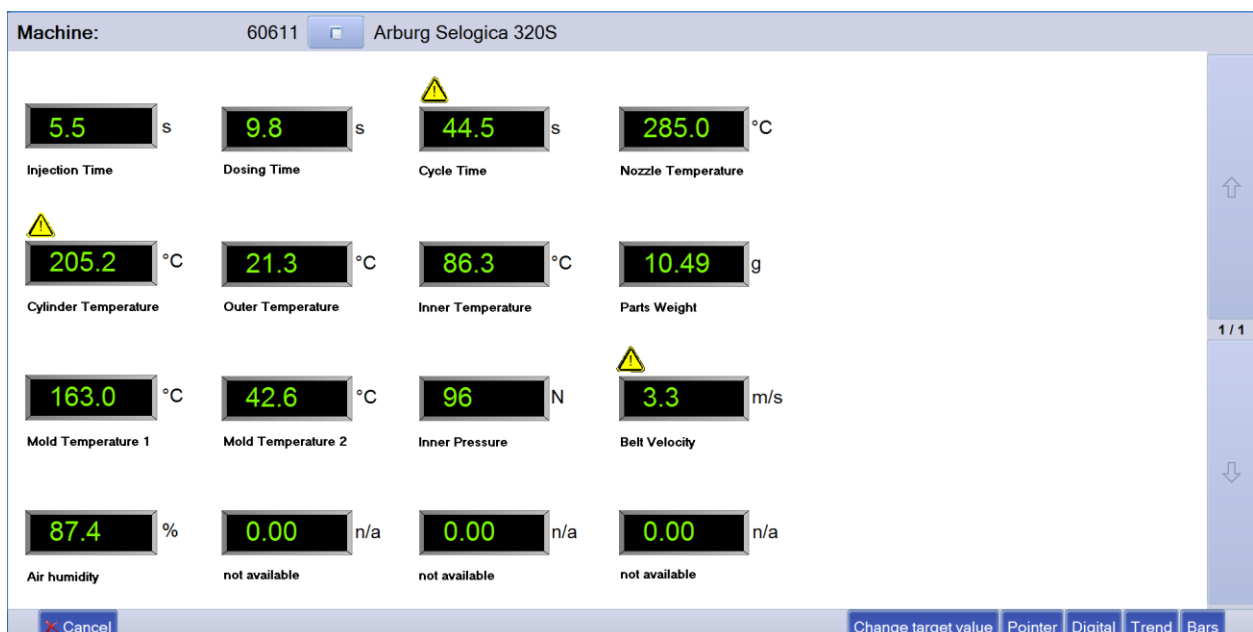


Trend display

The progress including a corresponding legend is shown for each process parameter in a graphic. The other process parameters can be reached by the arrow keys at the right margin of the screen.

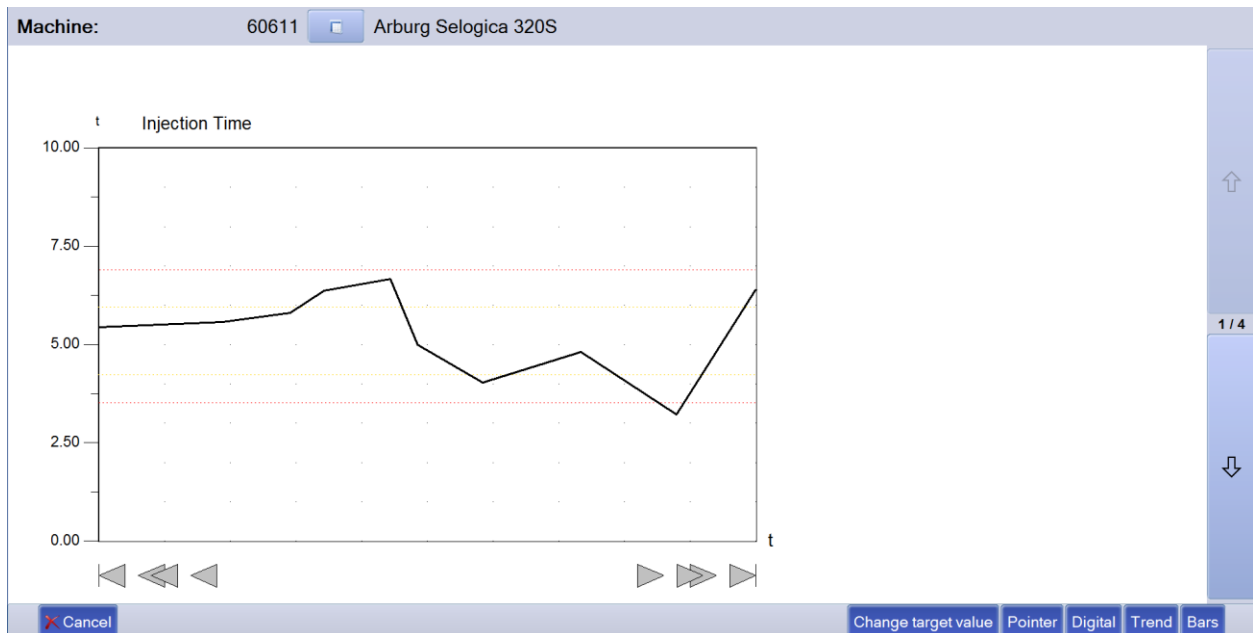

Bar display

Measuring channels are displayed as bars. All of the up to 16 configurable measuring channels of a machine are displayed at the same time:

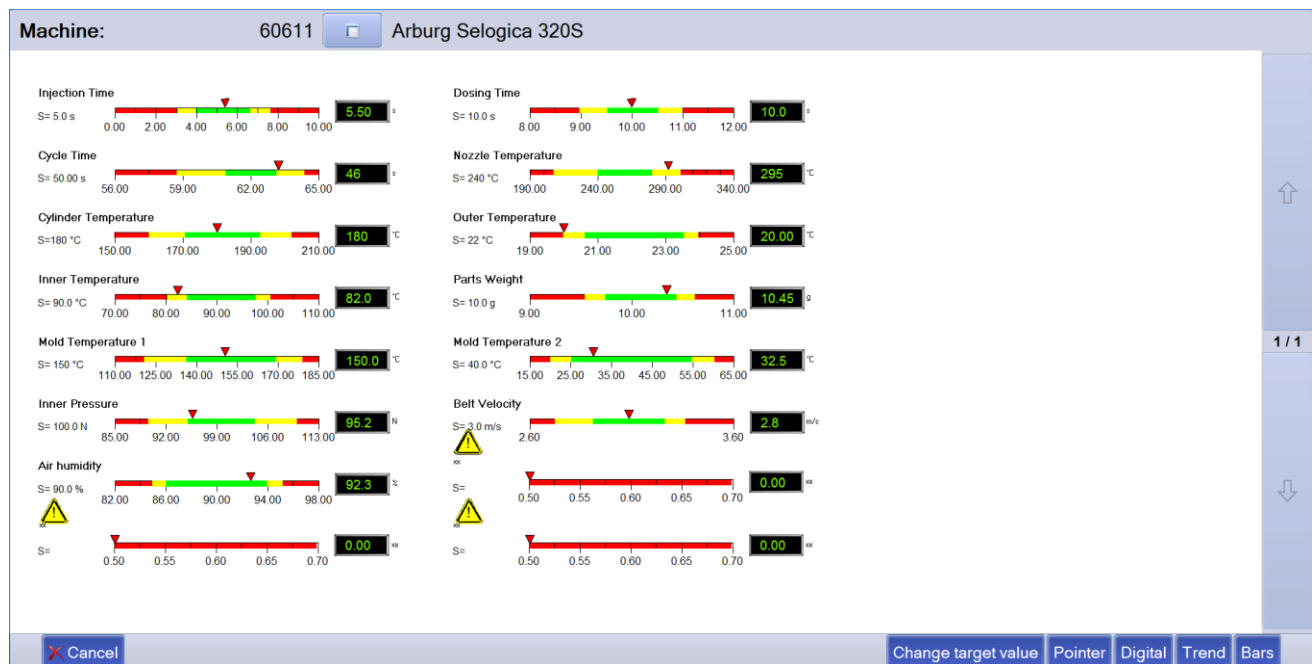

3.2 Change default value

Default values represent, among other things, a decisive factor when process data are displayed. They may be changed by clicking the “change default value” button.

Posting procedure

The required workplace has to be selected, before changing default values.

Starting of the “change default value” function

The “change default value” button is to be clicked. As soon as the function has been started, the user is navigated through the dialog. The workplace has already been defined.

Select process parameter

Change target value for process parameter at machine 60611

1 Choose process parameter 2 Change target values

Machine 60611 ARB-320S

Actual status UNDEFINED since 11.10.2010 14:00:00
Duration 15022:36:0

Filter

Cancel Go on

The required process parameter, the default values of which have to be changed is to be chosen from the available list.

Change default values

Change target value for process parameter at machine 60611

1 Choose process parameter 2 Change target values

Operation 0100 InjectionMolding

Prod.Order S6100328 Article SAL-OSI011-K-9001
Mirror housing left, crem

Process parameter ()

Upper tolerance limit
Upper process interv. limit
Target value
Lower process interv. limit
Lower tolerance limit

New target value

Actual target value

Staff Number

Cancel Back Change target values

The individual values that are to be changed are entered in the dialog that opens. This dialog shows the previous values as well as the new default values. The following values are concerned:

- **Upper tolerance limit**

- *Upper process action limit*
- *Target value*
- *Lower process action limit*
- *Lower tolerance limit*

Badge number

The badge number of the person changing the data is to be entered here.

Confirmation of “change default values”

The default values are updated in the system by confirming the dialog. They in turn affect HYDRA-PDV display at the AIP terminal.

4 AIP2 -Local Configuration


4.1 Local Configuration ctaip.ini

The most important hardware and system settings are defined for each terminal in the CTAIP.INI file of the C:\MPDV\AIP2 directory.



Changes to the configuration file ctaip.ini are only enabled after rebooting the terminal software.

Layout configuration

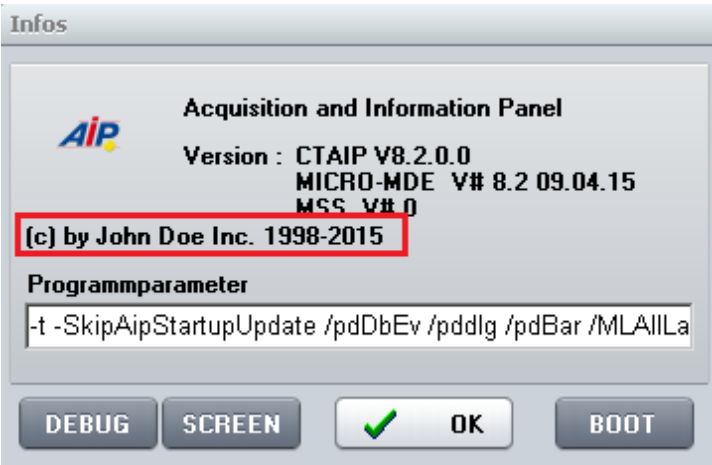Entry	Comment
Section [system]	
CompanyInfo=(c) by John Doe Inc. 1998-2015	Overwrites the copyright text in the "About" dialog 
parameters= ... -t +t	The virtual keyboard can be disabled/enabled, irrespective of the terminal type.
DEMO_ALL=ON	The information in the lower bar are normally hidden in demo mode. This option, however, causes all pieces of information to be displayed even in demo mode (version number and date, server, terminal number, online lights).
parameters= ... - SkipDynDlgExtraction...	Internal option preventing the extraction of dialog fields/buttons when updating dialog data. (Only applies if WF directory ".\spool\swf.\$\$\$\" is available)
parameters= ... - SkipAipStartupUpdate...	Internal option preventing the configuration files (*.ini,*.cfg,*.cfi) of the module DLLs (packets*.dll) and application DLLs (functions*.dll) from being synchronized when starting the terminal.
VirtScreenSize=640	All windows are started with the indicated resolution

Entry	Comment
VirtScreenRatio=16:9	The display ratio remains if the configuration VirtScreenSize is used to reduce the window. The width-to-height (aspect) ratio can be changed using VirtScreenRatio. Consequently, the width-to-height ratio 16:9 can be tested with a 4:3 monitor and vice versa. The value can be configured as "16:9" or as floating point value (e.g. 1,77777). Note: Information screens are specifically scaled if monitor screens in portrait format (e.g. 9:16) are used. This special scaling can be disabled in hytnrcfg.ini: [Tnr Konfiguration 0]->PortraitAlignment=off
Section [SKIN]	Configurations for the terminal's skin (see ctaipplay.ini) The online configuration of the terminal can be reached by the info dialog (click MPDV icon). ALT+F1 opens the control elements for the skin. Please note: Only in the design/GUI of AIP 8.1 and/or the dynamic dialogs
Saturation=0	Skin configuration / Default = 0
Hue=0	Skin configuration / Default = 0
Name=mpdv	Skin to be used / Default = mpdv
Active=false	Skins can only disabled in ctaip.ini! Default = true

Entry	Comment
Section [system]	
Usr=21	Distinct terminal number
Hostname=192.9.200.24	Internet address of the server
Offlinetimeout=600	The interval after which online access should be attempted the next time. The interval is specified in seconds
Showcursor=on	Show or hide mouse pointer in terminal application: on: mouse pointer active off: mouse pointer inactive
Loadfile=ctnet\win\aip2.txt	Configuration file to download the application from the server. The paths is relative to the installation directory of the system.
Watchdog=on	ON: Watchdog is activated OFF: Watchdog is not activated

Entry	Comment
Demo=off	'on': Offline demo mode; always off in the production environment!
parameters=-t	The -t parameter switches off the virtual keyboard.
TMOUT_C=xxx	Timeout for CONNECT to the server If not specified, default = 10 seconds → Increase to 20 seconds for routing
TMOUT_S=xxx	Timeout for SEND to the server If not specified, default = 10 seconds → Increase to 20 seconds for routing
TMOUT_R=xxx	Timeout for RECEIVE of the server If not specified, default = 120 seconds
TMOUT_F=xxx	Timeout for FILESERVER operations to the server If not specified, default = 10 seconds → Increase to 20 seconds for routing
Section [barcode]	Configuration of customized barcode prefixes.
BarKenn90=MNR4 ... BarKenn99=ANR3	BarKenn90 > defines the prefix (here: 90); The ID from the dialog (= acronym) is assigned.
Section [comports]	
com1=0 com2=MSS com3=BAR Com3=LEGIC Com4=RFLESER	Assignment of serial interfaces to connected devices: MSS – machine interface BAR, LEGIC, RFLESER – various reading devices
Section [MSS-INIT]	
MSS_DIALOG=10	If the terminal is switched off longer than 15 minutes, a dialog is displayed on terminal restart. The user must then decide whether the counter pulses, which were recorded when the terminal was closed, are posted or discarded. The dialog closes automatically with "Yes" after an entered time has elapsed; in this case the counting impulses are posted. This value configures the time in seconds the dialog is open. If the terminal is switched off for less than 15 minutes, no dialog is opened; the counting pulses recorded in the switch-off phase are accepted and posted without confirmation. Please note: The value can also be configured in hytnrcfg.ini. Entries in the hytnrcfg.ini file take priority.

Entry	Comment
MSS_FILEAGE_MIN=5 MSS_FILEAGE_OVERTIME=delete	Additional configuration for MSS_DIALOG If the backup file for counting pulses of the terminal is older than 5 minutes, no dialog is opened and the back up file deleted. Quantities recorded at the time when the terminal was closed are not used/posted. Please note: The value can also be configured in hytnrcfg.ini. Entries in the hytnrcfg.ini file take priority.
Section [ext. software]	
Button=Editor WindowName=Editor SearchParts=On	Configuration of the button in the top line: A previously started program can be brought to the foreground at the push of a button. Button: button caption WindowName: Name of the program (e.g. from the taskbar). SearchParts=On: Parts of WindowName are sufficient SearchParts=Off: WindowName must be entered completely. The option "SearchParts=On" is recommended for programs such as MSWord that change the title bar subject to the document that is currently being loaded.
ProgFileName=c:\Programme\wincmd\Wincmd32.exe	The program that is started if the program mentioned above cannot be called to the foreground.
AutoStart=on	This option starts the program (ProgFileName) when starting the terminal program.
Section [DLL]	
BusDLL=PCC.EXE	PCC.EXE must be entered here if the terminal is configured with the option "operated as HYDRA-MDE terminal". If necessary, the AIP2 enters this value independently upon starting the program.
Section [PDV]	
PDVProtokoll=ON	Enables PDV logging (prot_pdv.txt) (by default=OFF)
PDVIOPODir=c:\IOPSim\	Path for DNC
Section [CAQ]	
;Supported barcodes	
FieldWNRBarcodeOnly=Y	If this entry is set the tool number may only be entered using a scanner.
FieldNestBarcodeOnly=Y	If this entry is set the cavity number may only be entered using a scanner.
FieldNummBarcodeOnly=Y	If this entry is set the number may only be entered using a scanner.
FieldKNRBarcodeOnly=Y	If this entry is set the badge number may only be entered using a scanner.

Entry	Comment
BarcodeWNR=	This field specifies which acronym is entered into the tool number field by the scanner.
BarcodeNest=	This field specifies which acronym is entered into the cavity number field by the scanner.
BarcodeNumm=	This field specifies which acronym is entered into the number field by the scanner.

4.2 PNG – Files / Bitmaps

The use of PNC files is recommended by MPDV. By default PNG files have a size of 24 x 24 px.

4.2.1 File pict.zip

The file "pict.zip" is updated by the installation tool "inst32.exe" while downloading and includes all default PNG files.

The default PNG files can be overwritten in the file pict_cust.zip. Several PNG files have the extension ".small.png" (e.g. aip.small.png). These PNG files are used with a screen resolution of 640x480.


4.2.2 File pict_cust.zip

The file "pict_cust.zip" is loaded from the server directory (e.g. \<serverDir>\1\custom) when starting the program (as is the case for the hycust.mld).

Customized PNG files may be stored in this file and loaded by the AIP2 terminal. Default PNG files may also be "overwritten".


Please note: file sizes are not adjusted.

Customize header



The AIP icon displayed in the header can be replaced by storing a separate AIP.png file in the pict_cust.zip file.

This AIP icon will also be replaced in the "About" dialog.

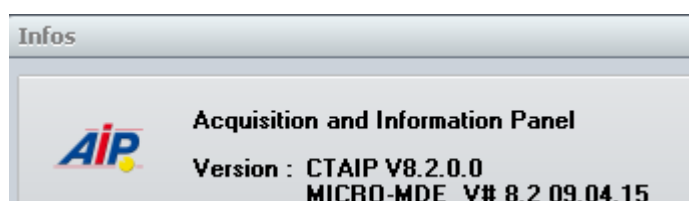


Customize footer



The MPDV icon displayed in the footer can be replaced by storing a separate company.png file in the pict_cust.zip file.

Customize PZE dialog

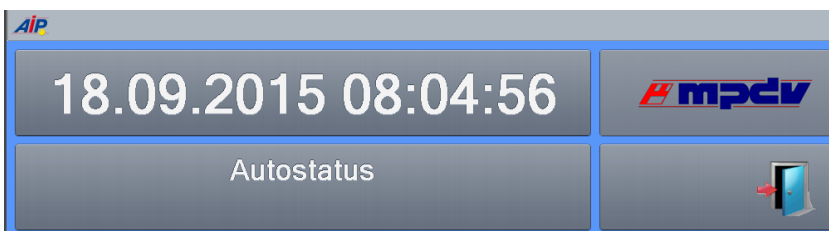

The MPDV icon displayed in the PZE dialog can be replaced by storing a separate pze_mpdv.png file in the pict_cust.zip file. In case the PZE terminal is operated with a screen resolution of 640x480, a customized pze_mpdv.small.png file has to be integrated in the pict_cust.zip file.

4.3 Multilingualism (*.mld files)

The below-mentioned files are required for the translation of the application. The table shows the priorities for the translation, ownership and the relevant storage locations.

Priority	File	Server directory	Owner	Description
1	ctaipkd.mld	./ctnet/win/aip2/custom	Customer	Customer-specific translations
2	hycust.mld	./1/custom/	MPDV	Customized translations by MPDV. The file is used by the AIP2, CTAIP and CTWIN terminal.
3	ctaip.mld	./ctnet/win/aip2	MPDV	Standard translation file

5 AIP2 - Central Configuration File hytnrcfg.ini

You can use this file as central place to store different configurations for all or for separate terminals.

For each section, a general version is available

[section 0].

The entries included in this section can be overwritten by entries in a terminal-specific section

[section <TNR-USER>]

<TNR-USER> = UserNo = terminal number + 2000 e.g. 2010,2101,..) for exactly one terminal/UserNo



The file hytnrcfg.ini is loaded from the server on every terminal start.

Section / Entry	Comment
	→→→
[Tnr Konfiguration 0]	
FollowExternStatus=on	Transfer of machine statuses when reloading machine list. Useful if status change is set by PDM or another terminal
[Terminal->Installation 0]	
InstallFonts=on	If set to "off", fonts are not installed during restart. ON=DEFAULT
OnlyInstallFontsAfterDownload=false	If "InstallFonts=on": If true, then fonts are only installed directly after a download. If false, then fonts are installed every time the terminal is restarted. (false = DEFAULT)
[Terminal->USR 0]	

Section / Entry	Comment
AttachedApplication=First	Displaying documents of OP info: With this configuration, the system first checks whether or not an application is linked in Windows that matches the file extension of the document. This application is then used to display the document. If no link is available, the viewers configured in ctaip.ini (→ [ext. software]) and internal viewers are used. If an extension is completely unknown, the system tries to display the document as text . Different settings are possible: First → search for linked application first AfterUserViewer → If a UserViewer is configured, this one overrides the linked application (also applies to ExcelViewer, WordViewer and PowerpointViewer) Last → Only if no ctaip.ini assignment is found for the file extension, then the system searches for a linked application (default). Off → The system does not search for a linked application.
HTTPBrowser=standard	Display of documents (via OP info): If documents are configured with a path of schema "http", the file is not downloaded to the terminal, but the link is transferred to a browser. The default browser for the terminal is htmview3.exe, as this one can be operated by touchscreen. If this entry is set, the default browser configured in Windows is used.
SupressErrorMessage=70012	Suppress message "material is not planned"
MSS_DIALOG=10	If the terminal is switched off longer than 15 minutes, a dialog is displayed on terminal restart. The user must then decide whether the counter pulses, which were recorded when the terminal was closed, are posted or discarded. After a configurable period of time, the dialog closes automatically with "Yes" (Yes, posting of pulses). This value configures the time in seconds the dialog is open.
MSS_FILEAGE_MIN=5 MSS_FILEAGE_OVERTIME=delete	If the backup file for counter pulses on the terminal is older than 5 minutes, then no dialog is opened and the backup file deleted. Quantities recorded at the time when the terminal was closed are not used/posted.
[SignatureRecording->User 0]	
ManualBadgeInput=true	This configuration specifies whether or not the field <i>User</i> can be edited on the terminal (by default: no editing) true → activates keyboard input for field <i>User</i> on the terminal

Section / Entry	Comment
Transparency=255	The display of the signature dialog can also be transparent. 255 → Signature dialog is 0 % transparent (not transparent) 1 → Signature dialog is 99% transparent (maximum transparency) (Default = 155)
ShowPosition=TR	You can change the place of the signature dialog: TL Top – Left TM Top – Middle TR Top – Right ML Middle – Left MM Middle – Middle (Default) MR Middle – Right BL Bottom – Left BM Bottom – Middle BR Bottom – Right
USE_SERVICE_ACCOUNT=1	0 (default) SSO: ServiceAccount is not used (requirement: the terminal must be started with the domain "user" (SSO)). Note: ServiceAccount=1 can only be used if all users are in the "root" domain. SubDomain users are not supported.
SIGNATURE_1_USER_TYPE=REPORTING_USER_READONLY	REPORTING_USER_READONLY The user identification using the Windows user is activated. The Windows user is then preassigned in field <i>User</i>. The <i>User</i> field is read-only. Requirement: The "SSO" option must be enabled for all reporting users. Otherwise, successful authentication is not possible. REPORTING_USER_CHANGEABLE The user identification using the Windows user is activated. The Windows user is then preassigned in field <i>User</i>. The <i>User</i> field can be edited. Requirement: The "SSO" option must be enabled for all reporting users. Otherwise, successful authentication is not possible.

Section / Entry	Comment
SIGNATURE_1_LOGON_TYPE=HYDRA	"" / Not set / "EMPTY" There is also an alternative login procedure. HYDRA The user identification using the Windows user is locked. You must enter a user for identification. Requirement: All reporting persons must have been created as users and the option "SSO" must not be enabled for the users. Otherwise, successful authentication is not possible. ACTIVEDIRECTORY The TAB for the user identification via <i>User</i> is locked. The Windows user must be used for identification purposes. Requirement: The "SSO" option must be enabled for all reporting users. Otherwise, successful authentication is not possible. MIXED_BUT_UNIQUE The setting of option "SSO" specifies whether the user login or the Windows login is used. "SSO" enabled → Windows only "SSO" disabled → user only
SIGNATURE_2_LOGON_TYPE=HYDRA	Identical to SIGNATURE_1_LOGON_TYPE (see above)
ExtendedSignatureRecording=true	Used for signatures on the terminal with quality data collection.
[MDE/Blade Configuration 0]	
CONVERT-TO-ANSI- FILE=<list1 list2>	Configuration of the files that are provided from the AIP to the MDEB2 blade in ANSI format when a combined operation is available. The following lists are transferred by default if the entry is not available. counters.lst schicht.lst mnr.lst mstat.lst anr.lst pnr.lst If you want to transfer further lists, you must specify the standard lists and the additional lists.

5.1 Layout configuration

Entry	Comment
Section and/or [terminal configuration 0] [terminal configuration 2XXX];	(general configuration) (2XXX terminal-specific configuration)
AUTO-CONFIRM-UHR-ERROR-MESSAGE=TRUE	This setting specifies that in case of an error that occurred reading the clock (e.g. when activated after standby

Entry	Comment
	mode), the time is transferred without confirmation dialog and the terminal time is later synchronized with the server time via PDM command.
SUPPRESS-MAXIMUM-NUMBER-OF-MACHINES-WARNING=ON	Suppresses the warning after restart of terminal if more than 32 machines are assigned to the terminal (static/dynamic). (Default=OFF)
CalcTargetYieldSinceLogon=2	CalcTargetYieldSinceLogon=1 The duration is calculated from the total runtime since login (all statuses) minus the configured shift breaks. CalcTargetYieldSinceLogon=2 The duration is calculated from the total runtime since login (all statuses). Defined breaks are not used and are not deducted. (default value)
Section [QRD-PRINTER->TICKET 0] ;(general configuration) [QRD-PRINTER->TICKET 2xxx] ;(2XXX configuration for a specific terminal)	
COMPLETE-ABSENCE-OF-LOCAL-MNR-DATA-FOR-EVENT=< Events >	Reloads the machine row for the configured <Events>, if it is not available locally ➔ This configuration might be required for a group workplace without machine assignment.
COMPLETE-ABSENCE-OF-LOCAL-ANR-DATA-FOR-EVENT=< Events >	Reloads the order row for the configured <Events>, if it is not available locally ➔ This option has been implemented to access order data in the master data, e.g. when logging on orders.
COMPLETE-...-EVENT=< Events > COMPLETE-...-EVENT=#ALL# COMPLETE-...-EVENT=A_AN A_P_AN	Explanation on the configuration of <Events> ➔ Using <#ALL#> the row (ANR/MNR) that is not available is reloaded for any event. ➔ <A_AN A_P_AN> restricts reloading of information to specified events. The ID <DLGFAM> is preferred to the ID <DLG> in order to identify the <Event>.
Section [AIP2 Initialization 0]	
XML-GUI=OFF	Disables the new AIP2 design and uses the AIP 8.1 design.
CTWIN-STYLE=ON	Activates the GUI that is similar to CTWIN on the AIP2. The two button bars are shown below the two lists just like on the AIP 8.1.
CTWIN-BUTTON-LAYOUT=ON	If the option CTWIN-STYLE=ON is additionally set, the two button bars are displayed at the bottom of the screen.
AUTOMATIC-CHANGE-TO-START-DISPLAY=30	As of AIP 8.2.2.28: If this option is set, the display automatically changes to the main view after the configured time if no other interaction was performed in the meantime. The changing display is configured via the option <i>Show machine/OP</i> in the <i>Terminal configuration</i>, tab <i>MF functions</i>. - List: - Change from the detail views or function menus (operation, person, resource, etc.)

Entry	Comment
	○ Change to the main view with "tiles" • Icons: ○ Change from the detail views or function menus or from the main view with tiles ○ Change to the icon view of workplaces The configuration is specified in seconds. Do not specify less than 10 seconds. An automatic change to the start screen is not made if an input dialog is open.