

Manual

Partial Quantity Documentation AIP-TMD 8.2

Version 1.0.23049

Last changed on: 01.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Overview of Partial Quantity Documentation	4
2	Printing Partial Quantities.....	5

1 Overview of Partial Quantity Documentation

Purpose

Use this function package if you want a simple way to print out a container label that shows the partial quantity in the container.

Integration

Entered quantities (yield) and order/workplace-related data are printed on the label. The latter are transferred from the logged on operation.

Features

- Start label printing after prompted to do so (press a button)
- Print out a label for the current operation that shows the quantity produced up until now (since the last printout). The label is printed in DIN A5 format on the default printer configured at the terminal

2 Printing Partial Quantities

Usage

The feature of printing partial quantities allows for a label or accompanying note to be printed with current data such as order number, article number, workplace/machine and the produced subset. A text accompanied by a bar code can be printed out at AIP 8.1 and AIP 8.2 terminals, while orders are processed at a machine.

Requirements

The function is enabled by checking the option "label printing" in the terminal label.

The function has to be configured accordingly depending on whether AIP 8.1 or AIP 8.2 is in use. The configuration of the AIP 8.1 is identical to configuring the list view for the AIP 8.2.

AIP 8.1 configuration:

To be able to use this function, the corresponding ID/function call has to be configured in the ctaipbut.ini button configuration.

AIP 8.2 configuration:

The corresponding ID/function call has to be configured in the corresponding layout to be able to use this function.

Additionally, an operation has to be logged on in order for a ticket to be printed.

Terminal functions

The function for printing partial quantities is triggered manually using a separate key.

The button triggering the function can be found on the 2nd page in the order section. The position can be changed by customizing the configuration file for buttons.

Label printing is triggered for the currently selected OP.

The following data is printed :

Date/time of printing
MES order number (combined order/OP number) as barcode
MES order number as plain text
Operation name

Article number
Target quantity (primary quantity unit)
Unit
Yield (primary quantity unit) since last printing
or the first printing since the OP is logged on
Current machine/workplace

Printing is performed in the A5 format using the default printer defined for the terminal. MPDV may adjust the label layout while customizing the system.



The function of printing partial quantities is only enabled if the terminal is online.

No label is printed, provided that no quantity has been entered since the last printing.

If no OP is logged on, no label will be printed.

A reprint function is not planned.

AIP 8.1 configuration:

- If button configuration is customized, e.g. using "ctaipbut.ini", the function can be configured for the required button by manually adding "A_TDM".

Example:

[ANR-ALL-Page2]

...

3=%PARAM1[9]=J%A_TDM,L,Teilmengendruck,Text Document.png

- If a customized hytnrcfg.ini is available and the function EXECUTE-CODED-FUNCTION is defined, A_TDM must be added to this entry

Example:

[Dialog->Initialization 0] ; for all terminals or e.g. 2090 for terminal 90


;Default = ; EXECUTE-CODED-FUNCTION=

A_LOS_AN|A_LOS_AB|A_ELW|A_ALW|C_LOS_EING|C_GEN|C_UMB|C_PAL_ASW|A_VERB
EXECUTE-CODED-FUNCTION=

A_LOS_AN|A_LOS_AB|A_ELW|A_ALW|C_LOS_EING|C_GEN|C_UMB|C_PAL_ASW|A_VERB|
A_TDM

AIP 8.2 configuration:

- Similar to the "interrupt operation" button, the button has to be integrated in the corresponding layout, e.g. the layout for operations (l_anr.xml):

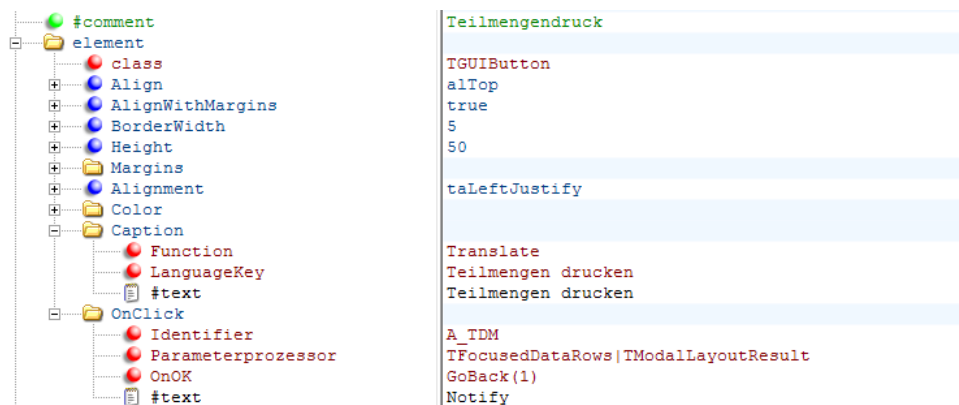

An existing button may be copied in advance to simplify the process.

Further information can be found in the document entitled EAT-AIP_82.pdf.

- If a customized hytnrcfg.ini is available and the function EXECUTE-CODED-FUNCTION is defined, A_TDM must be added to this entry

Example:

[Dialog->Initialization 0] ; for all terminals or e.g. 2090 for terminal 90

;Default = ; EXECUTE-CODED-FUNCTION=

A_LOS_AN|A_LOS_AB|A_ELW|A_ALW|C_LOS_EING|C_GEN|C_UMB|C_PAL_ASW|A_VERB

EXECUTE-CODED-FUNCTION=

A_LOS_AN|A_LOS_AB|A_ELW|A_ALW|C_LOS_EING|C_GEN|C_UMB|C_PAL_ASW|A_VERB|

A_TDM