

Manual

Measures to Optimize Energy Consumption EGM-OPM 8.3

Version 1.0.23049

Last changed on: 01.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Measures to Optimize Energy Consumption	4
2	Measure Tracking	5

1 Measures to Optimize Energy Consumption

Purpose

You use the function package for the following purposes:

- You want to collect and monitor measures in HYDRA that are intended to decrease energy consumption.

Integration

You require the basic function EMG-MGM.

Features

The package provides functions to create, edit and document measures.

2 Measure Tracking

Summary

Menu	Quality management --> QM evaluation --> Measure tracking Quality management → Complaint management → Measure tracking
Transaction code	tm
Function authorization	tm

The measure tracking function provides an overview of all generated measures. The "type" specifies from which area/application the measure derives. The application allows for measures to be edited at a central place and assigned statuses to be changed.

Utilization

Filtering by the "status" is the central element allowing to select, for example, all measures that are open, done, read or in process. If this is combined with filtering or grouping by the party responsible, it is possible to create a list showing all measures that are still open by person, department, etc.

Measures may be changed. In addition to changing statuses, it is also allowed to enter a comment about the activities made in the fields "measure text" and/or "comment". Furthermore, this application also includes the actual date indicating when a measure has been completed and the degree of effectiveness and fulfillment in %. It is even allowed to change the party responsible.

The "reference" group provides information on the origin of the measure. If it is, for example, a measure generated in complaint management, the type, area and the complaint or complaint detail will be shown here.

The relevant application can be opened by clicking the corresponding button in the toolbar. The application is determined by the content of the "context" field.

The "long-term data" tab is only available if the archiving license has been purchased. If this option is set, long-term data will also be used when measures are displayed and tracked.

Integration

The measure tracking function is connected with all applications where measures are documented.

Prerequisite

There are no special requirements to be met.

Selection criteria

Except for the "reference" tab, selection criteria are self-explanatory and not described separately. The filter fields "key 1" up to "key 5" of the "reference" tab allow for measures to be restricted specifically to the origin of the measure. In case of a complaint measure, the field "key 1" includes, for example, the complaint number generated automatically in HYDRA. The key field 2 then includes the number of the complaint detail.

Field descriptions

The display dialog shows different tabs. However, if newly created/edited, there is only one tab (the "measure" tab) that includes all pieces of information.

Measures tab

Measure

Measure number and/or selection or direct entry of a measure number. The relevant master data catalog can be opened for selection purposes.

Measure designation

The designation of the assigned measure number is shown. If the measure number is input directly, the designation will only be shown upon saving.

Text

Free text field to enter a complementary measure text.

Comment

Free text field to enter a complementary comment for the measure.

Status

Available measure types can be displayed or selected. The types "in process", "read", "done" and "open" are provided by default.

Measure type

Available measure types can be displayed or selected. The following types are available by default "short-term", "medium-term", "long-term" and "no assignment".

Fulfillment [%]

Fulfillment in % can be displayed or entered.

Effectiveness [%]

Effectiveness in % can be displayed or entered.

External

This field can be used to control the printout of forms. However, it does not have a special function.

Context

Assigned object, e.g. inspection requirement, inspection step, complaint management, complaint detail, energy management

Type

The referenced application type can be displayed or selected, e.g. in-production inspection, goods receipt/goods issue inspection, initial sample inspection, test equipment inspection, complaint management, energy management

Area

The area of the type can be displayed or selected, e.g. production for in-production inspection

Key 1 to 5 (general)

The key fields are assigned depending on the context. These fields are empty for measures pertaining to energy management.

Key 1

Shows the internal and unique complaint number for measures from complaint management. The inspection requirement number is entered here for measures of inspection requirements or inspection steps.

Key 2

Shows the complaint detail number for measures from complaint management including assignment to the complaint detail. The inspection step number is entered here for measures of inspection requirements or inspection steps.

Key 3

Shows the internal, unique ID number of all failure analysis entries of a complaint for measures from complaint management that are also collected in failure analysis. The OP sequence number of the characteristic is entered here for measures of inspection requirements or inspection steps, provided that data in relation to the characteristic has been collected.

Key 4

This field is empty for measures from complaint management. The sample number is entered here for measures of inspection requirements or inspection steps, provided that data in relation to the sample number has been collected.

Key 5

This field is empty for measures from complaint management. The measured value number is entered here for measures of inspection requirements or inspection steps, provided that data in relation to the sample number has been collected.

Party in charge tab**Party in charge type**

Different types may be selected when inputting data. The type "external person" is used, as normally people are responsible for dealing with measures.

Party in charge

The party in charge is shown or it may be chosen from the list of responsible parties. Which entry is transferred to the list of responsible parties is defined within master data. The selected entry is used as the responsible party.

Party in charge name 1, name 2, name 3

The contents of the fields name 1, name 2 and name 3 of the responsible party are shown. The customer name and the content of the address fields 1 and 2 are displayed for customers. The last name, first name and initials are displayed for external persons.

Dates tab**Target date/time**

A date and optionally a time by which the measure has to be finished may be displayed or entered. It will not be monitored automatically, whether or not this time limit is kept. The content of this field is fundamental to the "measures tracking" application, as it may be determined manually for all measures (global) which of them have exceeded the target date, for example.

Actual date/time

A date and optionally the time by which the measure has been finished may be displayed or entered. However, this field does not have a special function. In the "measure tracking" application, this field can be used to manually determine measures that have been completed with delay.


"Reference" tab

Area

Shows the referenced area within the application type, e.g. production

Toolbar

Apart from standard functions, the referenced measure, referenced inspection requirement or the consumption analysis can be called up for the measures from complaint management.

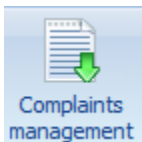

Calling up of referenced complaints

Function authorization: cm.*


Calls up the complaint referenced for the selected measure.



Calling up of referenced inspection requirements

Function authorization: irp.*

Calls up the inspection requirement referenced for the selected measure.

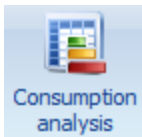

Calling up of the consumption analysis

Function authorization: cona.*

Calls up the "consumption analysis" application

Editing functions

New measures can be created, provided that relevant skills are available. Consequently, users must have profound knowledge, as they are not guided through the process of data collection/modification and validation checking is not performed.

Relevant data need to be entered manually in the key fields 1 to 5 as well as in the context, type and area fields to enter new measures. The field descriptions provide further details about these field functions.

Please note:

New measures for complaints should be created within Complaint Management, as the creation within the Measure Tracking function requires the internal HYDRA complaint number to be entered.