

Manual

MES Cockpit Services for HYDRA Systems MC-CSHS 3.2

Version 1.2.23049

Last changed on: 01.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	MES Cockpit Services for HYDRA Systems	4
2	General Operating Instructions for MES-Cockpit.....	5
2.1	Home Screen	5
2.2	Basic functions of the Home Screen.....	5
2.3	Further basic functions	7
3	MES-Cockpit - Overview of General Functions	8
3.1	Minimized objects.....	8
3.2	Dealing with selection boxes	8
3.3	Functions of the title bar	8
3.4	Selection status.....	9
3.5	Menu bar	9
3.6	Search field	10
4	User administration	11
5	Function authorizations	14
6	Function profiles	18
7	Responsibility Areas.....	21
8	Responsibility Profiles	23
9	Licensing	25
10	Management of Target Values.....	28
11	Assignment of Responsibility Areas (Workplaces)	32

1 MES Cockpit Services for HYDRA Systems

Purpose

The function package MES Cockpit Services for HYDRA Systems provides extensive functions to evaluate and compare the data collected in HYDRA systems.

The following packages are available for the different evaluation purposes:

- Performance Analysis
For further information on the Performance Analysis, refer to the documents MC-CPAM_32.pdf and MC-CPAA_32.pdf.
- Performance Monitoring
For further information, refer to the documentation MC-PMC_32.pdf.
- Production Information:
For further information, refer to the documentation MC-CSI_32.pdf.

2 General Operating Instructions for MES-Cockpit

Depending on the installed version, MES Cockpit provides you with different applications, such as the performance analysis or current overviews with different functions. This section deals with the general operation of MES Cockpit focusing on functions applicable to multiple applications.

2.1 Home Screen

The "Home Screen" is the start page for MES Cockpit and enables the user to go to the available applications (depending on the license) and display relevant data. The user can switch between the following applications:

- **Performance analysis**
Leads to the KPI analysis referring to several systems showing the trend of KPIs. Information and KPIs are provided for the following objects: workplaces, orders and operations.
- **Production Monitoring**
Shows an overview of status information across several systems on the objects workplaces, orders and operations including display of current shift KPIs for the selected objects.
- **Workplaces/machines**
Tabular overview of workplaces/machines to visualize the current machine condition (status, point in time since when the status is applicable) including basic information on the workplace/machine. It is an application relating to systems.
- **KPI monitor**
When starting the KPI monitor, it first provides an overview of the whole site and enables to drill down key figures in relation to cost centers, machine groups and the single object "machine". It is an application relating to systems.
- **Messages listing**
List of planned maintenance orders (pool of orders including orders/OPs of the "maintenance" category). It is an application relating to systems.
- **Contact person**
Search for contact partners within the company and check if they are available. It is an application relating to systems.

2.2 Basic functions of the Home Screen

Besides the possibility to switch to the available applications, the home screen of MES Cockpit also provides the following functions:

2.2.1.1 Log on and off

You have to log on to MES Cockpit to be able to use MES Cockpit functions. Upon calling online functions, MES Cockpit automatically logs on to the registered HYDRA system and relevant data is shown.

HYDRA user

The logon requires a user created for MES Cockpit and a relevant password.

The "change password" function changes the password defined for the user to log in to the single systems via the web interface.



Please note that most of the browsers save the login name and often offer to save the relevant password. This function is not part of MES Cockpit and therefore cannot be disabled in MES Cockpit.

Language

Using the radio group buttons, it is possible to switch between the different languages that are available for the user. MPDV can provide additional language packs on request.

Settings

By the "system" selection list, you can choose the HYDRA system you intend to work with. The available systems are defined during implementation and/or by your administrator.

By clicking "OK", you confirm the entered data and log in with the relevant user to the selected system. An error message occurs, if the login fails.

2.2.1.2 Help

MES Cockpit provides a context-sensitive help function, i.e. the content of the displayed help file depends on the contents of the current screen.

2.2.1.3 Logout

By clicking the "logout" button the user logs off from MES Cockpit. The user has to log in once more to switch to the other applications.

2.2.1.4 Back

By using the MES Cockpit icon or the arrow in front of it, it is possible to go back step by step.

2.3 Further basic functions

In addition to the above-described basic functions, the applications provide further basic functions:

2.3.1.1 Home

The "Home" button leads the user back to the home screen.

2.3.1.2 Update

The displayed page is refreshed.

2.3.1.3 Filter

The filter allows restricting the data displayed online. This function cannot be used in the Performance Analysis.

3 MES-Cockpit - Overview of General Functions

3.1 Minimized objects

Besides the displayed objects, a document may also include minimized objects that are hidden.

Such objects can be shown by double clicking the relevant icon or the title.

3.2 Dealing with selection boxes

The individual selection boxes/list boxes provide the user with the following options and/or functions:

-  Sort: The table is sorted in ascending or descending order by clicking the displayed arrow.
-  Select: By clicking the little down arrow, contents are shown as in a drop-down box and values may directly be selected. A search by entering letters can be carried out.
-  Search: The "magnify" function opens a search field where the searched term may be entered.
 - Search using wildcards: Wildcards (*) may be used when searching for a term.
 - Fuzzy search: The search term is preceded by a tilde/swung dash (~) for the fuzzy search.
 - Normal search: no additional characters are added to the search term. A normal search without wildcards is performed.

The search dialog opens even if the object was selected and letters were entered.



Not all of the above-mentioned functions are available in all list boxes/selection boxes.

3.3 Functions of the title bar

These functions are available in the title bar of individual evaluation objects:

-  Unselect
All selections made that are not locked will be canceled.
-  Export to Excel
Current values for displaying the evaluation object are inserted in a separate Excel file.
-  Change to different diagram
The display can switch to the presentation selected for the evaluated object. The position of the "change" icon can be chosen in the title bar or the diagram.
-  Minimize
The diagram is minimized and can be displayed again by double clicking.

-  Menu

All functions of the evaluated object are displayed in a drop-down menu where they may also be selected.



Not all of the above-mentioned functions are available in all list boxes/selection boxes.

3.4 Selection status

All selections and restrictions made are displayed in the selection status where they may also be edited or deleted. It provides a general overview of individual selection options.

These activities can be performed in the selection status:

-  : By clicking the displayed rubber/eraser icon, the complete restriction is deleted. All other restrictions remain intact.
-  : By clicking the arrow, additional or different objects of the object type can be selected. A search by entering letters can be carried out.

3.5 Menu bar

The menu bar is available on each dashboard and provides the following functions:



3.5.1.1 Clear

All selections made are removed and data is displayed without restriction and selection. However, this might lead to the fact that no KPIs are selected in the evaluation/report and no data can be displayed.

3.5.1.2 Back/Forward

Scrolls backward and/or forward in the selections made on a dashboard.

3.5.1.3 Undo/redo layout

Changes made to the layout (changes can only be made if relevant authorizations are available) can be removed and/or restored.

3.5.1.4 Lock/unlock all selections

The selections made are locked and cannot be removed by the "clear" function. However, additional selections can still be made.

3.5.1.5 *Selections*

The box of the selection status listing all selections made is displayed.

3.5.1.6 *Show/hide notes*

Notes are shown and/or hidden → will be used in future in MES-Cockpit

3.5.1.7 *Repository*

Can only be started in the editing mode. It represents the properties of individual objects.

3.5.1.8 *New sheet object*

Can only be started in the editing mode. It allows inserting new objects in an existing dashboard in the web.

3.5.1.9 *Select fields...*

Can only be started in the editing mode and shows a list of available fields.

3.5.1.10 *Add/remove bookmarks*

Adding and removing bookmarks. A bookmark saves the selection and/or restrictions made, which is/are required once more or has/have to be restarted. The stored bookmarks are available in the "select bookmark" option where they may be selected by the user.

3.5.1.11 *Select report*

This menu item opens created and integrated reports.

3.6 **Search field**

The integrated search field looks for the entered term in all objects and data of the document. The results are shown in a list below the search field. The user may also select data from this list.

4 User administration

Overview

Menu	System administration → User administration → Users
Transaction code	user
Function authorization	user

On start of the MOC, the user name and password are requested. HYDRA offers the possibility to assign individual authorizations to each MOC user for the separate sub-areas. All programs of the MOC, which offer the possibility to correct or change collected data, are equipped with authorization checks for functions and for areas of responsibility. The system does the same check for evaluations/reports and information dialogs that display "confidential" data.

Prior to be allowed to work in MOC, the following activities must be performed for each user.

- Create the user
- Assign function authorizations
- Assign responsibility areas

Purpose

The User application can be used to create individual users.

Selection criteria

User

Unique user name

Field descriptions

User

A unique/unambiguous MOC user identification must be entered here. We recommend to use the user names from mail programs or ERP programs that are already in use. This way, the respective person can use the same user name in all programs.

Name

The name describes the user more precisely. Enter first and last name here.

Password

The Password field is used to define the password by which the user can log on to the HYDRA system. The password is checked by the Password confirmation field. Both entries will be hidden.

locked

If the "locked" field is checked, a period can be defined during which the user cannot log on to the system. If only the start time for blocking is defined here, the user account will stay blocked from this time on and if only the end time is defined for blocking, it will stay blocked until this time. If no period is defined the user account will stay blocked.

Please note:

The user account can automatically be blocked according to the account lockout policies.

User has to change password when logging on the next time

The "User has to change password..." option will force the user to change the password to log on again.

Company, Name, Person

These fields have been designed to assign the user to a person in the HR master.

SSO active, SSO user, SSO domain

These fields enable Single Sign On for the user. In case Single Sign On is active, the Windows user's name and domain are used to identify and log in the relevant HYDRA user.

Please note:

- In combination with the following INI entry, the fields for password entry / password change request are hidden.

INI configuration to hide the password entry for SSO users:

```
Name =      SYSTEM
Section =    ExclusiveSingleSignOn
Key =  ISACTIVE
Value =      TRUE
Active =          [CHECKED]
```

Please**note:**

Copy function: SSO configuration of the user to be copied will not be copied.

Toolbar



Password rules

Link to the application: Password rules



Function authorizations

Link to the application: Function authorizations



Responsibility areas

Link to the application: Responsibility areas



Synchronize users

Function authorization: wfusr

This function is used to synchronize the HYDRA users with the MES – workflow management server.

These attributes are taken over:

MOC field	→	MES workflow management
User	→	Login name
Name	→	Full name
Person (e-mail, company)	→	Attributes (InSign:ADDR_EMAIL)

Synchronization of users

If the Workflow Management is in use, the HYDRA users will be synchronized with the users in the Workflow Management system (Inspire) by way of the manual function "synchronize users" and a cyclic Scheduler process.

These users are required, for example, in order that the HYDRA users' tasks can be requested and displayed. The used language depends on the language ID assigned to the user in the Workflow Management system (Inspire). If the language is to be changed, this has to be done in the Workflow Management system.

5 Function authorizations

Overview

Menu	System administration → User administration → Function authorizations
Transaction code	faut
Function authorization	faut

Use

You use function authorizations to control which user can access or execute a specified application/function.

You can assign individual function authorizations for specified functions, or you can assign [Function profiles](#) (defined groups of authorizations). All applications, which include editing functions for recorded data, are protected. Only authorized users can use the functions.

Integration

In the MOC client, the function authorizations are used to control the access to e.g. applications or fields.

Requirements

You must create the users before you can assign function authorizations.

Selection criteria

The application provides the following selection criteria:


User

Select the function authorizations that are assigned to a user.

Function

Select the function authorizations assigned to a user via the function.

Field description

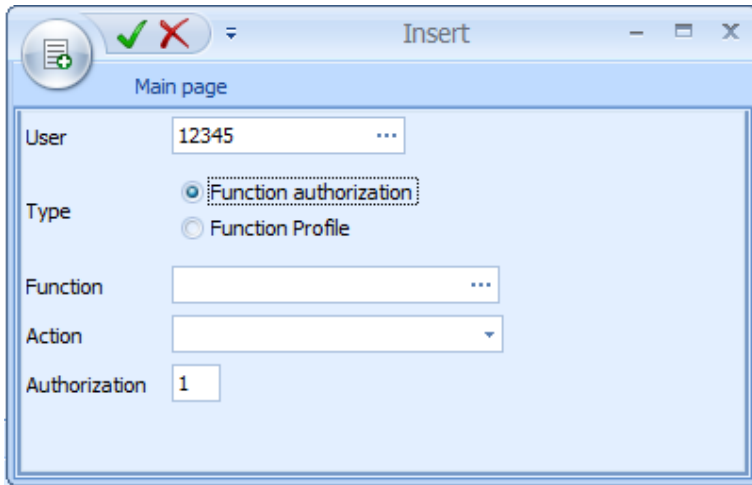

Type "Function authorization" (single authorization)

Function

If you assign authorizations for a specific function, you can not only assign the authorization for the function, but also for specific actions.

Action

To edit data, the following actions are available in the selection list:

- create
- copy
- edit
- delete
- view (= view only)

You can enter further actions. Actions are documented in the application that processes the special actions.

If you assign a function without restriction to the possible data maintenance actions (the "Action" field remains empty), authorization is assigned for the create/copy/change/delete/display actions.



If you want to assign several actions of a function authorization to a user, then you must define the required authorization with the respective actions.

The actual function authorization is made up of the *function* and the *action* in the form "<function>.<action>".



The independent field *Action* is only available when you create data records. You can easily select the respective actions then. In the other detail applications, the *Action* is included in the

field *Function*.

Example:

If you want to assign the authorizations *Create user* and *Edit user* to a user, but not *Delete*, the required authorizations are *user.create* and *user.edit*.

Authorization

The usual function authorizations do not process this field. You should set the value of this field to the default value 1.

In special use cases, you can enter an authorization level or another key number for the function authorization. The authorization level is rarely used and is then documented by the user where this exception is required.

Function locks

To improve the protection of personal data, Service Pack 13 has introduced the option of locking individual functions for specific users:

- Print
- Export, STRG+C



The function locks are available for the application "Persons". You can add functions if a customization of the standard is required.



The field "Action" remains empty if you create function locks.

Available function locks

You can deactivate the print function in the HR master data application by assigning "pers_disprt" to a user or profile (buttons "Print preview" and "Print all" are hidden and the associated keyboard shortcuts are deactivated).

You can deactivate an export in the HR master data by assigning "pers_disexp" (Excel export buttons in the context menu and the export buttons in the print preview are hidden. Furthermore, the key combination CTRL+C is ineffective for selected table cells).

Type "Function profile"

Function profile

You can assign an existing [Function profile](#) to a user.

6 Function profiles

Overview

Menu	System administration → User administration → Function profiles
Transaction code	fautp
Function authorization	fautp

Use

Function profiles are used to easily assign authorizations in the user administration. A function profile consists of 1 – n function authorizations.

If you assign a function profile to a user, the user automatically obtains all authorizations included in the profile.

If you change the profile subsequently, the changes are directly enabled when the user logs on the next time.

Selection criteria

The application provides the following selection criteria:

Function profile

Select one or several function profiles, e.g. enter wildcards

Function

If you select the functions, all function profiles are displayed that include the individual function(s).

Field descriptions

Function profile

Function profile key

Function

Assigned function authorization

Name

Name of the function authorization

Action

To edit data, the following actions are available in the selection list:

- create
- copy
- edit
- delete
- view (= view only)

You can enter further actions. The actions are documented with the application that processes the specific actions.

If you assign a function without restriction to the possible data maintenance actions (the "Action" field remains empty), authorization is assigned for the Create/Copy/Change/Delete/Display actions.



If you want to assign several actions of a function authorization to a user, you must define the required authorizations with the respective actions for this user.

The actual function authorization is made up of the *function* and the *action* in the form "<function>.<action>".



The independent field *Action* is only available when you create data records. You can easily select the respective actions then. In the other detail applications, the *Action* is included in the field *Function*.

Example:

If you want to assign the authorizations *Create user* and *Edit user* to a user, but not *Delete*, the required authorizations are user.create and user.edit.

Authorization

The usual function authorizations do not process this field. You should set the value of this field to the default value 0.

In special use cases, you can enter an authorization level or another key number for the function authorization. The authorization level is rarely used and is then documented by the user where this exception is required.



When data records are edited, you can only change the field *Authorization*, as the *Function profile* and *Function* are key fields of the data record. This means: You must delete the data record and insert a new one to change the field *Function profile* and/or *Function*.

Function locks

To improve the protection of personal data, Service Pack 13 has introduced the option of locking individual functions for specific users:

- Print
- Export, STRG+C



The function locks are available for the application "Persons". You can add functions if a customization of the standard is required.



The field "Action" remains empty if you create function locks.

Available function locks

You can deactivate the print function in the HR master data application by assigning "pers_disprt" to a user or profile (buttons "Print preview" and "Print all" are hidden and the associated keyboard shortcuts are deactivated).

You can deactivate an export in the HR master data by assigning "pers_disexp" (Excel export buttons in the context menu and the export buttons in the print preview are hidden. Furthermore, the key combination CTRL+C is ineffective for selected table cells).

7 Responsibility Areas

Summary

Menu	System administration→ User administration→ Responsibility areas
Transaction code	respa
Function authorization	respa

Usage

In addition to the function authorizations controlling the access to applications/ functions, there is also the possibility to control the access to the data included in the system.

This is made by restricting authorizations to responsibility areas. This enables customers with several sites, for example, to protect configurations that do only apply to one specific site against modifications made by users of different sites.

The responsibility areas will not explicitly be created individually and then be assigned to the user. New responsibility areas are directly created when an assignment is made to a user.

Integration

Responsibility areas can be created for several objects.

- Machines (resources)
- Staff
- Orders/ operations

Requirements

In order to assign responsibility areas, the users must be created.

Selection criteria

The following selection criteria are available in the application:

Originator

User that is created in the user administration.

Responsibility profile/ area

Name of the responsibility area or profile.

Field descriptions

Responsibility profile

Key of the responsibility profile

Responsibility area

Key of the assigned responsibility area

Authorizations

Authorizations define how the user may process or use the data.

Display:	The user is allowed to view the data.
Use:	Only used in the PZE.
Insert:	The user may create new data records.
Edit:	The user may edit existing data records.
Delete:	The user may delete existing data records.

8 Responsibility Profiles

Summary

Menu	System administration → User administration → Responsibility profiles
Transaction code	rpp.*
Function authorization	respp

Usage

Responsibility profiles are used to facilitate the granting of rights in the administration of responsibility areas. A responsibility profile is comprised of 1 – n responsibility areas.

By the assignment of a responsibility profile to a user, the user will automatically receive all responsibility areas included in this profile.

Later logins to a profile will have direct effects on the login without further modifications.

Integration

Responsibility areas can be created for several objects.

- Machines (resources)
- Staff
- Orders/ operations

Requirements

In order to assign responsibility areas the users must be created.

Selection criteria

The following selection criteria are available in the application:

Responsibility profile

Selection of the created responsibility profiles using the designation (wildcard entries are possible)

Field descriptions

Originator

User, to whom the responsibility area is to be assigned.

Responsibility profile/ area

It is possible to assign individual responsibility areas or such responsibility areas that are comprised to profiles. For more information on responsibility profiles, see the manual on responsibility profiles.

Authorizations

Authorizations define how the user may process or use the data.

Display:	The user is allowed to view the data.
Use:	Only used in the PZE.
Insert:	The user may create new data records.
Edit:	The user may edit existing data records.
Delete:	The user may delete existing data records.

9 Licensing

Overview

Menu	System administration → System settings → Licensing
Transaction code	lic
Function authorization	lic licov – License status report (as of SP7)

Purpose

The system administrator uses the *Licensing* function to view the available licenses and to license further products.

Field descriptions

Category

Assigns the license to a logical category.

License date

Date when the license was created.

License key

Cryptic license key.

Product

Technical product key.

Product name

Product group the product belongs to.

Release

Valid release version.

Valid until

Date until which the license is valid.

Activation period until

Available as of MW 4.0_{pe}.

Expiration date of the activation period for this license. If you have not activated the license by that date, the license ceases to be effective.

Number

Shows the number of licenses.

As of MW4.0_{pe} the licenses displayed in the table are highlighted in color:

- Red: licenses that are not active.
- Yellow: licenses that are active but not yet activated.
- Green: licenses that are active and activated.

Toolbar



License status

Calls the [report for the license status](#) (as of SP7).




Request activation

As of MW 4.0_{pe}.

Creates the activation request file. This file includes all installed licenses and current system parameters.


The following dialog opens:

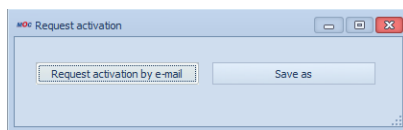

Click **Save as** to save the activation request file anywhere you like.

Click *Request activation by e-mail* to send the activation request file to the Customer Service Center of MPDV Mikrolab GmbH (CustomerServiceCenter@mpdv.com). An e-mail with pre-populated values opens. Attach the activation request file manually to this e-mail (e.g. clipboard).

The file will be saved automatically if you did not save it explicitly by clicking "save as". In both cases, a dialog box opens to indicate the storage location. The file is also available in the clipboard.

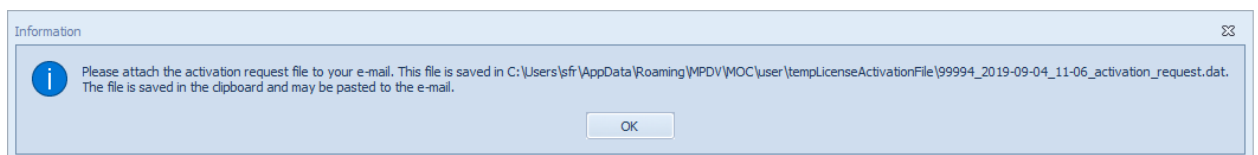

Then you receive the activation file by e-mail. Please note that this process can take one or several business days. Save this file locally.



Install activation file

As of MW 4.0_{pe}.

Use this function to install the activation file. If you received the activation file by e-mail, save it locally. Select the locally saved activation file to activate your licenses.

After activation, the table view highlights all activated licenses in green.

10 Management of Target Values

Summary

Menu	System administration → MES-Cockpit → Management of target values
Transaction code	mctv
Function authorization	mctv

Usage

By defining target values, MES-Cockpit not only shows calculated KPIs (actual values) but also specified target values to enable direct comparisons.

The "management of target values" application allows editing of such target values for MES Cockpit. Target values are defined for individual KPIs (definitions of key performance indicators), a period and dimension.

If target values are defined for the current period and current dimension of the evaluation diagram, they will be displayed along with the actual values.



Only one target value may exist at a time for an object type and KPI.

If the "valid from"/"valid to" date is not set, the specified target value applies without limitation of time.

The user is responsible for setting correct periods, if necessary.

These object types are available to define a target value:

- Workplace
Target values are specified for each workplace and displayed with the dimension "workplace" in the evaluation diagram.
- Cost center
Target values are specified for each cost center and displayed with the dimension "cost center" in the evaluation diagram.
- Workplace group
Target values are specified for each workplace group and displayed with the dimension "workplace group" in the evaluation diagram.

- No selection
Target values are specified for a KPI and displayed with the "time" dimension in the evaluation diagram.

Relevant objects can be defined subject to which object type is specified.

Calculation of target values

Target values are defined for a period of time that can be broken down to single days. If an evaluation period is to be displayed for which no direct assignment exists, the displayed target value is determined as follows:


Example: presentation of target values with different dimensions:

Workplaces	KPI	Valid from	Valid until	Target value
4711	OEE	2014-01-01	2014-02-10	0.8
4711	OEE	2014-02-11	2014-03-31	0.7
4711	OEE	2014-04-01	2014-12-31	0.8

Presentation and calculation of target values for the "month" dimension:

- Target value for January: **0.8**
- Target value for February:
 $(10 \cdot 0.8 + 18 \cdot 0.7) / 28 = (8 + 12.6) / 28 = 0.73571 = \mathbf{0.74}$
- Target value for March: 0.7

Graphic presentation:

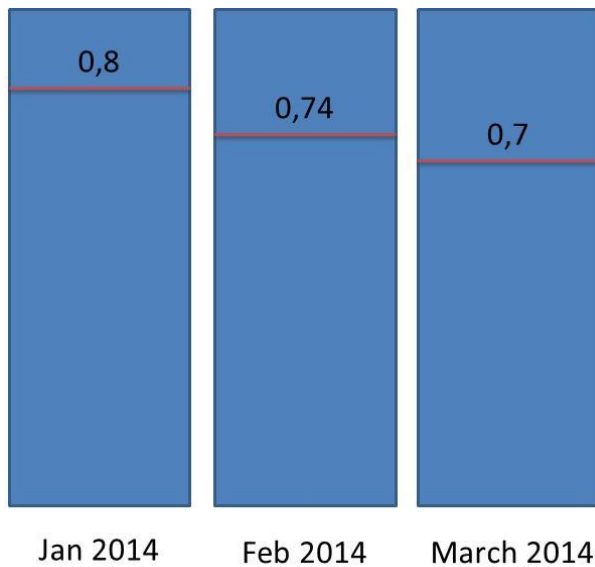

Selection criteria

The following selection criteria are available in the application:

Object type

Object type of defining KPIs. The following object types are available:

- Workplace
- Cost center
- Workplace group
- No selection

Object

Depending on the selected object type, the relevant object may be selected in this field.

Site

Can only be filled out if the "workplace" object is searched.

KPI

The available KPI definitions may be selected.

Field descriptions

Site

Site which the target value applies for. Can only be edited if object type = workplace.

Object type

Type of object for which the target value is to be defined.

Possible selections from the drop-down list: workplace, cost center, machine group, no selection

Object

This field is shown depending on the selected object type. Subject to the selected object type, a workplace, cost center, workplace group or no object may be selected. By taking over a workplace, the "site" field is filled out automatically.

KPI

KPI for which the target value is to be defined

Valid from / until

Validity range of the target value (dates)

Target value

Specified target value as decimal value with a maximum of 2 decimal places

Modified by

User who last edited this entry

Modified on

Point in time when the data record was last edited.

11 Assignment of Responsibility Areas (Workplaces)

Summary

Menu	System administration → MES-Cockpit → Assignment of responsibility areas (workplaces)
Transaction code	mcwpra
Function authorization	mcwpra

Usage

In addition to function authorizations specifying the access to applications/functions, it is also possible to control access to data included in the system.

The access to data can be monitored by restricting authorizations for responsibility areas. This allows customers with several sites or factories, for example, to protect configurations which only apply to one site from being edited by users at other sites.

Integration

In general, responsibility areas can be created for different objects such as KPIs, dashboards and workplaces. They are assigned to workplaces in this application.

Prerequisite

Users have to be created before responsibility areas can be assigned.

Selection criteria

The following selection criteria are available in the application:

Company

Name of the system from which the workplace was exported.

Workplace

Workplace number of exported workplaces.

Short description

Short name of the exported workplace.

Responsibility area

Responsibility area of workplaces.

Field descriptions

Company

Name of the system from which the workplace was exported. The name cannot be edited/changed.

Workplace

Workplace number of exported workplaces. A workplace can be identified unambiguously by a combination of the company/site and the workplace number.

Short description

Short name of the exported workplace. The short name cannot be edited/changed.

Description

Description of the exported workplace. The description cannot be edited/changed.

Responsibility area

Responsibility area that can be assigned to a workplace. The responsibility areas available in the system are listed in a drop-down box. Assignments are not overwritten if workplaces are exported once more.



Individual workplaces are exported from connected systems. For this reason, additional workplaces cannot be added manually.

All users are allowed to evaluate/assess the workplace if no responsibility area is defined.