

Manual

PCC Configuration Manager PCC-CFG 8.1

Version 1.0.23049

Last changed on: 02.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	PCC Configuration Manager	4
2	PCC Configuration Manager	6

1 PCC Configuration Manager

Overview

Purpose

The PCC Configuration Manager connects the logical HYDRA configuration with physical communication partners in the shop floor. The HYDRA data collection server PCC (Process Communication Controller) links both. The PCC Configuration Manager (PCC-CFG) creates, manages and maintains PCC configurations files and provides the HYDRA data collection server (PCC) with these files.

Implementation notes

The PCC Configuration Manager should be used if you want to establish a connection between the MES and the machines/controls using the Process Communication Controller (PCC). The PCC Configuration Manager facilitates configuration and management of the connection.

Integration

The PCC Configuration Manager uses HYDRA master data relating to terminal and channel assignments. Based on this data, you can create, manage and maintain required PCC configurations.

You can use PCC configurations with the following HYDRA modules as part of Manufacturing Control:

- MDE: machine data
- DNC: setting data and NC programs
- EMG: energy management
- PDV: process data

You can use PCC configurations for the following PCC operating modes:

- Stand-alone PCC
- PCC with AIP2 (combined operation)
- PCC with AIP (embedded operation)

You can use PCC configurations with the following PCC drivers:

- OPC-UA
- OPC-DA
- PCC-E63
- PCC-DIF
- DNC840D

- DNCFTP
- DNCFICPY
- DNCDR

Features

- Distinct generation and management of different PCC INI file configurations including status management (released, blocked) for each PCC configuration.
- Graphic channel mapping between HYDRA and PLC signals
- Specific distribution mechanisms transferring PCC INI file configurations for each terminal
- Syntax and validation check for all active key fields in INI file configurations


2 PCC Configuration Manager

Overview

Menu	System administration → Terminals → PCC Configuration Manager
Transaction code	pcccfg
Application	PCC Configuration Manager
Function authorization	pcccfg*

Purpose

PCC configurations connect logical HYDRA configurations with physical communication partners in the shop floor. The HYDRA data collection server PCC (Process Communication Controller) links both. The PCC Configuration Manager (PCC-CFG) provides the HYDRA data collection server (PCC) with all functions required to create, manage and maintain PCC configuration files.

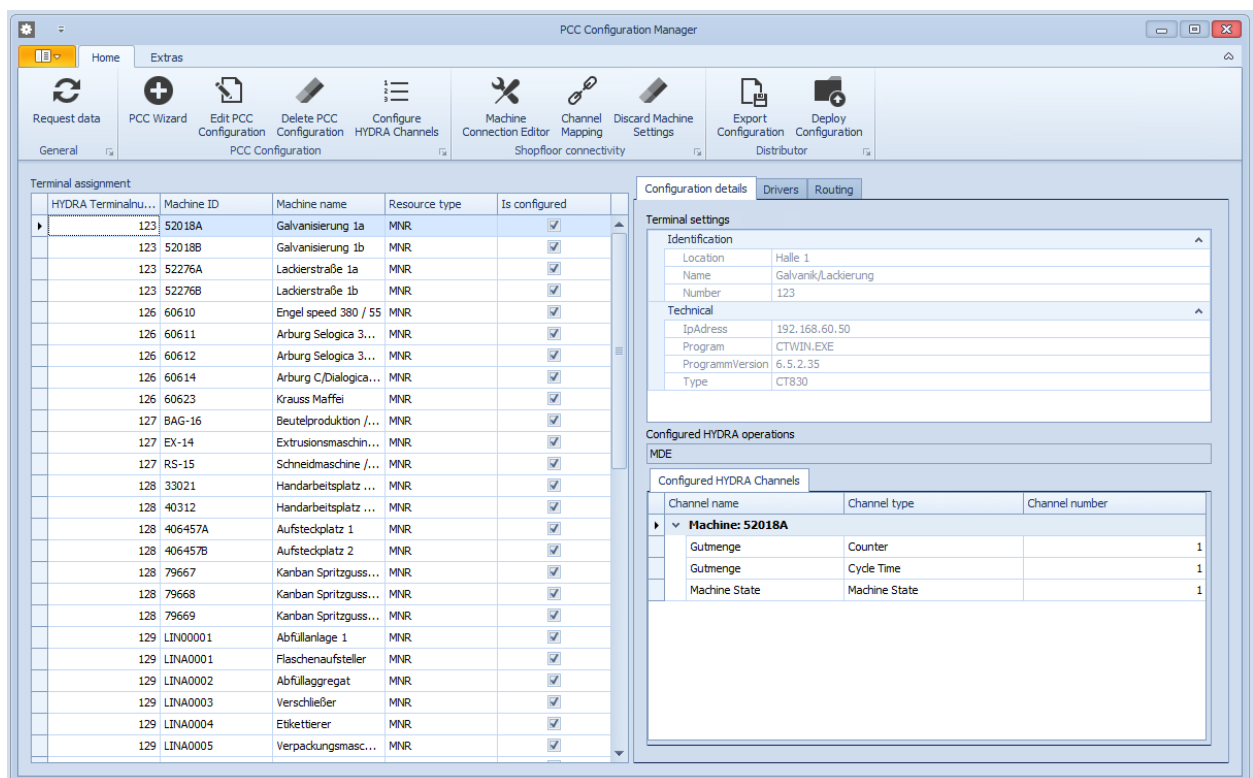

Integration

The PCC Configuration Manager uses HYDRA master data relating to terminal and channel assignments. Based on this data, you can create, manage and maintain required PCC configurations.

You can use PCC configurations with the following HYDRA modules as part of Manufacturing Control:

- MDE: machine data
- DNC: setting data and NC programs
- EMG: energy management
- PDV: process data

You can use PCC configurations for the following PCC operating modes:

- Stand-alone PCC
- PCC with AIP2 (combined operation)
- PCC with AIP (embedded operation)

You can use PCC configurations with the following PCC drivers:

- OPC-UA
- OPC-DA
- PCC-E63
- PCC-DIF
- DNC840D
- DNCFTP
- DNCFICPY
- DNCDR


Requirements

- Version: PCC.exe in version 7.2.0.0 or higher must be used.
- Runtime components: Microsoft Visual C++ libraries must be installed in the operating system. You can obtain these libraries free of charge via Microsoft.
(Visual C++ Redistributable Packages Visual Studio 2013 for 32-bit Windows operating systems).
- HYDRA server paths: The following paths must be available for PCC configuration files and the PCC data model: PCCCONF and PCCMODEL

Field description: toolbar


The application includes two toolbars:

"Home" and "Extras"

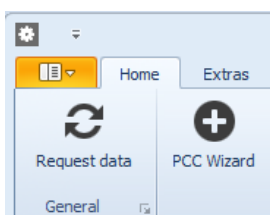


Depending on the context, the "home" bar shows all applications as buttons. The buttons are distributed among three submenus:

"PCC configuration", "Shop floor connectivity" and "Distributor"

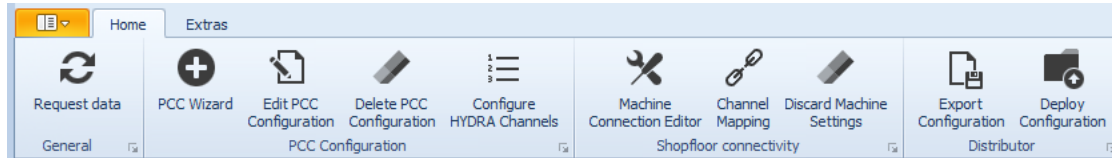


The "extras" bar includes a button starting the F1 application help.

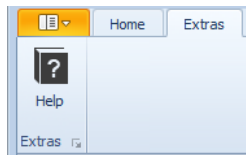

Field description: PCC configuration

The submenu "PCC configuration" consists of four buttons:


"PCC wizard", "Edit PCC configuration", "Delete PCC configuration" and "Configure HYDRA channels"

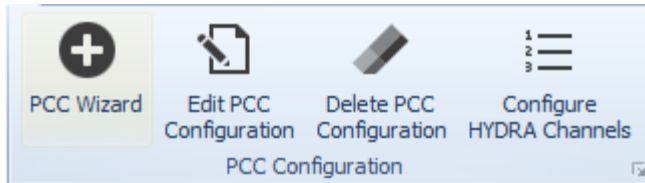

Field description: shop floor connectivity

The submenu "shop floor connectivity" consists of three buttons:


"Machine connection editor", "Channel mapping" and "Discard machine settings"

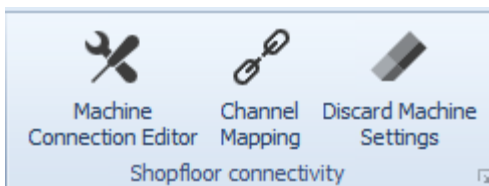

Field description: distributor

The submenu "distributor" consists of two buttons:

"Export configuration" and "Deploy configuration"

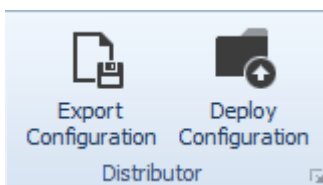

Field description: terminal assignment

The tabular view of "terminal assignments" provides an overview of already existing terminal assignments. You can use these assignments to create, view and manage PCC configurations. You can only select one terminal assignment at a time. The selected terminal assignment represents the distinct relation between a terminal number and a machine ID. The data displayed in the grid can be sorted and matches the set filters. The columns "HYDRA terminal number", "machine ID", "machine name", "resource type" and "configured" can be filtered.

Machine name ▼

Terminal assignment				
HYDRA Terminalnu...	Machine ID	Machine name	Resource type	Is configured
131	R000	Walzgerüst	(User-defined)	
131	W2030	Verwiegeplatz	Abfüllaggregat	
129	LINA0003	Verschleißer	Abfüllanlage 1	
129	LINA0005	Verpackungsmaschine	Arburg C/Dialogica 270C	
130	545123A	Verpackung 1	Arburg Selogica 320S	
131	50550	Seriennummernerfa..	Aufsteckplatz 1	
127	RS-15	Schneidmaschine / R.	Aufsteckplatz 2	
131	R001	Rollenschneider	Beutelproduktion / Einzelosfertigung	
130	50512	Rohrmontage rechts	Endmontage rechts	
131	P000	Packplatz	Engel speed 380 / 55	
150	M2	Montage-Arbeitsplat.	Etikettierer	
410	MM-WO-02	MM_Wärmeofen_02	Extrusionsmaschine / Rollenfertigung	
410	MM-WO-01	MM_Wärmeofen_01	Flaschenaufsteller	
400	MM-QM-03	MM_Ultraschallprüfu..	Gabelstapler 101	
400	MM-QM-02	MM_Ultraschallprüfu..	Galvanisierung 1a	
400	MM-QM-01	MM_Ultraschallprüfu..	Galvanisierung 1b	
412	MM-ME-04	MM_Schmelzofen_04	Handarbeitsplatz Entgraten, Reinigen	
412	MM-ME-03	MM_Schmelzofen_03	Hauptmontage	
412	MM-ME-02	MM_Schmelzofen_02	Hauptmontage rechts 1	
412	MM-ME-01	MM_Schmelzofen_01	Hauptmontage rechts 2	
411	MM-PA-03	MM_Metallverpacku...	MNR	
411	MM-PA-02	MM_Metallverpacku...	MNR	
411	MM-PA-01	MM_Metallverpacku...	MNR	
123	52276B	Lackierstraße 1b	MNR	☒
123	52276A	Lackierstraße 1a	MNR	☒

User-defined filter

Column filter with the following criterion:

Machine name

Is like ▼ (empty)

Equals (empty)

Does not equal

Is like

Is not like

Is greater than

Is greater than or equal to

Is less than

Is less than or equal to

Is blank

Is not blank

Is empty or NULL

Is neither empty nor NULL

OK Cancel

The right-hand side of the main screen shows different pieces of information deriving from HYDRA master data for terminal configurations, channel assignments and PCC configurations. The display is divided into the following tabs:

"Configuration details", "Drivers" and "Routing"

Channel name	Channel type	Channel number
Machine: 60610		

The "configuration details" tab includes three sections "terminal settings", "configured HYDRA operations" and "configured channels".

The section "terminal settings" provides two drop-down menus:


"Identification" and "Technical"

Identification	
Lo	Halle 2
Na	Spritzgussmaschinen
Nu	126

Technical	
Ip	10.10.10.11
Pr	ctaip.exe
Pr	2.0.2.21
Ty	CT850

The displayed information is based on the selected terminal configuration and managed as well as collected in the MOC application "terminal configuration".

The section "configured HYDRA operations" shows the HYDRA modules used with the PCC wizard for the selected HYDRA terminal.



The section "configured channels" shows the HYDRA channels assigned to a machine. This assignment depends on the selected terminal assignment and relates to the machine.

Configured HYDRA Channels		
Channel name	Channel type	Channel number
Machine: 60610		
Gutmenge	Counter	7
Ausschuss	Counter	8
Stromverbrauch	Counter	10
Gutmenge	Cycle Time	7
Ausschuss	Cycle Time	8
Stromverbrauch	Cycle Time	10
Machine State	Machine State	1
EinspZ	Measurement	1
DosierZ	Measurement	2
ZyklusZ	Measurement	3
DuesenTemp	Measurement	4
ZylinderTemp	Measurement	5
AussenTemp	Measurement	6

The "driver" tab includes the "PCC driver instances" and shows all PCC driver instances and their elements referring to the selected terminal assignment.


The "routing" tab includes the "routing for machine" section and indicates the connected elements between machine and HYDRA. The function "channel mapping" establishes these connections.

Description of the function: PCC wizard

You can start a PCC configuration by clicking the "PCC wizard" button. Select the required terminal assignment from the list of "terminal assignments".

A new window opens, once you have selected the required terminal assignment and clicked the button "PCC wizard". The window caption shows the selected HYDRA terminal number for which the PCC wizard is supposed to prepare configurations. (Example: TNR126).

HYDRA Terminalnumber	Machine ID	Machine name
126	60611	Arburg Selogica 320S

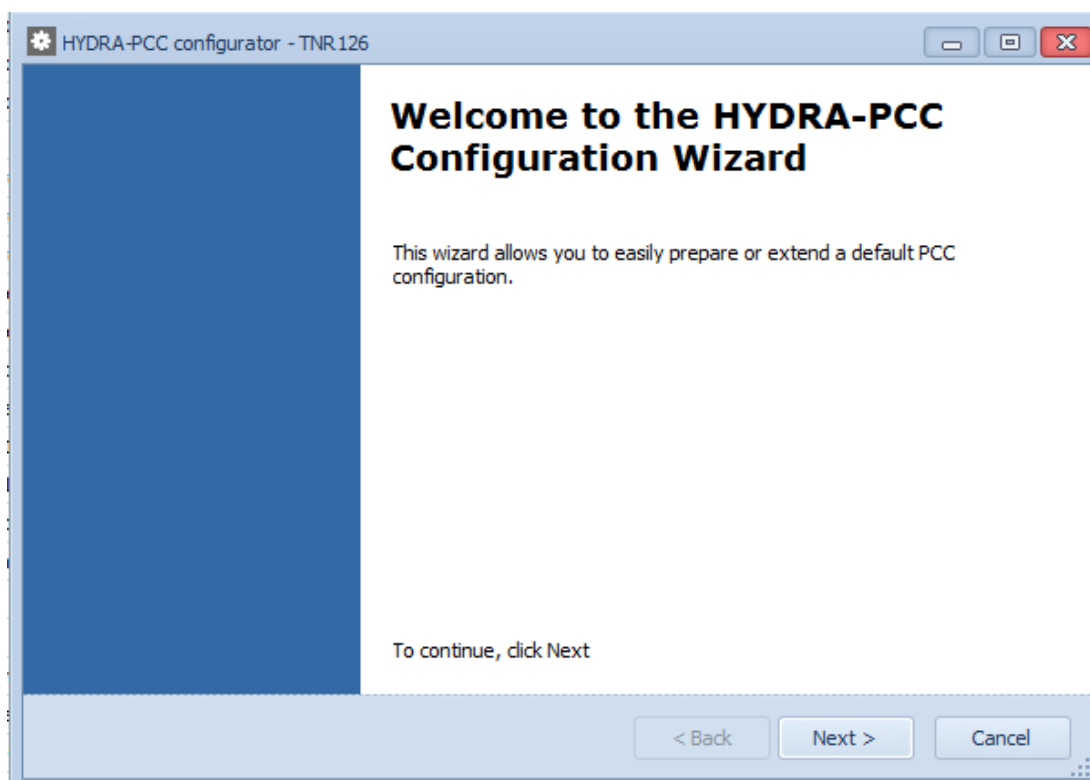


The wizard starts and goes to the next step by clicking "Next". You can cancel the wizard if you click "Cancel".

In the next window you can select the required basic configuration for the relevant HYDRA module:

"MDE", "DNC", "EMG" or "PDV"

Choose the required radio button.

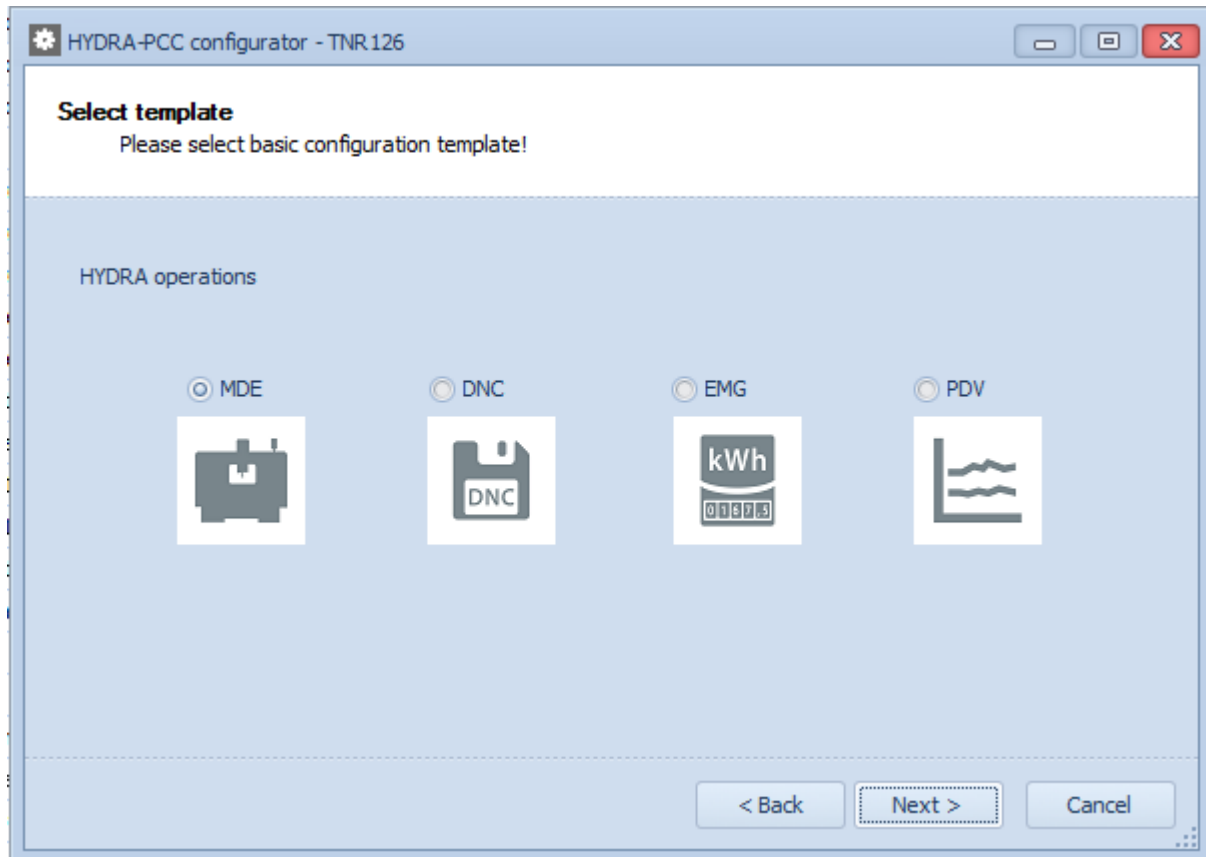


If you click "Next", you proceed to the next step. If you click "Back", you return to the previous window. You cancel the wizard by clicking "Cancel".

This document does not deal with the single HYDRA modules and their fields of application.

In the next window you can select the required HYDRA-PCC operating mode:

"Stand-alone PCC", "PCC with AIP2 (combined operation)" or "PCC with AIP (embedded operation)"


Subject to the selected HYDRA module, different selection options are shown.

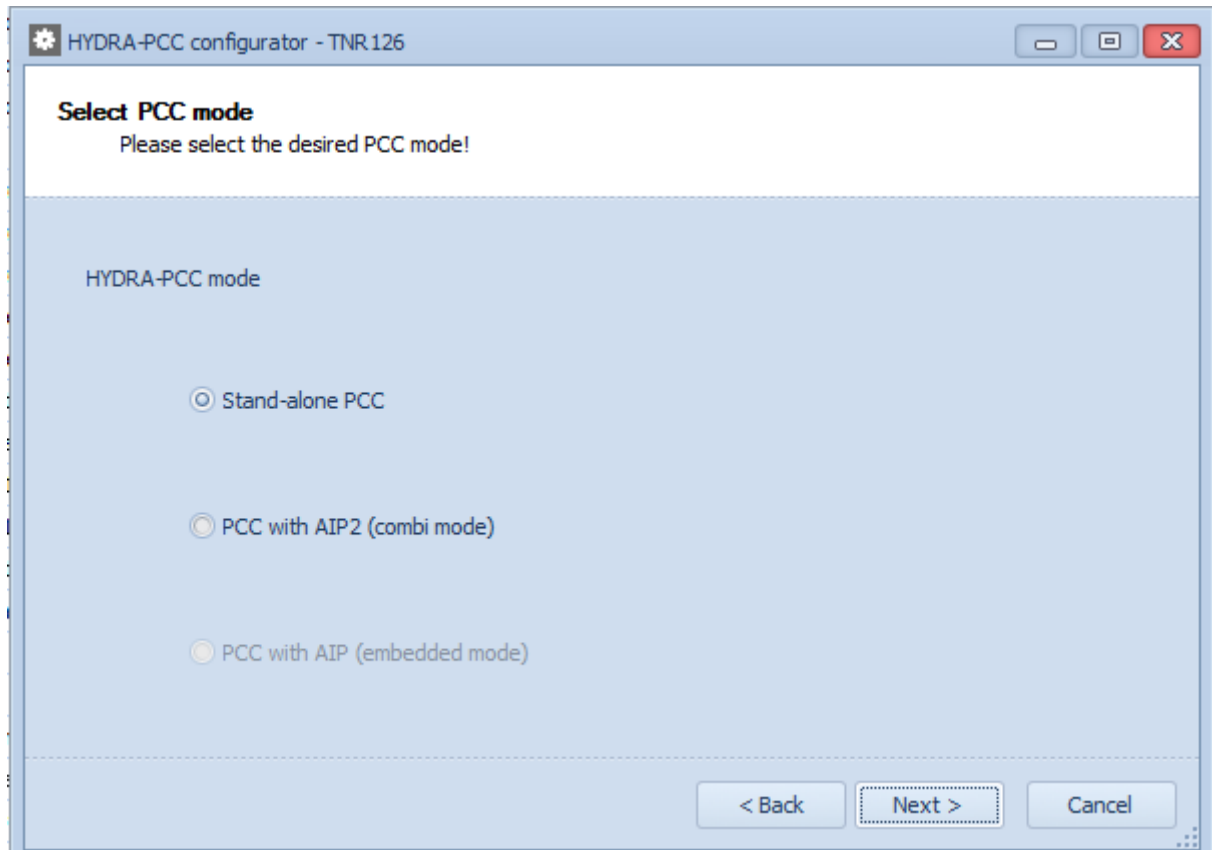

If you click "Next", you proceed to the next step. If you click "Back", you return to the previous window. You cancel the wizard by clicking "Cancel".

The product documentation MBL_HYD-PCC deals with the different PCC operating modes and their specific fields of operation. This document does not provide further information.


The next window shows the supported PCC driver components. The driver catalog includes different PCC driver types. The selection of supported PCC drivers is extended or restricted, depending on the previously selected HYDRA module(s). Multiple selections are supported.

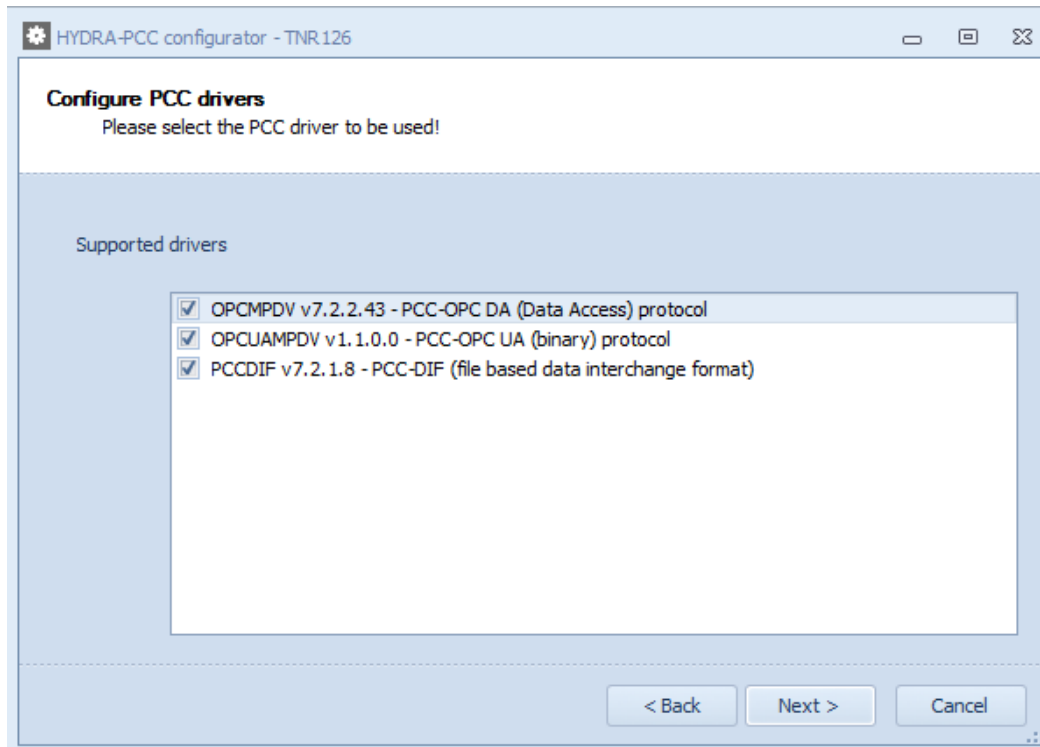

If you click "Next", you proceed to the next step. If you click "Back", you return to the previous window. You cancel the wizard by clicking "Cancel".

The selection of drivers depends on the PCC connection options defined in the CID (Customer Implementation Document) and must be implemented for each specific project and machine.


Enter the connection data for the HYDRA server in the next window that opens. Enter the IP address and the input port of the HYDRA server.

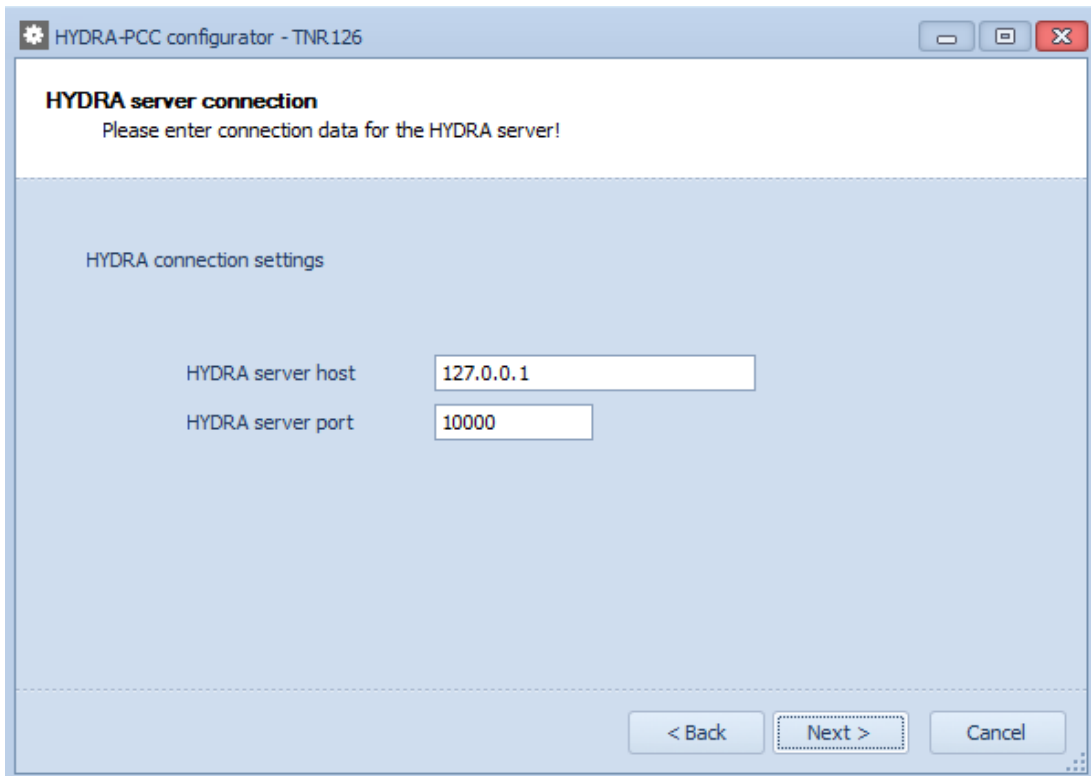

The screenshot shows a window titled "HYDRA-PCC configurator - TNR126". Inside the window, the title "HYDRA server connection" is displayed, followed by the instruction "Please enter connection data for the HYDRA server!". Below this, the section "HYDRA connection settings" is shown. It contains two input fields: "HYDRA server host" with the value "127.0.0.1" and "HYDRA server port" with the value "10000". At the bottom of the window, there are three buttons: "< Back", "Next >" (which is highlighted with a dashed border), and "Cancel".

If you click "Next", you proceed to the next step. If you click "Back", you return to the previous window. You cancel the wizard by clicking "Cancel".


The last window shows an overview of all configurations made.

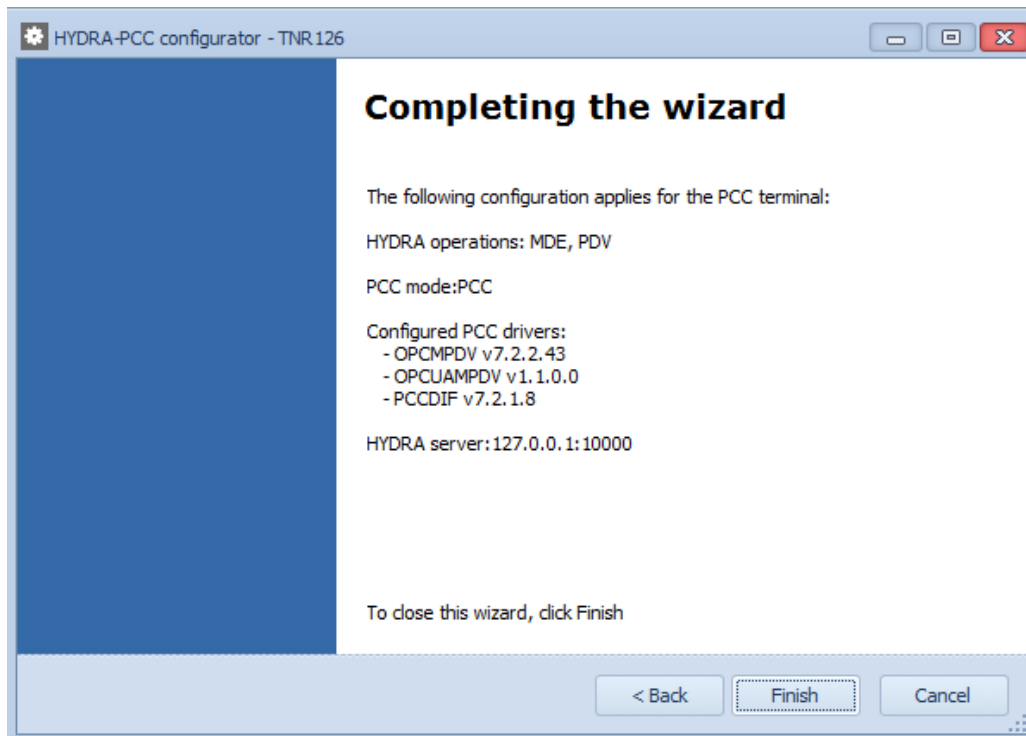

You can complete the wizard and the PCC basic configuration by clicking "Finish". If you click "Back", you return to the previous window. You cancel the wizard by clicking "Cancel".


Description of the function: edit PCC configuration

You can view or edit an existing HYDRA PCC configuration by clicking the button "edit PCC configuration". The column "configured" in the window "terminal assignment" indicates if a HYDRA PCC configuration is available.

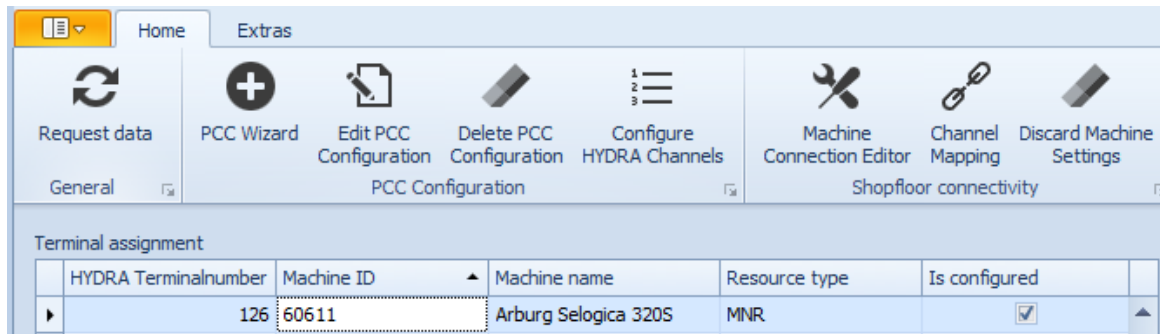


A new window (PCC terminal configuration: terminal number) opens, if you click the button "edit PCC configuration".

The top left area shows the selected PCC mode. The bottom left area shows the enabled and released PCC drivers. The right-hand side of the window is divided into two parts: The first part shows the PCCDLL settings. The second part shows the PCC settings.

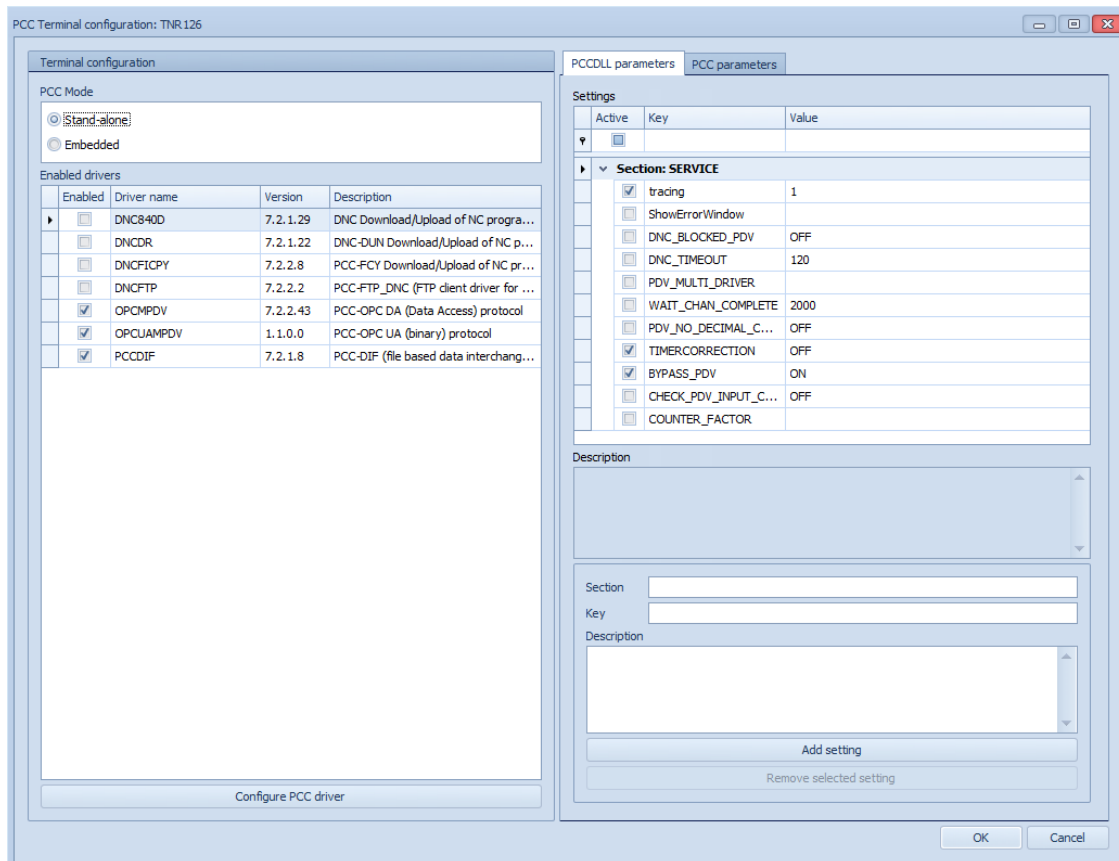

You can still change the PCC mode subsequently. Modifications are saved if you click the "OK" button. If you click "Cancel", you exit the window without saving the changes.

If you select a PCC driver and click the button "configure PCC driver", you can view or change the PCC driver settings in a new window.

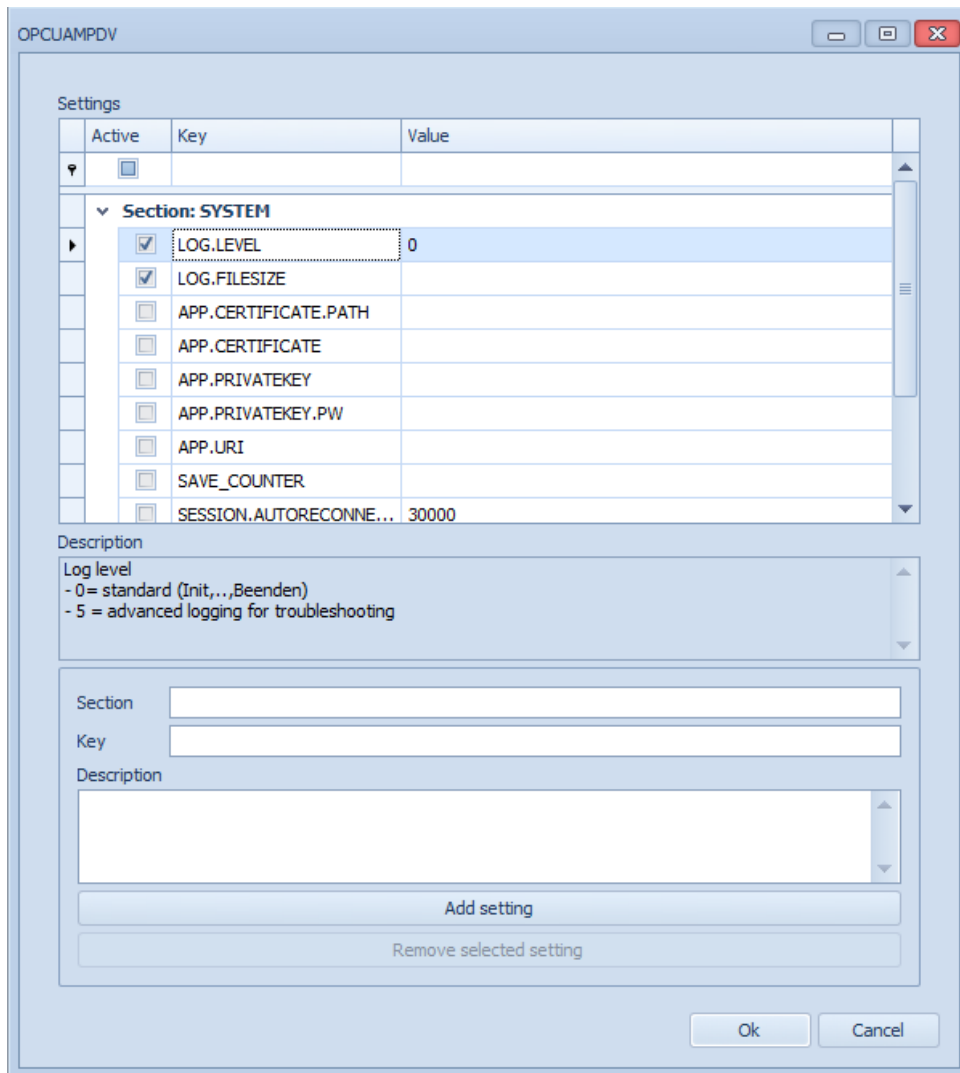

You can add new PCC driver settings (INI sections, keys and values). You can remove manually added PCC driver settings. Default PCC driver settings cannot be deleted but only enabled or disabled. The applicable value range for default PCC driver settings is either specified or can be found in the "description" for PCC driver settings. Modifications are saved if you click the "OK" button. If you click "Cancel", you exit the window without saving the changes.

Refer to the corresponding PCC driver documentation for further information on PCC driver settings.

The tab "PCCDLL parameters" shows all default PCCDLL settings that can be changed within their valid range of values.

PCCDLL parameters | PCC parameters

Settings

Active	Key	Value
☐		
Section: SERVICE		
☒	trading	1
☐	ShowErrorWindow	0
☐	DNC_BLOCKED_PDV	1
☐	DNC_TIMEOUT	2
☐	PDV_MULTI_DRIVER	3
☐	WAIT_CHAN_COMPLETE	4
☐		5
☐	PDV_NO_DECIMAL_C...	2000
☐		OFF
☒	TIMERCORRECTION	OFF
☒	BYPASS_PDV	ON
☐	CHECK_PDV_INPUT_C...	OFF
☐	COUNTER_FACTOR	

Description

Logging
5= highest log level
0=disables logging

Section

Key

Description

Add setting

Remove selected setting

You can add new PCCDLL settings (INI sections, keys and values). You can remove manually added PCCDLL settings. Default PCCDLL settings cannot be deleted but only enabled or disabled. The applicable value range for default PCCDLL settings is either specified or can be found in the "description" for PCCDLL settings. Modifications are saved if you click the "OK" button. If you click "Cancel", you exit the window without saving the changes.

The tab "PCC parameters" shows all default PCC settings that can be changed within their valid range of values.

Active	Key	Value
Section: BLADES		
☒	BLADE_1	.\blades\PDV.DLL
☒	BLADE_2	
☐	BLADE_3	
☐	BLADE_4	
Section: DLL		
☒	BusDLL	pccdll.dll
☒	BUSSTARTMODE	SYNCHRONIZE
Section: FILTER		
☒	PDV	R_PMW, GETVAL, EVENT
☐	DNCB	RES_UPLOAD, RES_DOWNL
☐	TNR	EVENT
☐	MDEB	GETVAL, EVENT

Description

Available HYDRA application blade DLL files from the blade folder. These files enable the PCC to execute application-specific operations. One example is process data processing as of version 7.2. Irrespective of the terminal software, the PDV blade collects PDV information and sends it to the HYDRA server via a separate data channel. Additionally, the PDV blade represents the online data server for process data visualization in the network. If the MDE blade MDEB.DLL is used the corresponding MDEB.INI configuration file must be stored in the

Section:

Key:

Description:

Add setting


Remove selected setting

You can add new PCC settings (INI sections, keys and values). You can remove manually added PCC settings. Default PCC settings cannot be deleted but only enabled or disabled. The applicable value range for default PCC settings is either specified or can be found in the "description" for PCC settings. Modifications are saved if you click the "OK" button. If you click "Cancel", you exit the window without saving the changes.

For further information on the PCCDLL and PCC settings refer to the [PCC product documentation](#) and related PCC driver documents.

Description of the function: delete PCC configuration

You can delete an existing HYDRA PCC configuration, if you use the function "delete PCC configuration". The HYDRA master data and assignments remain.

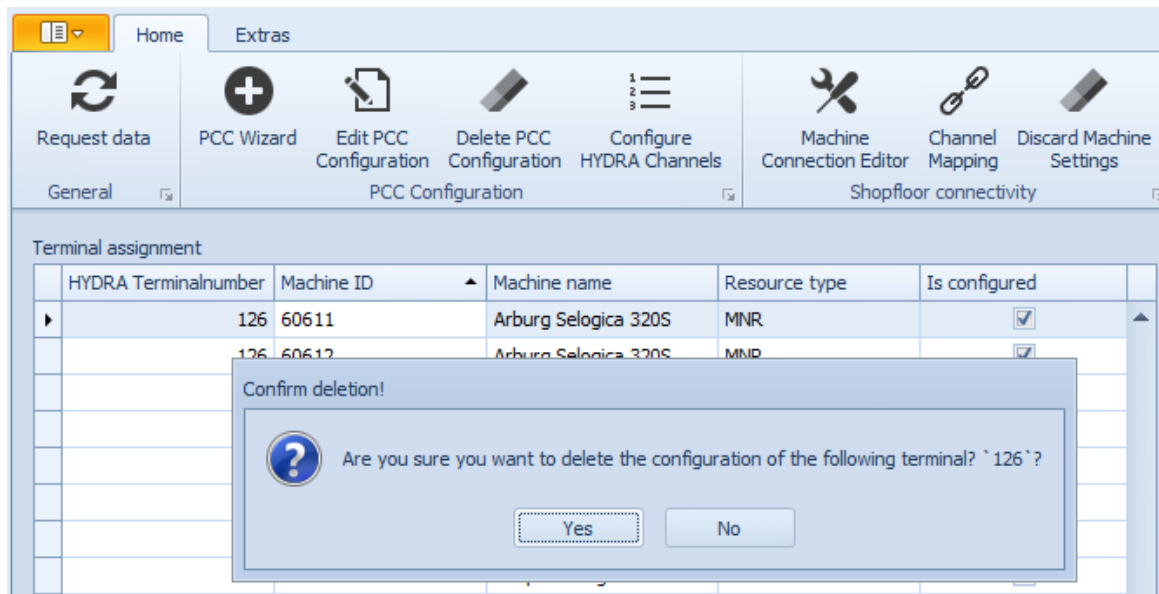

You must confirm if you really want to delete the HYDRA PCC configuration by choosing "Yes" or "No".

Description of the function: configure HYDRA channels

A new window opens (channels), once you have selected a terminal assignment and clicked the button "HYDRA channels". If the machine (resource) is assigned to "PDV logical channels" or "counters", they will be shown (channel type: counter and measurement). If counter channels are available, cycle channels will be generated automatically (channel type: cycle time). The channel type "machine state" is set up automatically in HYDRA (MSTAT).

Channel number	Channel name	Assigned machine
Channel type: Counter		
1	Gutmenge	60611
2	Ausschuss	60611
11	Stromverbrauch	60611
Channel type: Cycle Time		
1	Gutmenge	60611
2	Ausschuss	60611
11	Stromverbrauch	60611
Channel type: Machine State		
1	Machine State	60611
Channel type: Measurement		
14	EinspZ_60611	60611
15	DosierZ_60611	60611
16	ZyklusZ_60611	60611
17	DuesenTemp_60611	60611

Machine:


Channel type:

Channel number:

Channel name:

You may add and assign additional HYDRA channels. The following channel types are provided: digital input (I), digital output (O), trigger (T) and value (V).

To add a channel, you must complete all fields and click the "add channel" button. You can delete a channel by clicking "remove channel".

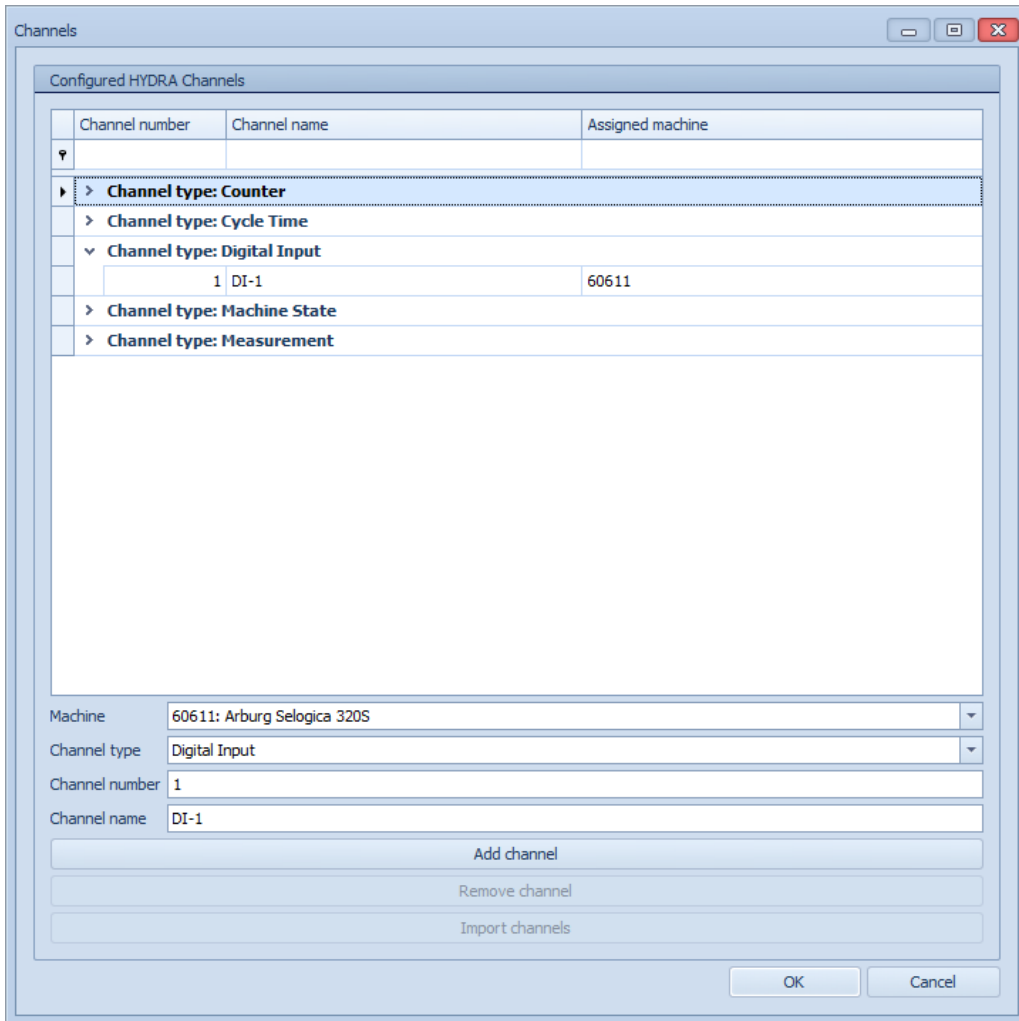

Channels

Configured HYDRA Channels

Channel number	Channel name	Assigned machine
> Channel type: Counter > Channel type: Cycle Time > Channel type: Digital Input 1 DI-1 60611 > Channel type: Machine State > Channel type: Measurement		

Machine: 60611: Arburg Selogica 320S

Channel type: Digital Input

Channel number: 1

Channel name: DI-1

Add channel


Remove channel

Import channels


OK Cancel

Description of the function: machine connection editor


A new window (machine details) opens, if you click the button "machine connection editor". You can manage the PCC driver instances in this window. You can add, modify or delete PCC drivers. PCC drivers are displayed if they were selected previously in the PCC wizard or added using the function "edit PCC configuration".

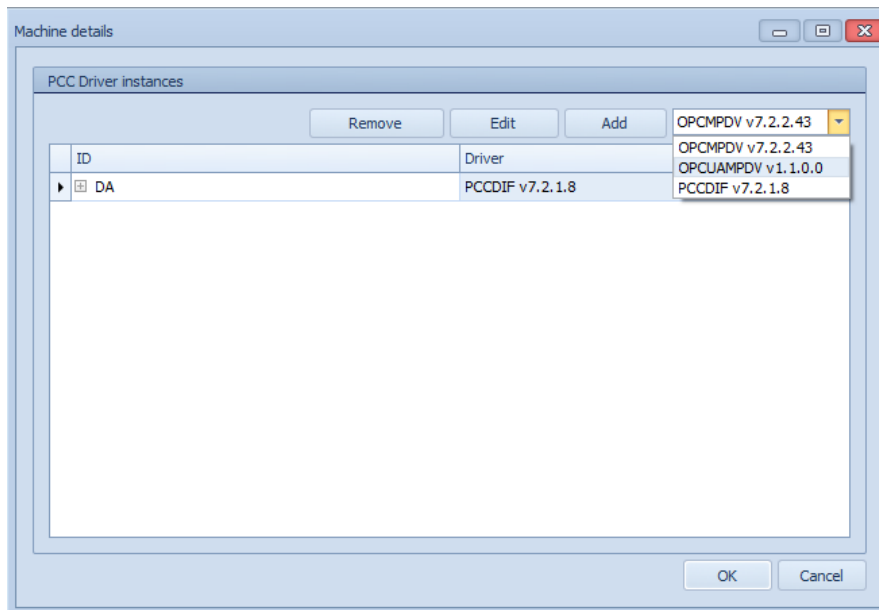

Select the required PCC driver from the selection menu and click "add" in order to add a new PCC driver instance.

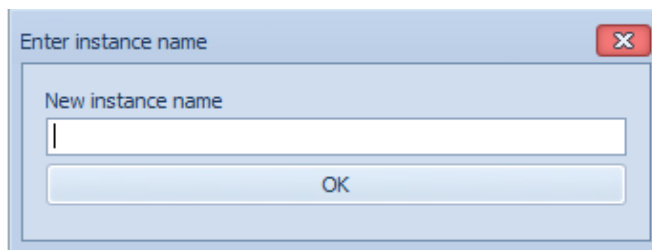

You must enter a name in the input field "new instance name". The entered name is used in the PCC driver's log file generated by this driver instance. A new window opens by clicking "OK". Structure and contents of the new window vary with each specific driver.


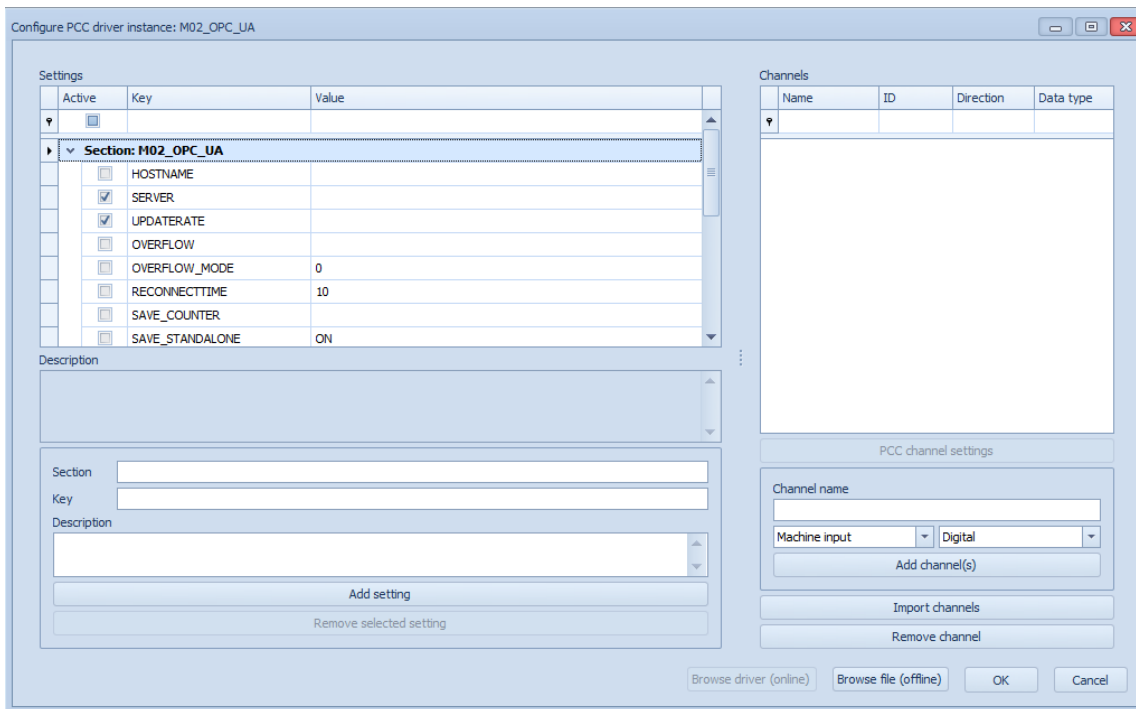


The screenshot shows the 'Configure PCC driver instance: M02_OPC-UA' window. It is divided into several sections:

- Settings:** A table with columns 'Active', 'Key', and 'Value'. It contains a section 'Section: M02_OPC-UA' with the following settings:

Active	Key	Value
☐	HOSTNAME	
☒	SERVER	
☒	UPDATERATE	
☐	OVERFLOW	
☐	OVERFLOW_MODE	0
☐	RECONNECTTIME	10
☐	SAVE_COUNTER	
☐	SAVE_STANDALONE	ON
- Description:** A text area for describing the configuration.
- Channels:** A table with columns 'Name', 'ID', 'Direction', and 'Data type'. It is currently empty.
- PCC channel settings:** A section containing:
 - Channel name:** A text input field.
 - Machine input:** A dropdown menu currently set to 'Machine input'.
 - Digital:** A dropdown menu currently set to 'Digital'.
 - Add channel(s):** A button.
 - Import channels:** A button.
 - Remove channel:** A button.
- Buttons:** 'Add setting', 'Remove selected setting', 'Browse driver (online)', 'Browse file (offline)', 'OK', and 'Cancel'.

If the PCC-OPC-UA driver (screenshot above) is used, you must enter the OPC UA server connection data including security settings. These connection settings are specific for each project. Provided that the OPC-UA server can be reached and correct OPC-UA server connection settings have been entered, you can browse the configured OPC-UA server and select node IDs for channel mapping. You can start browsing by clicking "browse driver (online)". A new window opens. The new window "browse:" shows all node IDs available for the selected OPC-UA server. If required, you can select these IDs. Multiple selections are supported. By clicking "select", you can define the selected node IDs for channel mapping (screenshot below).

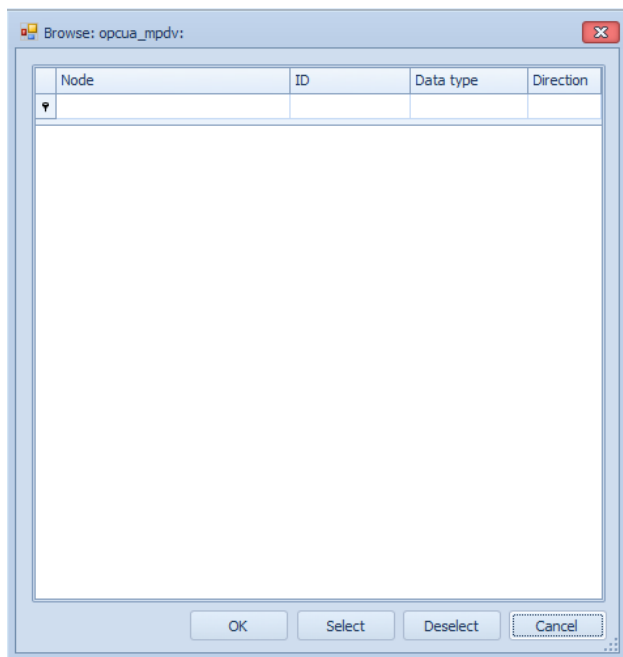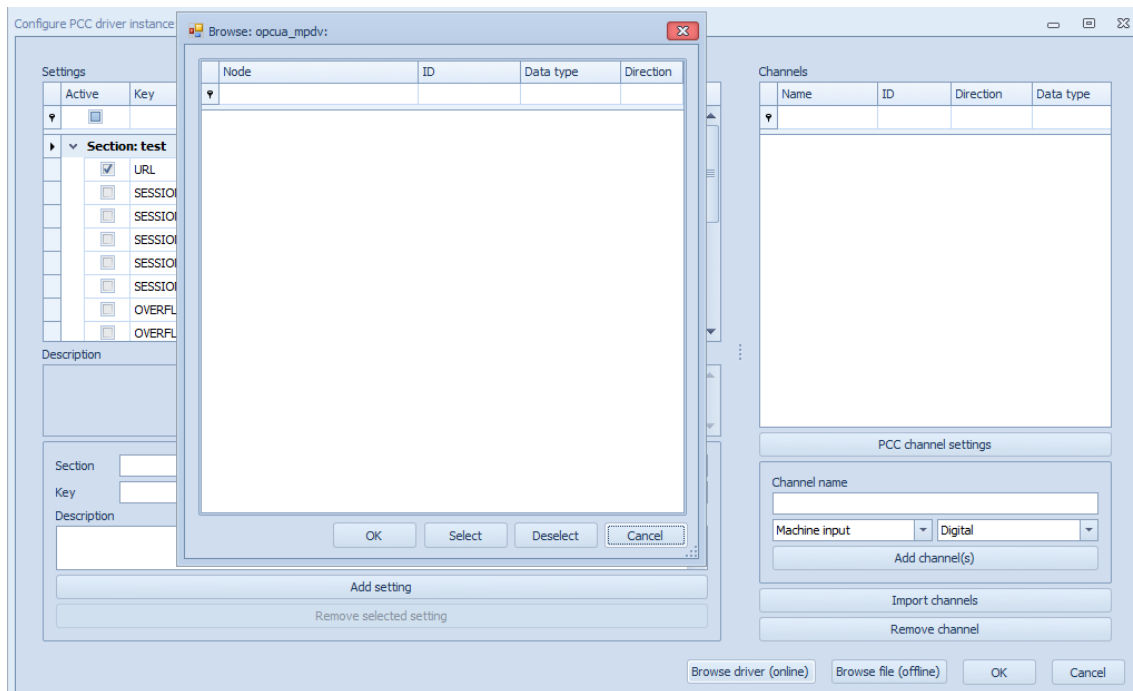

The "browse:" window is closed after clicking "OK". The right-hand side of the window "configure PCC driver instance" shows the selected node IDs.

Configure PCC driver instance: DA

Active	Key	Value
Section: DA		
☒	HOSTNAME	
☒	SERVER	
☒	UPDATERATE	
☐	OVERFLOW	
☒	OVERFLOW_MODE	0
☐	RECONNECTTIME	10
☐	SAVE_COUNTER	
☐	SAVE_STANDALONE	ON

Description
Counter overflow mode
This parameter configures data collection for counters at machines allowing to reset counters.
0=Initial value 0 after resetting
1= Initial value 1 after resetting

Section:
Key:
Description:

Add setting
Remove selected setting

Name	ID	Direction	Data type
AussenT...		Outgoing	Number
InnenTemp		Outgoing	Number
Duesente...		Outgoing	Number
Gut		Outgoing	Number
Schlecht		Outgoing	Number
Zyklus		Outgoing	Number

PCC channel settings

Channel name:
Machine input: Digital:
Add channel(s)
Import channels
Remove channel

Browse driver (online) Browse file (offline) OK Cancel

If the OPC-UA server cannot be reached from this application, you can also browse the OPC-UA server offline. For this purpose, the HYDRA server provides a tool based on command lines. This tool must be started from a PC that can reach the OPC-UA server. This tool specifically connects to defined node IDs and stores data in an XML file after browsing. The XML file can be imported if you click the "browse file (offline)" button. Then all node IDs included in the XML file are available for channel mapping. You can also manually add or subsequently remove machine channels. To do so, the channel name must be known. By clicking "OK", the window closes and the settings made are accepted. If you click "Cancel", you exit the window without saving the changes.

The "machine details" window must be closed by clicking "OK".

Machine details

PCC Driver instances


Remove Edit Add Driver

ID	Driver
DA	OPCMPCIV v7.2.2.43

OK Cancel

Description of the function: channel mapping

You can connect the machine channels with the HYDRA channels, once the required machine channels have been imported in the PCC Configuration Manager using the Machine Connection Editor. To do so, choose the required terminal assignment and click the button "channel mapping". A new window "channel routing" opens.

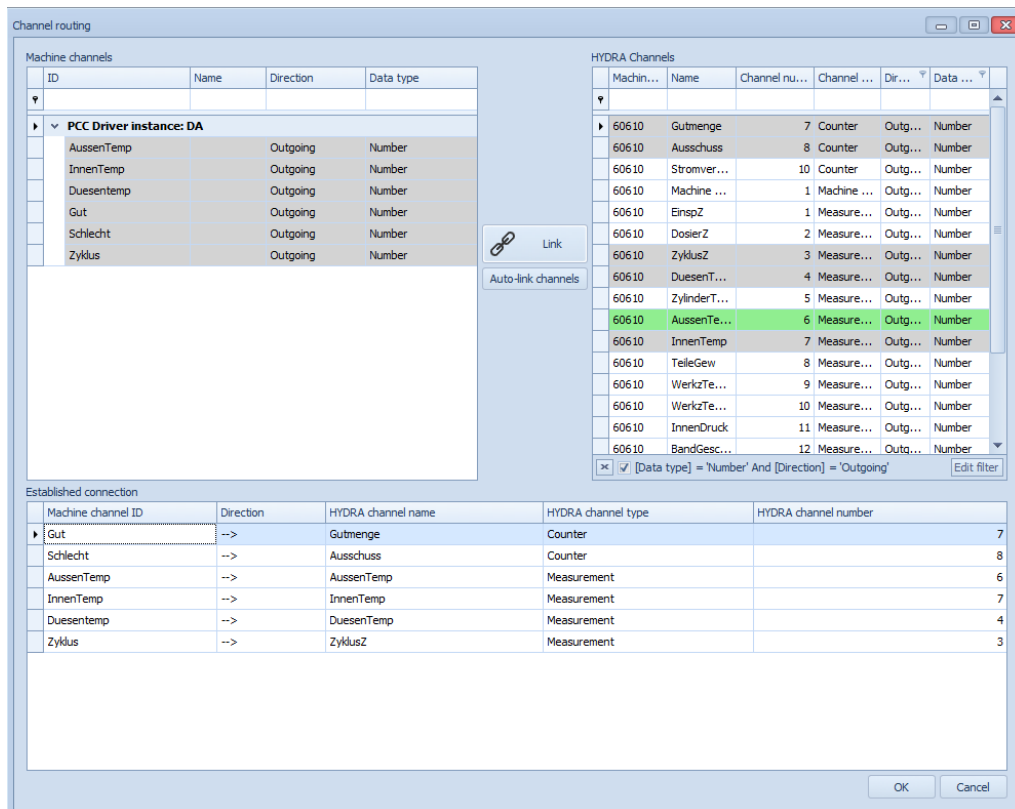

First you have to select the corresponding machine channels and HYDRA channels. Then you can connect the two channels by clicking the "link" button. The top left window shows the machine channels. The top right window shows the HYDRA channels. The lower section of the screen shows established channel connections. The "auto-link channels" option allows you to connect all channels with matching names.

Channel routing

ID	Name	Direction	Data type
PCC Driver instance: DA			
AussenTemp		Outgoing	Number
InnenTemp		Outgoing	Number
Duesentemp		Outgoing	Number
Gut		Outgoing	Number
Schlecht		Outgoing	Number
Zyklus		Outgoing	Number

Unlink

Auto-link channels

Machin...	Name	Channel nu...	Channel ...	Dir...	Data ...
60610	Gutmenge	7	Counter	Outg...	Number
60610	Ausschuss	8	Counter	Outg...	Number
60610	Stromver...	10	Counter	Outg...	Number
60610	Machine ...	1	Machine ...	Outg...	Number
60610	EinspZ	1	Measure...	Outg...	Number
60610	DosierZ	2	Measure...	Outg...	Number
60610	ZyklusZ	3	Measure...	Outg...	Number
60610	DuesenT...	4	Measure...	Outg...	Number
60610	ZylinderT...	5	Measure...	Outg...	Number
60610	AussenTe...	6	Measure...	Outg...	Number
60610	InnenTemp	7	Measure...	Outg...	Number
60610	TelleGew	8	Measure...	Outg...	Number
60610	WerkzTe...	9	Measure...	Outg...	Number
60610	WerkzTe...	10	Measure...	Outg...	Number
60610	InnenDruck	11	Measure...	Outg...	Number
60610	BandGesc...	12	Measure...	Outg...	Number

[x] [Data type] = 'Number' And [Direction] = 'Outgoing' Edit filter

Machine channel ID	Direction	HYDRA channel name	HYDRA channel type	HYDRA channel number
Gut	-->	Gutmenge	Counter	7
Schlecht	-->	Ausschuss	Counter	8
AussenTemp	-->	AussenTemp	Measurement	6
InnenTemp	-->	InnenTemp	Measurement	7
Duesentemp	-->	DuesenTemp	Measurement	4
Zyklus	-->	ZyklusZ	Measurement	3



OK Cancel

Rows highlighted in gray indicate channels that have already been routed. Rows highlighted in green show most recently routed channels.

You can exit the window by clicking "OK", once you have generated all required routings. The connections are saved. If you click "Cancel", routings will not be saved.


Description of the function: export configuration

Click the "export configuration" button in order to export a HYDRA PCC configuration. Consequently, you can generate all configuration files relevant to PCC and store them in one folder.

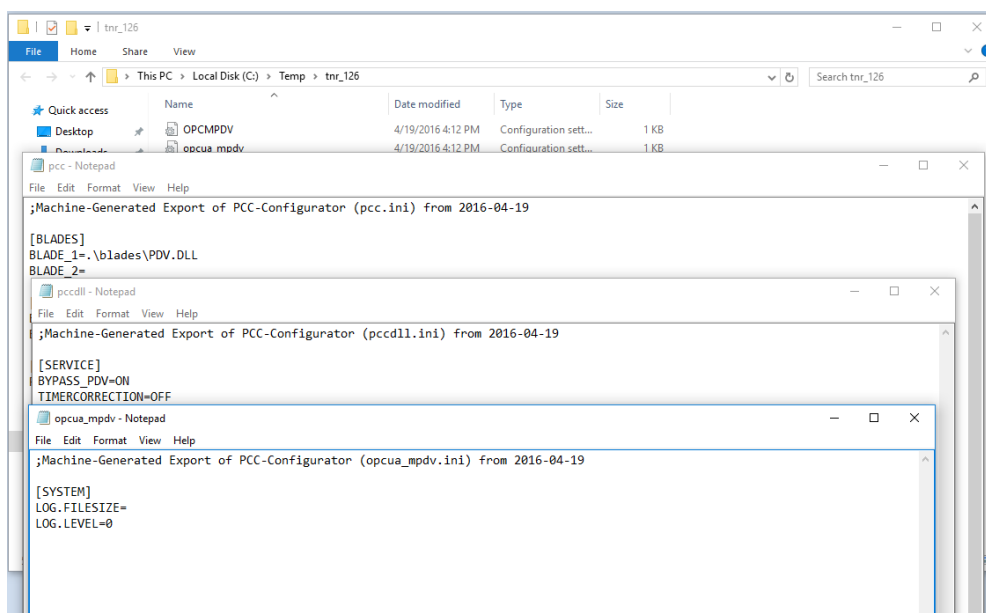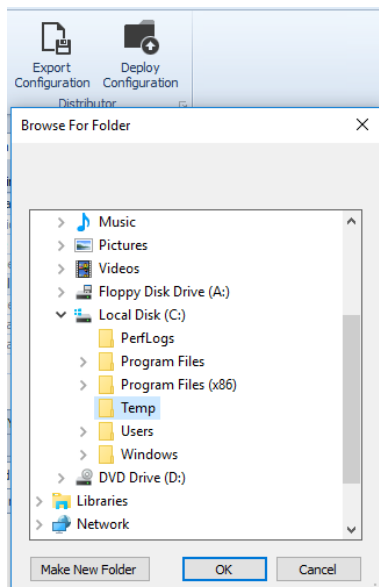


Description of the function: deploy configuration

If you click the "deploy configuration" button, all configuration files relevant to PCC are specifically exported and saved. In contrast to the "export" function, this option stores the PCC configuration files in a specified HYDRA server path.

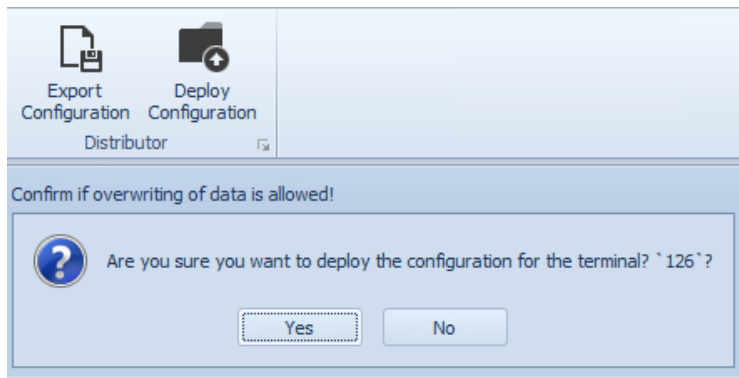

A subfolder is created in this path. The folder name starts with "tnr_" and ends with the terminal number for which a PCC configuration has been performed.

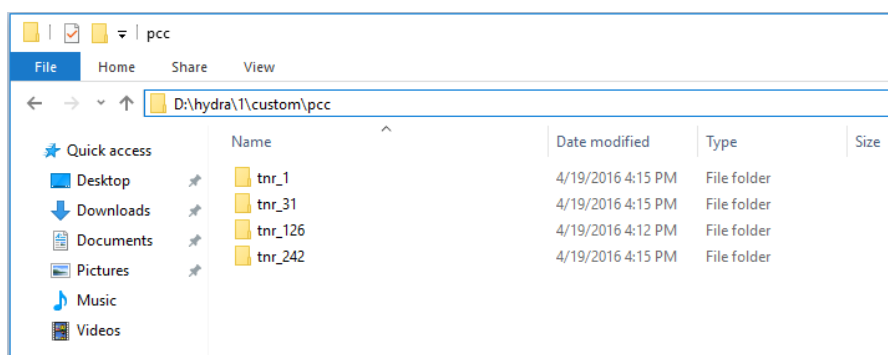

A separate folder is available for each HYDRA PCC/AIP terminal with a PCC configuration. This folder includes the PCC configurations for each terminal number and makes configurations available to the HYDRA PCC.

