

Manual

Dealing with Tools and Resources WRM-WRB 8.1

Version 1.0.23049

Last changed on: 02.09.2020

Copyright

©Copyright 2012 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Dealing with Resources - Overview	4
2	Resource Overview	6

1 Dealing with Resources - Overview

Overview

Purpose

The WRM WRB tool and resource management packet provides functions to assist in the day-to-day handling and managing of resources. The packet allows you to manage resource status, implement measures, make storage postings etc. and also to log resources on through production orders. These postings flow into the resource history. Therefore, the packet adds dynamic components to the purely statistical master data update function and opens up the option of supporting and documenting the maintenance history of resources.

Integration

The packet requires the basic WRM MGM license.

Features

- Automatic posting of cycles, production figures (yield and scrap) as well as use times (operating hours) for logged on resources
- The tool creates the basic data used in the maintenance calendar and amortization calculations. The data also flow into the resource history.
- Functions for defining resource availabilities or reservations (release, lock and lock until a particular date)
- Active collection and posting of status changes on the client. Comment entry. Processing of postings from client or terminal
- Automatic release of resources after the blocking period has expired (reservation)
- Assignment of a home storage location for the resource as well as automatic assignment of the current storage location (workplace) when logging on
- Manual transfer of resources to defined storage locations on the client. Processing of postings from client or terminal
- Capability to manually enter measures incl. comments on the client for display in the resource history. The measures catalog is used as a model. Processing of postings from client or terminal
- Editing and correction functions for postings entered

2 Resource Overview

Overview

Menu	Production facility management → Current information → Resource overview
Transaction code	resov
Function authorization	resov.*

The resource overview is the central application that provides an overview of the current resources managed in the system. The resource overview provides functions regarding status change, stock transfer and documentation of measures.

Purpose

You can use the *Resource overview* to show the current status of selected resources. The application shows all resources matching the conditions you specified in the selection parameters.

The list shows the specified resource master data and the current resource status. If the tool is active (logged on), the *Resource overview* shows the machine and the operation where the resource is logged on to. If the resource is locked, the overview shows the following:

- the reason of the lock,
- the time when the resource has been locked, and - if entered -
- the time until the resource will be locked.

Integration

You can use the master data function *Resource configuration* to create, change or delete resources.

Selection criteria

The application provides the following selection criteria:

Resource from ... to ...

This selection criterion refers to the resource. You can also use wildcards (placeholders *).

Short name

Short name of the resource. Only relevant for resources of type MNR.

Resource type

Type of resource.

Designation

Name of the resource.

Group

Workplace/machine group of the resource. Only relevant for resources of type MNR.

Cost center

Cost center of the resource.

Short name

Short name of the resource.

Resource family

Family the resource is assigned to.

Responsibility area

Responsibility area the resource is assigned to.

Storage location

Regular storage location of the resource.

Current storage location

Current storage location of the resource. The functions *Status change* and *Stock transfer* are used to book the resource to this storage location. If you log on a resource to a workplace, this workplace automatically becomes the current storage location of the resource.

Show deleted resources (as of WRM 8.2)

Use this field to specify if logically deleted resources are shown.

MD user fields

MD user fields 1- 6 of the resource. If you select a resource family in the selection panel, the application shows the field names according to the assigned user field definition.

Field descriptions

Most field descriptions are included in the application [Resource configuration](#). See the following tabs:

- General resource configuration
- User fields
- Comment
- Resource attributes
- Resource list

The additional tabs of the resource overview are described here:

"Status" tab**Active**

Specifies whether or not the resource is currently logged on to a workplace.

Deleted (as of WRM 8.2)

Specifies whether the resource displayed is logically deleted or not.

Current machine, current order

For active resources, this field specifies the workplace and the order where the resource is currently logged on.

Current storage location

Current storage location of the resource. The functions *Status change* and *Stock transfer* are used to book the resource to this storage location. If you log on a resource to a workplace, this workplace automatically becomes the current storage location of the resource.

Resource status, status since

Specifies the current status of the resource. Number and name are displayed and the time when the status was set.

New status, from, until

You can specify a future status that is set when the status changes. The status is not immediately set, but an expected future status is specified.

The HYDRA Shop Floor Scheduling can use this future status to show and monitor the resource assignment.

In the HYDRA Scheduler, a job "WRM resource control" is installed. This job regularly executes the script `./hyresctl.scr /STATUS` (by default every 30 minutes). The program called by the script, performs the following processing:

- If the time "New status from" is exceeded, the new status is set.
- If the time "New status until" is exceeded, then the status is set that includes the value "F" in field *Collection* in the [status configuration](#).

Technical note: Both status changes are internally performed via an asynchronous DDI call (DLG=RES_STATUS or DLG=RES_FREI).

"Use" tab**Target utilization****Cycles**

The field *Cycles* provides additional information. The cycles value defines how long the resource is to be used.

Runtime

The field *Runtime* provides additional information. It defines how long the resource is to be used.

Actual utilization

Cycles

The total number of cycles that have been recorded for the resource since initialization.

Runtime

The total run time that has been recorded for the resource since initialization.

Yield, scrap

Total of yield or scrap that has been recorded for the resource since initialization and posted to the relevant account (base quantity, primary quantity).

Run times since implementation, allocated to RPA

Account name (e.g. SUT, MUT)

Total number of hours that has been recorded for the resource and booked to this resource performance account since initialization.

Toolbar

Resource tab



File – Show file (function authorization: mdres.doc)

Opens the file view – only available for document resources, which are configured as file-based resources without DNC processing in the *Resource type*. And only available if the relevant license and function authorization are available.



Go to – Resource configuration (function authorization: mdres)

Opens the application *Resource configuration*. The selected resource is passed as default value.



Go to – Resource list (function authorization: mdrbom)

Opens the *Resource list* application. The selected resource is entered as default value for the higher-level resource.



Go to – Resource history (function authorization: reshi)

Opens the application *Resource history*. The selected resource is passed as default value.



Functions – Measure

Opens the *Measures* application.



Functions – Status change

Opens the dialog to change a resource status. The following input fields are available:

Status: Status that is set according to configuration.

Material buffer: With the status change, the resource can be relocated and transferred to another storage location.

Set immediately:

- The current date is preassigned to the field *from* and cannot be changed.
- The field *till* is empty; you can enter a date here.

Set for period:

- The current date is preassigned to the field *from* and can be changed.
- The field *till* is empty; you can enter a date here.

If no date is entered in field *till*, the system automatically sets the date to 31-DEC-9999.

The checkbox *Including subordinate resources* is not relevant and reserved for future extensions.

Comment: The comment entered can be displayed in the *Resource history*.



Functions – Release of resource

Opens the dialog to release a resource. The checkbox *Including subordinate resources* is not relevant and reserved for future extensions.



Functions – Stock transfer

Opens the dialog to transfer/relocate a resource.



Generate order (function authorization: resovgenorder)

Generates a maintenance order for the selected data row. (The function is only available with function package WRM-IHA).



Document management (function authorization: resovdoc)

Click this button to call the [Document management](#).

DNC tab

The tab is only available, if you select a DNC resource. These are resources configured with *DNC processing* in the *Resource type*.

**File – Export (function authorization: mdres.export)**

Exports the file specified for the resource. You use the file explorer to specify the target file.

**File - Import (function authorization: mdres.import)**

Imports the file specified for the resource. You use the file explorer to specify the source file.

**File - Viewer (function authorization: mdres.vis)**

Opens the file specified for the resource using the defined viewer program.

**File - Editor (function authorization: mdres.editor)**

Opens the file specified for the resource for editing using the defined editing program.

**File – Comparison editor (function authorization: mdres.diff)**

Opens the comparison editor for the selected resource or resources. See below for further information.

**Go to – Resource configuration (function authorization: mdres)**

Opens the application *Resource configuration*. The selected resource is passed as default value.

**Go to – Resource list (function authorization: mdrbom)**

Opens the *Resource list* application. The selected resource is entered as default value for the higher-level resource.


**Functions – Status change**

Opens the dialog to change a resource status.

**Functions – Release of resource**

Opens the dialog to release a resource.

How to use the comparison editor

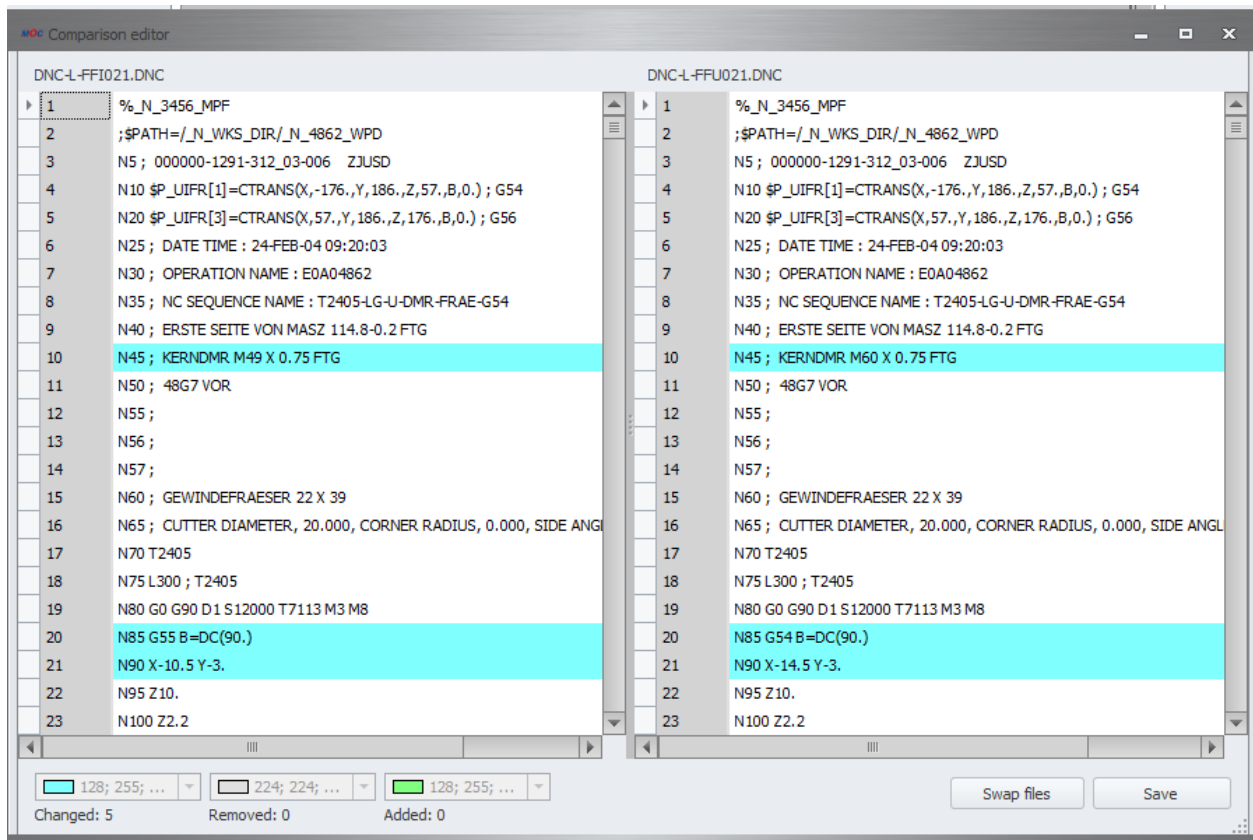

The comparison editor compares the files attached to the DNC resources. Two operation modes are available:

Selection of one resource:

The editor shows the released resource and the optimized version of the resource for comparison. You can change the file displayed on the right-hand side of the editor. Once you have made the changes, the comparison editor transfers these changes to the system, like the simple editor. You can only use this mode for DNC types with the file processing type "optimized".

Selection of two resources:

If you select two resources before you open the comparison editor, the editor compares the two selected resources. You can select the file type. You can change the file displayed on the right-hand side of the editor. Once you have made the changes, the comparison editor transfers these changes to the system, like the simple editor.

Click the relevant buttons or use the context menu (right-click) to start the functions of the comparison editor:

- Reject: Rejects the difference identified (on the right). Accepts the value from the left file. The editor does no longer highlight the difference.
- Keep: Accepts the difference identified (on the right). The editor does no longer highlight the difference.
- Next difference: Goes to the next difference.
- Insert: Inserts a row at the current position.
- You can always change the contents of a row. Click the row and enter a value. Press ESC to quit the row without changes. The editor then highlights the row as "changed".
- Swap windows: Click this button to swap the windows. This function is necessary if you compare two resources. The place where a resource is displayed results from the display order in the table; the system does not know, which resource must be changed. In mode *Selection of one resource*, this button is not available because here you can only change the optimized program version.
- Save: Saves the changes made to the file on the left-hand side.