

Manual

Alarm System ZKS-ALS 8.1

Version 1.0.23049

Last changed on: 02.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Alarm System - Overview.....	4
2	Current Alarms and Malfunctions.....	5
3	Alarms and Malfunctions.....	7
4	Alarm Suppression.....	8
5	Access Control Escalations.....	9
5.1	Summary.....	9
5.2	Configuration of ZKS escalations	10

1 Alarm System - Overview

Fields of application

The alarm system of the access control module has been configured to report alarms and disturbances occurring at accesses. Existing alarms and malfunctions are displayed in a special status overview, past alarms and disturbances can be viewed in an evaluation/report. E-mails can be used, for example, to notify the relevant people of alarms. [Access points](#) have to be configured additionally for the functions of the alarm system.

Implementation notes

You use the function package if you:

- use the HYDRA access control system (ZKS) and you wish to generate alarms for access points or the access control hardware

Integration

This function package can only be used if the HYDRA access control is in use (function package *administration functions, access control*).

Features

- Generation of alarms
 - Alerts are generated if access points are opened too long or without authorization and if the access technology is sabotaged or fails
- Notification of alarms
 - Notification e.g. by e-mail if an alarm occurs
- Alarm overview and history
 - Listing and confirmation of currently applicable and past alerts
- Alarm suppression
 - Exception for the suppression of alarms (e.g. on open days)

2 Current Alarms and Malfunctions

Menu	Human Resources Management → Access Control → Current Alarms and Disturbances
Transaction code	acca
Function authorization	acca

This status dialog shows all current alarms and disturbances as well as those that have not yet been confirmed/acknowledged. Each entrance/access where an alarm or disturbance occurred remains in this overview until the alarm or disturbance has been signed. If an alarm or disturbance is signed, but the corresponding condition is still available the color changes from red to yellow. The alarm or disturbance is no longer displayed in the list, once the status/condition has been finished.

Current alarms and disturbances

Main page Profile

Request data Cancel Print preview Print all Sign alarm Save Help on operation Help on application Help on detail application

Selection

Access Access group Terminal

Access ... to ...

Designation

Current alarms and disturbances

Drag a column here to group by that column

Access	Access group	Status	Alarm is active					
Access	Designation	Access type	Access group	Designation	Date from	Time	Status	Alarm is active
>	1 East Entrance SF	Entrance	2 Screw Factory	2/28/2011	3:10	Open w/o permission	☒	
	3 Canteen	Entrance	4 Canteen	2/28/2011	5:57	Sabotage	☒	
	6 Basement Parking	Entrance	1 Basement Par...	2/28/2011	5:56	No message	☐	



The view of current alarms and disturbances is refreshed automatically approximately once a minute.


Toolbar



Sign alarm

Function authorization: acca.sign

The following dialog opens when an alarm is to be signed. This dialog provides the option to choose whether the currently selected alarm or the alarms and disturbances of all entrances/accesses are to be signed:

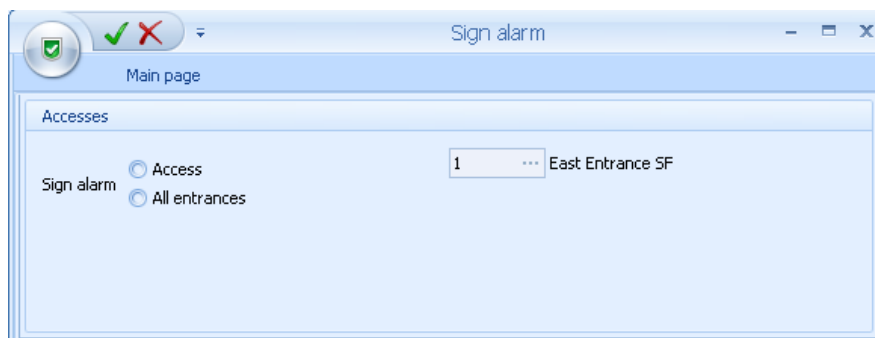

3 Alarms and Malfunctions

Summary

Menu	Human Resources Management → Access Control → Alarms and Disturbances
Transaction code	acad
Function authorization	acad

This report shows all alerts and disturbances for the selected period of time.

Alarms and disturbances

Main page Profile

Request data Cancel Print preview Print all Save Help on operation Help on application Help on detail application Help

Selection

Access ... to ...

Date from 1/1/0001 to 1/1/0001

Alarms and disturbances

Drag a column here to group by that column

Access	Designation	Access type	Status	Duration
3	Canteen	Entrance	Open w/o permis...	3:05
2	Main Gate SF	Entrance	Sabotage	0:00
4	IT-Room	Entrance	Disturbance	0:03
4	IT-Room	Entrance	Sabotage	0:00
3	Canteen	Entrance	Disturbance	0:06
1	East Entrance SF	Entrance	Open w/o permis...	2:58
4	IT-Room	Entrance	Disturbance	0:00
5	Side Entrance SF	Entrance	Disturbance	0:01
3	Canteen	Entrance	Open w/o permis...	0:00
3	Canteen	Entrance	Disturbance	3:05
2	Main Gate SF	Entrance	Sabotage	0:01
2	Main Gate SF	Entrance	Disturbance	3:06
4	IT-Room	Entrance	Disturbance	0:00
3	Canteen	Entrance	Open w/o permis...	0:00
2	Main Gate SF	Entrance	Disturbance	0:01
4	IT-Room	Entrance	Disturbance	0:00

Alarms and disturbances

Access

Access 3 ... Canteen

Status

Status Open w/o permission

Duration 3:05

Beginning

Date 12/21/2010 Time 11:18

End

Date 12/21/2010 Time 14:24

Badge

Badge ...

Company ...

Person ...



The columns “badge”, “company” and “person” are only filled out if the “opened too long” status is available.

4 Alarm Suppression

Summary

Menu	Human Resources Management → Access Control → Alarm Suppression
Transaction code	acas
Function authorization	acas

The “alarm suppression” function releases [accesses](#). In this context, releasing of accesses means that no alarm will be triggered during the specified period of time if the access/entrance is opened too long or without permission. “Free” is displayed as [access status](#).

Alarm suppression

Main page

Request data Cancel Print preview Print all Insert Copy Edit Delete Save Help on operation Help on application Help on detail application Help

Selection

Access point

Alarm suppression

Drag a column here to group by that column

Access	Designation	Valid from	Valid until	Comment
6	Basement Parking	3/16/2012 6:00:00...	3/16/2012 10:00:00...	Rel
3	Canteen	3/16/2012 6:00:00...	3/16/2012 10:00:00...	Rel

Alarm suppression

Access point 6 Basement Parking

Valid from 3/16/2012 6:00:00 AM

Valid until 3/16/2012 10:00:00 PM

Commentary Relocation Prod.Facilities

Last editing

Modified by Miller

Modified on 1/29/2001 12:31:44 PM

5 Access Control Escalations

5.1 Summary

Using the escalation management alarms and access attempts may be sent by e-mail, SMS or as message to the console of certain users.

Within access control the following events can be sent using the escalation management:

ZNR.OPEN_TOO_LONG

The entrance has been opened too long. This alarm also indicates the badge number that has opened the entrance.

ZNR.OPEN_TOO_LONG_END

The access, which was opened too long, has been closed again.

ZNR.OPEN_WITHOUT_PERMISSION

The entrance has been opened without permission (e.g. by way of a key or tool).

ZNR.OPEN_WITHOUT_PERMISSION_END

The entrance, which was opened without permission, has been closed again.

ZNR.READER_SABOTAGE

The access reader has been opened (this message only appears when the reader has got a sabotage contact).

ZNR.READER_SABOTAGE_END

The access reader has been closed again (this message only appears when the reader has got a sabotage contact).

ZNR.READER_FAILURE

Communication between the HYDRA-ZKS terminal and the access reader has broken down.

ZNR.READER_FAILURE_END

The connection between the terminal and the reader has been re-established.

ZNR.ACCESS_POINT_OFFLINE

The access has not sent a status within the given status time. Thus, the access status is not known.
The connection between the server and the HYDRA-ZKS terminal has broken down.

ZNR.ACCESS_POINT_OFFLINE_END

The access has sent a status again.

ZNR.ACCESS

The entrance has been opened by an authorized badge.

ZNR.ACCESS_ATTEMPT

The entrance could not be opened by an unauthorized badge.

5.2 Configuration of ZKS escalations


Something has to be entered in the [configuration of the escalation](#) to be able to report an escalation from the HYDRA-ZKS module:

The screenshot shows a software window titled 'Edit' with a standard Windows-style title bar. Inside, there's a 'Main page' tab and a series of tabs: 'Event', 'Options', 'Message', 'Notification', 'Condition', and 'Last change'. The 'Event' tab is selected. The form contains the following fields and options:

- Event:** A text box containing 'ZNR.OPEN_WITHOUT_PERMISSION' with a dropdown arrow on the right.
- Designation:** A text box containing 'Entrance opened without permission'.
- Recipient type:** A dropdown menu currently showing 'Function'.
- Recipient:** A text box containing 'HYDRA-Administrator' with a dropdown arrow on the right.
- Priority:** A text box containing the number '1'.
- Color:** A dropdown menu currently showing 'Light red'.
- Active:** A checked checkbox.
- Cyclic monitoring:** A section with a text box that is currently empty.
- Automatic: after reading the message:** A section with a text box that is currently empty.
- Automatic: after closing the event:** A section with a text box that is currently empty.
- Automatic: after sending the message:** A section containing:
 - An unchecked checkbox labeled 'Active'.
 - A dropdown menu currently showing an empty box.
 - A text box containing the word 'CLOSE'.

The event can directly be reported to a person or a group of persons ([function group](#)). If the message is to be forwarded by e-mail, the IP address of the mail server and the [person's](#) e-mail address (company) have to be defined in the [basic settings](#). To be able to send the event to a console, the assignment between personnel number and user needs to be established in the [user management](#) function.

The text is entered with placeholders for variable data in the message tab:

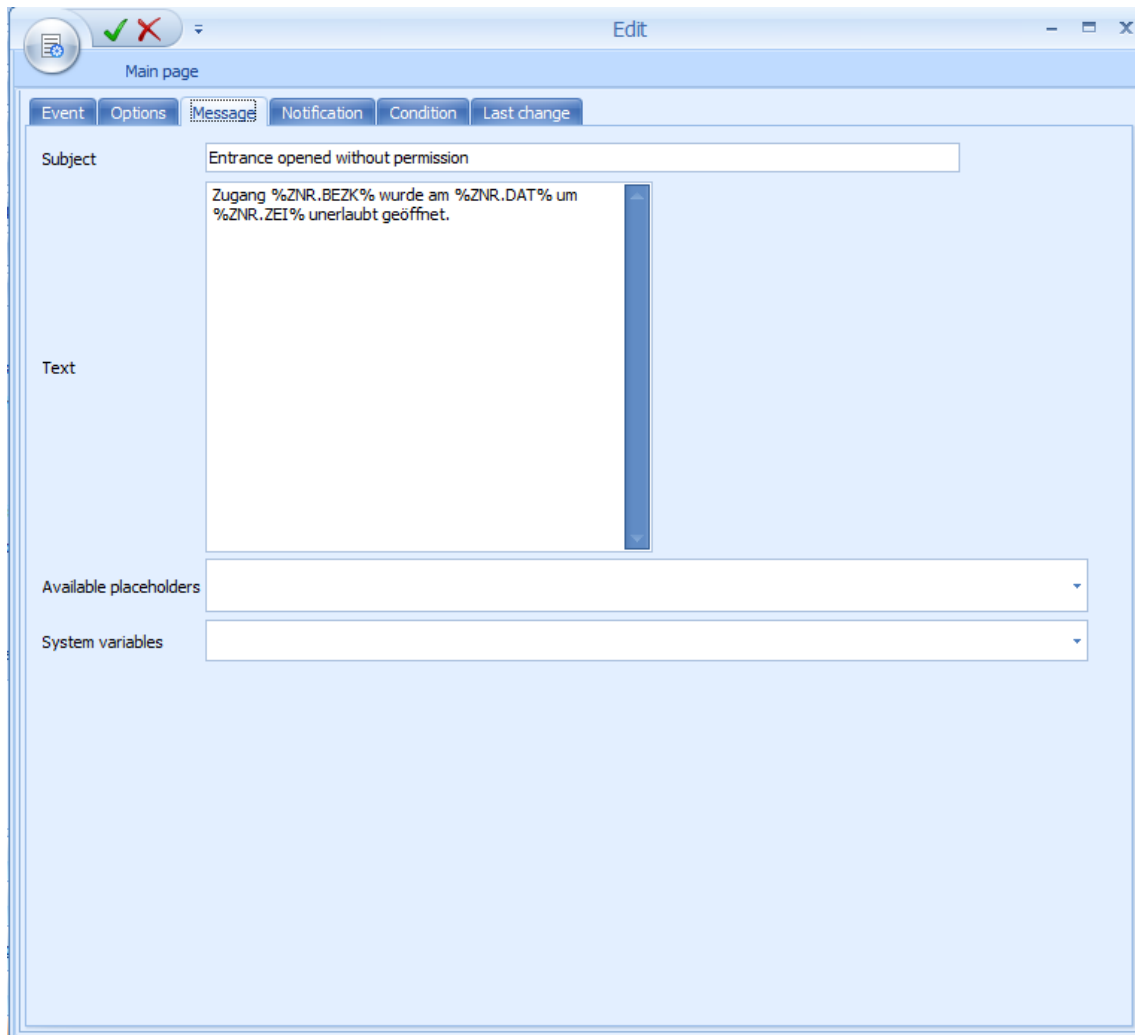

How the message is sent is defined in the “notification” tab.

Notifications about access attempts may have different reasons. The ZPR.ZVG variable determines that only certain access attempts are displayed. Several configurations with different conditions have to be created for the respective event in order to get different messages for different causes.

The following reasons for access attempts are possible:

ZPR.ZVG	Description
2001	Unauthorized badge
2002	No badges loaded
2003	Beyond time zone
2004	Beyond opening hours

2005	Wrong pin code
2006	Wrong company number
2007	Bag check
2008	Alarm system activated
2010	Duplicate posting within lock time
2013	Missing pin code
2014	Badge beyond validity period
2015	Finger print does not match
2020	Other entry of security gate/safety lock is open
2030	Already present in room zone
2031	Not present in room zone
2032	Room zone completely occupied

The following screenshot shows the exemplary condition to send a message if an employee tries to enter a room zone twice:

