

Manual

Connection of DORMA Offline Components ZKS-SXS 8.1

Version 1.0.23049

Last changed on: 02.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Overview: Connection of Dorma Offline Components	5
2	Configuration of Dorma Offline Components	7
2.1	Configuration of Notebook and/or Palm	7
2.2	Configuration of Dorma Offline Components	7
2.3	Configuration of Office Unlocked (office hours)	7
2.3.1	Time Domains in the Opening Hours	8
2.3.2	Authorization in Access Profile	8
2.4	Configuration Restrictions	8
2.4.1	Planning of Opening Hours Valid in the Future	8
2.4.2	Maximum Number of Access Periods	8
2.4.3	No Access Periods beyond Midnight	8
2.4.4	Access Attempt Logging	8
2.4.5	Pin Code Request	9
2.4.6	Badges in Download Once Only	9
2.4.7	Processing Public Holidays	9
2.4.8	Several Palms for Synchronizing Authorizations	9
2.4.9	Display of Change Date/Time in Access Status	9
3	Installation for Connection of Offline Components	10
3.1	Installation of Palm Desktop and HotSync	10
3.2	Installation of Dorma XS Manager	10
3.3	Installation of HYDRA XS-Sync Program	11
3.4	Notes on Installation	14
4	Synchronization of Dorma Offline Components	16
4.1	Troubleshooting	17
5	Access on Card (AoC)	18
5.1	Overview	18
5.2	Requirements	18
5.3	Memory Space Requirement on Legic Badge	19
5.4	Configuration of HYDRA XS-Sync for AoC	20
5.5	Configuration of Access Authorizations	20

5.6	Provision of Authorizations	21
5.7	Writing Authorizations on the PZE Terminal	23
5.7.1	Terminal Configuration at the Console.....	24
5.7.2	Terminal Configuration	24
5.7.3	Procedure on the Terminal	25
6	Status of access point	28


1 Overview: Connection of Dorma Offline Components

--	--	--

Purpose

This function package includes an interface for connecting Dorma offline components. Since these components locally store authorizations and are battery-operated, structural changes for routing data lines are not required. The infrared interface of a notebook and/or Palm PDA is used in order to read out access logs and synchronize authorizations. Like online components, authorizations are maintained in HYDRA.

The following illustration shows the data flow using the example of a cylinder:

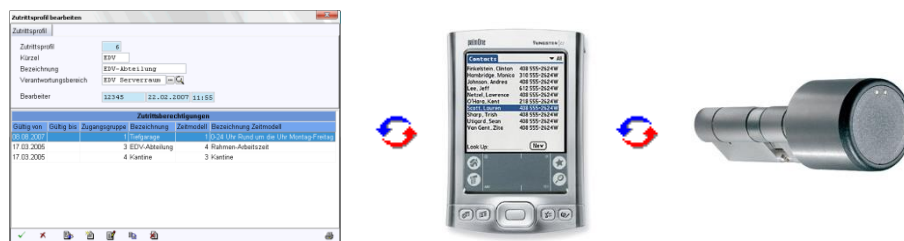

Alternatively to storing authorizations on the components, it is possible to write the authorizations of an employee on the badge at a PZE terminal. Depending on the validity period of such authorizations, this approach has the advantage that lost badges automatically lose their authorizations upon expiry of this validity without the need to lock the authorizations on the offline components concerned.

Implementation notes

You use the function package if:

- you wish to control and monitor door access without routing a communication line and/or voltage supply to the relevant door;
- you intend to substitute a locking system by access readers;
- the HYDRA system does not require a current status (open, closed, disturbed, ...) of the relevant doors.

Integration

This function package can only be used if access control is used in HYDRA (function package *Management Functions Access Control*). The connection is available for the following offline components:

- XS mounts by Dorma
- XS cylinders by Dorma

Features

- Connection of offline components
 - Interface for transferring access authorizations and time models to Dorma offline components (only available for specific offline components)
- Display of offline components in the [access status](#)
 - Additional information is displayed in the access status for Dorma offline components.

Differences between offline mounts and cylinders

The following differences exist between offline mounts and cylinders:

- An offline mount behaves like a door handle and can therefore only be used to open the door.
- An offline cylinder behaves like a key and can therefore be used to open and lock a door.

Using offline mounts has the following advantages:

- Simple operation due to the door handle
- An ordinary lock cylinder may be fitted on the door mount

Using offline cylinders has the following advantages:

- The door does not need to be modified (e.g. important for fire doors)
- An offline cylinder can be used if the offline mount is too wide.

2 Configuration of Dorma Offline Components

2.1 Configuration of Notebook and/or Palm

The notebook and/or the Palm for comparing authorizations and logs is entered as a terminal in HYDRA. The "Palm" entry must be set in the **Type** field of the [terminal configuration](#).

Since the notebook and/or Palm does not send any cyclic status messages to HYDRA, the LED for indicating the terminal status turns yellow after the set cycle duration and red after the double cycle duration. If this display is not required, you can leave the *Cycle duration of status messages* field empty and the LED for status indication will always be shown in white.

2.2 Configuration of Dorma Offline Components

Offline fittings and cylinders are filed as [accesses](#) in HYDRA and have to be identified by the *Offline component* option.

By assigning the access to a terminal of the type "Palm", the access is defined as Dorma offline component and specified by which notebook and/or Palm authorizations and logs are to be synchronized. Consequently, you can use several notebooks and/or Palms for different offline components at various locations or within one plant. If the same offline components are to be synchronized by two or more notebooks and/or Palms, only one terminal header is created and assigned.

The *Reader* field remains empty for offline components. In addition to the number of the access, the name and the assigned terminal, the *Door opener relay duration* field is processed and transferred to the offline component.

By assigning an access to an access group, the opening times and access authorizations are specified in the same way as for common online readers.

With regard to offline components, the *Offline component* option has to be activated so that the access is loaded on the notebook and/or Palm. When the access is saved, a check is performed to verify that the number of accesses for which this button is set does not exceed the number of existing licenses for ZKS-SXS.

2.3 Configuration of Office Unlocked (office hours)

The XS components support an office unlocked function (office hours), within which specific badges may trigger and also terminate a permanent opening.

Office unlocked is activated if an authorized badge is read twice in quick succession. Office unlocked is terminated by holding an authorized badge against the reader once, or if the Office unlocked period as defined in the opening hours has expired.

To configure Office unlocked, the relevant period must be set in the opening hours and the authorization for Office unlocked must be activated in the access profile.

2.3.1 Time Domains in the Opening Hours

The [access periods](#) of an [access time model](#) provide the *Office unlocked* option. Office unlocked may only be activated at the access in access periods in which this option is set. At the end of the access period, *Office unlocked*, if active, is terminated automatically.

2.3.2 Authorization in Access Profile

[Access authorizations](#) are defined in the [access profiles](#). Here, the *Office unlocked* option can also be used to determine whether *Office unlocked* can be activated by the assigned badges.

2.4 Configuration Restrictions

2.4.1 Planning of Opening Hours Valid in the Future

In HYDRA, [opening hours](#) can be planned for the future through the period of validity. The offline components will always only receive the currently valid opening hours, not the changes potentially planned for the future.

2.4.2 Maximum Number of Access Periods

An [access time model](#) used for opening hours may include a maximum of 6 [access periods](#) (from, to) per weekday. Access time models used in the access authorizations are limited to 4 access periods per weekday.

2.4.3 No Access Periods beyond Midnight

In contrast to Access on Card (AoC), the XS manager does not process any authorizations beyond midnight. [Access periods](#) configured beyond midnight only apply up to midnight.

2.4.4 Access Attempt Logging

In logging control, the offline components do not differentiate between accesses and access attempts. If only Access attempts logging is set in HYDRA, the offline components will log both access attempts and accesses.

2.4.5 Pin Code Request

The offline components do not support any pin code entry. If pin code request is activated in HYDRA, the badge number is read instead.

2.4.6 Badges in Download Once Only

In HYDRA you can create a badge number several times with different periods of validity and enter several [access time models](#) for an [access](#) on a [badge](#) . The offline components can process a badge only once. For this reason, only the currently valid access authorization of a badge and/or the access authorization of a badge valid next in time is transferred to the offline component. If there are several current access authorizations with different access time models, the authorization with the smaller number of the access time model is transferred.

2.4.7 Processing Public Holidays

Any [public holidays](#) loaded on the offline components are not only valid for one year, but also for the future years. As regards public holidays falling on different dates each year (Carnival Monday, Carnival Tuesday, Ash Wednesday, Good Friday, Easter Sunday, Easter Monday, Ascension of Christ, Mother's Day, Whit Sunday, Whit Monday, Corpus Christi and day of repentance), the formula for calculating the date is entered so that these public holidays will be processed correctly in the next years, too.

The public holidays for the current year are always loaded. This means that the public holidays are also configured for the next year if they are not yet created for the next year in HYDRA. If public holidays for the next year are changed, they may only be loaded on the offline components as from 01 January of the respective year.

2.4.8 Several Palms for Synchronizing Authorizations

If several palms are used to synchronize the authorizations of one or more accesses, only the synchronization date/time of the last Palm may be saved, and it is possible when checking whether there are changes for any access that the relevant access is not shown in the current list.

2.4.9 Display of Change Date/Time in Access Status

The maintenance of badges, access profiles, access authorizations, profile assignments and exceptional authorizations has an effect on the date/time of the last change in the access status for the accesses concerned and, as a result, the loaded authorizations are shown as being no longer current.

Changes to the terminals, accesses, access groups, time zones and opening hours, however, do not have any effect on the date/time of the last change in the access status.

3 Installation for Connection of Offline Components

As from version 2.1 of HYDRA XS-Sync and version 3.2 of the XS Manager, it is possible to perform initialization and synchronization of XS components optionally via a Palm or a notebook with infrared interface.

3.1 Installation of Palm Desktop and HotSync



This installation step is only required if XS components are to be initialized and synchronized via a Palm.

In order to be able to compare authorizations and logs by means of a Palm, the Palm Desktop and HotSync applications must first be installed on the relevant PC. The installation CD is part of the Palm scope of supply.

After installing Palm Desktop, the Palm must be connected to the computer and a HotSync must be carried out. This verifies that communication between the Palm and the computer works.

For Windows installations with several Windows users, the Palm Desktop has to be installed individually for each user who requires access.

3.2 Installation of Dorma XS Manager

When installing the Dorma XS Manager, the required programs for communication with XS components are installed.


Installation requires local administrator authorization. For Windows installations with several Windows users, the XS Manager has to be installed individually for each user who requires access.

If XS components are to be initialized and synchronized via a Palm, the programs required for this are loaded on the Palm upon the next HotSync. For this purpose, the Palm HotSync has to be started during the execution of the installation program. After installation, the XS Manager has to be transferred to the Palm by a HotSync.


3.3 Installation of HYDRA XS-Sync Program

The HYDRA XS-Sync program is installed through the installation program hy_xs_sync_setup.exe, which is stored in the subdirectory fterm\hy_xs_sync of the HYDRA directory in the HYDRA server. Installation requires administrator authorization.


Since HYDRA 7.1 and HYDRA MW 2.0 / MW 2.1 / MW 3.0 use different communication routines, the HYDRA version used is inquired during installation:

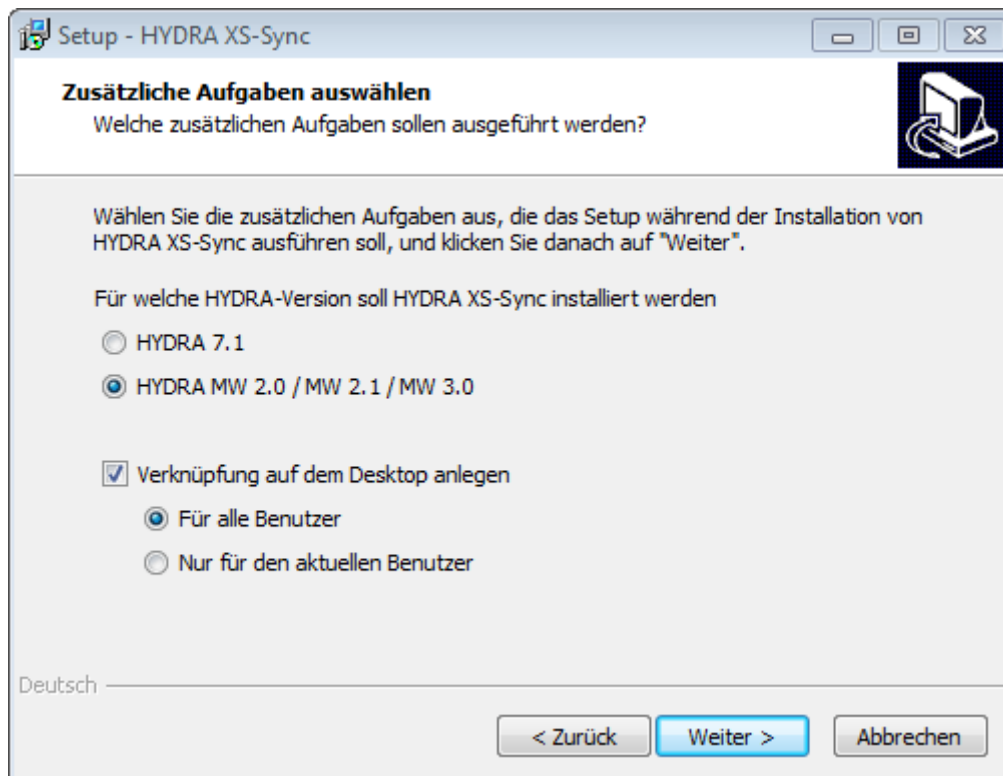

The following window opens at the end of the installation:

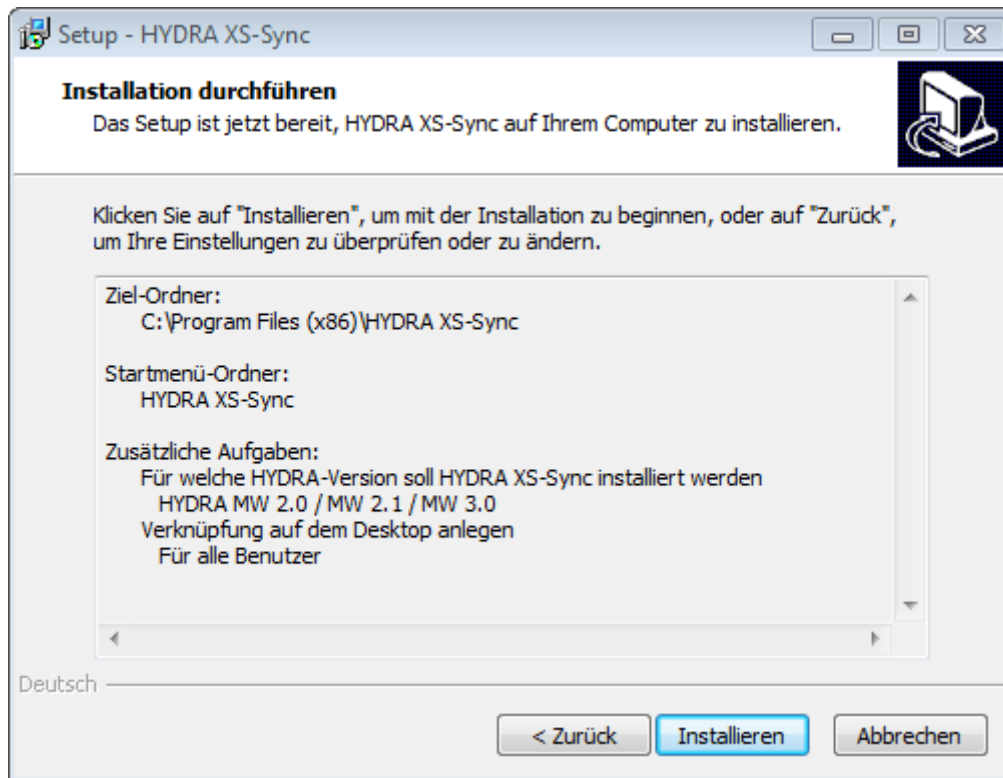

If the *HYDRA XS-Sync settings* option is active, the file `hy_xs_sync.bat` is opened in an editor and the required settings can be made:

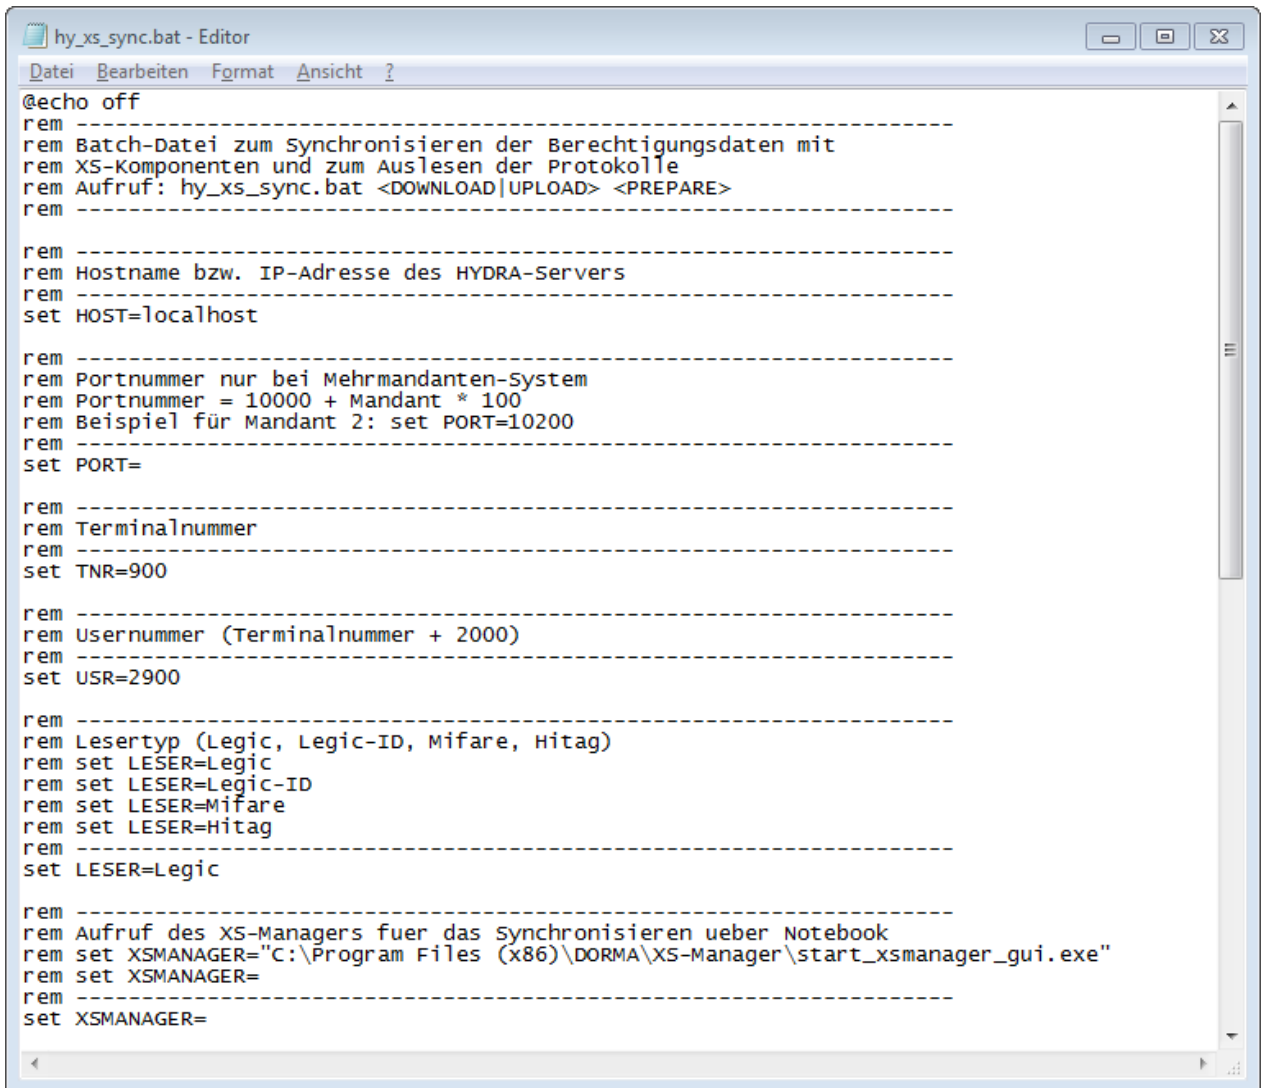

```
@echo off
rem -----
rem Batch-Datei zum Synchronisieren der Berechtigungsdaten mit
rem XS-Komponenten und zum Auslesen der Protokolle
rem Aufruf: hy_xs_sync.bat <DOWNLOAD|UPLOAD> <PREPARE>
rem -----

rem -----
rem Hostname bzw. IP-Adresse des HYDRA-Servers
rem -----
set HOST=localhost

rem -----
rem Portnummer nur bei Mehrmandanten-System
rem Portnummer = 10000 + Mandant * 100
rem Beispiel für Mandant 2: set PORT=10200
rem -----
set PORT=

rem -----
rem Terminalnummer
rem -----
set TNR=900

rem -----
rem Usernummer (Terminalnummer + 2000)
rem -----
set USR=2900

rem -----
rem Lesertyp (Legic, Legic-ID, Mifare, Hitag)
rem set LESER=Legic
rem set LESER=Legic-ID
rem set LESER=Mifare
rem set LESER=Hitag
rem -----
set LESER=Legic

rem -----
rem Aufruf des XS-Managers fuer das Synchronisieren ueber Notebook
rem set XSMANAGER="C:\Program Files (x86)\DORMA\XS-Manager\start_xsmanager_gui.exe"
rem set XSMANAGER=
rem -----
set XSMANAGER=
```

The following settings are required:

HOST

The HOST environment variable sets the host name or the IP address of the HYDRA server.

PORT

In a multi-instance system, the connection to the requested instance is configured via the port number. This is computed according to the formula:

$$\text{Port number} = 10000 + \text{instance} * 100$$

The port number remains empty for installations without several instances.

TNR

The TNR environment variable is used to enter the terminal number created for the Palm in HYDRA. This terminal number specifies which accesses are loaded on the Palm.

USR

The user number is computed from the terminal number + 2000.

LESER

The LESER (READER) environment variable is used to select the reader type of the badges used. Here, "Legic", "Legic ID", "Mifare" and "Hitag" can be selected.

XSMANAGER

This environment variable is used to set the file name for calling the XS Manager. The effect of this setting is that the XS Manager is started automatically if synchronizing has been started in HYDRA XS-Sync. If authorizations are synchronized via a Palm, this environment variable remains empty. When updating to version 2.1 of HYDRA XS-Sync, the file `hy_xs_sync.bat` is not overwritten, so the previous settings are maintained. Instead, a new file `hy_xs_sync.bat_new` is created. If you intend to set the environment variable XSMANGER in this case, the remaining settings from the file `hy_xs_sync.bat` have to be transferred to the file `hy_xs_sync.bat_new`, which must then be renamed to `hy_xs_sync.bat`.

After the settings have been made and saved, the HYDRA XS-Sync program is ready for use.

Please note:

The file `hy_xs_sync.bat` is found in the directory where HYDRA XS-Sync was installed.

The files `hy_xs_sync.bat` and `hy_xs_custom.hsc` are not overwritten upon re-installation of HYDRA XS-Sync in the same directory. This means, for instance, that the program can be installed again in the case of an update to version 2.1 of HYDRA XS-Sync without losing the customer-specific settings.

3.4 Notes on Installation

Should errors occur during installation or if a previously installed system does not work anymore, it is usually necessary to uninstall and subsequently reinstall all components (Palm Desktop, XS-Manager and HYDRA XS-Sync).

If HYDRA XS-Sync does not start after installation, but terminates with an error message, the XSSync-DLL is probably not registered correctly. This may be repeated in a DOS box in the subdirectory `xssync` of the directory where the Dorma XS-Manager is installed, by calling up

```
regsvr32 XSSync.dll.
```

A system re-start may be required after registration of the DLL.

For the operation of HYDRA XS-Sync under Windows 7, the settings for the user account control (Control Panel - Security Center - Action Center - Change User Account Control settings) must be set to "Never notify".

4 Synchronization of Dorma Offline Components

The HYDRA XS-Sync application synchronizes the configured accesses and their opening hours and access authorizations with the XS Manager on a notebook and/or Palm. Starting the program opens the following window:

Function Key Assignment

Synchronizing

The *Synchronize* function key is used to process the logs read from the XS components and subsequently the configurations and authorizations are requested from HYDRA and transferred to the notebook and/or the Palm.

Reading

The *Read* option only transfers the logs read from the XS components to HYDRA.

Download log

After *synchronizing* the authorizations, this button can be used to display the download log.

Upload log

After *synchronizing* or *reading* the logs, an upload log is obtained via this button.

Close

This function closes HYDRA XS-Sync.

After starting synchronization or reading of the data, the request to start the PC Sync in the XS Manager on the notebook and/or the HotSync on the Palm is displayed in the dialog instead of these two buttons (synchronize and read):

After performing the HotSync process, the number of data records transferred is shown in the list and the download and upload logs may be checked.

The configurations and authorizations on the notebook and/or Palm have now been updated and may be loaded on the XS components via the infrared interface. For more information on this, please refer to the XS Manager documentation.



The synchronization software HYDRA XS-Sync is only available in German.

4.1 Troubleshooting

If the error message "No download data found" appears when loading the authorizations, this may be due to the fact that the `hy_xs_data` directory (directly in the HYDRA directory) is missing on the server. Another possible cause is a lack in local authorization for writing data. In this case, writing authorization must be assigned for the program directory and or set to a lower level under Windows 7 UAC (settings for user account control).

The reason for an error message when reading the data into the XS Manager (Java NULL-Pointer-Exception) may be an incorrect setting of the search string. Please observe that the search string must contain an even number of digits.

5 Access on Card (AoC)

5.1 Overview

When using Dorma offline components (cylinders or fittings) for access control, authorizations are uploaded to the components from a notebook or a Palm handheld. One disadvantage of this procedure is that every time authorizations are changed, for example due to new employees or lost badges, they have to be downloaded on site onto the offline component.

By contrast, **Access on Card** (AoC) makes it possible to write authorizations on the card at a time recording terminal. This means, for example, that new employees can open the entrance without any need for authorizations to be updated on the offline component. AoC also provides a solution in the case of badges which are no longer authorized on an offline component. Depending on the time period for which the authorizations are written on the badge, they will expire automatically and do not need to be loaded on the offline component. If, for instance, authorizations for the current day only are written on the badge, it will not be possible to load the badge once it has been locked and the authorizations are no longer valid on the next day.

Even if AoC is used, a notebook or Palm handheld will still be required for the initial set-up and for the administration of offline components. When using a notebook, a USB adapter with an infrared interface is also required.

5.2 Requirements

For using AoC, memory space is required on the badge. Legic badges need a separate segment.

A Legic badge must have the following structure:

- It must have two segments with the same search string.
- By default, the first segment is the standard PZE/ZKS access segment with search string+badge data (standard MPDV segment).
- The second segment is the AoC segment. This segment **MUST** have the same search string as the 1st segment. The search string must immediately be followed by the AoC data according to Dorma AoC data structure.

At present, AoC is only available for Legic badges.

Another prerequisite for using AoC is HYDRA XS-Sync, version 2.1 or higher. As from version 2.1, HYDRA XS-Sync writes the access group onto the offline component. This is compulsory so that authorizations can be processed correctly on the badge.

In addition, the XS manager, version 3.2 or higher, must be loaded.

Please note:

When introducing AoC in an existing access control system with offline components, these components must have been synchronized at least once with HYDRA XS-Sync as from version 2.1 so that the authorizations on the badge can be interpreted correctly!

5.3 Memory Space Requirement on Legic Badge

The required size of the segment can be calculated according to the following formula:

$20 \text{ bytes} + 7 \text{ bytes} \times \text{number of authorized access groups} \times \text{number of days}$

If a badge is authorized for offline components which are classified in 5 access groups, and the authorizations are to be written on the badge for the next 2 days, this results in a memory space requirement of:

$20 \text{ bytes} + 7 \text{ bytes} \times 5 \times 2 = 90 \text{ bytes}$

If the badge is authorized at an access group for several non-consecutive time periods of a day or time periods with and without the function "Office unlocked", 7 more bytes are to be added for each time period and day.

If a badge is authorized at one or more access groups for the same time period every day (consecutively including weekends and public holidays), the authorizations are saved in a collective period and consequently occupy less space on the badge. A prerequisite for this is that the badge is only authorized for a time period which is identical at all access groups and for all days, and also with the same setting for the "Office unlocked" function at all access groups. The memory space required for this is determined by the largest access group affected:

$\text{Largest access group} / 8 + 1 \text{ byte}$

The authorizations for the remaining access groups are mapped by individual authorizations whose memory space requirement is described in the paragraph above.

Please note:

The required memory space for authorizations has an effect on the time taken to write the authorizations. Approx. 1 second is required for every 100 bytes. For this reason, authorizations should be allocated in such a manner that as many access groups as possible are saved using a collective period and as few access groups as possible, or ideally none at all, are saved in individual authorizations.

5.4 Configuration of HYDRA XS-Sync for AoC

The Dorma XS components are initialized and maintained via a notebook or a Palm. To ensure, for example, that authorizations are not also written on the components when the access logs are read, writing of authorizations in HYDRA XS-Sync has to be deactivated. This is done in the file `hy_xs_custom.hsc`:

```
...  
    //setting whether the access authorizations are to be written via notebook and/or Palm  
    // or whether they are only transferred via the card with Access on Card (AoC)  
  
    // If writing //  
    // berechtigungen_schreiben = "J";  
    berechtigungen_schreiben = "N";  
...  

```

By entering `berechtigungen_schreiben = "N"` (`write_authorizations = "N"`), the access authorizations are not written on the XS component and instead authorizations have to be written on the badge.

5.5 Configuration of Access Authorizations

In order to use the memory space on the badge as efficiently as possible and be able to write authorizations on the badge for an extended period, an effort should be made to classify the offline components in as few access groups as possible, since authorizations are written on the badge per access group.


Please note:

At present, only access groups with a number less than 256 are processed for AoC. Where older firmware versions are used, this restriction has to be expected in the future, too.

The access periods for the authorization can be set to exceed the next day. Values ranging from 0:00 (24:00 p.m.) to 48:00 p.m. are permissible; for times on the next day, 24 hours have to be added to the time. Consequently, you can load authorizations for night shifts, if necessary, on the badge, even if the authorizations are only written for the current day. An example of a possible access period is from 00:00 (24:00 PM) to 31:00 (07:00 AM the next morning).

5.6 Provision of Authorizations

An entry in the HYDRA scheduler provides authorizations in the server. The interval at which the authorizations are processed for the terminal on the server can be set in the *Interval* tab:

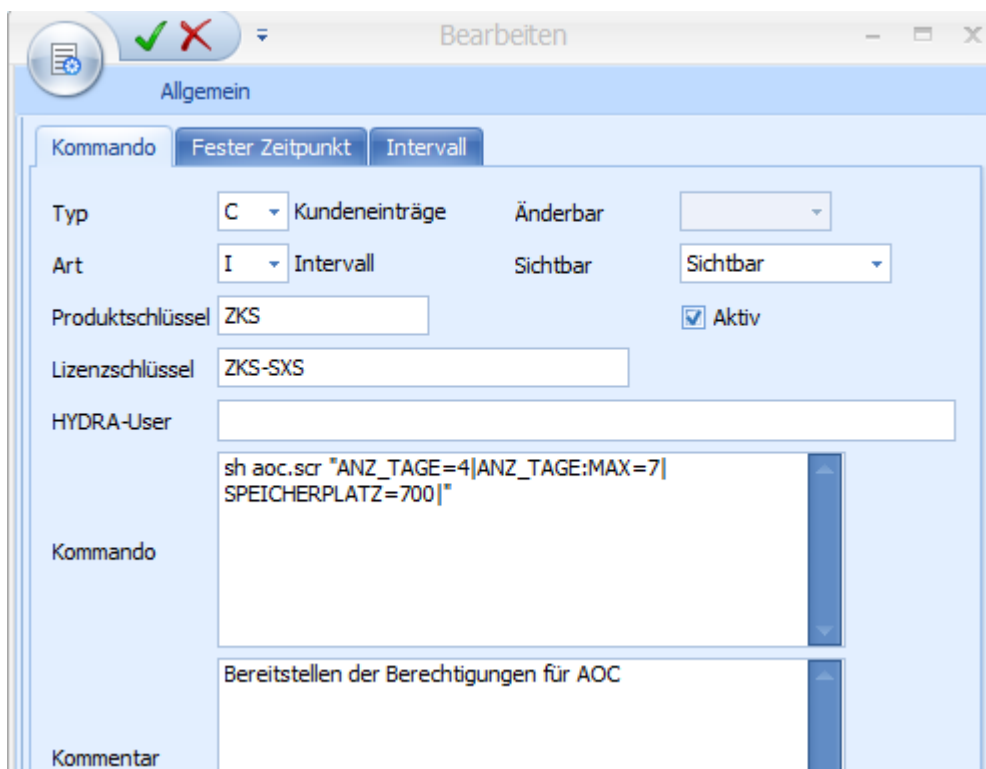

Tab "command":

Type C=customer entry

Category I=Interval

Visible Visible

Active [X] Activated

Product key ZKS

License key ZKS-SXS

Command (depending on the server's operating system)

Windows: sh aoc.scr "ANZ_TAGE=4|ANZ_TAGE:MAX=7|SPEICHERPLATZ=700|"

Linux: aoc.scr "ANZ_TAGE=4|ANZ_TAGE:MAX=7|SPEICHERPLATZ=700|"

Please also see the following description of parameters!

Comment Provision of authorizations for AOC

Tab "interval":

Interval	0:05:00
----------	---------

This entry only provides authorizations for accesses with Dorma offline components. These accesses are assigned to terminals of the type "Palm". The following parameters specify the supply of authorizations:

ANZ_TAGE=...

This parameter determines for how many days in advance the authorizations are written on the badge.

ANZ_TAGE:MAX=...

If the authorization within the previously set number of days does not extend to all of these days, the authorizations are written on the badge up to the maximum number of days set here.

Example: Authorizations for 2 days are written on the badge on a Friday. If the employee is not authorized on weekends, the authorizations for the next Monday are provided if the maximum number of days entered is at least 4. If this functionality is not required, the maximum number of days has to be set to the same value as the previously set number of days.

SPEICHERPLATZ=...

This parameter conveys the size of the badge memory space to the program for authorization provision. This ensures that the number of authorizations provided is not excessive. If the set number of days is not reached on a badge, this is logged on the server in the hyz_zut.pro file of the "err" directory.

TNR:VON=... / TNR:BIS=...

You have to enter the notebook and/or Palm used for managing the offline components in the HYDRA terminal configuration. The accesses for the offline components are then assigned to the "terminal" through which they are managed. If an installation extends to several locations, use the optional parameters TNR:VON and TNR:BIS to specify the terminals and hence implicitly the accesses whose authorizations are to be loaded on the badges. As a result, only the authorizations for the respective location are written in order to keep the memory requirements as little as possible.

ZGRP:VON=... / ZGRP:BIS=...

As an alternative or in addition to the terminal numbers specified by TNR:VON and TNR:BIS, the authorizations to be written can also be limited by a number range on access groups. In general, authorizations are only provided for accesses configured as offline components. These two parameters are also optional.

DATEI=...

If only authorizations for the relevant location are to be written for installations with several locations, a unique file name has to be set through the DATEI (FILE) parameter. The file name for PZE terminals is configured in the customer-specific configuration file *hytnrcfg.ini*.

```
for CTWIN      ./ctnet/win/ctwin/custom/
for AIP        .[/1]/custom/aip/
; general configuration for all terminals (default = aoc.dat)
[ Tnr Konfiguration 0]
Access-On-Card-File=aoc.dat
; configuration for terminal 90
[ Tnr Konfiguration 2090]
Access-On-Card-File=aoc.090.dat
```

A separate scheduler entry with the relevant file name is then required for each location.



The terminal updates authorizations along with the clocking authorizations for the PZE module. This results in the maximum duration until changes to authorizations are available on the PZE terminal, namely from the total of the cyclic loading time set in the terminal configuration and the interval set in the scheduler. If you use the default settings, authorizations are provided every 5 minutes in the server and downloaded every 5 minutes to the PZE terminal. Consequently, it can take up to 10 minutes until a changed authorization will be available in the PZE terminal and can be loaded onto the badge.

5.7 Writing Authorizations on the PZE Terminal

Writing a person's authorizations on his/her badge is performed at the PZE terminal through one of the 4 absence reason buttons.

Required program statuses:

Terminal program	Versions
drv_crypt.dll	V# 1.0.2.0
ctwin.exe	V# 7.2.5.98
ctaip.exe	V# 2.0.2.25
.\packets\pzezks72.dll	V# 2.0.1.12
.\functions\pze.dll	V# 2.0.1.11

5.7.1 Terminal Configuration at the Console

The Access on Card (AoC) function is configured in the [Terminal configuration](#) of the "HR functions" tab. The writing of authorizations on the badge can be configured using the "Absence reason" **AOC** and appropriate labeling on an absence reason button.

5.7.2 Terminal Configuration

For writing on badges, a reader-specific DLL has to be configured at the terminal. Available at present:

DLL	Description
drv_crypt.dll	PHG LEGIC Reader Type PHG Admitto 123 (phg-crypt protocol)

Configuration is performed at the terminal in the ctaip.ini file for AIP terminals and/or in the ctwin.ini file for terminals with the terminal program CTWIN.

For reasons of downwards compatibility, configuration is designed for the new phg-crypt and the former 1685A protocol. The relevant protocol mode can be set in the "Comports" section of ctaip.ini or in ctwin.ini.

Please note:

The AoC functionality is only available with phg-crypt readers!!! As a consequence, phg-crypt has to be set as protocol mode for AoC:

```
DRV_CRYPT-PARAM=PROTOCOLMODE=CRYPT-PLAIN
```

General setting:

```
[comports]
com1= drv_crypt
```

Reader setting for phg-crypt protocol:

```
[ COMPORTS-MASK ]
DRV_CRYPT-MASK=XXXXXXXXXXXXFFFFKKKKKK

[ COMPORTS-PARAM ]
DRV_CRYPT-PARAM=PROTOCOLMODE=CRYPT-PLAIN|
```

Reader setting for 1685A protocol: (NO AOC AVAILABLE!!!)


```
[ COMPORTS-MASK ]
DRV_CRYPT-MASK=XXXXXXXXXXXXFFFFF

[ COMPORTS-PARAM ]
DRV_CRYPT-PARAM=PROTOCOLMODE=1685A|
```

Further settings in the .ini file can influence the reader behavior. Such entries should be made very carefully, as they affect the entire behavior of the AoC application.

The following settings can also be made via DRV_CRYPT-PARAM.

Configuration of the start address of AoC data in the AoC segment.

Default is 2. This value depends on the badge configuration and hence the 2nd segment. This value indicates the byte address, as from which byte number in the segment the AoC data are to be located. For MPDV AoC badges, the start address is always 2, as the AoC data must immediately follow the search string of the AoC segment.

Warning: This may only be changed if the existing AoC badges do not correspond to the MPDV definition!

```
DRV_CRYPT-PARAM= Startadress=2|
```

5.7.3 Procedure on the Terminal


The "A.o.C.(Access on Card)" function is selected using the relevant function key.



Please note:

The screenshots show the AIP terminal display when loading authorizations on the badge. The CTWIN display is comparable in terms of contents.


After reading the badge, the following note is displayed:

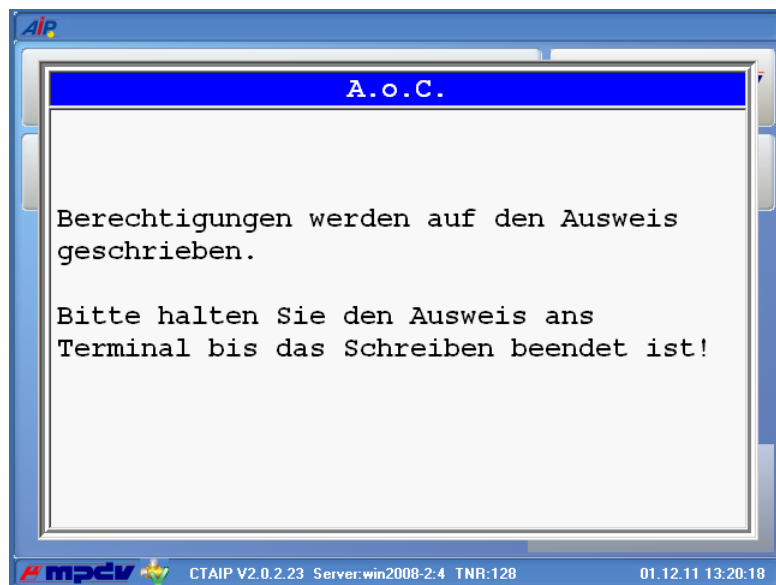

The note is closed after successful writing of the authorizations. The following screen is shown indicating that the process has succeeded (similar to a successful clocking).



In the event of an error, the following message window is displayed that can be canceled by "OK":

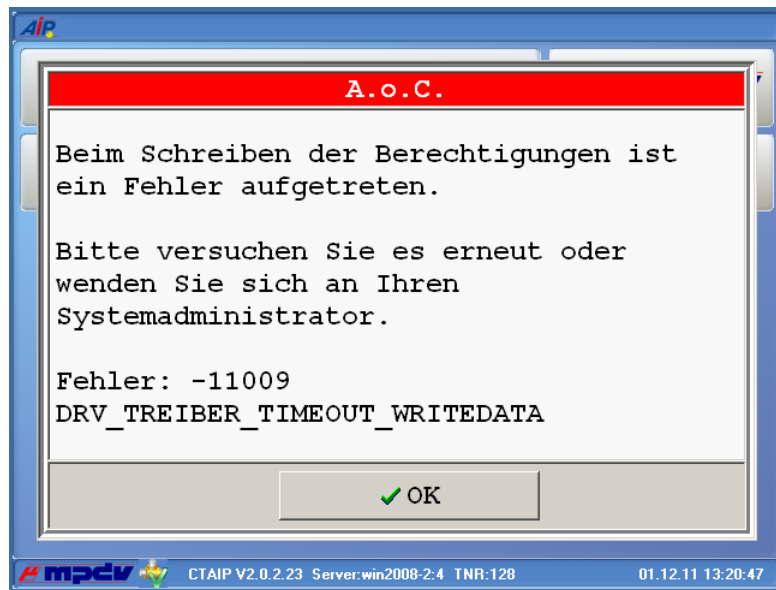

Possible errors include:

Error	Description
-11008	DRV_TREIBER_ERROR_WRITEDATA Error when writing the badge data. Possible reasons: - Badge is removed from the reader during writing - The free memory space on the badge is not sufficient - Communication to the reader and/or the badge is disrupted
-11009	DRV_TREIBER_TIMEOUT_WRITEDATA Timeout when writing the badge data Possible reasons: - Communication to the reader and/or the badge is disrupted

6 Status of access point

Overview

Menu	HR management → Access control → Access status
Transaction code	acst
Function authorization	acst

In this application, the current status and the time since this status occurred are displayed.

Zugang	Zugangsgruppe	Status	Datum von	Zeit
1 Osteingang Schrauben	2 Schraubenfabrik	Unerlaubt offen	05.03.2012	3:10
2 Haupttor Schraubenf.	2 Schraubenfabrik	Geschlossen	05.03.2012	3:44
3 Kantine	4 Kantine	Sabotage	05.03.2012	5:57
4 EDV-Raum	3 EDV-Abteilung	Offen	05.03.2012	5:59
5 Nebeneing. Schrauben	2 Schraubenfabrik	Geschlossen	05.03.2012	0:42
6 Tiefgarage	1 Tiefgarage	Keine Meldung	05.03.2012	5:56



Here, you can set in the configuration of the HYDRA server which access status is communicated from the terminal to the HYDRA server and how often [Access points](#)

An access can have the following statuses:

Closed

The access is closed.

Open

The access is open as it was used before. This status is only displayed if a door contact is connected.

Online

If the access is configured in a way that it does not signal the Open and Closed statuses to the HYDRA server, the Online status is displayed instead. If there is no cyclic status posting, then the access changes to "No message" (see below).

Opened too long

The access was opened because there was an authorized access and the allowed opening time was exceeded. This status is only displayed if a door contact is connected.

Open w/o permission

The access was opened without an authorized badge. This status is only displayed if a door contact is connected.

Free

A permanent activation is currently in place for this access.

Disturbance

The terminal has no connection to the access reader. The status of the access is unknown.

Sabotage

The access reader was opened. This status only appears if the reader has a *sabotage loop*.

No message

The access (or the terminal to which the access is connected) has not responded within the cycle time set for the access status. The status of the access is unknown.

Offline component

The access is an offline component for which no current status is available.



[Alarms and disturbances](#) are displayed in yellow in the list if they have been signed off and still exist. Alarm and disturbances not signed off are shown in red.

Additional information on Dorma offline components:

The following additional information is displayed in the access status for the Dorma offline components:

Date from/time

Since the current status for offline components is not known, "Offline component" is displayed instead. The time displayed provides information about when data was last written to or read from the palm.

Modified on

The editing of badges, access profiles, access authorizations, profile assignments and exceptional authorizations has an effect on the time of the last change for the relevant accesses and therefore causes the loaded authorizations to be displayed as no longer current.

Load badges

In addition to the time when the authorizations were loaded onto the Dorma XS component, this category also shows the number of cards loaded and whether the authorizations in the account are current. There are three different colors for LEDs:

A red LED indicates that the offline components are not current.

A yellow LED indicates that the authorizations are loaded onto the palm but there is no message whether the date was actually loaded.

A green LED indicates if the authorizations for accesses are current.

Synchronize badges

If authorizations were changed, this category shows the time when the data was loaded onto the palm. You can also see the number of transferred badges.

Access logs

The access logs displayed here up to the point in time were fetched at the XS component and read into HYDRA. It is not guaranteed that the access logs are complete, as the logs in the offline components are overwritten when the available memory is full.

Battery

This category shows the battery status of the XS component. If a red minus sign is displayed instead of the green plus sign, the battery must be replaced. The battery status is identified when the data is read from the offline component and therefore does not necessarily represent the current status.