شاشة

Shasha Guide

Everything in one file: installing, watching, and parental controls.

No ads · No recommendations · No sign-in · Kids' profiles · Time limits · Your phone as a remote · English and العربية



A YouTube app for the family TV

For Google TV

September 2026

Shasha Guide

Eight short parts

Read only the part you need. You install once; the rest is there when you need it.

1 What is Shasha? 2
2 Install in 9 steps 3
3 First launch 8
4 Everyday use 9
5 For parents 11
6 Settings 13
7 Troubleshooting 16
8 Updates 17

Part 1

What is Shasha?

A YouTube app for the family TV. It shows only what you choose.

No ads, no recommendations

Home shows the latest videos from your channels, nothing else.

Kids' profiles

A child sees only the channels you allow.

Time limits

Daily minutes and viewing hours for each child.

Serious mode

A video you start is watched to the end.

Skips sponsor segments

The ads read inside a video, skipped by themselves, using SponsorBlock data.

Voice search

With the remote's microphone, in English or Arabic.

Your phone as a remote

Send links and grant extra time from your phone.

Your data stays home

Everything lives on the TV. No accounts, no tracking.

The pictures in this guide show Shasha in Arabic. In English every screen is the same, mirrored left to right.

Part 2

Install in 9 steps

Only once, in about fifteen minutes. Follow the steps in order.

You need

- The TV (Google TV) and its remote.
- A computer: Windows or Mac.
- Both on the same home network.

Every step

Computer TV Phone

tells you where to do it.


1 Download the setup kit

Computer

On the repository page, click `Shasha-Setup.zip`, then **Download**.

Unzip it. Windows: right-click → **Extract All**. Mac: double-click.

Everything you need is in this folder. Don't move anything out of it.

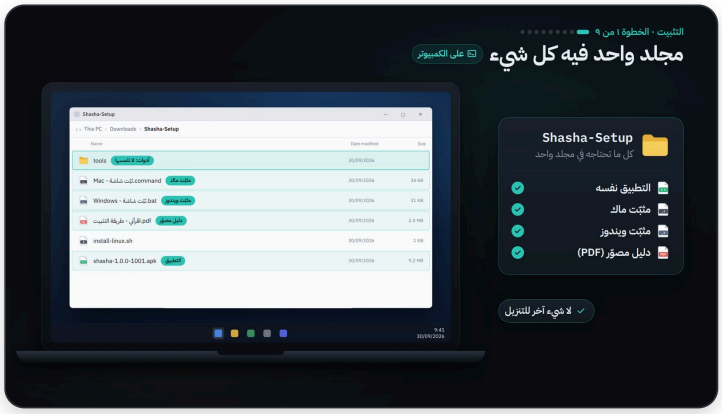

One folder with everything: the app itself, the Mac installer, the Windows installer, the illustrated guides (PDF). Nothing else to download.


2 Turn on developer options

TV

Settings → System → About.

On **Android TV OS build**, press **OK** seven times.

A message appears:
You are now a developer!

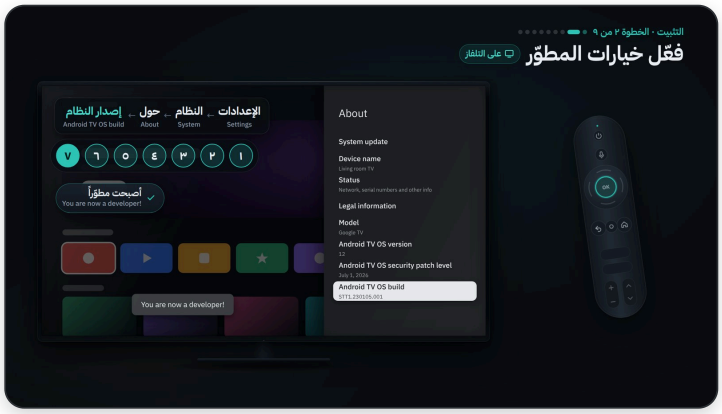


Turn on developer options: press the middle button (OK) seven times.

3 Turn on debugging TV

Settings → System → Developer options.

Turn on **USB debugging**.

Also turn on **Network debugging** if you see it.

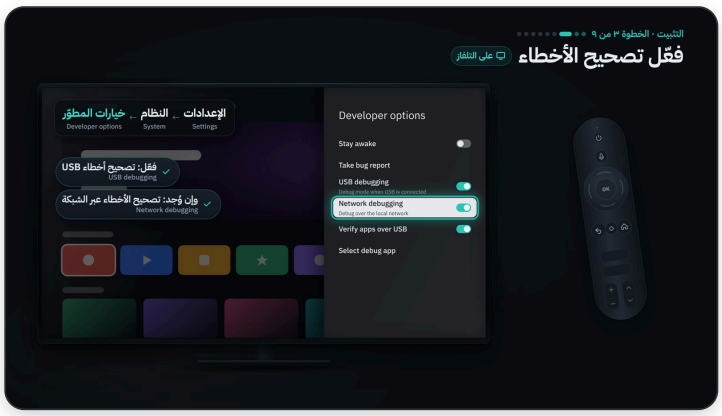

Turn on debugging: USB debugging, and Network debugging if it is there.

4 Find the TV's address TV

It is four numbers with dots between them, like `192.168.1.50`.

Write it down.



Note the TV's address: on Wi-Fi, under IP address. Wired? Under «Connected».

On Wi-Fi

Settings → Network & Internet → your network's name.

Read the number under **IP address**.

On a cable (Ethernet)

Settings → Network & Internet → **Ethernet**.

Read the number under **Connected**.

> **The address changed?**
> It can change after the router is switched off. Repeat this step and note the new address.

5 Run the installer Computer

Open it as shown in the two boxes below.

It asks: Type the TV's IP address. Type the address, then **Enter**.

The installer speaks English and Arabic.



Type the TV's address in the installer window.

Windows

Double-click **Windows - ثبّت شاشة** (“Install Shasha”).

If a blue Windows warning appears: click **More info**, then **Run anyway**.

Mac

Double-click **Mac - ثبّت شاشة** (“Install Shasha”).

If the Mac refuses to open it: System Settings → Privacy & Security → scroll down → **Open Anyway**.

Since macOS 15 Sequoia, “right-click, then Open” is no longer enough.

6 Allow the computer TV

The TV shows:


Allow USB debugging?

Tick:

Always allow from this computer

Then press **OK**.

You have 60 seconds.

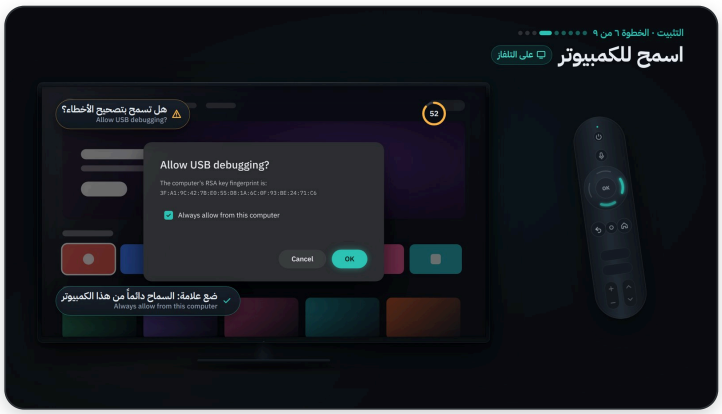

Allow the computer: tick «Always allow from this computer», then OK.

7 Wait: the installer finishes on its own

Computer

It installs Shasha and gives it its permissions.

It asks whether to turn off the official YouTube app. Type `y` or `n`.

It opens Shasha and says Done! Press any key to close the window.



It finishes on its own: installs the app, grants its permissions, asks about official YouTube (y or n), then “Done”.

8 First launch

TV

Shasha asks for a parent PIN, then your profile, then your child's.

The details are in Part 3 (page 8).



Something doesn't work?
See Part 7: Troubleshooting (page 16).

9 Link your phone (optional)

Phone

In Shasha: Settings → **Local server** → **Pairing QR code**.

Scan the code with your phone's camera.

Add the page to your phone's home screen.



Link your phone: “Phone control” on the TV shows the code; scan it with the phone's camera.

That's it: Shasha is installed

Updating later

Run the installer again (step 5).

Your data stays as it is.

The easier way is in Part 8.

Removing it

On the TV: Settings → Apps → Shasha → **Uninstall**.

This erases all of Shasha's data.

If you use the command line

The installer accepts **--undo**: it brings back official YouTube and takes away Shasha's permissions, but leaves it installed.

Part 3

First launch

Four short screens, only once.



1 The parent PIN

4 to 8 digits. Keep it safe.

It opens your profile and Settings, and takes a child out of their profile.



2 A profile for your child

A name and a picture. It starts with one hour a day, from 7 am to 10 pm.

Change that later, in Part 5.



3 Allowed channels

Choose the channels your child can watch.

Your child sees nothing else.



4 Who's watching?

Appears every time Shasha starts.

A child's profile opens straight away. Yours needs the PIN, unless you turn that off (Part 5).

Part 4


Everyday use

Lost? Press **BACK** a few times until you are back home.



Home

- The latest videos from your channels, newest first.
- The side menu is on the left: press ← . (In Arabic it is on the right.)
- Hold **OK** on a video: **Watch later** or **Go to channel**.

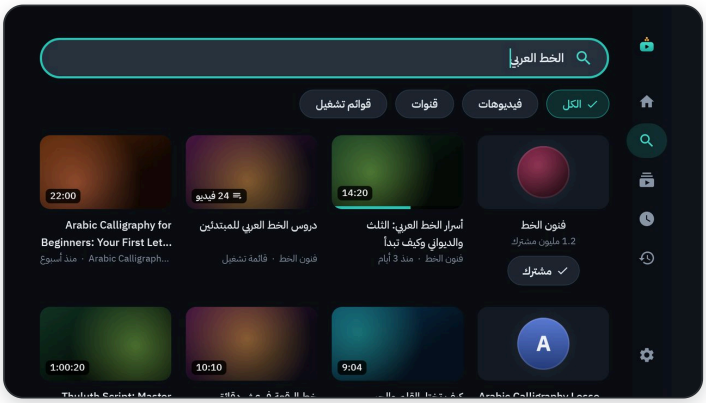


Search

- Type with the on-screen keyboard. Suggestions appear as you type.
- Pick a type: All, Videos, Channels, Playlists.

New: voice search

Press the microphone button on the remote and say what you are looking for. It understands English and Arabic. Switch with the «ع / EN» button next to the microphone, or in Settings.

The player

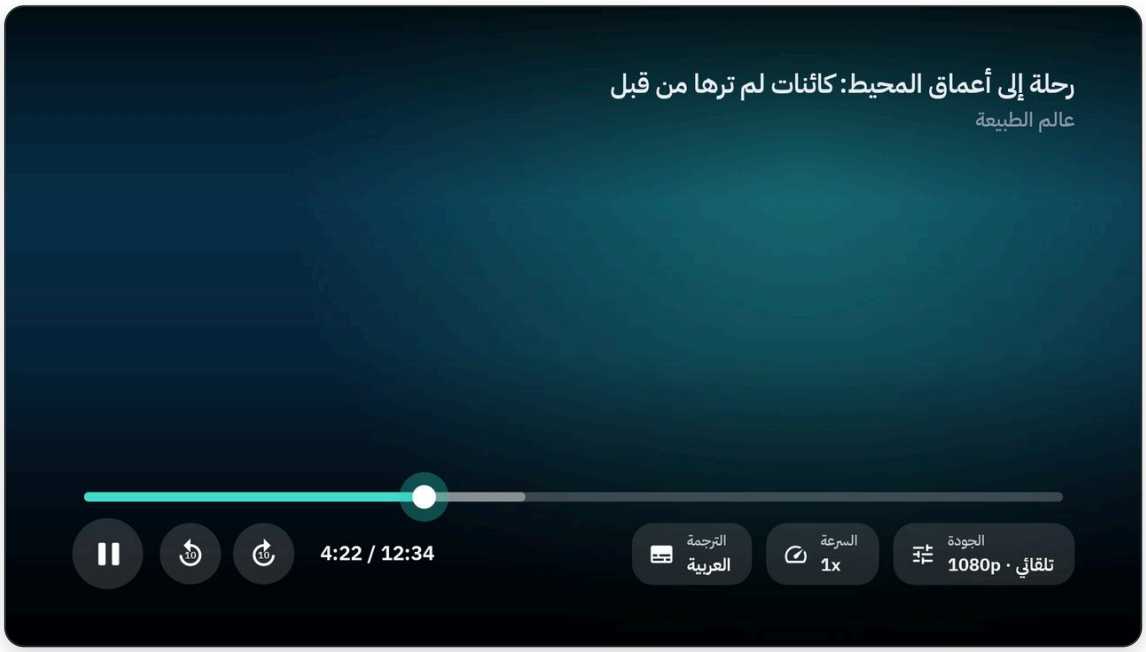

OK	Pause and play.
← →	Back and forward 10 seconds.
↓	The captions, speed and quality buttons.
Speed	From 0.5× up to 4×.
Resume	A video carries on where you stopped.
Playlists	The next video starts after 5 seconds.

The controls hide by themselves after 3 seconds. Any button brings them back.

Skipping sponsor segments (SponsorBlock)



- Shasha jumps over the ad read inside the video, by itself.
- A message says: Skipped: sponsor.
- Want to see it? Press **Undo skip** within 5 seconds.

Part 5

For parents


Everything in this part needs the parent PIN.

Kids' profiles

Settings → **Profiles & parent PIN** → **Manage profiles**.

Add a profile, change a name or picture, or delete a profile.


> **Your profile without a PIN?**
> In the same section, turn off **Ask for the parent PIN to open the adult profile** (on by default). Your profile then opens without a PIN, for your child too. Settings always ask for the PIN.

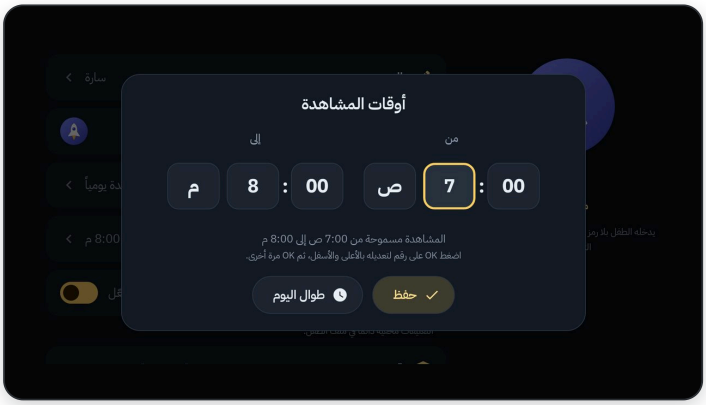

Daily time and schedule

Settings → **Time limits & schedules**.

- **Limit:** how many minutes a day.
- **Schedule:** from what time until what time.
- 5 minutes before the end, a gentle reminder appears.

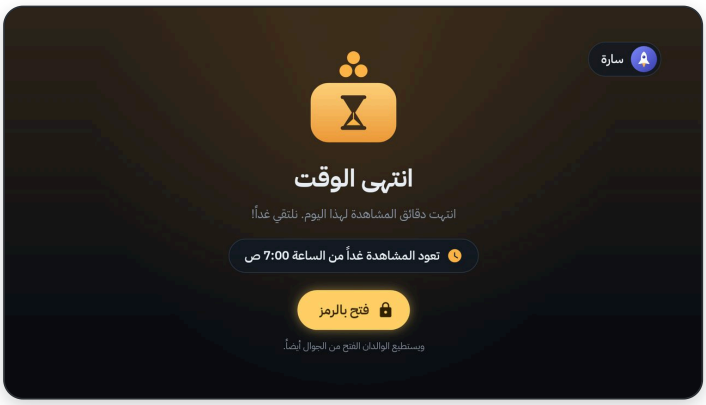

When time runs out

- A “Time's up” screen appears.
- Extra time? Enter the PIN and choose 15, 30 or 60 minutes, or the rest of the day.
- Or grant time from your phone.

Allow and block lists

Allowed

Each child has a list. They see nothing else.

Blocked

Channels hidden from every profile.

To add one quickly: hold **OK** on a channel card, or send its link from your phone.


Serious mode

A video you start is not left until it ends.

- On from the start, in every profile.
- **A child** can leave before the end only with the parent PIN.
- **An adult** holds BACK for 10 seconds, then types a phrase that appears.
- Leaving early is counted as “giving up” in the statistics.
- To turn it off: Settings → **Serious mode**. BACK then leaves any video.



1. Keep holding until the circle is full.

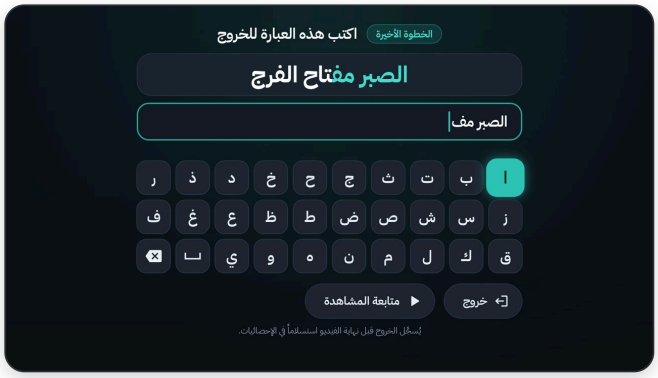

2. Type the phrase exactly as shown, then **Leave**.

Control from your phone





- Pause and play, search, and send a link to the TV.
- **Parent section** (with the PIN): grant extra time, and add a channel to the lists.
- It can also end a video locked by serious mode.
- The page follows Shasha's language.

The phone and the TV must be on the same home network.

Part 6

Settings

All behind the parent PIN. You don't have to change anything: the defaults work well.

Setting	What it does	Default
Serious mode		
Serious mode	A video is watched to the end	On
Adults may leave early	By holding BACK, then the phrase	Allowed
Hold duration	Before the phrase appears	10 seconds
Exit phrase	Random from a list, or your own	Random
Allowed skipping	Skipping ahead that still counts the video as finished	30 seconds
Time and reminders		
Reminder before time runs out	A gentle reminder before it stops	5 minutes
Reminder duration	How long it stays on screen	12 seconds
Extra-time choices	Offered after the PIN on “Time's up”	15 · 30 · 60 minutes
Parent PIN		
Attempts before lockout	Wrong PINs in a row	5
First lockout	And longer each time	5 minutes
Settings stay open	After entering the PIN	5 minutes
Ask again after leaving the app	After Shasha has been off screen	15 seconds
PIN to open the adult profile	Off: your profile opens without it. Settings keep the PIN	On
Playback		
Starting speed	The player's menu goes up to 4×	1×
Seek step	One press left or right	10 seconds
Hide the controls	With no key pressed during playback	3 seconds
Countdown to the next video	Inside a playlist	5 seconds
Child back to home	After a child's video ends	10 seconds

Setting	What it does	Default
Skipping sponsor segments (SponsorBlock)		
Categories	Which segments are skipped	Sponsor, self-promotion, interaction reminder, intro, outro
“Undo skip” window	In adult profiles	5 seconds
Skip message	In a child's profile	3 seconds
Kids		
Hide comments	Per profile. Always hidden for a child	Shown for adults
Shorts limit	Anything shorter counts as a Short	180 seconds
Quality, phone and voice		
Default quality	The highest quality, lowered by itself on a weak network	Auto up to 1080p
Phone control	Turns the local server on and off	On
Server port	A number from 1024 to 65535	8765
Voice search language	English or Arabic	Arabic
App		
Language	The whole interface and the phone page	العربية
Theme	Dark or light	Dark

Changed something by mistake?

- Every section has a **Restore default** button.
- To restore everything: Settings → **Reset** → **Restore all settings to their defaults**.



Nothing is deleted
Profiles, the PIN, subscriptions, history, lists and limits all stay.

Language and theme

Language

Settings → **Language** : **العربية** (the default) or **English**.

In English the whole interface runs left to right. The phone page follows it.

Theme

Settings → **Theme** : **Dark** (the default) or **Light**.

Dark is easier on the eyes in a dim room.

This guide and the video, inside Shasha

Settings → **Guide & video** : this guide as pages you turn with the remote, and the explainer video. In the language you chose.

About

The version, where the skip data comes from, and the libraries and their licences. And:

Made by Ahmad Nayfeh — made with love for my family

Also the developer's other apps, each with a QR code. Scan it with your phone's camera.

Shadra

شذرة

The first code opens its website, the second its Google Play page.

shadhra.app

shadhra.app

Google Play

Silah

صِلة

github.com/Ahmad-Nayfeh/silah

Masarif

مصاريف

github.com/Ahmad-Nayfeh/masarif

Khatwa

خطوة

github.com/Ahmad-Nayfeh/khatwa

Part 7

Troubleshooting

A short question, a short answer.

The installer can't reach the TV

Is the TV on? Is the computer on the same home network? Check the address (step 4) and type it again.

“The TV refused the connection”

Turn on **USB debugging** (step 3), then run the installer again.

“Allow USB debugging?” never appeared

Turn **USB debugging** off and on again. Run the installer again and watch the TV.

The TV only has “Wireless debugging”

Select it, then **Pair device with pairing code**. When the installer asks, type the address and the 6-digit code.

The installer window closes at once (Windows)

Press the Windows key, type `cmd`, then **Enter**. Drag the installer into the black window and press **Enter**. Read the message.

The Mac won't open the installer

System Settings → Privacy & Security → **Open Anyway**.

Do the same if the `adb` tool is blocked.

“Signed with a different key”

An old copy is on the TV. Remove it: Settings → Apps → Shasha → Uninstall. Then install again.

A video won't play

Try another video. If none play, YouTube has changed something: update Shasha (Part 8).

Is the protection absolute?

No. It is enough for everyday life, but extreme steps, such as a factory reset of the TV, get around it. Look at **Protection status** in Settings now and then.

Part 8

Updates

Now and then YouTube changes things. Playback may stop when it does.

1

Playback stops.
Nothing is broken on your side.

2

A fix is published.
A new version of Shasha.

3

You update.
In one of the two ways below.

The easy way

Settings → **Check for updates** → **Download and install**.

Confirm in the TV's window.

Works if Shasha was built with the update key. If you see “Checking for updates needs a read token”, use the other way.


From the computer

Download the new **Shasha-Setup.zip**.

Run the installer as in step 5.

The TV won't ask you to allow the computer again.

Your data stays
Profiles, subscriptions and history are not erased by an update.

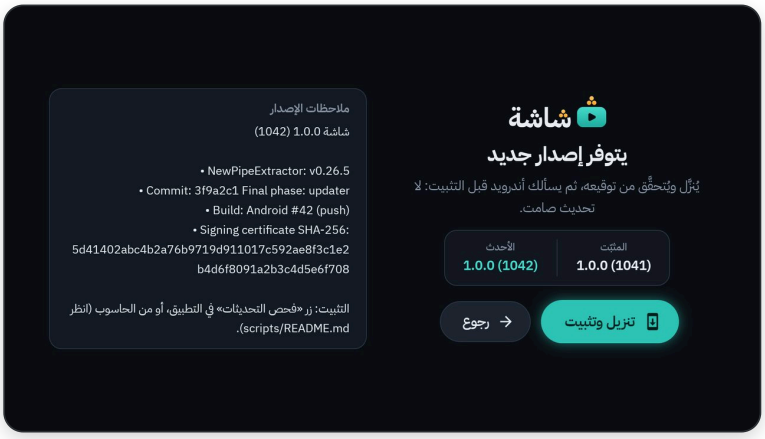

شاشة

Calm viewing for the whole family.