




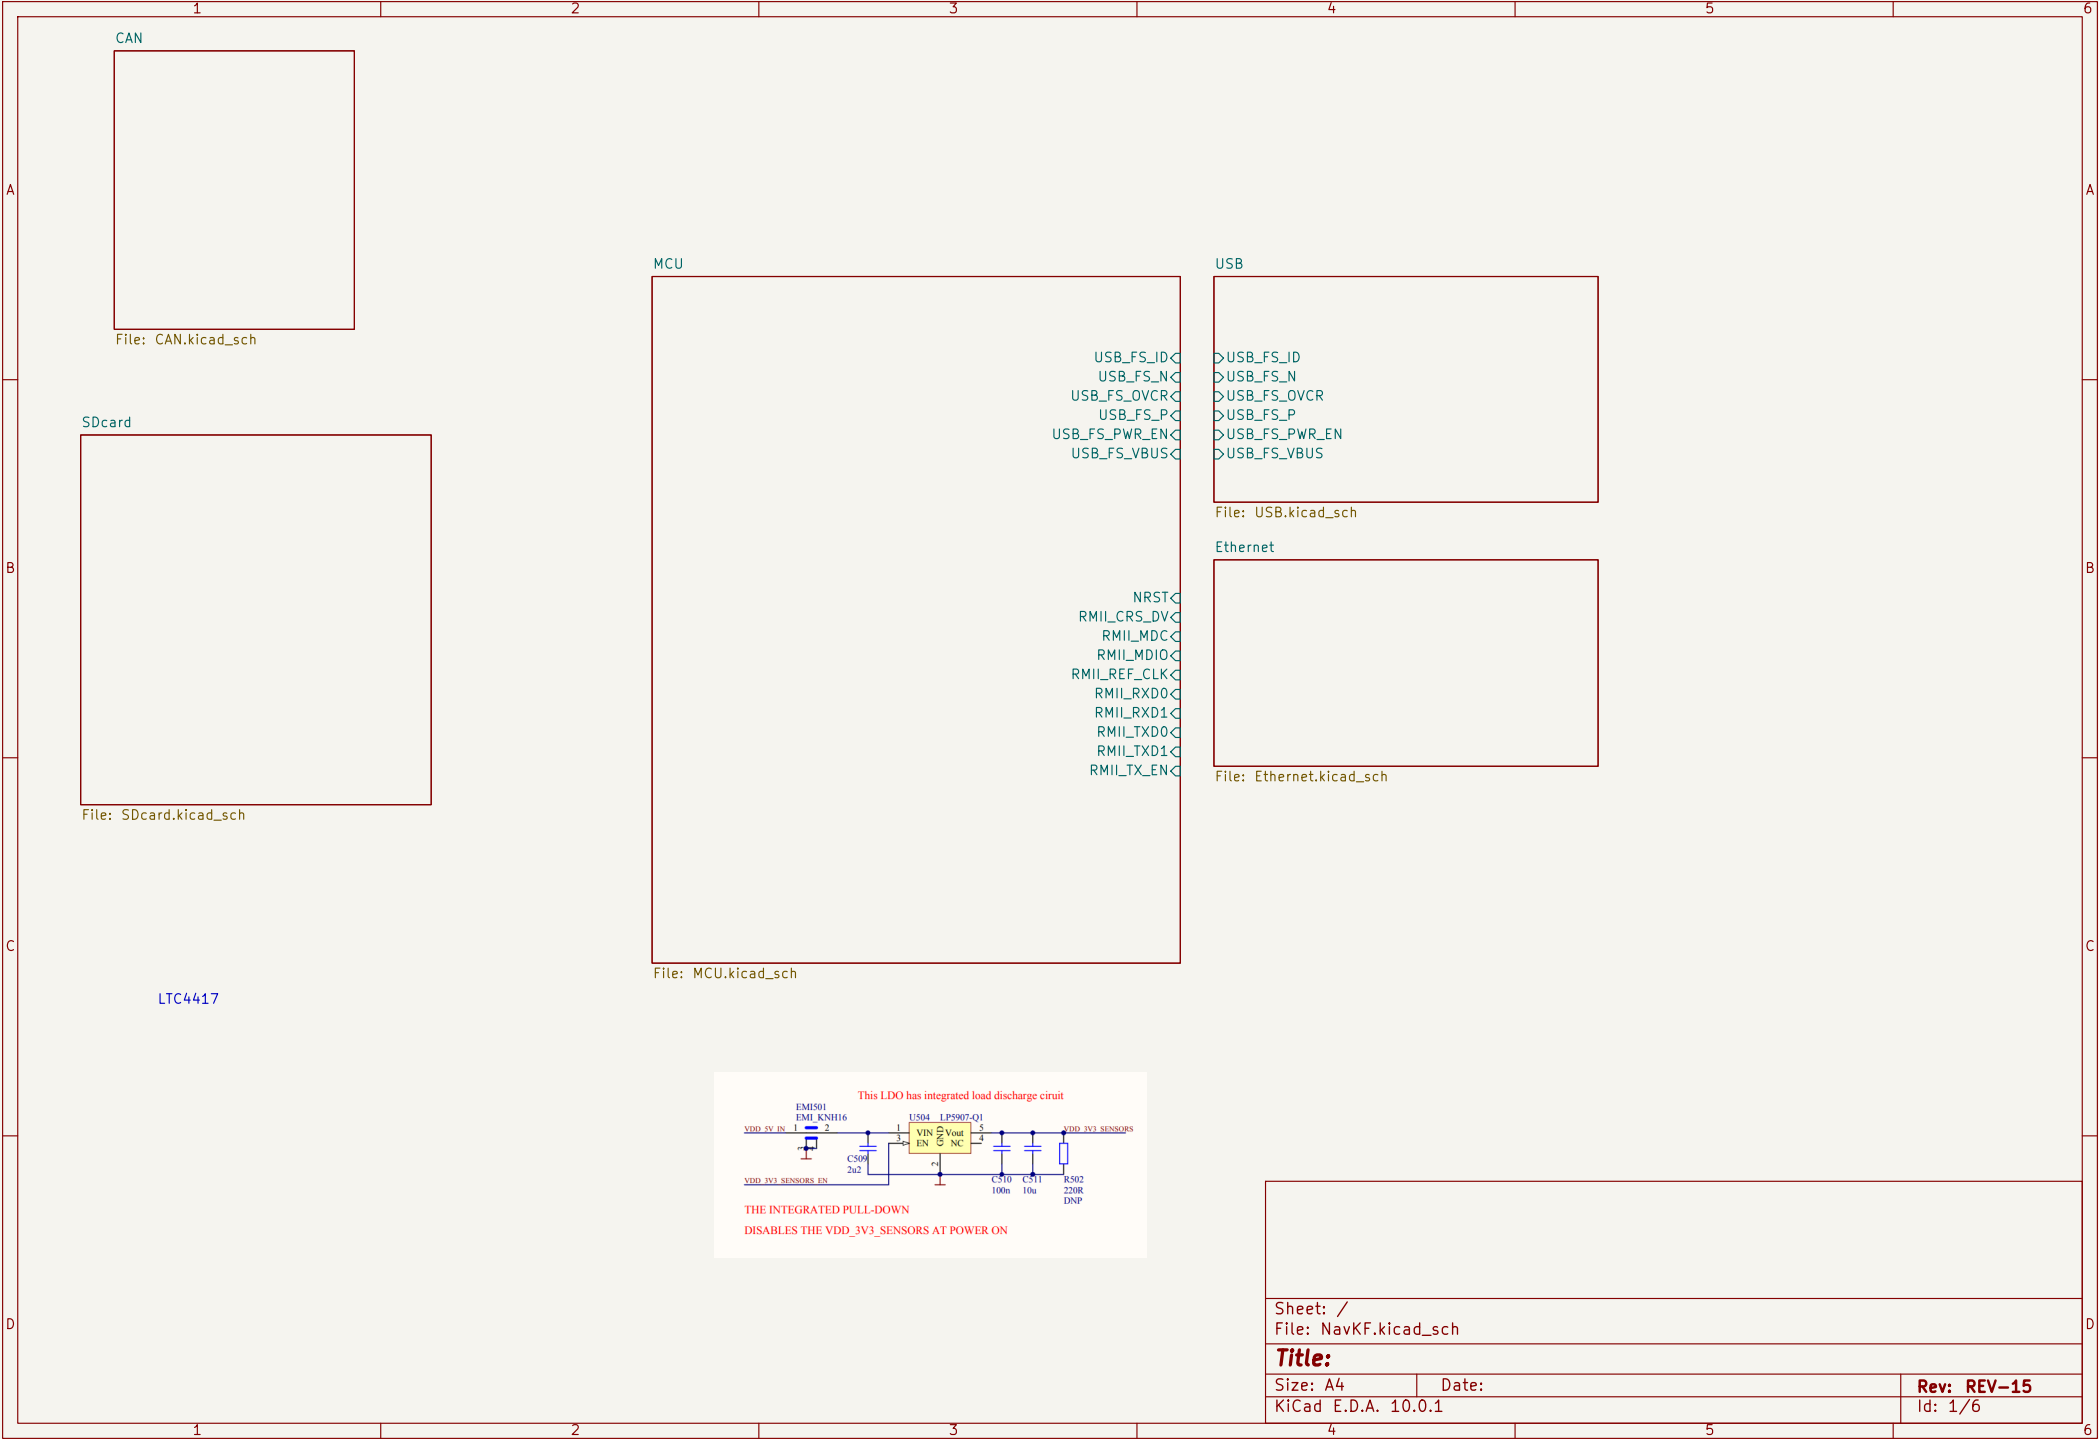



Buzzer

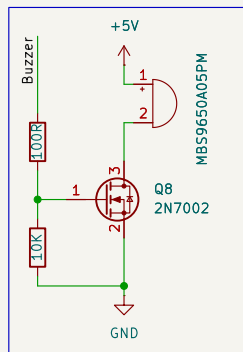








POWER





LED_STATE



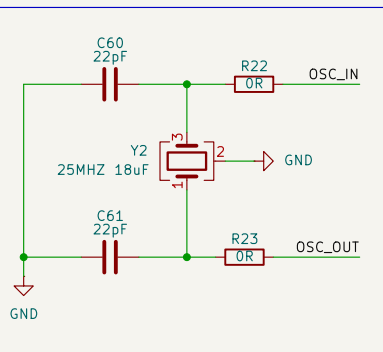
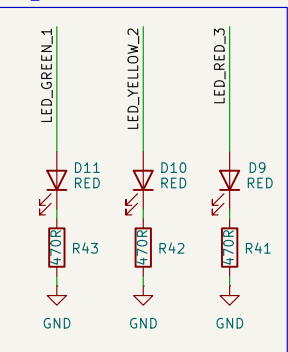


Reset

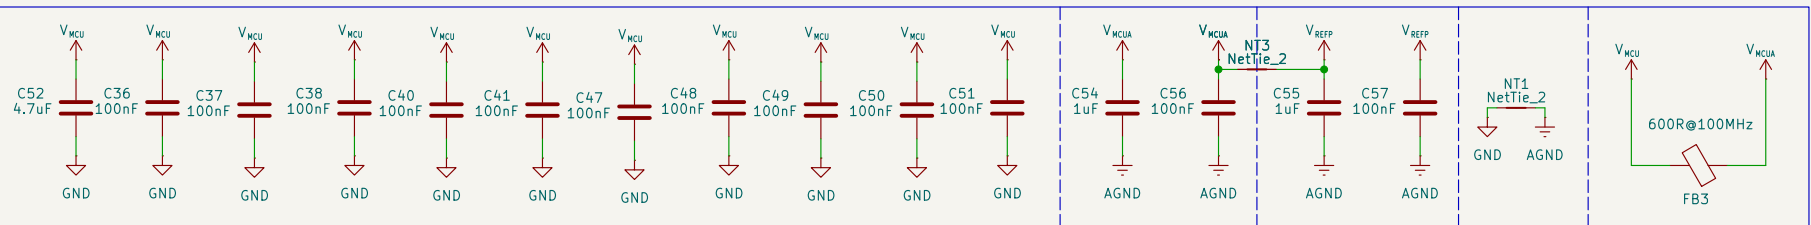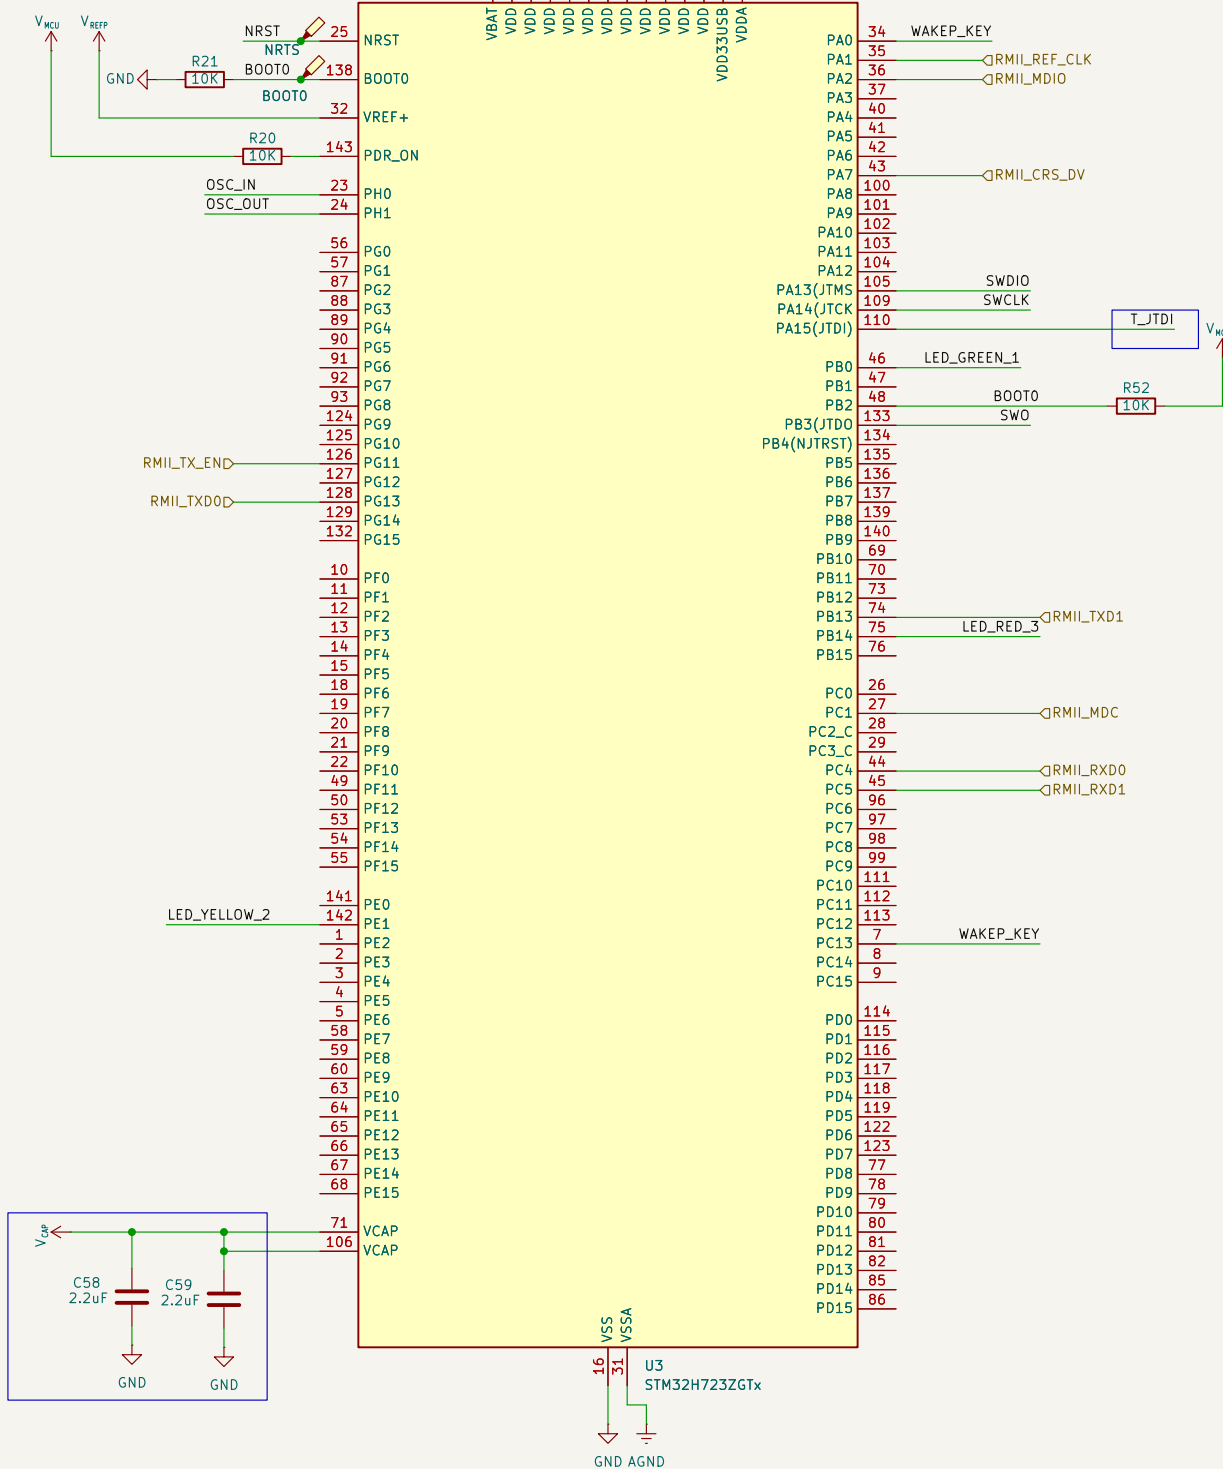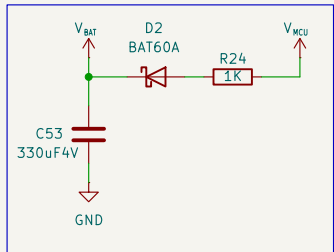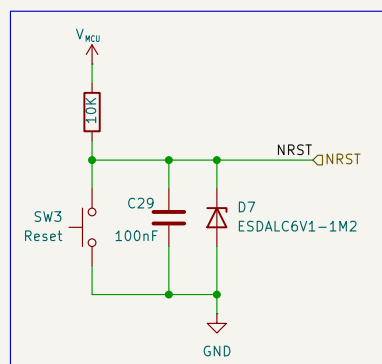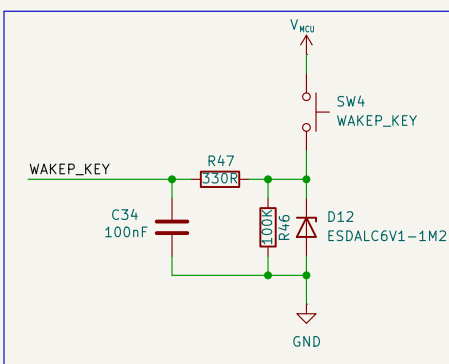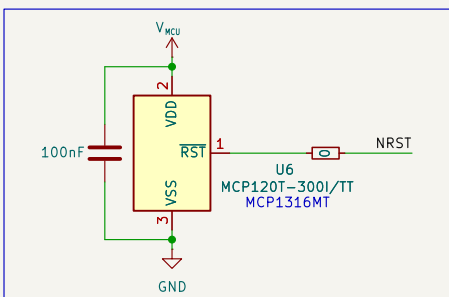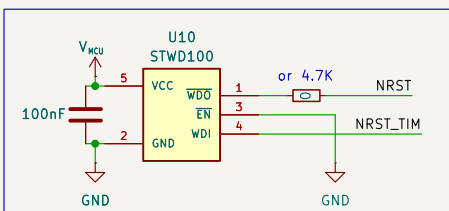

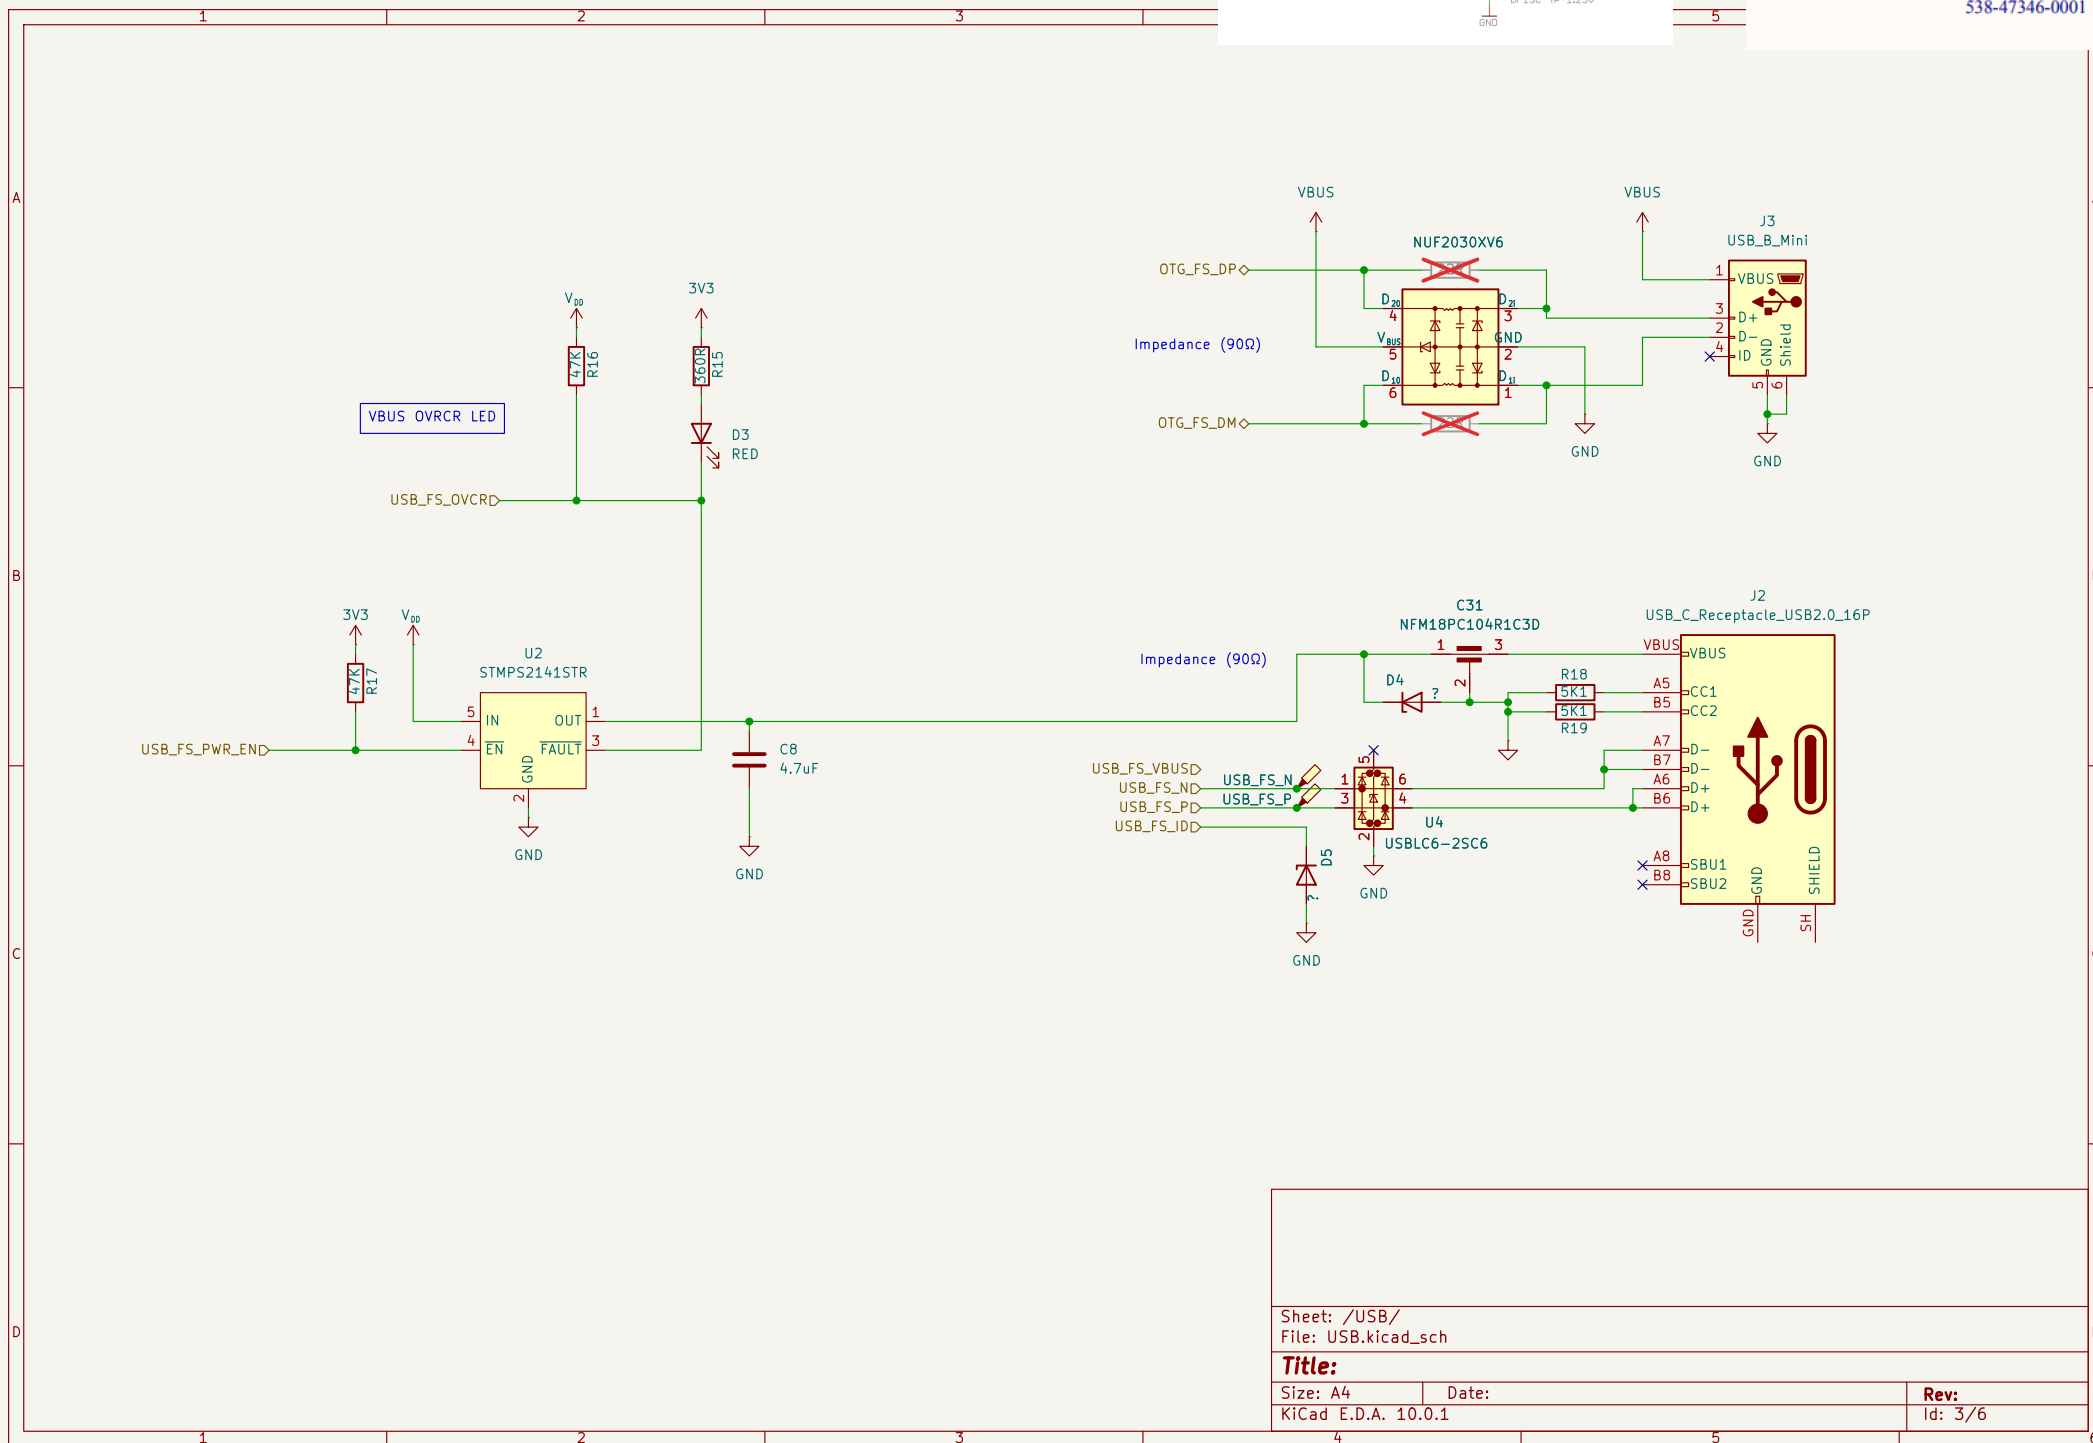

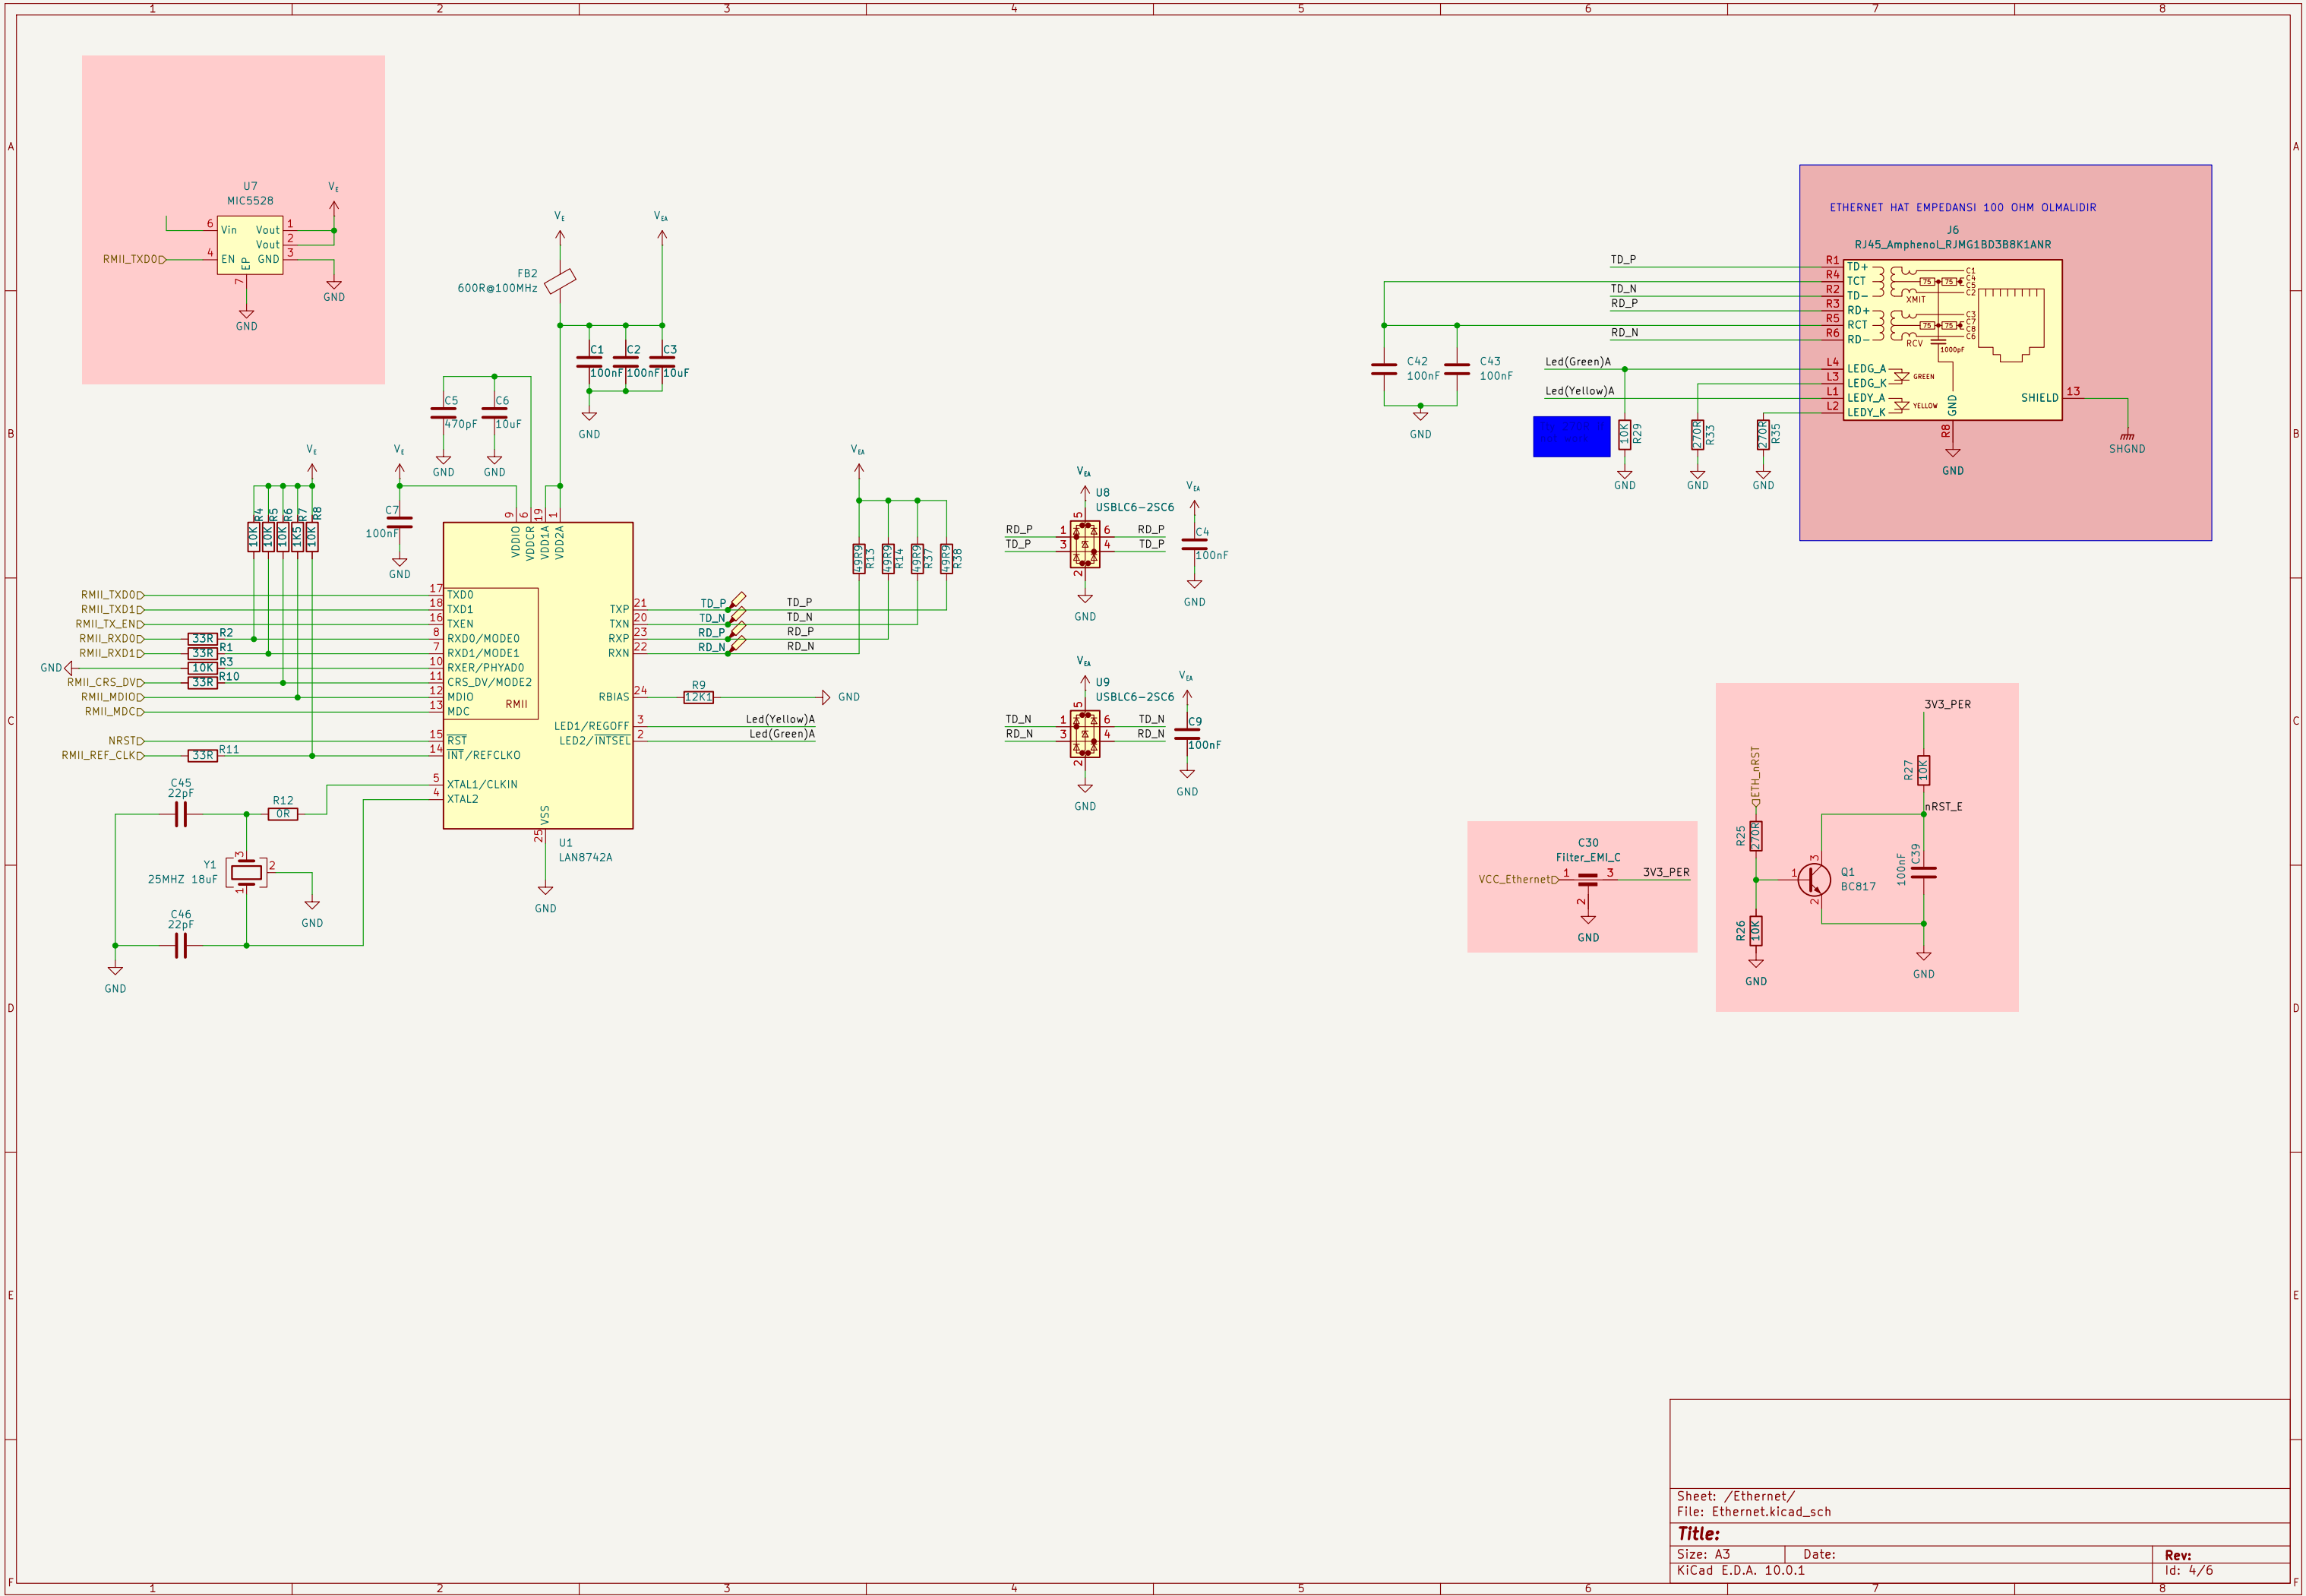

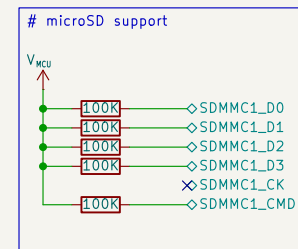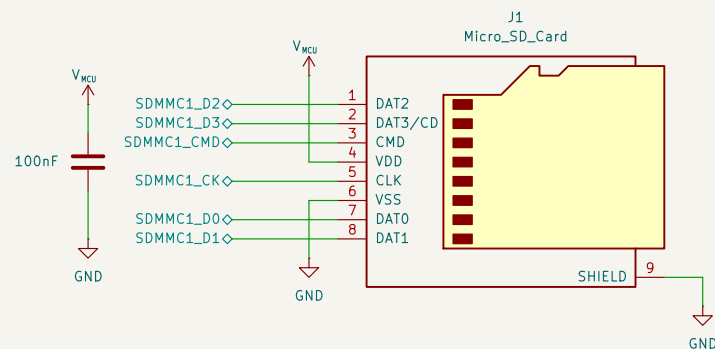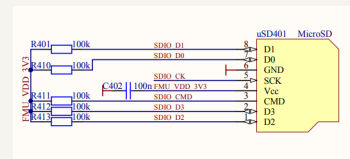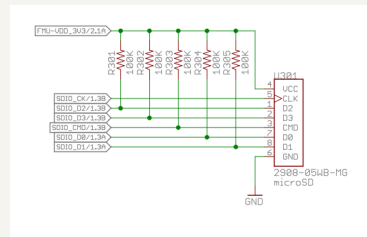

Sheet: /SDcard/
File: SDcard.kicad_sch

Title:

Size: A4 Date:

KiCad E.D.A. 10.0.1

Rev:
Id: 5/6

