


hft series

3D view

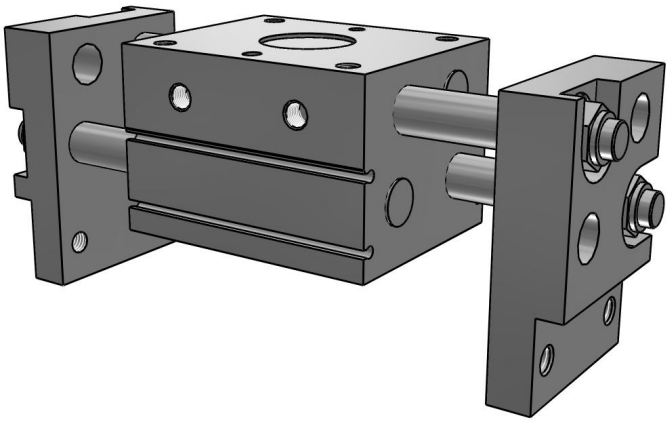

HOW TO ACTIVATE 3D?

To activate the interactive 3D view in Acrobat Reader, you need to select, at the top of the page, **Options** and then **Trust this document**

Zoom

Moves you toward or away from objects in the scene when you drag vertically. You can also zoom with the hand tool by holding down Shift as you drag.

Pan

Moves the model vertically and horizontally only. You can also pan with the hand tool: Ctrl-drag.

Rotate

Turns 3D objects around relative to the screen. How the objects move depends on the starting view, where you start dragging and the direction in which you drag.

Augmented Reality (AR) - Digital meets real


Augmented Reality, often shortened to AR, is a technology that blends digital information into the real world.
For more information, please click here or directly try yourself by scanning the QR code with your phone.

SCAN ME




hft series

2D derivation

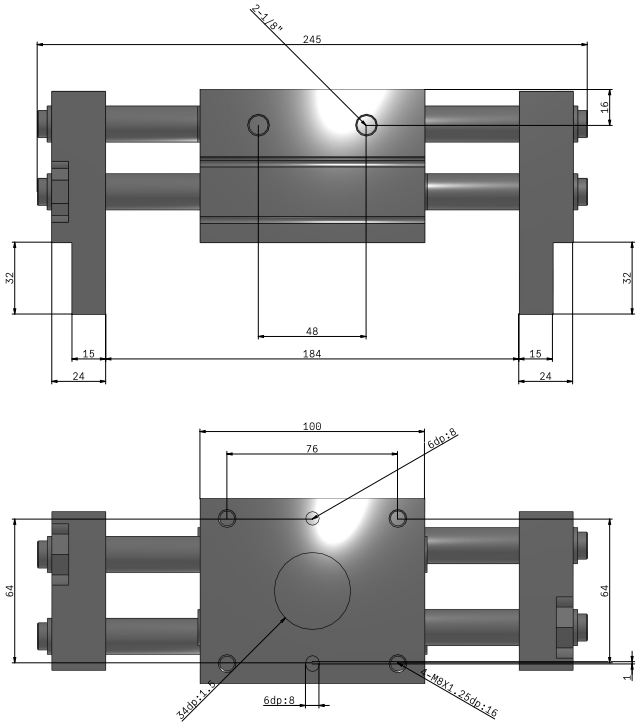

ISO view

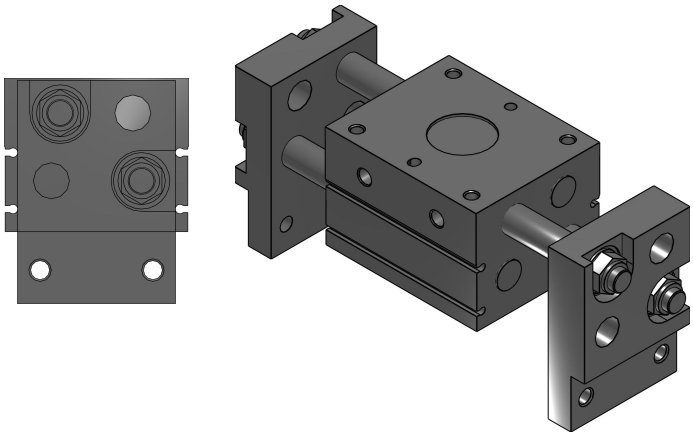


Bill-Of-Materials


N°	Description	Amount
1	HFT32X60S(0)	1
1.1	HFT32X60S(0)_dummy	1





hft series

Technical drawings

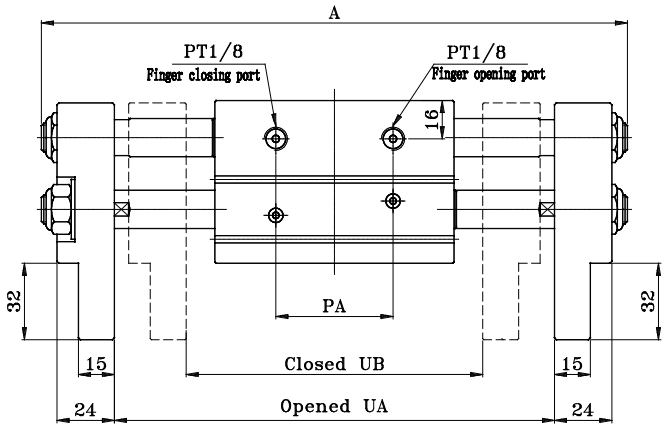

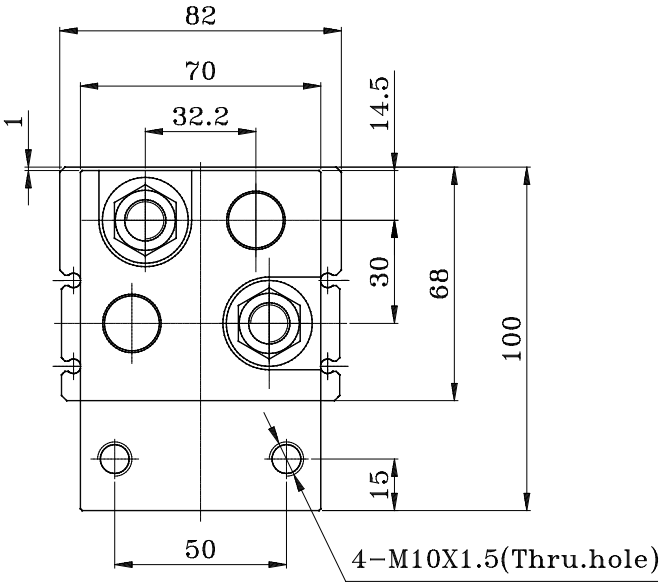

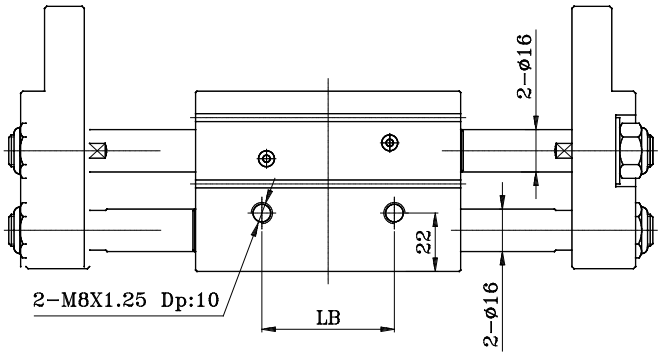

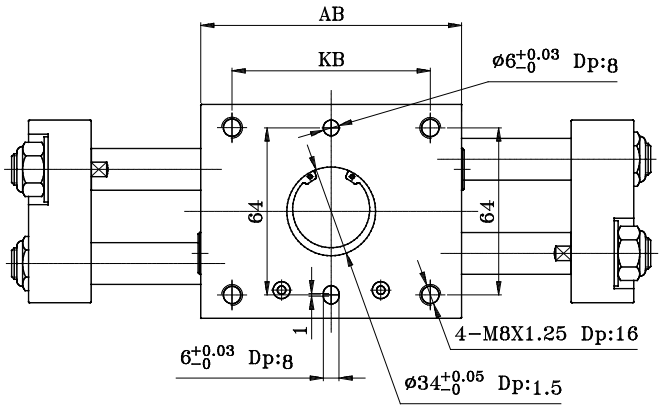



hft series


Technical data

TYPE (/ mm)	Double acting
BS (Bore size / mm)	32
ST (Stroke / mm)	60
MG (Magnet / mm)	With magnet
TT (Thread type / mm)	PT Thread
POS (Pistion rod position / mm)	0
A (/ mm)	245
AB (/ mm)	100
JB (/ mm)	0
KB (/ mm)	76
LB (/ mm)	50
PA (/ mm)	48.0
UA (/ mm)	184
UB (/ mm)	124
F03 ()	1/8"
T06 (/ mm)	8.0
T08 (/ mm)	6.0
T09 ()	M8X1.25
T10 (/ mm)	16.0
T11 (/ mm)	34.0
T12 (/ mm)	1.5
T13 (/ mm)	0.0
L11 (/ mm)	M10X1.5
B03 (/ mm)	10

hft series

CAD plugins

With our CAD integrations, you can use 3Dfindit directly in your CAD system and make your work easier with additional comfort functions, such as replacing a part and many more.

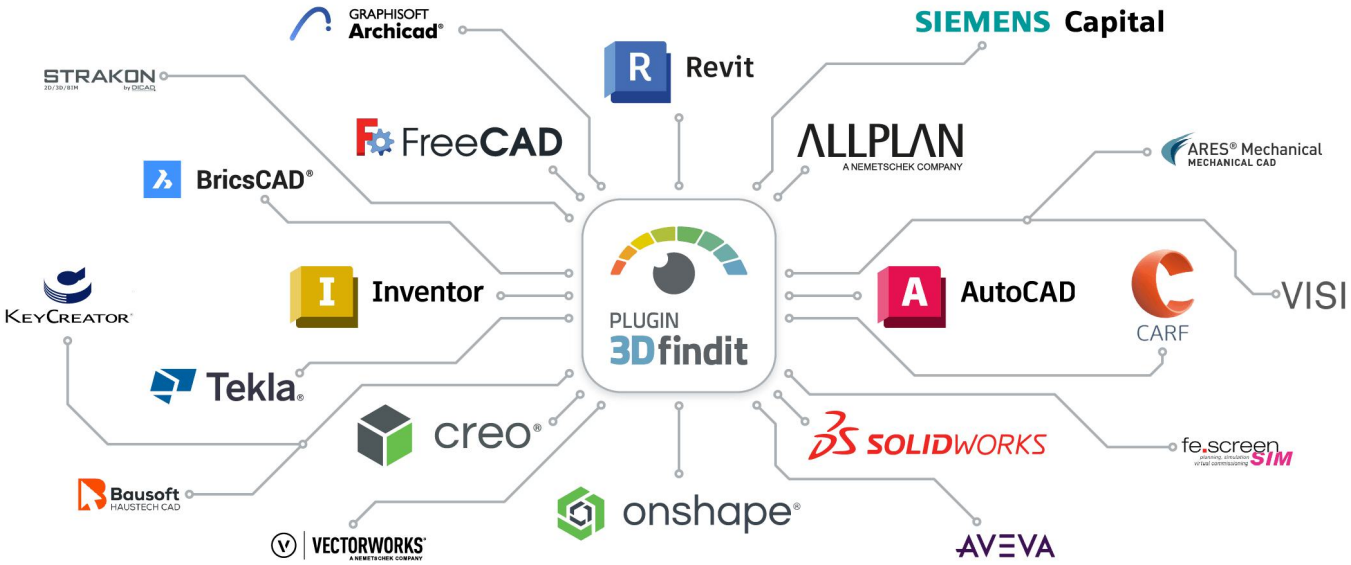

To the plugins