


PARTS INCLUDED

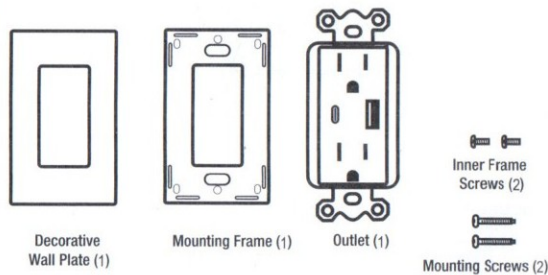

WARNING:



This product may represent a possible shock or fire hazard if improperly installed or attached in any way. Product should be installed in accordance with the owners manual, current electrical codes and/or the current National Electric Code (NEC).


RISK OF ELECTRIC SHOCK: TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING.

RISK OF FIRE:

- DO NOT EXCEED ELECTRICAL RATINGS
- USE INDOORS ONLY

TAMPER RESISTANT RECEPTACLES

Built-in shutter keeps children safe.

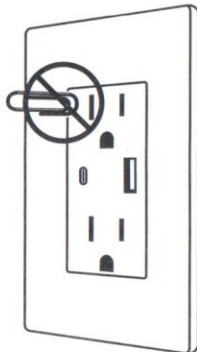

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device is to be installed in an outlet box that measures at least 3in x 2in x 2.5in and wired in accordance with NEC article 314 box fill requirements.

CAUTION:

This device is to be used with Class 2 USB connectors and interconnecting cables.

The Class 2 USB ports are not intended to physically support products or appliances.

The Class 2 USB cables must be routed away from the 125V receptacles and inserted plugs

This device is to be used with copper or copper clad wire only.

CAUTION:


To reduce the risk of fire and overheating, check for compatibility with the appliance manufacturer's charging instructions.

Type C support protocol: PD2.0/PD3.0, QC2.0/QC3.0, FCP, AFC, DCP, Apple 2.4A
USB A output 5VDC 2.0A.
type C output 5-20V 35W Max when type C and type A are used at the same time.
When type C is used alone, it means that the maximum power of the fast charging under the working condition of the fast charging mode.
support:5V3A, 9V3A, 12V3A, 15V3A, 20V2.25A

RELIABLE AND FRIENDLY CUSTOMER SERVICE:

We provide 1 year warranty. Please email us for any query, we will be in touch within 24 hours.

supports@micmi.com




Purchase 2025.04 Amazon

- ▶ DOES provide PD output
- ▶ 15v validated 2026.02 DM, with pinicil soldering iron

TR WALL OUTLET WITH USB-A and USB-C PORTS

Works with
smart-phones, tablets,
digital cameras

Price Point as of 2026.02 = \$17.50 or \$34 for 2pcs

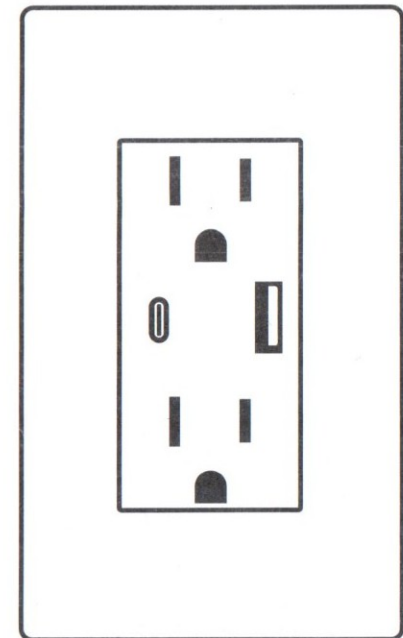

USB Charger Specifications
Class 2 5V-20V 45W fast charging

125 Volt • 60Hz

Installation



WARNING: SHOCK HAZARD. MAY RESULT IN SERIOUS INJURY OR DEATH. TURN OFF POWER AT CIRCUIT BREAKER BEFORE INSTALLING.


IF YOU'RE UNFAMILIAR WITH PROPER ELECTRICAL WIRING OBTAIN THE SERVICES OF A QUALIFIED PERSON.

READ AND SAVE THESE INSTRUCTIONS


1 TURN POWER OFF

Turn power off at circuit breaker or remove fuse.

2 REMOVE EXISTING OUTLET

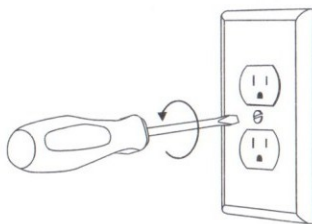

Take off wall-plate and outlet by removing mounting screws.

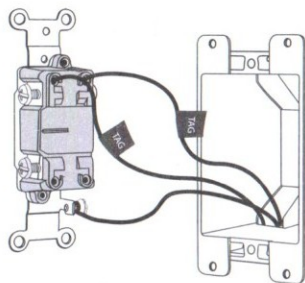

Carefully pull out outlet from wall.
Label wires connected to existing outlet box and disconnect wires.


3 STRIP WIRES

Strip wires to 5/8 inch if necessary. Use with #14 or #12 AWG copper or copper clad wire.




4 WIRE YOUR NEW OUTLET

Wire device as shown below.
Use a screwdriver to secure wires to terminals.

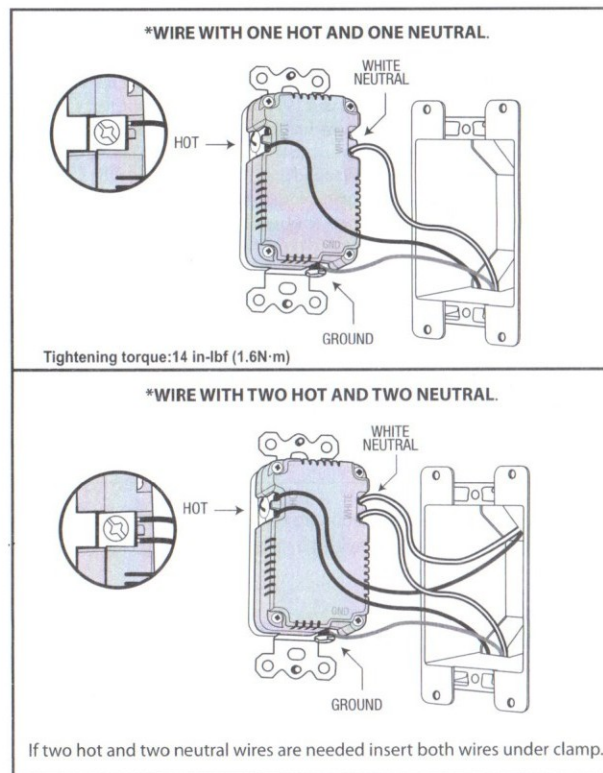


5 INSERT OUTLET INSIDE THE OUTLET BOX

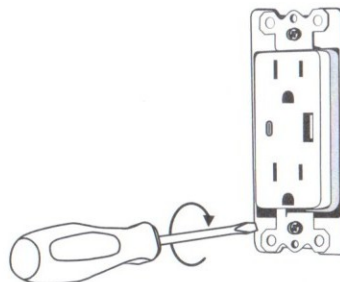


Position all wires inside the outlet box with care, leaving enough room to insert the device.

Use provided mounting screws to attach the device securely inside the outlet box.


6 SEPARATE MOUNTING FRAME FROM WALL PLATE

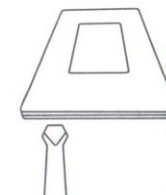

Gently insert screwdriver into slots to separate mounting frame from wall plate.

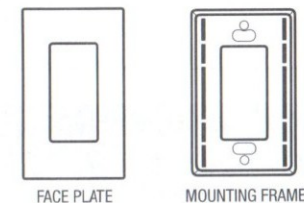


7 INSTALL MOUNTING FRAME

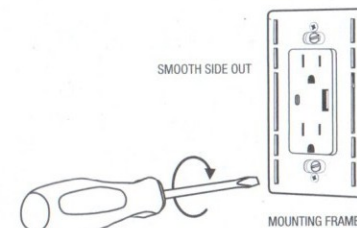

Place the mounting frame over your installed outlet and secure it using provided screws.

8 INSTALL WALL PLATE

Place the decorative wall plate over the installed mounting frame with the top first then the bottom. Gently push wall plate to ensure flush fit.

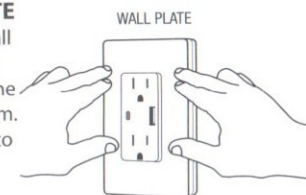

9 TURN POWER ON


Turn power on at circuit breaker or replace the fuse.

Wall outlet from Amazon.com

Link: <https://amzn.to/3Cxf3Od>

Manual compiled by D Malawey 2025.05

Max Power: 45W by USB-PD using USB-C port

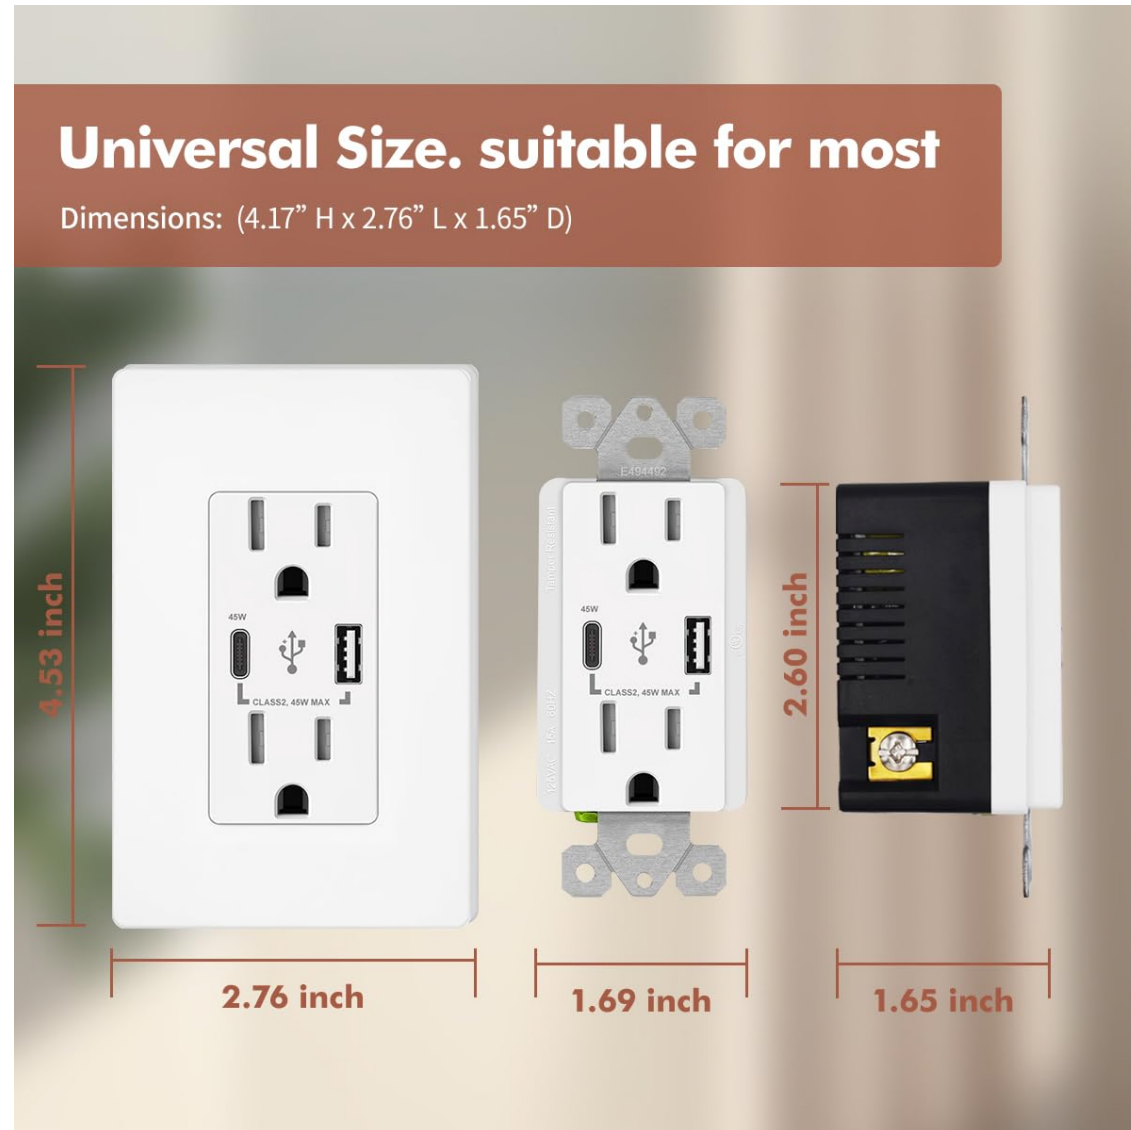

Installation




WARNING: SHOCK HAZARD. MAY RESULT IN SERIOUS INJURY OR DEATH. **TURN OFF POWER AT CIRCUIT BREAKER BEFORE INSTALLING.**

IF YOU'RE UNFAMILIAR WITH PROPER ELECTRICAL WIRING OBTAIN THE SERVICES OF A QUALIFIED PERSON.


1 TURN POWER OFF

Turn power off at circuit breaker or remove fuse.

2 REMOVE EXISTING OUTLET

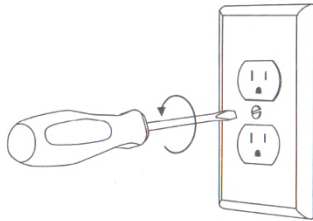

Take off wall-plate and outlet by removing mounting screws.

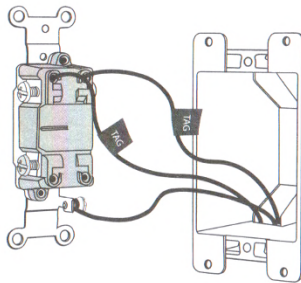

Carefully pull out outlet from wall.
Label wires connected to existing outlet box and disconnect wires.

3 STRIP WIRES


Strip wires to 5/8 inch if necessary. Use with #14 or #12 AWG copper or copper clad wire.




READ AND SAVE THESE INSTRUCTIONS

4 WIRE YOUR NEW OUTLET

Wire device as shown below.
Use a screwdriver to secure wires to terminals.

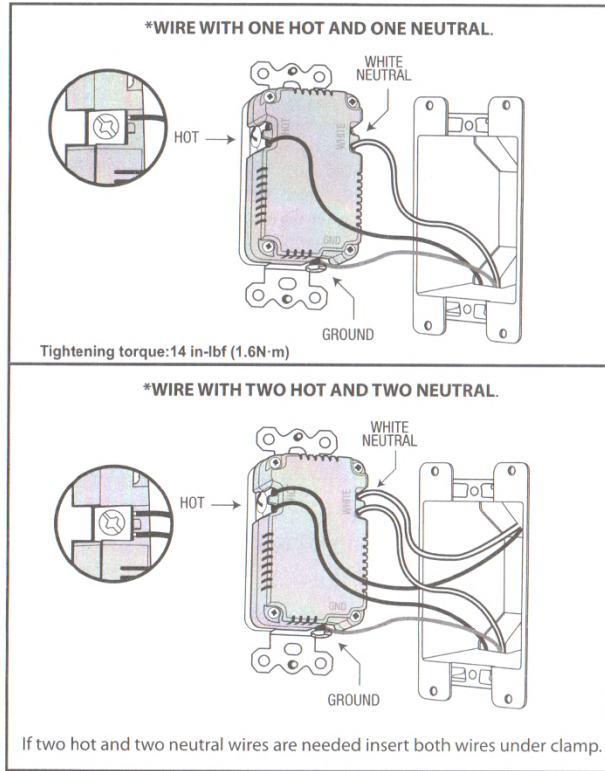


5 INSERT OUTLET INSIDE THE OUTLET BOX

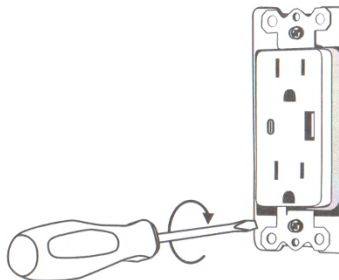


Position all wires inside the outlet box with care, leaving enough room to insert the device.

Use provided mounting screws to attach the device securely inside the outlet box.


6 SEPARATE MOUNTING FRAME FROM WALL PLATE

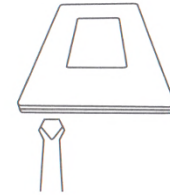

Gently insert screwdriver into slots to separate mounting frame from wall plate.




FACE PLATE

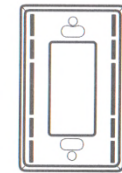

MOUNTING FRAME


7 INSTALL MOUNTING FRAME

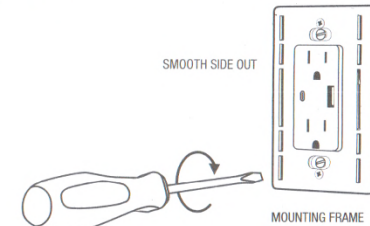

Place the mounting frame over your installed outlet and secure it using provided screws.

8 INSTALL WALL PLATE

Place the decorative wall plate over the installed mounting frame with the top first then the bottom. Gently push wall plate to ensure flush fit.

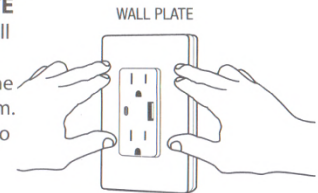


9 TURN POWER ON

Turn power on at circuit breaker or replace the fuse.

2024.10 installed, brkr 05

PARTS INCLUDED

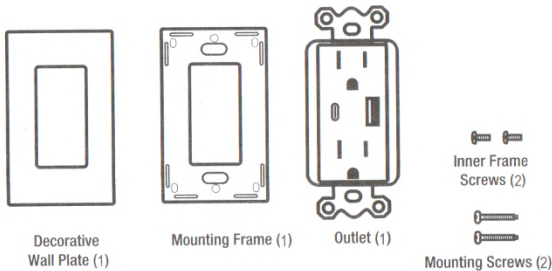

WARNING:


This product may represent a possible shock or fire hazard if improperly installed or attached in any way. Product should be installed in accordance with the owners manual, current electrical codes and/or the current National Electric Code (NEC).

RISK OF ELECTRIC SHOCK: TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING.

RISK OF FIRE:
- DO NOT EXCEED ELECTRICAL RATINGS
- USE INDOORS ONLY

TAMPER RESISTANT RECEPTACLES

Built-in shutter keeps children safe.

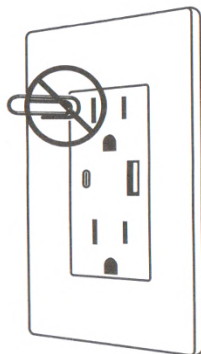

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device is to be installed in an outlet box that measures at least 3in x 2in x 2.5in and wired in accordance with NEC article 314 box fill requirements.

CAUTION:

This device is to be used with Class 2 USB connectors and interconnecting cables.

The Class 2 USB ports are not intended to physically support products or appliances.

The Class 2 USB cables must be routed away from the 125V receptacles and inserted plugs

This device is to be used with copper or copper clad wire only.

CAUTION:

To reduce the risk of fire and overheating, check for compatibility with the appliance manufacturer's charging instructions.

Type C support protocol: PD2.0/PD3.0, QC2.0/QC3.0, FCP, AFC, DCP, Apple 2.4A
USB A output 5VDC 2.0A.
type C output 5-20V 35W Max when type C and type A are used at the same time.
When type C is used alone, it means that the maximum power of the fast charging under the working condition of the fast charging mode.
support:5V3A, 9V3A, 12V3A, 15V3A, 20V2.25A

RELIABLE AND FRIENDLY CUSTOMER SERVICE:

We provide 1 year warranty. Please email us for any query, we will be in touch within 24 hours.

supports@micmi.com



Follow us to become 5 star membership for extra 6 months warranty



@Micmicom



@Micmi.Official




@Micmi.Official



@Micmi.com

TR WALL OUTLET WITH USB-A and USB-C PORTS

Works with
smart-phones, tablets,
digital cameras

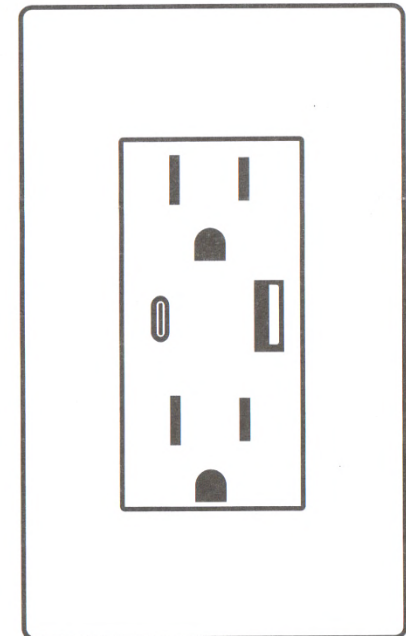

USB Charger Specifications
Class 2 5V-20V 45W fast charging

125 Volt • 60Hz



Not happy?

Our friendly customer service team will work hard to put a smile back on your face. Here's how we can connect:



Scan for fast customer service

micmi.com/support




supports@micmi.com



Scan with the Amazon app to learn more.

① Download the Amazon APP




② Scan the Transparency barcode on the product's packaging

③ View Product Information



transparency

Type C PD

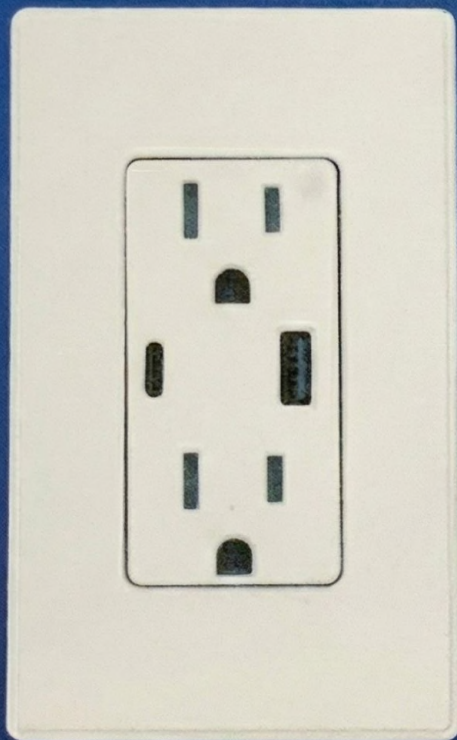

45W
Quick Charge
Type C &
USB A Charger
15A
Tamper
Resistant
Receptacle


Compatible with USB Powered Devices

- Blackberry®, Android Phones
- Bluetooth™ Headsets
- Digital Cameras
- GPS
- iPad®
- iPhone®
- iPod®
- Kindle™, Nook e-readers
- Mobile Phones
- Nintendo 3DS™
- PlayStation® Vita
- Samsung Devices
- Tablets
- Windows® Phone by HTC

supports@micmi.com

MADE IN CHINA

INCLUDING WALL PLATE



LISTED
3KJY
E494482

Type C PD

DESCRIPTION

Receptacle Rating-----15Amp, 125VAC
USB Rating-----Two USB ports with total 5-20VDC 45W
Wiring Terminals-----#14-#12 AWG
Model #-----PD45

APPLICATION

- Cafes Labs
- Offices Salons
- Kitchens Hotels
- Bedrooms Schools
- Restaurants Libraries
- Meeting Rooms Workstations
- Airport Lounges



850048538245

FEATURES

- Two Vertical USB Ports
- 45W Charging Capacity
- Charges Most USB Powered Devices
- Two High-Powered Charging Ports
- 15A Tamper-Resistant Outlets for Improved Safety
- Back and Side Wired for Easy Installation
- cULus Listed

WARNINGS

TO AVOID FIRE, SHOCK, OR DEATH, TURN OFF POWER AT CIRCUIT BREAKER OR FUSE AND TEST THAT THE POWER IS OFF BEFORE WIRING.

THIS DEVICE SHOULD BE INSTALLED BY AN ELECTRICIAN OR OTHER QUALIFIED PERSON.



RECYCLABLE