



EN/CN-A03

Adventurer 5M Pro

User Guide



Adventurer 5M



Adventurer 5M Pro



WARNING

1. Please refer to this Guide for initial printer setup.
2. Hot! Avoid touching the heating nozzle in operation.
3. Moving parts in the printer may cause injuries. Do not wear gloves or other sources of entanglement in operation.



Safety Notice

Do not power on the printer until installation is completed.



For more information, you can visit the Flashforge official website.
www.flashforge.com - [Support]

CONTENTS

Notice	02
1. Equipment Introduction	04
1.1 - Printer Components	04
1.2 - Printer Parameters	05
2. Initial Setup	06
2.1 - Unboxing	06
2.2 - Packing List	08
2.3 - Installing the Spool Holder	09
2.4 - Unlocking the Build Plate	10
2.5 - First Print	11
3. Software Introduction & Installation	15
4. Printing	19
4.1 - Filament Loading and Changing	19
4.1.1 - Filament Loading	19
4.1.2 - Filament Changing	19
4.2 - Network Connection	22
4.2.1 - Wireless Network Connection	22
4.2.2 - Wired Network Connection	22
4.3 - Printing Methods	23
4.3.1 - Printing via USB	23
4.3.2 - Printing via Wi-Fi transfer	23
4.3.3 - Printing via Cloud	24
4.4 - Camera Connection	26
4.5 - Model Removal After Printing	27
5. Introduction to Auxiliary Functions	27
5.1 - Leveling and Calibration	27
5.2 - Air Filtration	28
5.3 - Other Function Settings	28
6. Maintenance	29
6.1 - Suggestions on Platform Plate Usage	29
6.2 - Suggestions on Nozzle Usage	29
6.3 - General Maintenance	29
7. Q&A	30
8. Help and Support	33

NOTICE

SAFETY NOTICE: PLEASE CAREFULLY READ AND STRICTLY FOLLOW ALL THE SAFETY WARNINGS AND NOTICES BELOW ALL THE TIME.

Note: Each 3D printer undergoes printing tests before leaving the factory. Filament residue on the nozzle or slight scratches on the build plate are normal and do not affect usage.

WORK ENVIRONMENT SAFETY

- ◆ Please keep the workspace clean and tidy.
- ◆ Please ensure the equipment operates away from combustible gases, liquids, and dust. High temperatures generated during operation may react with combustible gases, liquids, or airborne dust, potentially causing fires.
- ◆ Children and untrained individuals should not operate the equipment alone.

ELECTRICAL SAFETY

- ◆ Please properly ground the equipment. Do not modify the plug. Ungrounded equipment/improperly grounded equipment/modified plug will inevitably increase the risk of electric leakage.
- ◆ Avoid exposing the equipment to damp or direct sunlight environments. Humidity will increase the risk of electric leakage. Exposure to sunlight will accelerate the aging of plastic parts.
- ◆ Make sure to only use the power cord provided by Flashforge.
- ◆ Do not use the equipment during thunderstorms.
- ◆ Please turn off the equipment and unplug it if it is not in use for a long time.

PERSONAL SAFETY

- ◆ Do not touch the extruder, build plate, etc., during printing.
- ◆ Do not touch the extruder and build plate after finishing printing to avoid high temperature burns or mechanical damage.
- ◆ Do not wear scarves, masks, gloves, jewelry, or other objects that can easily get tangled into the equipment while operating it.
- ◆ Do not operate the equipment while you are tired or under the influence of drugs, alcohol or medication.

CAUTIONS

- ◆ Keep the inside of the equipment clean. Do not drop metal objects into the grooves at the bottom of the build plate.
- ◆ Please clean up filament debris in time. It is recommended to operate this outside the equipment.
- ◆ Any modification of the equipment by yourself will void the warranty.
- ◆ Please keep the distance between the extruder and build plate for at least 50mm during filament loading. Too-close distance may cause nozzle clogs.
- ◆ Please operate the equipment in a well-ventilated environment.
- ◆ Do not use the equipment for illegal activities.
- ◆ Do not use the equipment to make food storage containers.
- ◆ Do not place printed models into your mouth.

EQUIPMENT ENVIRONMENT REQUIREMENTS

- ◆ Room temperature: 15-30°C; Humidity: 20-70RH%

EQUIPMENT PLACEMENT REQUIREMENTS

- ◆ The equipment must be placed in a dry and well-ventilated environment. A distance of at least 35cm must be reserved around the front, back, left and right sides of the equipment. Recommended storage temperature: 0-40°C

COMPATIBLE FILAMENT REQUIREMENTS

- ◆ When using this equipment, it's recommended to use Flashforge's filaments. If non-Flashforge filaments are used, there will be certain differences in material properties, and print parameters may need adjustments.

FILAMENT STORAGE REQUIREMENTS


- ◆ Please store filaments in a dry and dust-free environment after unpacking. It is recommended to use the matching filament dry box for storage.

LEGAL STATEMENT


- ◆ Users are not authorized to make any modifications to this User Guide.
- ◆ Flashforge shall not be held responsible for any safety incidents resulting from the disassembly or modification of the equipment by the customer. No one is allowed to modify or translate this Guide without Flashforge's permission. This Guide is protected by copyright, and Flashforge reserves the right of the final interpretation of this Guide.
- ◆ First Edition (September 2023)
Copyright © 2023 Zhejiang Flashforge 3D Technology Co., Ltd. All Rights Reserved.

1. Equipment Introduction

1.1 Printer Components

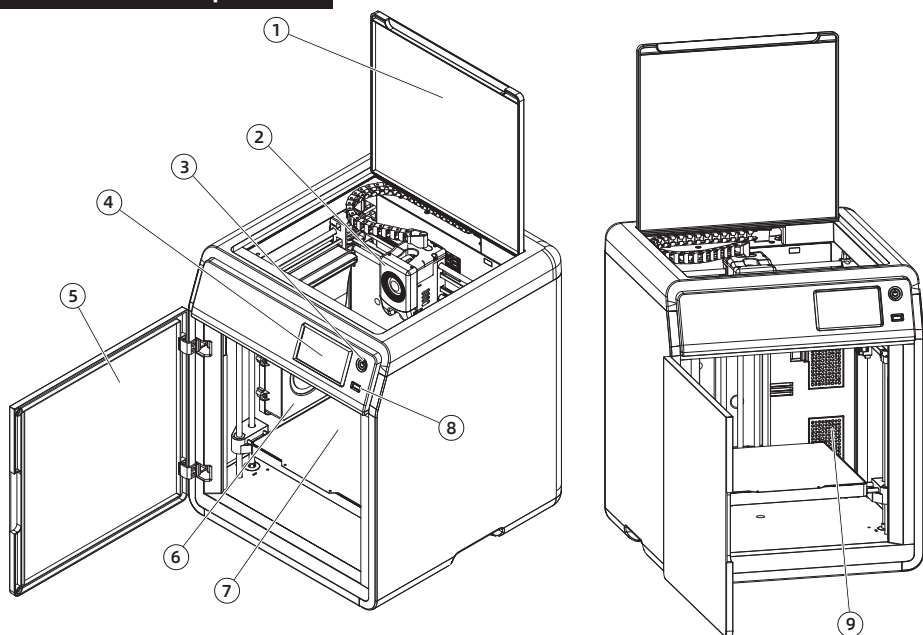

- 1. Top Cover
- 2. Extruder
- 3. Switch Button
- 4. Touch Screen
- 5. Front Door
- 6. Auxiliary Cooling Fan
- 7. Build Plate
- 8. USB Port
- 9. Air Filter
- 10. Screw Holes for Spool Holder
- 11. Ethernet Input
- 12. Power Switch
- 13. Power Socket

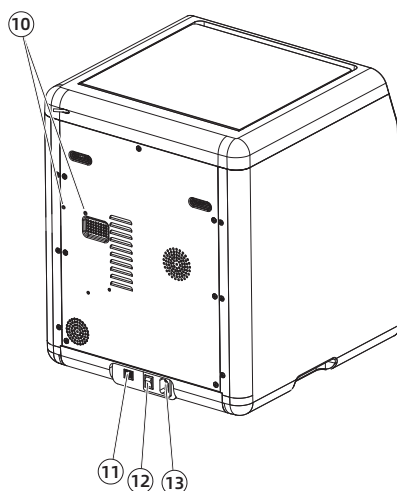

1.2 Printer Parameters


Machine Name	Adventurer 5M Pro
Extruder Quantity	1
Printing Precision	±0.1mm [testing based on 100mm cubes]
Positioning Accuracy	X/Y-axis: 0.0125mm; Z-axis: 0.0025mm
Layer Thickness	0.1-0.4mm
Build Volume	220 x 220 x 220mm
Nozzle Diameter	0.4mm [default]; 0.6/0.8/0.25mm [optional]
Printing Speed	10-300mm/s
Max. Acceleration	20000mm/s ²
Max. Travel Speed	600mm/s
Max. Extruder Temperature	280°C
Supported Filament	*PLA/*PETG [0.4mm nozzle] ASA/ABS *TPU/PLA-CF/PETG-CF [0.6/0.8mm nozzle] Note: Materials marked with * are recommended for printing.
Power Supply	Input: AC 100~240V, 50/60Hz, 350W
Device Size	380 x 400 x 453mm [excluding the spool holder]
Net Weight	14.6kg
Connectivity	USB/Wi-Fi/Ethernet
Operating Temperature	15-30°C
Compatible Operating System	Windows 7/8/10/11; Linux: Support version Ubuntu 20.04 or later; Mac OS: Support version 10.9 or later.
Compatible Slicing Software	Orca-Flashforge / OrcaSlicer
Max. Platform Temperature	110°C
Leveling Method	One-click auto leveling
Filament Run-out Reminder	√
Power Loss Recovery	√
Smart Touch Screen	4.3-inch
Remote Video Monitoring	√
Time-lapse Video	√
Air Filtration	Internal circulation + external circulation [HEPA + activated carbon]
Build Plate	PEI flexible steel plate
Automatic Shutdown	√

2. Initial Setup


2.1 Unboxing

Safety Notice: Do not power on the printer until installation is completed.


1. Open the box.

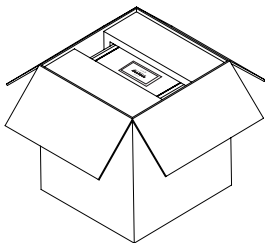


2. Remove the upper foam packaging, Quick Start Guide and After-sales Service Card.

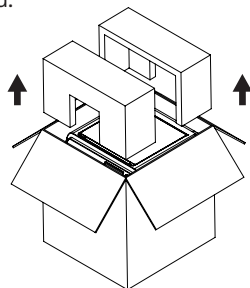


3. Take out the machine, place it on a level workspace and remove the packaging bags and tapes.

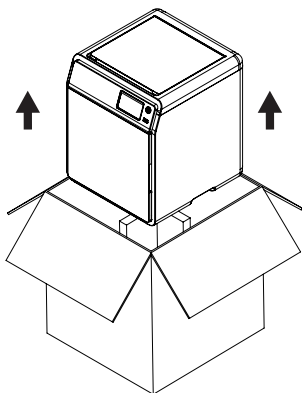


4. Open the top cover and remove the upper protective foam.

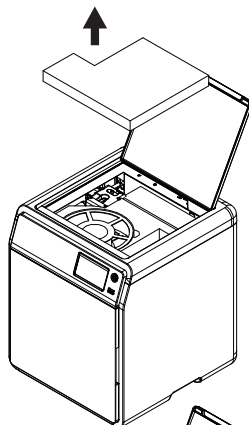


5. Remove the filament, power cable, USB flash drive, 0.6mm nozzle from the chamber protective foam. Remove the inner protective foam from the extruder. Open the front door and remove the front protective foam and accessory box.

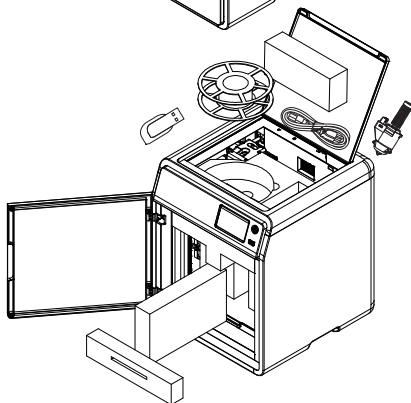


6. Move the chamber foam according to the arrow direction.

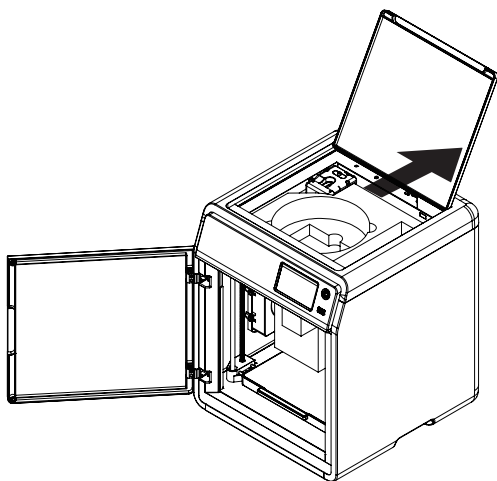


7. Remove the foam.

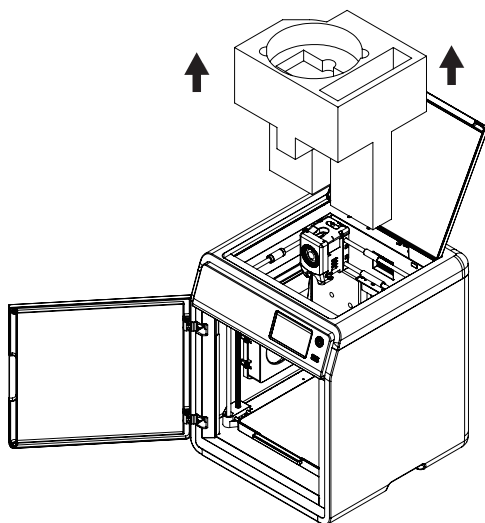


2.2 Packing List

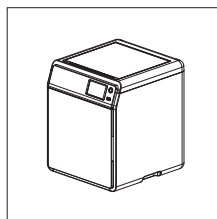


3D Printer

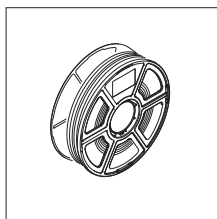


Filament

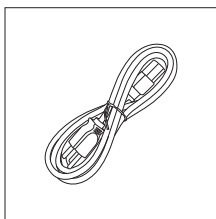


Power Cable

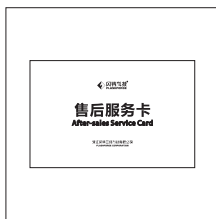


After-sales
Service Card

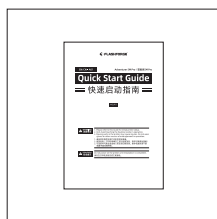


Quick Start Guide

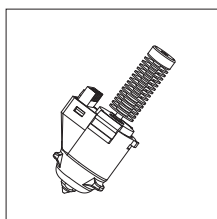


0.6mm Nozzle

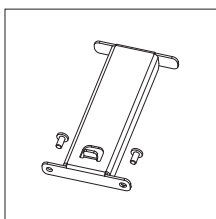


Spool Holder
(with 2 screws)

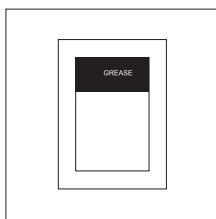


Grease

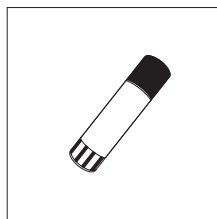


Glue

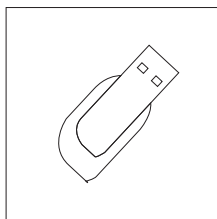


USB Disk

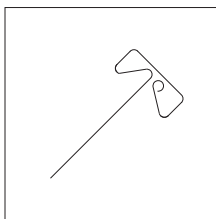


Unclogging Pin Tool

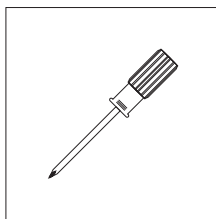

Screwdriver

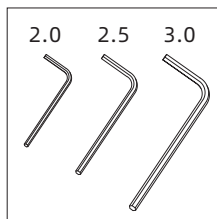


Allen Wrench

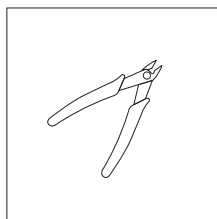

Diagonal Pliers


2.3 Installing the Spool Holder

1. Take out the two screws and spool holder from the accessory box.

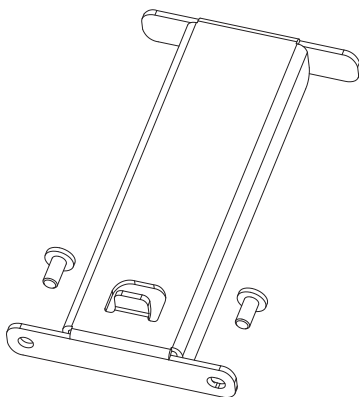

2. Install the spool holder at the position shown in the figure with the two screws.

(Note: Please tighten them using a 2.0mm Allen wrench.)

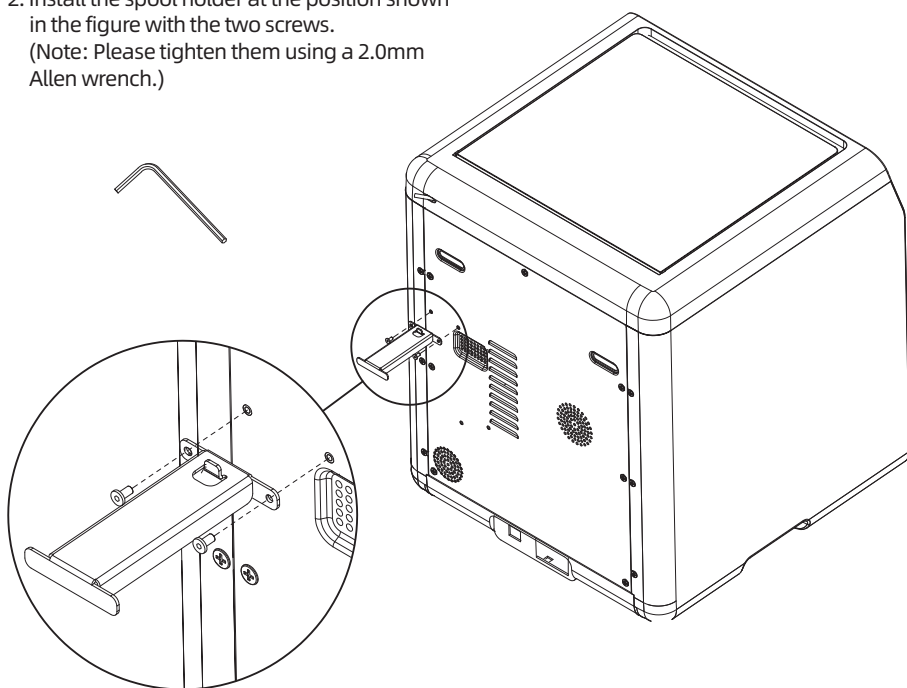


2.4 Unlocking the Build Plate



Note

Please ensure the platform has been cleared up!



Please use a 2.0mm Allen wrench to remove four screws which lock the build plate (as indicated by the arrow).

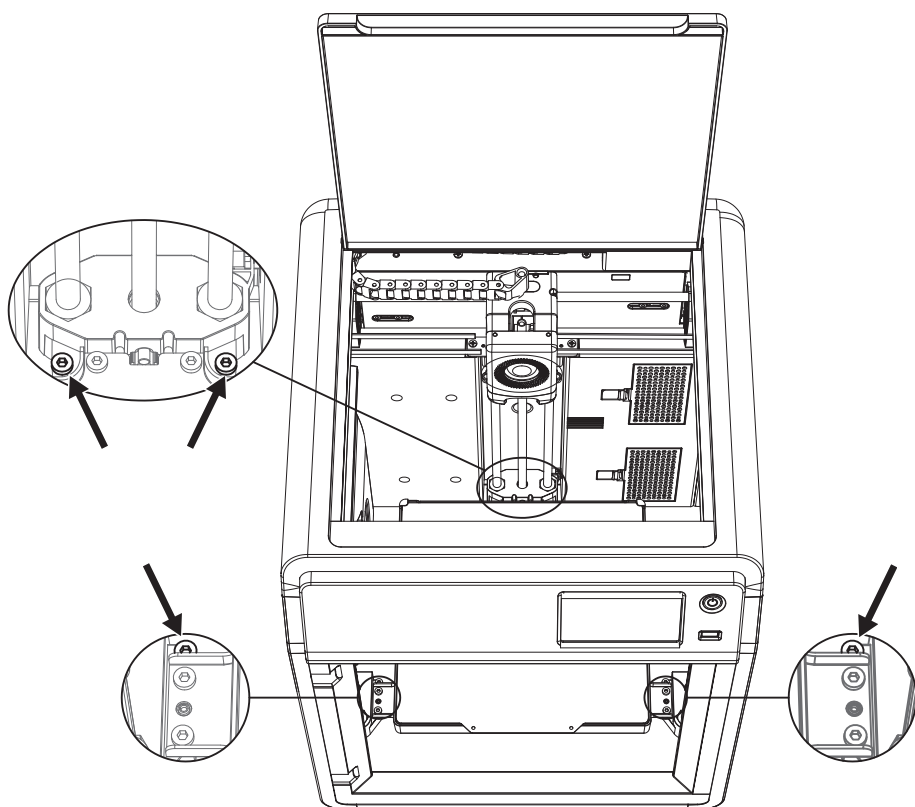

2.5 First Print

* The interface layout may change whenever there is an upgrade of firmware.





1. Connect the power, turn on the power switch, and press the switch button to turn on the screen.

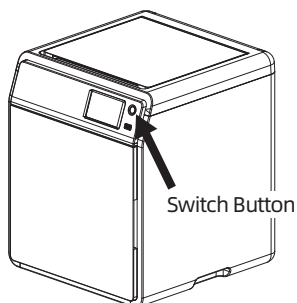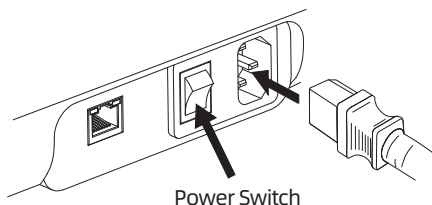

2. Following the guide on the screen, select the language.




3. Turn on the Wi-Fi switch and connect to the network following the instructions. A successful connection notification will pop up once connected.

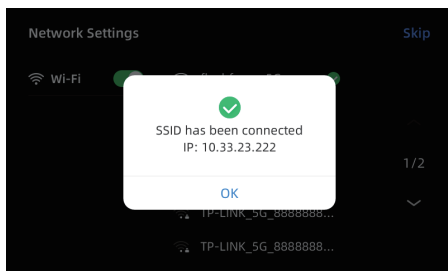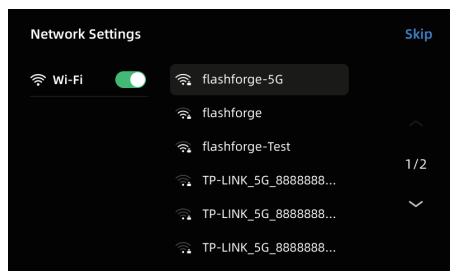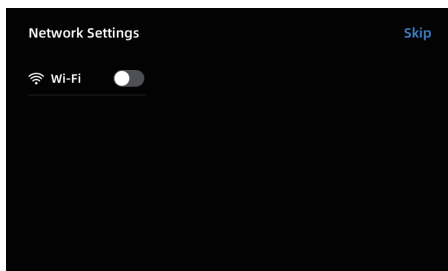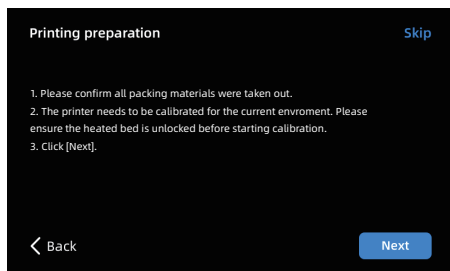

4. Bind the printer following the instructions.
(Note: If skipped, binding can still be done later on the printer; see Page 15.)


a. After clicking [OK], the QR code page will appear.

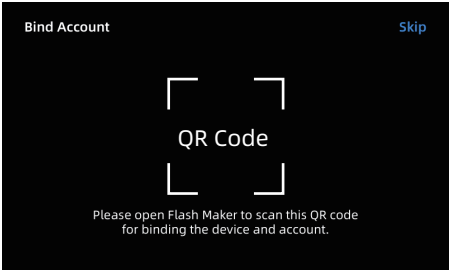



b. Download Flash Maker by scanning the QR code (see right) or from the app store, register your Flashforge account, and log in.




c. Use Flash Maker to scan the QR code on the printer screen to bind the printer to your account. (Note: Default printer name and location are set upon leaving the factory; after completing the startup, you can customize the printer name and location in the settings.)

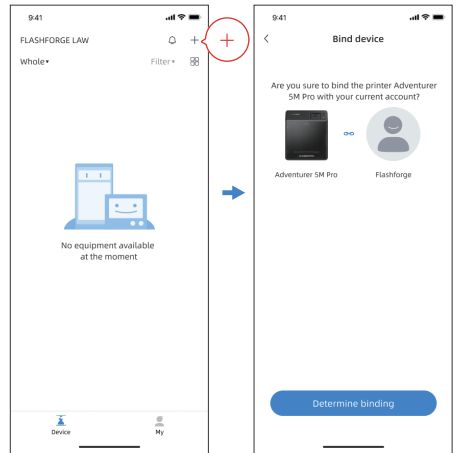


5. Click [Next] and the machine will perform the first calibration. Vibrations and noise during calibration are normal.
(Note: Please keep the machine on a stable surface and do not move it during calibration.)

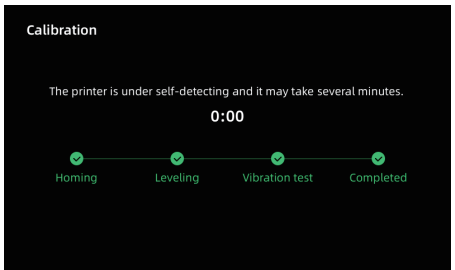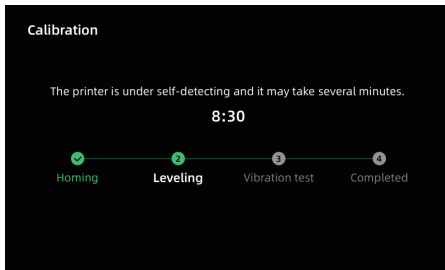



6. Load filament following the on-screen startup boot:

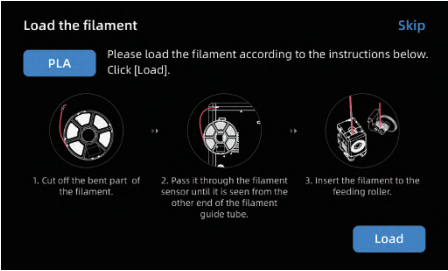


a. Cut off the bent part of the filament end.

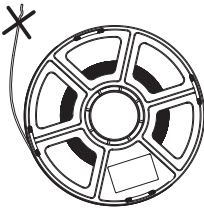


b. Hang the filament on the spool holder. Pass it through the filament sensor until it's seen from the other end of the filament guide tube. Push it forward to the feed roller, until it can not go further. (Please use PLA filament for the first print on initial setup).

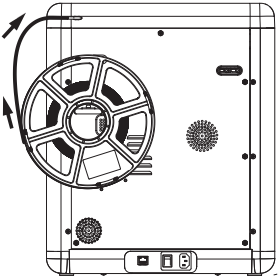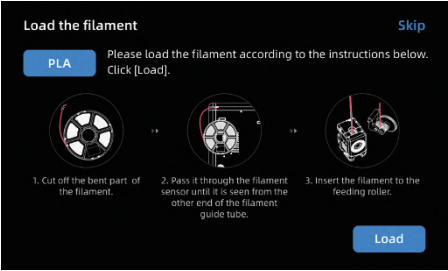



C1. Click [Load] and select [PLA] for the first print.

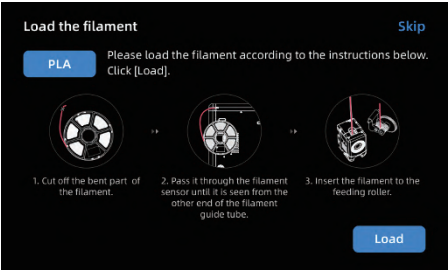

C2. Wait for the extruder to heat up.

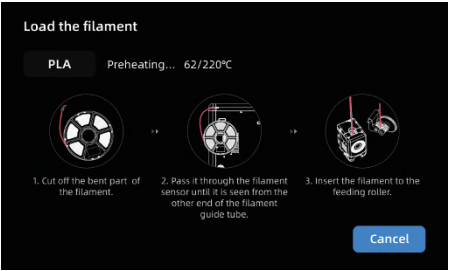


C3. Feeding will begin after heating. Successful filament extrusion from the nozzle indicates successful loading. Lastly, confirm the filament guide tube is properly inserted.

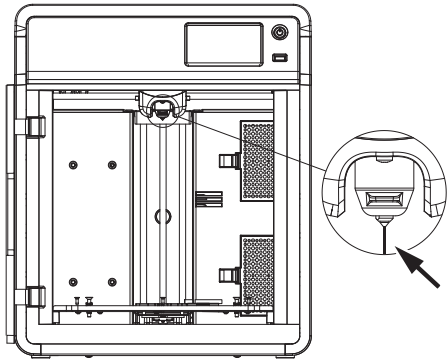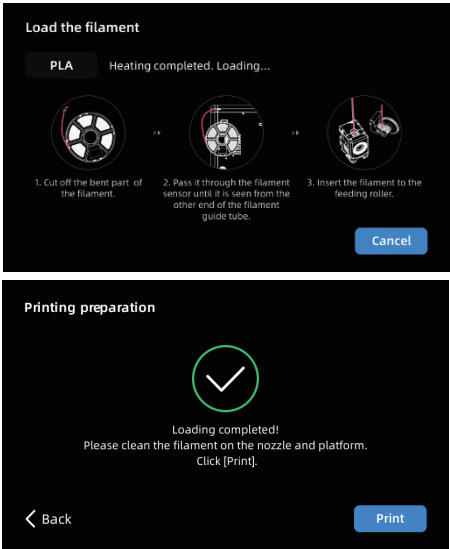


Note If no filament is extruded, manually insert the filament into the inlet and click [Back] to retry. Feel for filament movement until it is extruded.

7. Please clear the filament residues on the nozzle and platform. Users must apply glue to the platform so as to improve adhesion for the first print.

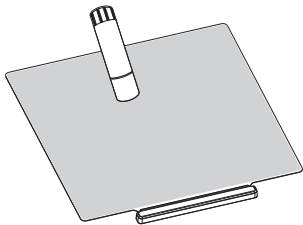

8. Click [Print] and the machine starts printing the built-in file (configured for PLA material).

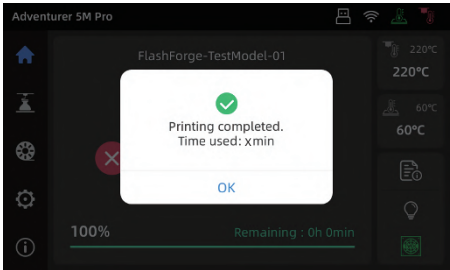



3. Software Introduction & Installation

Flash Maker Instructions

1. Download Flash Maker by scanning the QR code (see below) or from the app store, register your Flashforge account, and log in.
2. Click [] - [], and then turn on the Wi-Fi switch to connect to the network.



3. Click [] to enter the information interface, and then click [My Account] to access the printer's QR code.
4. Use Flash Maker to scan the QR code on the printer screen to bind the printer to your account.

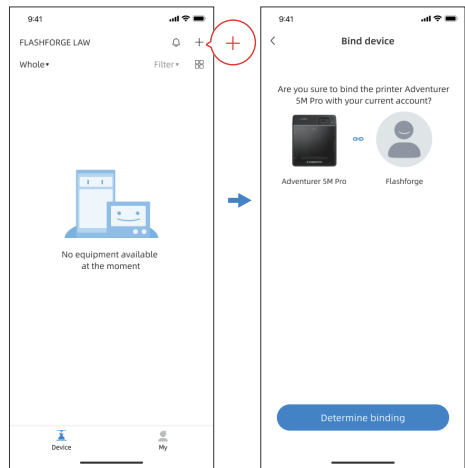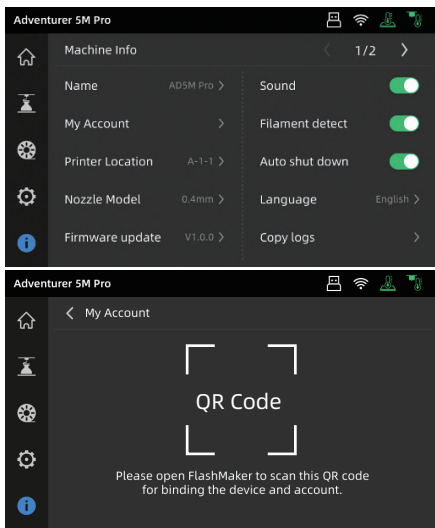

NOTE:

1. By default, the device name is set to "Adventurer 5M", and its location is set to "Group A" upon factory settings. You can modify the name and location on the printer's information interface as needed.
2. Real-time monitoring is only accessible when a camera is installed and the feature is enabled.
3. The APP does not support connection in the LAN Only mode.

Slicing Software Instructions for Adventurer 5M Series




Note

Before reading the brief instructions, please ensure you have reviewed the Quick Start Guide and completed the first print.

Before printing 3D model files, you need to configure slicing presets for the corresponding printer. Recommended slicing software: **Orca-Flashforge/ OrcaSlicer**.

Pre-printing Steps:

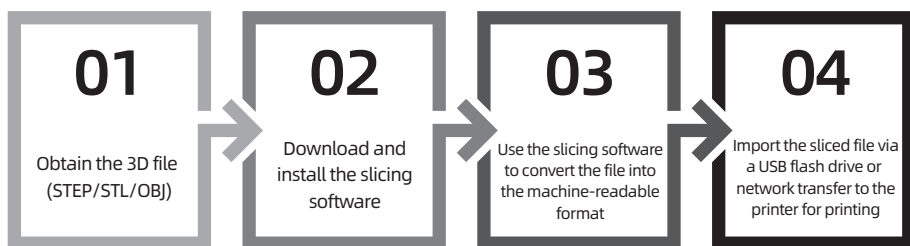

Orca-Flashforge

* The steps are illustrated for one machine type.

Orca-Flashforge is a slicing software developed based on OrcaSlicer, with custom features tailored for the Adventurer 5M series.

Download Instructions:

1. Download the latest slicing software from: <https://www.flashforge.com/download-center>.
2. Find the Orca-Flashforge's installation package on the USB flash drive and install the version that matches your system.


1. Open the installed Orca-Flashforge.



2. Setup Wizard:


Follow the setup wizard prompts for selecting your region, machine type, and materials.

(Note: You can select all machine types and material types in the list for later slicing options.)

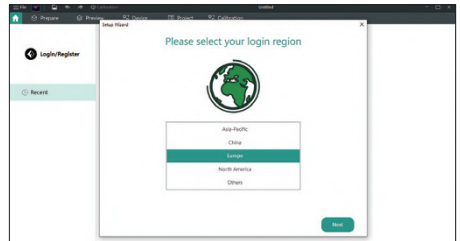


3. Account Login/Register:


Log in to Orca-Flashforge using your Flashforge account. If you don't have an account, register one using your mobile phone number. (Note: Flash Maker and Orca-Flashforge share the same account.)

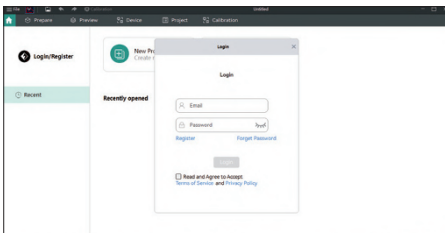


4. Create or open a project for slicing. You can select the machine type, material, and recommended parameters in the printer, filament, and process bars.

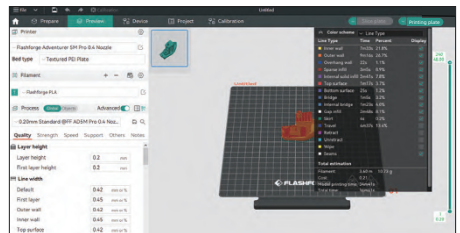

5. After slicing, select the printer and send for printing.

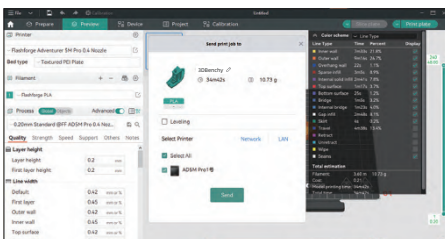

6. You can remotely monitor the printing progress and pause/stop printing when necessary on the device interface. (Note: Real-time monitoring is only available with a camera installed and activated.)

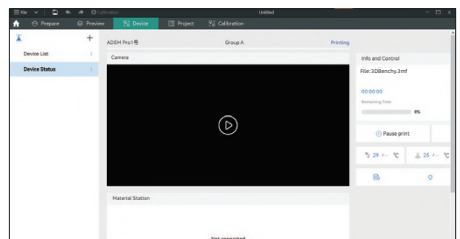

OrcaSlicer Download Instructions:

1. Download the latest slicing software from: <https://github.com/SoftFever/OrcaSlicer/releases>.
2. Download from the official Flashforge Download Center (<https://www.flashforge.com/download-center>).

Note: Please download slicing software version 1.8.0 or later.

Tip:



For details and tutorials on software usage, please refer to Flashforge Wiki. (<https://wiki.flashforge.com/en/home>).

4. Printing

4.1 Filament Loading and Changing


4.1.1 Filament Loading

Click [] to enter the filament loading interface and follow on-screen instructions to complete filament loading.

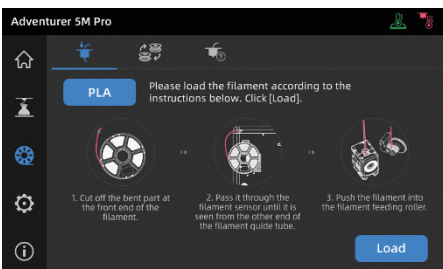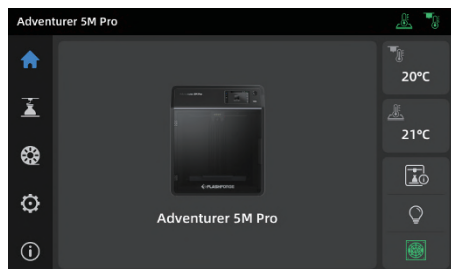


4.1.2 Filament Changing





1. Click [] - [], and follow on-screen instructions to complete filament changing.

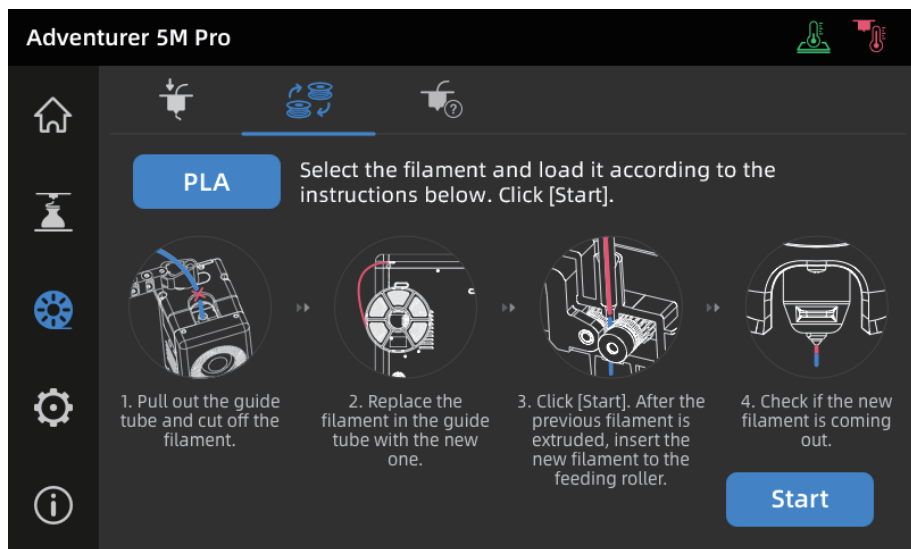






2. Pull out the filament guide tube as shown, and cut the filament.

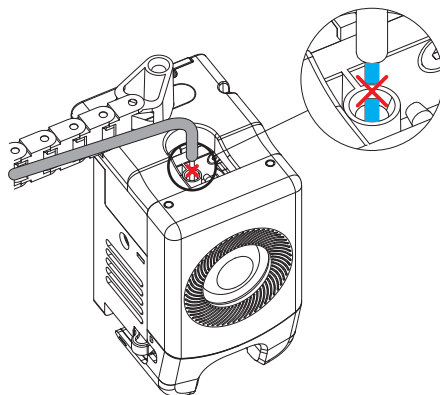

3. Pull out the cut filament, and insert the new filament into the filament guide tube. If the material type is changed, click [PLA] to select the corresponding material type.

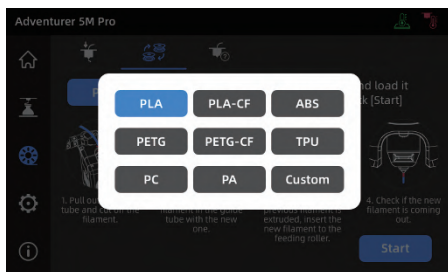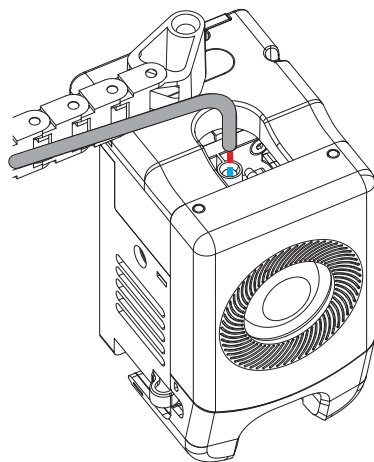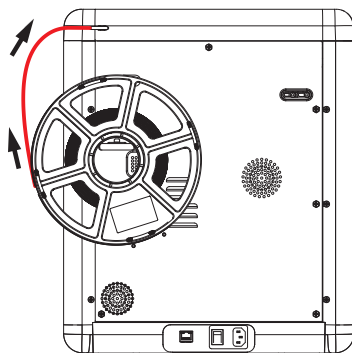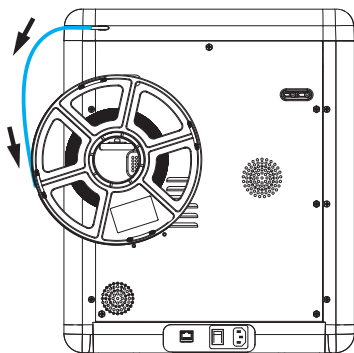

- Click [Start], wait for the extruder to heat up and filament feeding will begin. When you see the previous filament is extruded, insert the new filament and observe its flow and the extrusion. If the new filament smoothly comes out of the nozzle, the filament change is successful. If not, hold the filament by hand, insert it into the inlet, and click [Again] to retry. Feel for filament movement until it is extruded. After successful loading, insert the filament guide tube into the inlet.

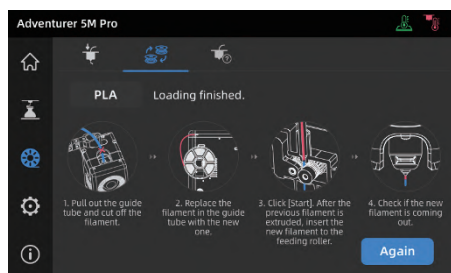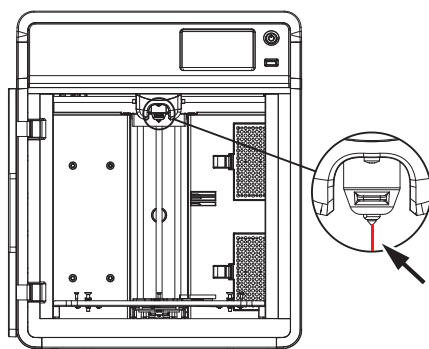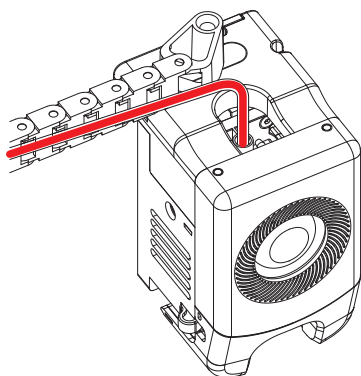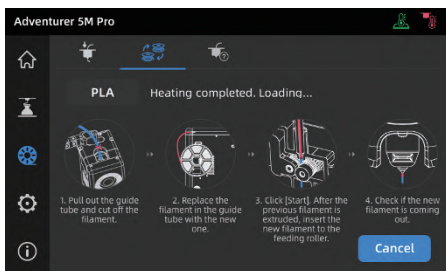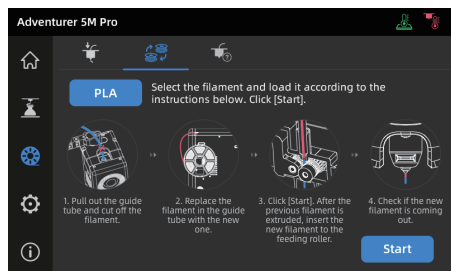


Note

- If the previous filament roll is completely used up and there is no filament in the guide tube, you can proceed with the loading process directly.
- When changing filament, try to clear out the old filament using the new filament.
- You can click [?] to view the nozzle usage guide on the screen.




4.2 Network Connection

Click [⚙️] - [📶] to enter the network connection interface.

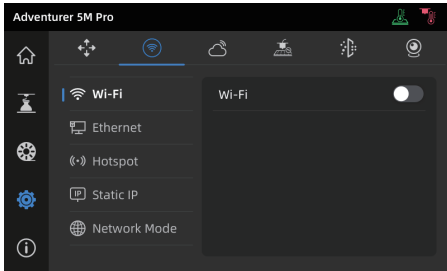



4.2.1 Wireless Network Connection

Turn on the Wi-Fi switch, and tap to connect to the corresponding wireless network. Once connected successfully, the network will be marked, and an [📶] icon will appear at the top right corner of the screen.

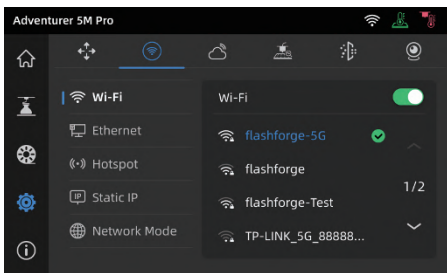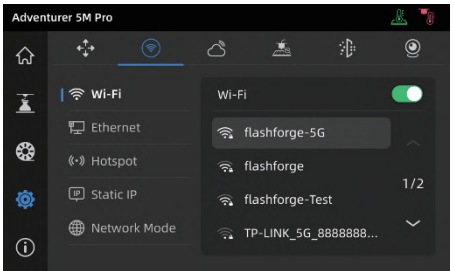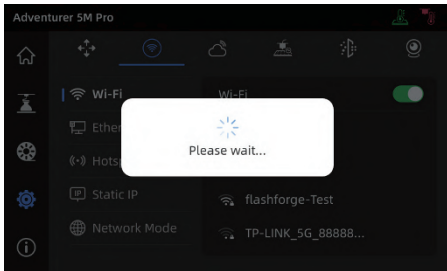

4.2.2 Wired Network Connection



1. Select [Ethernet] and plug the network cable into the Ethernet port on the back of the printer following on-screen instructions.
2. Once connected successfully, it will display as [Connected], and an [🖨️] icon will appear at the top right corner of the screen.

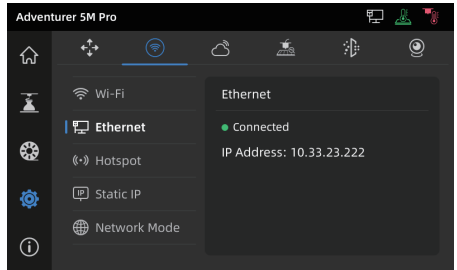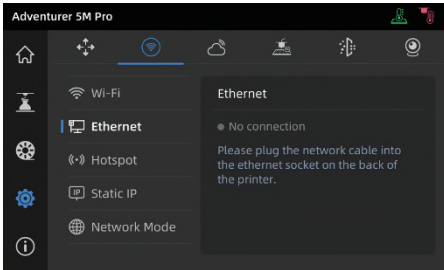

4.3 Printing Methods

4.3.1 Printing via USB

The printer supports printing via USB. Save the sliced file to a USB flash drive, insert it into the printer, and select the corresponding file to start printing.

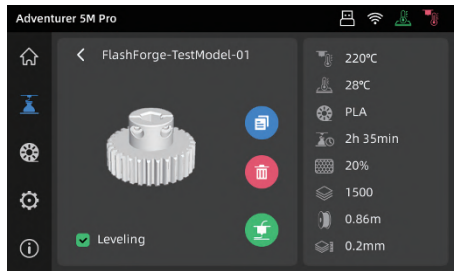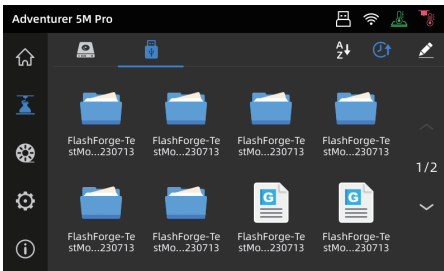


4.3.2 Printing via Wi-Fi transfer


After successfully connecting the printer to the network, open Orca-Flashforge. After finishing slicing, click [Print plate] in the menu, and select the connected Adventurer 5M Pro to send the print job.

Note



The printer and the computer must be connected to the same network. There are two modes for printer connection: WAN Mode and LAN Only Mode.

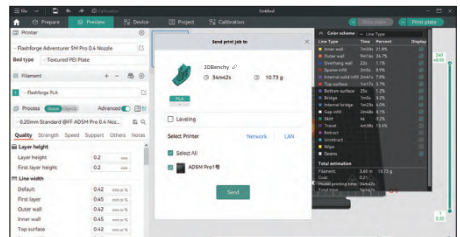

- a. WAN Mode: Please log in/register your Flashforge account before connecting the printer.
Click [+] on the device page to open the search list and select the desired machine.

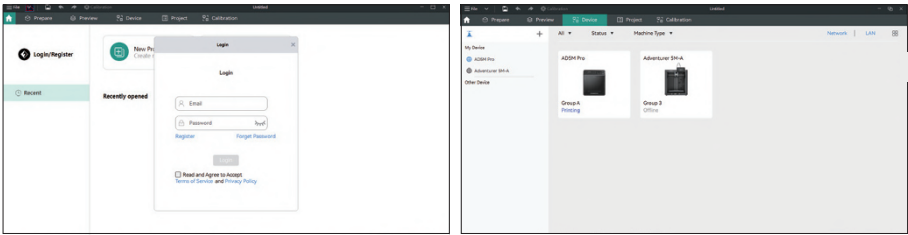


- b. LAN Only Mode: Enable [LAN Only] via [Network Mode]. In the slicing software, click [+] on the device page to find the corresponding printer. Select the printer and enter the Printer ID displayed on the printer to complete the connection.

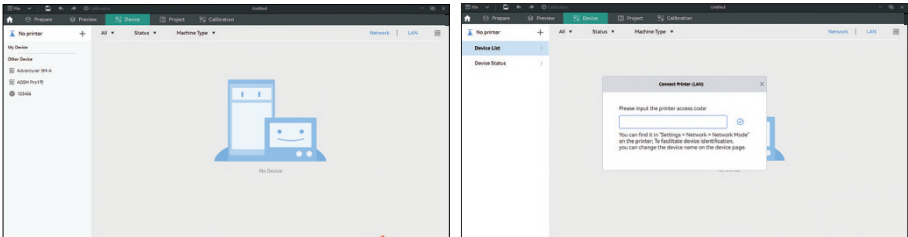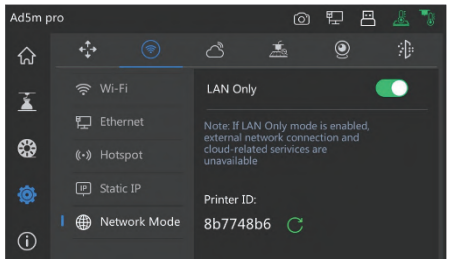


4.3.3 Printing via Cloud

Printing via FlashCloud

- Click [FlashCloud] - [FlashCloud], turn on the FlashCloud switch, and view the registration code.
- Open the FlashCloud website and register an account. After email activation, you can log in and use. **FlashCloud:** <https://cloud.sz3dp.com/>
- Click [My Printer] - [Add Printer]. On the Add Printer page, enter the registration code (cloud registration code) and name the printer. After clicking [OK], the information will appear on the printer's FlashCloud interface.

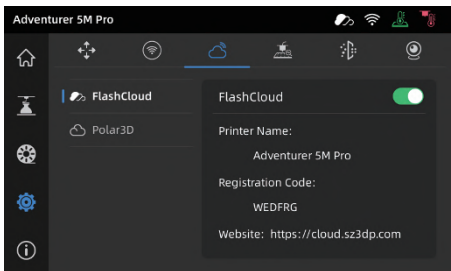


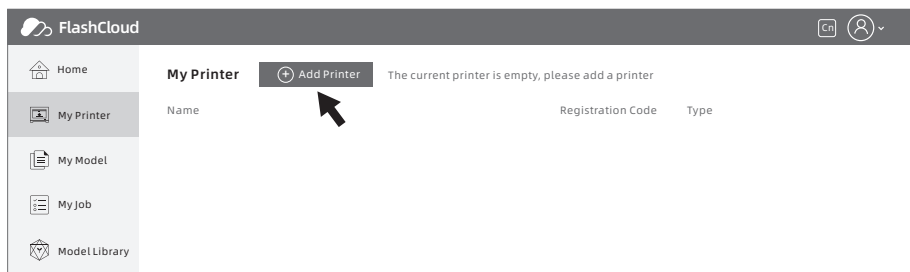


Printing via Polar Cloud Open the Polar Cloud website and register an account.
Polar Cloud: <https://polar3d.com>

Note: Polar Cloud service may not be available outside the United States.

After logging in, click the icon at the top right corner, click [Settings], and click [PIN Code] in the menu to find the PIN code.

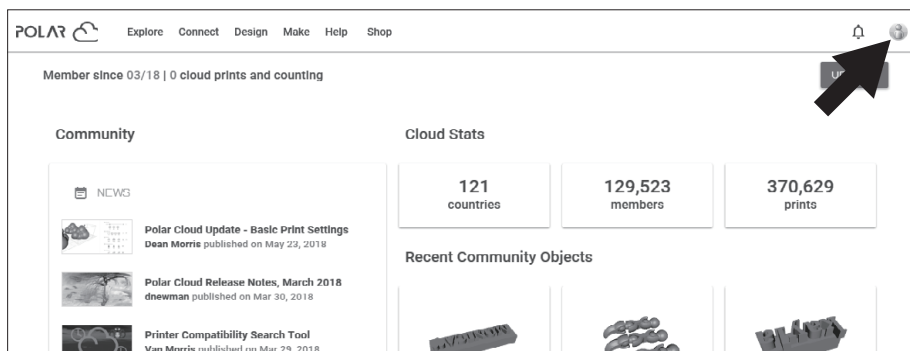


After connecting the Adventurer 5M Pro to the network, simply turn on the Polar Cloud switch and enter your account and PIN code.

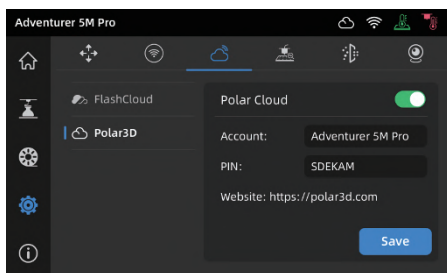


4.4 Camera Connection


1. Click [⚙️] - [📷] to turn on the camera switch.

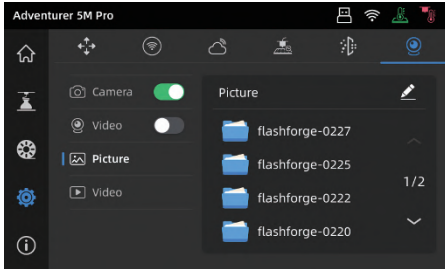

2. After the printer is connected to Orca-Flashforge, you can view real-time videos via [Device] - [Device Status] in Orca-Flashforge.

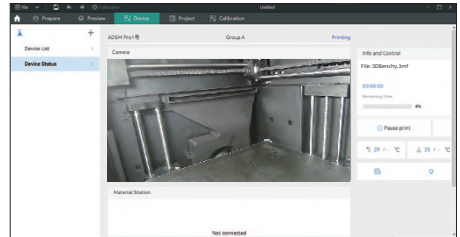

3. Turn on the video switch, and video files will be generated after the model is printed. You can export them to a USB flash drive for viewing.

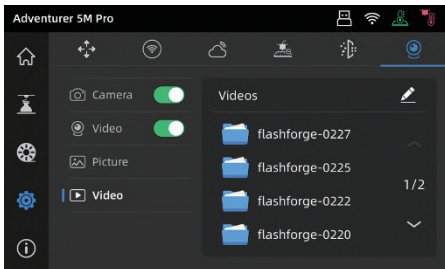

4.5 Model Removal After Printing





Note

When printing is completed, the nozzle and build plate may still be at a high temperature. It is recommended to allow them to cool down before removing the model.

After printing is completed, directly take out the flexible steel plate and bend the platform to remove the model. Ensure there is no residual filament on the platform before the next print.

Tips on Model Removal:

1. Please take the platform plate outside the printer for model removal to prevent model debris from accumulating inside the printer. It's recommended to keep the chamber clean.
2. For models printed with TPU or other flexible materials, it is recommended to use a scraper for removal, which ensures you can remove the flexible model from the bed without causing damage.

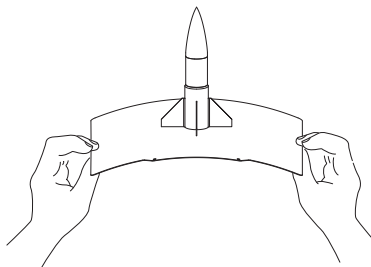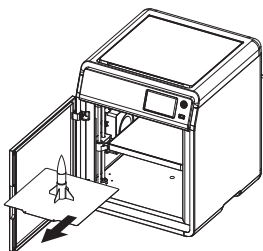

5. Introduction to Auxiliary Functions



Note

The interface layout may change whenever there is an upgrade of firmware.

5.1 Leveling and Calibration

During the first startup, equipment calibration will be performed. During subsequent use, choose leveling or vibration compensation as needed.

When to perform leveling:

- ◆ If continuously printing with PLA material, perform automatic leveling once with no need to do so before each print. However, performing leveling can inevitably improve the printing success rate;
- ◆ When switching between different materials (e.g., from PLA to ABS), please perform leveling before each print;
- ◆ If the platform-nozzle distance is too far (poor adhesion) or too close (no filament extrusion), please perform automatic leveling;
- ◆ After replacing the build plate or nozzle, please perform automatic leveling.


When to perform vibration compensation:

- ◆ When there is noticeable ghosting and ringing on 3D prints;
- ◆ After adjusting the tension of the synchronous belt;
- ◆ When the printer has been unused for a long time and is now being restarted.

Instructions:

Click [] - [] to enter the leveling and calibration interface. Choose [Leveling] or [Vibration test], click [Start], and the printer will automatically perform the corresponding operation.
(Note: Before calibration, ensure there are no foreign objects on the platform or at the nozzle tip.)


Note on when to perform PID calibration:
This can be performed after replacing the nozzle or when the nozzle temperature is abnormal.

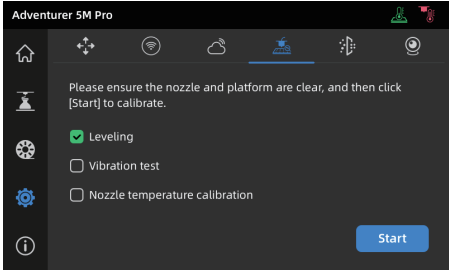

5.2 Air Filtration

The printer has internal&external circulation air filtration mechanisms for different materials.


During printing, the printer can automatically choose between internal circulation filtration or external circulation filtration based on the detected printing material. **(Note: Files exported from third-party slicing software cannot be automatically recognized and require manual selection.)**

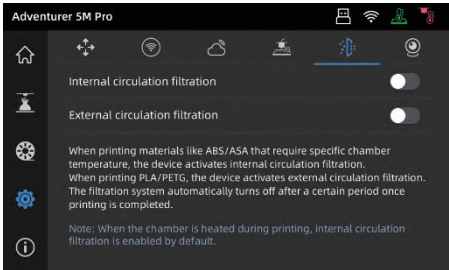

5.3 Other Function Settings

In the information interface, you can enable or disable sound, filament detection and auto shutdown, and perform firmware updates.

- ◆ When [Filament detect] is enabled, the printer will stop printing if filament runs out mid-print.
- ◆ When [Auto shut down] is enabled, the printer will power off automatically 30 minutes after completing a print job.
- ◆ When connected to a wireless network, click [Firmware update] to view the current version, check for updates, and perform online firmware updates.
- ◆ Printer Name and Location: Users can customize the name and location as desired.

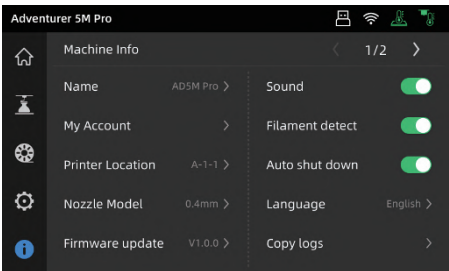

6. Maintenance

6.1 Suggestions on Platform Plate Usage

1. Powder coated PEI plate requires glue and is suitable for printing PLA/PETG/PLA-CF/PETG-CF/ABS/ASA. TPU printing does not require glue. This plate comes with the printer.
2. PEI film plate is suitable for printing PLA/TPU without glue. For PETG, it's recommended to use glue. This plate can be purchased separately.
3. PC sticker platform plate is suitable for printing PC/ABS/ASA. This plate can be purchased separately.
4. After applying glue to the platform plate, it can be cleaned with water.
5. If the platform plate gets oily, it can be cleaned with a dish detergent.
6. If the platform plate deforms significantly after long-term use, it's recommended to replace it with a new one.

6.2 Suggestions on Nozzle Usage

1. Please use one nozzle for the same type of material to avoid clogs and extend nozzle lifespan, especially when working with fiber-reinforced materials and PETG. Please avoid mixing them with other materials.
2. When switching to a different material with the same nozzle, if the new material's printing temperature is lower, adjust the setting to a higher temperature for filament extrusion to purge old filament from the nozzle.
3. When switching to a different material with a higher printing temperature, just load the new filament.
4. To clean residual filament inside the nozzle, you can perform multiple filament loading or manually clear any remaining filament using the unclogging pin tool.
5. After replacing the nozzle, please perform leveling again.

6.3 General Maintenance

1. Please apply lubricating oil to the guide rails after 200 hours of printing.
2. Please replace the filter cotton every 300 hours of printing or when it appears darker in color.
3. Please clean the filament residue inside the equipment chamber in time.

The following pages with images from wiki.flashforge.com/en/adventurer-series. These images identify the main components.



The CoreXY mechanism employs two motors working in unison to control the movement in both the X- and Y-axes. Movement along the X-axis occurs when both motors rotate in the same direction. Movement along the Y-axis occurs when both motors rotate in opposite directions. This design ensures precise and stable movement and allows for rapid acceleration.

The CoreXY structure offers several advantages over traditional 3D printer structures:


1. less inertia. The motors in the CoreXY structure can move simultaneously, so it has much less inertia than other structures. This allows the extruder to be more stable when moving at high speeds, reducing vibration and wobble and improving print quality.
2. higher speed and accuracy. With two motors moving simultaneously, the CoreXY structure can realize higher printing speed. Moreover, by accurately controlling the movement of both motors, higher printing accuracy can be realized, and more detailed models can be printed.
3. Smaller space occupation. The cross-over arrangement of the drive belts in the CoreXY structure results in a more compact path of motion for the extruder. The CoreXY configuration requires less space than other configurations and saves printer bed space.
4. Better stability and reliability. The two drive belts in the Core-xy structure intersect with each other to form a bi-directional tension balance, which effectively eliminates errors caused by inconsistencies in the belt tightening and loosening. This design not only improves the stability of printing, but also extends the life of the printer.

For more information about the CoreXY motion system please visit [this link](#)

The extruder feeds the filament to the hot end where it is then melted and extruded. Then 3D objects are created by layer-by-layer deposition of filaments.

The nozzle clips secure the hot end, which can be quickly removed by pressing both clips at the same time.

The cooling fan cools the heat sink to prevent nozzle clogs.

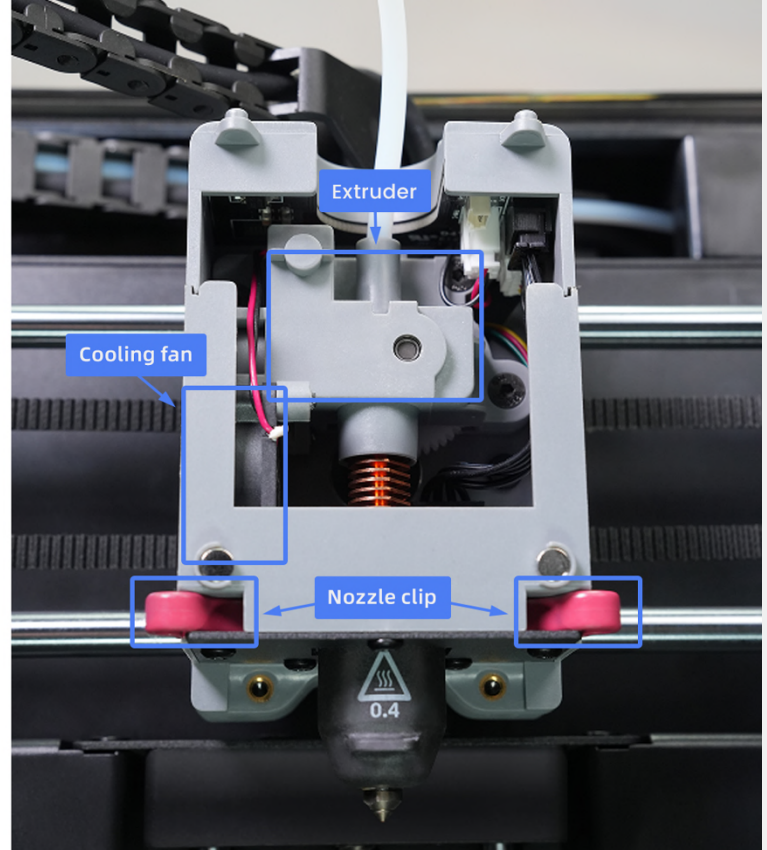

Belt tension adjusting screw for adjusting the belt tension to an appropriate level.

Spool holder mounting hole for installing a filament spool holder, offering convenient use.

Electrical Components

The Adventurer 5M series features various electrical components. Here are just some key ones.


Motherboard


The motherboard of the Adventurer 5M series uses a dual-core Cortex-A7 MCU, 8GB built-in storage, silent drivers, 5G & 2.4G Wi-Fi, and a TVOC sensor.

The CPU can enable functions like automatic shutdown upon print completion, pressure compensation, automatic leveling, and vibration compensation.

Pressure Sensor

The Adventurer 5M series uses a one-click full-auto leveling system, measuring the relative height between the nozzle and the platform through pressure sensing technology and performing automatic compensation. No need for leveling tools or manual Z-axis calibration, ensuring perfect first-layer quality.

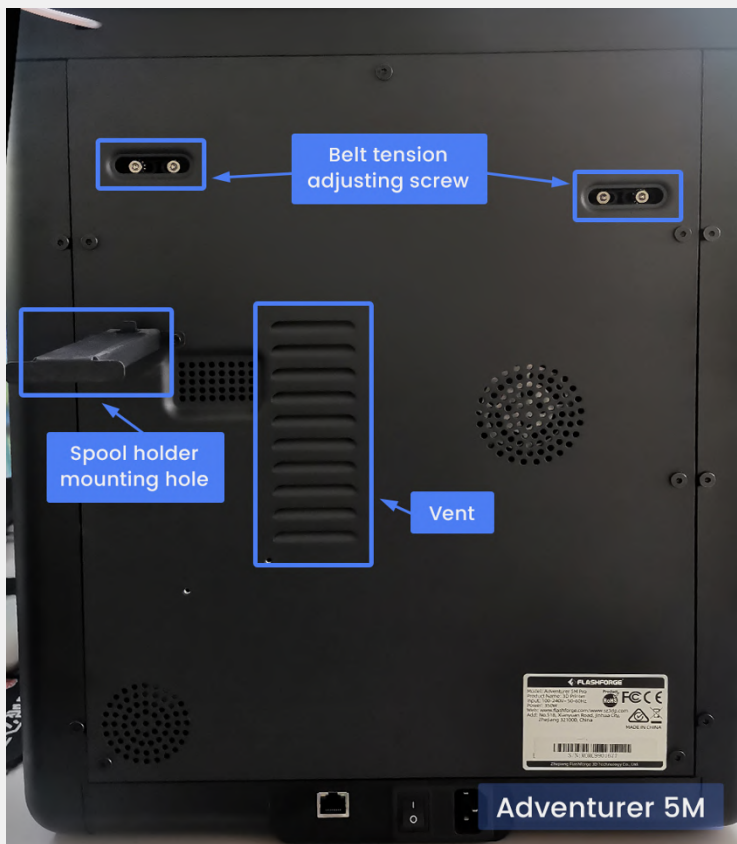


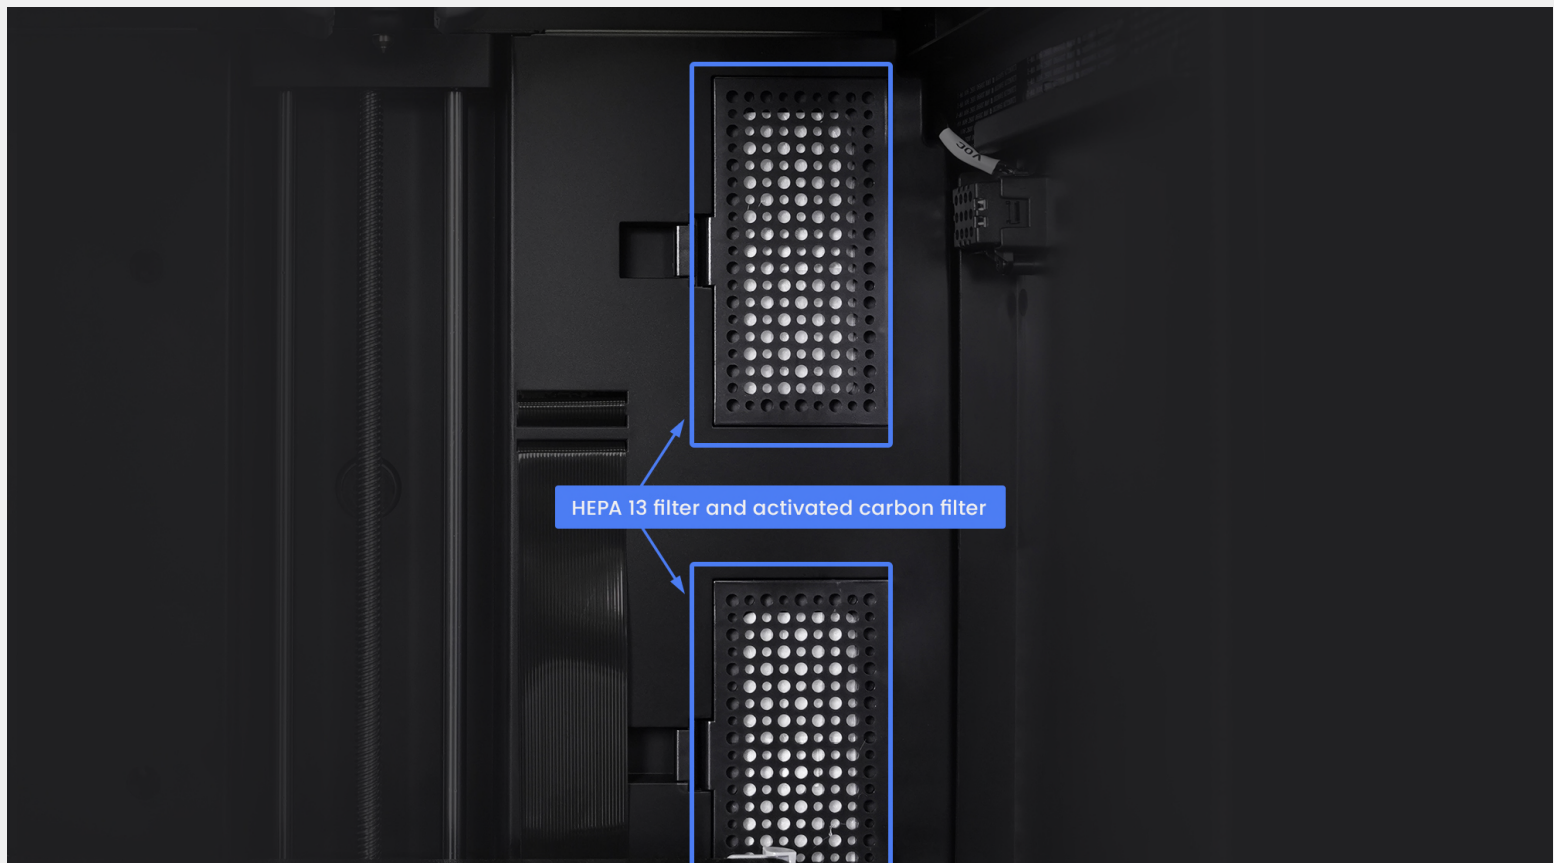

The hot end heats, melts, and extrudes the filament layer by layer.

Optional hot end are available in three sizes: 0.25mm, 0.6mm and 0.8mm (* 0.25mm and 0.4mm Nozzle are made of stainless steel; 0.6mm and 0.6mm Nozzle are high-strength steel) .

Suggest : Print PLA,PETG with 0.4mm or 0.25mm nozzle ; print TPU, PLA-CF and PETG-CF with 0.6mm or 0.8mm nozzle.

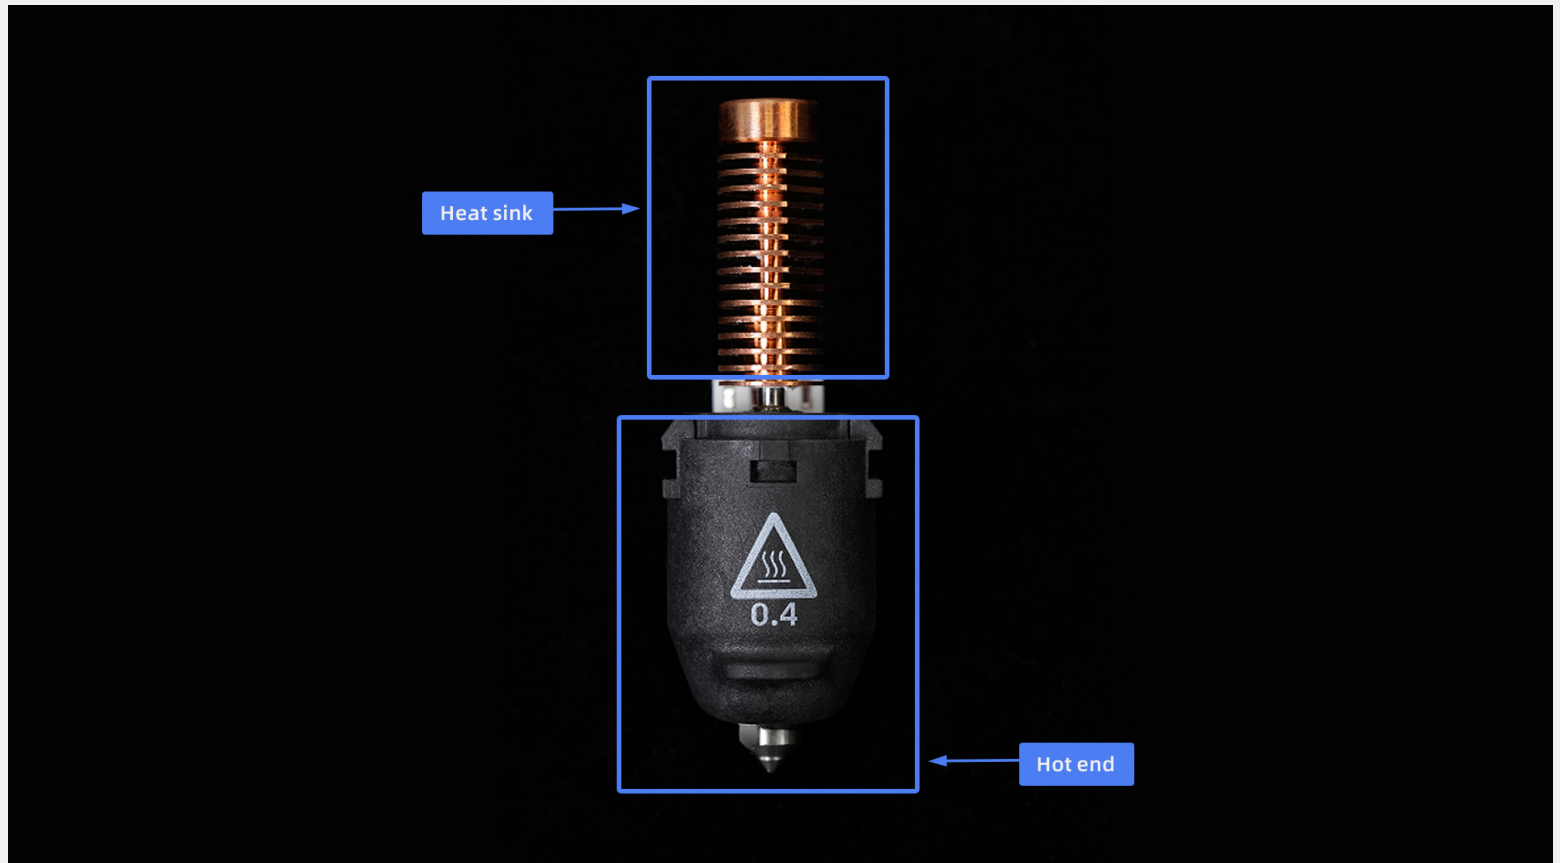

7. Q&A

Q1. How to unclog the nozzle?

Method 1: Click [Load] and heat the nozzle to the printing temperature of the used filament. After heating, remove the filament guide tube, and check if the filament is bent or filament tip is not smooth. If so, trim and insert the guide tube and filament into the nozzle, then click [Load] and check.


Method 2: If Method 1 doesn't work, use the unclogging pin tool.

Method 3: If Method 2 doesn't work, please replace the nozzle.


Q2. How to replace the nozzle?

Note Please power off the printer before replacing the nozzle!



1. Remove the filament guide tube and cut the filament.

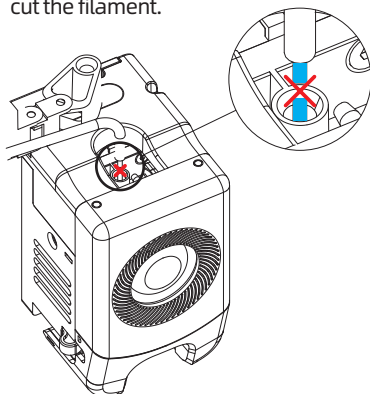

2. Press the left and right buckles and remove the nozzle. Trim the filament along the nozzle top.

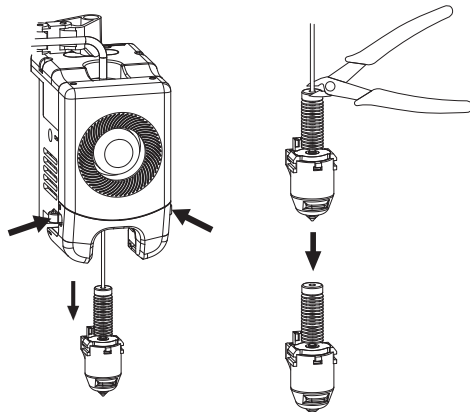


3. Insert the new nozzle into the extruder and you can hear a "click" sound indicating the buckle position has changed. Ensure that the nozzle slot aligns flush with the bottom of the extruder. Note: If you have trouble aligning the nozzle, you can press the buckles during installation or remove the front cover of the extruder (grab the lower part of the front cover with your hand and lift it upward slightly) to check the position.

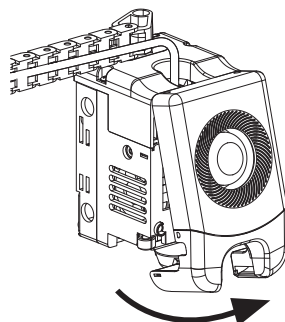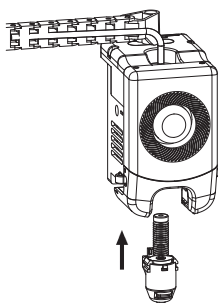


Whether it is installed in place is judged as follows:

1. Ensure the nozzle is pressed to the bottom firmly during installation.
2. Check if it is properly installed:

- a. Check the red buckle positions on the left and right.

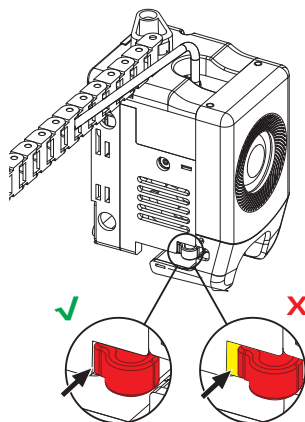

- b. Check if the nozzle slot is flush with the bottom of the extruder (if your view is obstructed, you can remove the front cover of the extruder to observe).

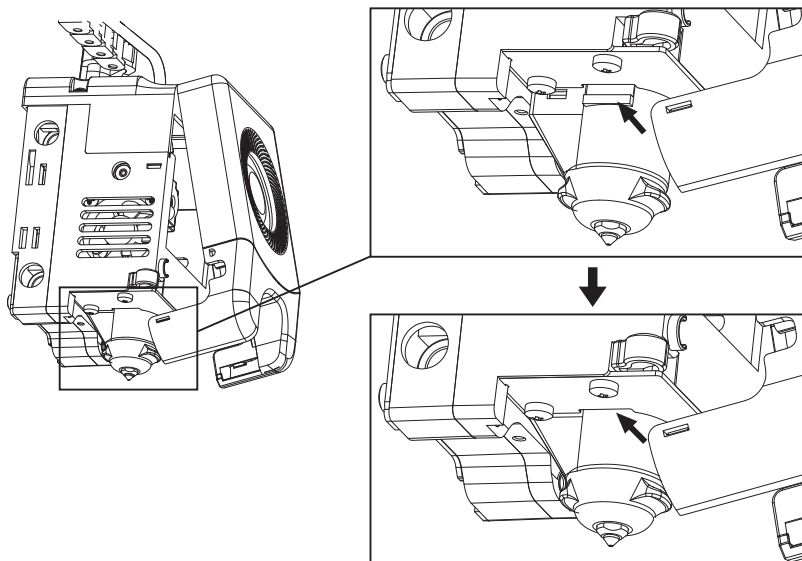

4. Power up the printer, click [] to enter the loading interface, and follow the on-screen instructions to complete filament loading (refer to 4.1.1). Filament coming out of the new nozzle smoothly indicates a successful nozzle replacement.

Q3. Is leveling required after nozzle replacement?

Yes. It is recommended to perform automatic leveling to ensure high print quality as slight errors may occur during nozzle installation. The equipment defaults to the leveling operation before each print.

Q4. What to do if the extruder moves but doesn't extrude filament at the beginning of printing after clicking the model for printing?

1. Observe the filament guide tube to check if filament has entered the nozzle. If not, please click [Load] until filament comes out.
2. Check if the nozzle is clogged. If so, please refer to the solution of Q1.

Q5. What to do if the nozzle position is too high (far from the platform) or too low (hitting the platform) during printing? How to level it?

Please check if the platform is properly installed and there is no excessive residue on the nozzle. If these issues exist, address them first. Then, go to the settings interface, select the leveling option, and perform automatic leveling or enable automatic leveling before printing.

Q6. Can filaments from other brands be used?

Yes. You can use filaments from other brands, but certain parameter adjustments are required due to slight temperature differences in different filaments.

Q7. Is it safe to print with ABS material?

ABS can release toxic gases during heating. It is recommended to enable internal-circulation air filtration during or after printing. If conditions permit, consider printing in a well-ventilated area. It is recommended to print non-toxic materials such as PLA in children's activity places.

Q8. What to do if the printed model warps or doesn't adhere well?

- Method 1: Increasing the platform temperature can improve the adhesion between the platform and the model.
- Method 2: Adding a brim during model slicing can alleviate the issue.
- Method 3: Apply glue.
- Method 4: Clean the platform to remove any oil or dirt.
- Method 5: Check if the platform is level. The leveling and calibration function can be used.

Q9. What to do if print files can not be found and the screen displays only folders after inserting the USB flash drive?

The USB flash drive format is incorrect. The printer supports the FAT32 file system. Please format the USB flash drive to FAT32.

Q10. What to do with the Wi-Fi connection failure?

1. Please check if the Wi-Fi name contains special characters. If so, modify it and try again.
2. Please check if the password contains special characters. If so, modify it and try again.

Q11. Firmware update precaution

Do not power off the printer or disconnect from the network during firmware download or update to prevent update failures.

Q12. Why is the boot screen white?

If the startup sound can be heard, please replace the screen or cable. If not, please contact our after-sales personnel.

8. Help and Support

Flashforge's professional after-sales service personnel and salesmen are on standby for you at any time and are ready to help you with any problem you may have with the printer. If the issues or questions are not covered in this User Guide, you can seek for solutions on our official website or contact us by phone.

There are instructions and solutions to common issues that can be found on our official website. Many questions are answered at Flashforge's English official website - www.flashforge.com.

The Flashforge after-sales service team can be reached by phone from 8:00 AM to 5:00 PM, from Monday to Saturday. In case you contact us during off-duty time, your inquiry will be answered the next working day immediately. We apologize for any inconvenience this may cause.



Note

Changing different filaments may leave minor impurities in the nozzle, leading to clogs. As this can be solved by just unclogging it, it's not owing to a quality issue. If you encounter this problem during use, please contact customer support and follow their guidance for unclogging.

After-sales Service Tel: 400-886-6023

E-mail: support@flashforge.com

Address: 3rd Floor, Building 2, No. 8 South Daxing Street, Tangxia Town, Dongguan City, Guangdong Province

Note: Please provide the product serial number which can be found on the barcode at the back of the printer when contacting customer support.



S/N: FFAD*****



更多产品相关资料您可以登陆闪铸官网查看。

www.sz3dp.com - [技术支持]



Follow us

Zhejiang Flashforge 3D Technology Co., Ltd.

Address: 3rd Floor, Building 2, No. 8 South Daxing Street, Tangxia Town,
Dongguan City, Guangdong Province

Service Hotline: +86 579 82273989

support@flashforge.com

This copy from ETID office printer (2025 Dec order)



售后服务卡

After-sales Service

< ASC20200706 >

浙江闪铸三维科技有限公司
Zhejiang Flashforge 3D Technology Co., Ltd.

 新浪微博：闪铸科技-3D打印机

 微信公众号：闪铸3D打印俱乐部

 官方QQ群：206773820

 Flashforge  ff3dprinters

 Flashforge 3D Printer

 www.flashforge.com www.sz3dp.com

 浙江省金华市仙源路518号
2/F, No.518, Xianyuan Road, Jinhua, Zhejiang, China

闪铸科技采用谁销售谁服务的原则，如您的3D打印机是在非闪铸官方平台购买，请向您购买的商家获取相关支持。

1. 闪铸科技所有3D打印机均为用户提供12个月整机有限质保。其中FFF技术3D打印机的喷头质保时间为3个月。
2. 质保期内若设备出现非人为损坏（由闪铸工程师评定），您将获得免费配件及售后技术支持。
3. 售后服务周期以产品出厂日期为起始。如能提供清晰的发票，则以发票开具日期为起始。
4. 维修零配件可能为非全新配件，但甲方保证配件功能完全正常。维修配件质保时间与其整机质保时间相同。

以下配件不列入质保范围

平台贴纸 / 平台金属板 / 平台玻璃板 / 亚克力罩 / SD卡及U盘 / USB线 / 打印耗材 / 丝盘轴 / 溶液盒 / 薄膜 / 打印平台 / 遮光罩
清洗盒 / 塑料铲刀 / 金属铲刀 / 刷子 / 清洗手套 / 内六角扳手(2.5mm*1/3mm*1/5mm*1) / 开口扳手 / 工具包及包内工具

*由于FFF产品喷头会有迭代升级，喷头升级套件需单独购买。

以下情况不在质保范围内

- 无法提供有效质保卡或序列号(遗失、涂改、模糊无法确认)；
- 整机及部件已经超过质保有效期；
- FFF商用设备运行总时长超过1000小时，FFF消费级设备运行总时长超过400小时；
- 设备曾经在未经闪铸授权的维修店维修；
- 设备在非产品规定的工作环境下使用而造成的设备故障或损坏；
- 设备正常磨损、老化或因操作造成的外观划痕或瑕疵；
- 由于使用非闪铸指定的软件而造成的设备故障或损坏；
- 由于使用其它品牌部件造成的设备故障或损坏；
- 由于私自对设备进行改装而造成的设备故障或损坏；
- 由于错误安装、使用而造成的设备故障或损坏；
- 由于滥用(包括超出工作负荷)、误用而造成设备故障或损坏；
- 由于使用低质量耗材而造成的设备故障或损坏(建议使用闪铸官方耗材)；
- 由于维护不当(受潮、发霉或暴露在极端气候)造成的设备故障或损坏；
- 由不可抗因素(如火灾、地震、雷击、水灾等)造成的故障或损坏；

Note: The one who sells you the printer should be responsible for your after-sales service.

1. Flashforge grants all end-users a 12-month limited warranty for all Flashforge 3D printers (except the Flashforge extruder) and a 3-month warranty for Flashforge FFF Extruder.
2. If Flashforge 3D printer fails during normal and proper use within the warranty period (judged by Flashforge engineers), Flashforge will provide users with free maintenance services or remote after-sales support.
3. The warranty period starts from the outbound date, or starts from the invoice date if clear and confirmed invoice is provided.
4. Flashforge will repair or replace only the defective parts with new or reconditioned parts or products that are functionally equivalent or superior to those originally supplied. If a part is repaired or replaced during the warranty period, the warranty period still remaining for the entire printer will apply to this part.

Parts Excluded from This Warranty

Build Tape / Build Plate / Acrylic Cover / SD Card / USB Stick / USB Cable / Filament / Filament Spool / Glue / Resin Vat / Film / Rinse Bucket / Gloves / Plastic Scraper / Metal Scraper / Brush / Allen Wrench(2.5mm*1/3mm*1/5mm*1) / Stamping Wrench / Tools Bag / Accessories

*FFF extruder kit shall be purchased independently due to upgrading.

WHAT IS NOT COVERED

- Unable to provide valid After-sales Service Card or serial No. (Including but not limited to lost, alter or fuzzy cannot be confirmed);
- FFF commercial printers out of warranty period or over 1000 working hours; FFF consumer printers out of warranty period or over 400 working hours;
- Damage(s) caused by improperly or incorrectly performed modifications, alterations or repair;
- Damage(s) due to operation under improper environment (damp, wet or other extreme weather);
- Exterior scratch or flaw caused by abrasion, aging or normal use;
- The warranty period of printer or part has expired;
- Damage(s) caused in service shops unauthorized by FlashForge;
- Damage(s) caused by improperly installation, use or operation;
- Damage(s) caused by abuse(overloaded working), misuses;
- Damage(s) caused by using unauthorized spare parts or poorquality filament(Recommended to use FlashForge filament);
- Damage(s) caused by using 3rd party software;
- Damage(s) caused by force majeure (such as a lightning strike, fire, earthquake, floods or any other event beyond human control);
- Damage(s) caused by using 3rd party parts;



After-sales Service Registration Form

Series No.: _____ Purchase from: _____

Fault Description: _____

Tel.: _____ Contact: _____

Add.: _____

❗ Please fill in this form carefully, cut out this form and mail it back to Flashforge together with the printer, or download this form from **www.flashforge.com**, fill in this form and mail it to **aftersales@flashforge.com**. After-sales service shall not be provided without this form.

❗ Please contact your printer's reseller to get After-sales service help if your printer is not purchased on official Flashforge website.



csXA9CMkGpX



S/N: MSQE9B03265

合德/以星统配-卡派		US
YW000431884ZD PC003758YWU000334		件数 334/400
额外服务：单独报关	PC-ZDGJ	
Amazon TEB4 747 COURSES LANDING RD PENNS GROVE NJ US UNITED STATES OF AMERICA 08069-2957 0000000000		邮编 08069-2957
		仓库代码 TEB4
MADE IN CHINA		

FBA

目的地:

FBA

TE04

74 COUSSES, END: GRI

PE INS COUVE NJ 08 39-28 7

美

产地:

FLASH

hejia

- Jin Hua - 3 000

O.51 Xianyan Road

国

400 55MPR BASTA 10/26/2025 08:52 EB4 Created: 2025/10/26 08:52 ST 2



FBA18433FQ1GU00123

Single SKU

FF AD5MP

数量

AD MPRC



Follow us

Zhejiang Flashforge 3D Technology Co., Ltd.

Address: Floors 2-4, Building B, Huaxing Development Building,
No.328 Wen'er Road, Xihu District, Hangzhou City, Zhejiang Province, China

Service: support@flashforge.com

Suggestions and Complaints: mkt2@flashforge.com

Web: flashforge.com | enterprise.flashforge.com

2026.02
FLASHFORGE® Paper copy

EN - A09

Adventurer 5M Pro

Quick Start Guide

WARNING

1. Please refer to this Guide for initial printer setup.
2. Hot! Avoid touching the heating nozzle in operation.
3. Moving parts in the printer may cause injuries. Do not wear gloves or other sources of entanglement in operation.

Safety Notice

Do not power on the printer until installation is completed.

LEGAL STATEMENT

Users are not authorized to make any modifications to this Quick Start Guide.
Flashforge shall not be held responsible for any safety incidents resulting from the disassembly or modification of the equipment by the customer. No one is allowed to modify or translate this Guide without Flashforge's permission. This Guide is protected by copyright, and Flashforge reserves the right of the final interpretation of this Guide.



EN/CN - A08

Adventurer 5M Pro / 冒险家5M Pro

Quick Start Guide

快速启动指南

中文P12

WARNING
⚠️ 注意事项

-
1. Please refer to this Guide for initial printer setup.
 2. Hot! Avoid touching the heating nozzle in operation.
 3. Moving parts in the printer may cause injuries. Do not wear gloves or other sources of entanglement in operation.
-
1. 请参照本指南完成打印机的初始准备。
 2. 高温危险！打印机喷嘴在工作时会被加热，操作时请避免接触！
 3. 可动部件可能会造成卷入挤压和切割伤害。操作机器时请不要佩戴手套或缠绕物。
-

Safety Notice
⚠️ 安全提示

Do not power on the printer until installation is completed.
请勿在打印机安装完成之前通电。


LEGAL STATEMENT
⚠️ 法律申明

Users are not authorized to make any modifications to this Quick Start Guide.
Flashforge shall not be held responsible for any safety incidents resulting from the disassembly or modification of the equipment by the customer. No one is allowed to modify or translate this Guide without Flashforge's permission. This Guide is protected by copyright, and Flashforge reserves the right of the final interpretation of this Guide.


用户无权对此使用手册进行任何修改。
客户若自行拆装或改造设备造成任何安全事故，闪铸集团概不负责。未经闪铸集团允许，任何人不得对该手册进行修改或翻译。
本手册受版权保护，闪铸集团对本手册保留最终解释权。

Unboxing Instructions


1. Open the box.

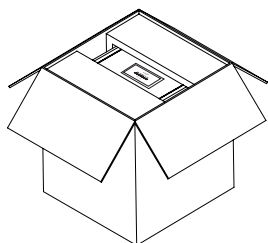


2. Remove the upper foam packaging, Quick Start Guide and After-sales Service Card.

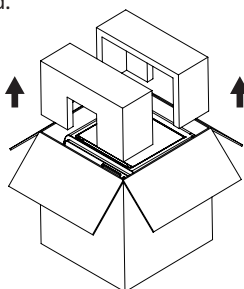


3. Take out the machine, place it on a level workspace and remove the packaging bags and tapes.

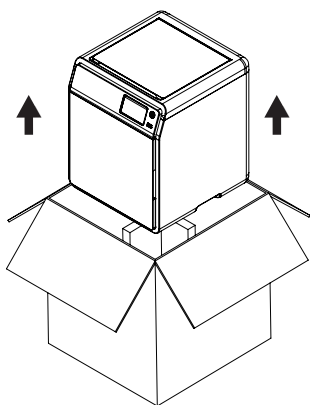


4. Open the top cover and remove the upper protective foam.

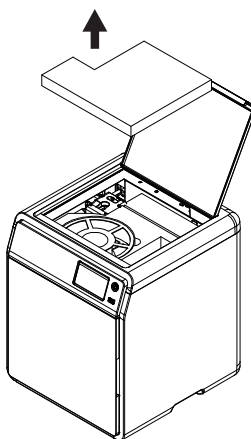


5. Remove the filament, power cable, USB flash drive, 0.6mm nozzle from the chamber protective foam. Remove the inner protective foam from the extruder. Open the front door and remove the front protective foam and accessory box.

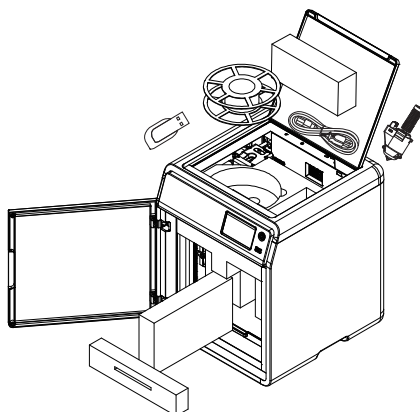


6. Move the chamber foam according to the arrow direction.

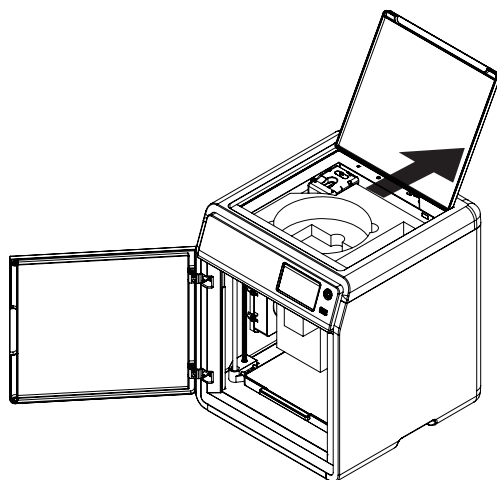

7. Remove the foam.

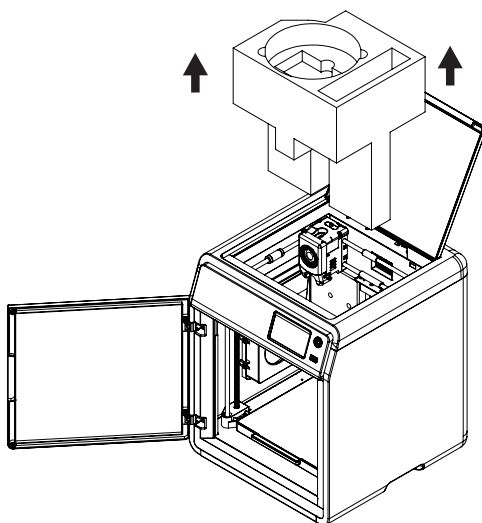

Packing List

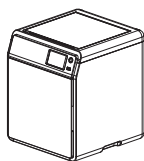

3D Printer




Filament




Power Cable




Quick Start Guide

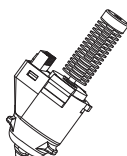

0.6mm Nozzle

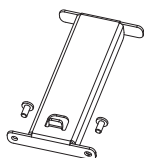


Spool Holder
(with 2 screws)




Grease



Glue

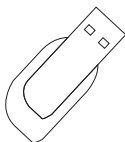


USB Disk

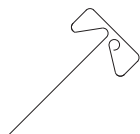


Unclogging Pin Tool



Screwdriver

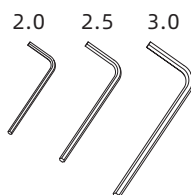


Allen Wrench Set

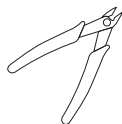


Diagonal Pliers

Printer Components

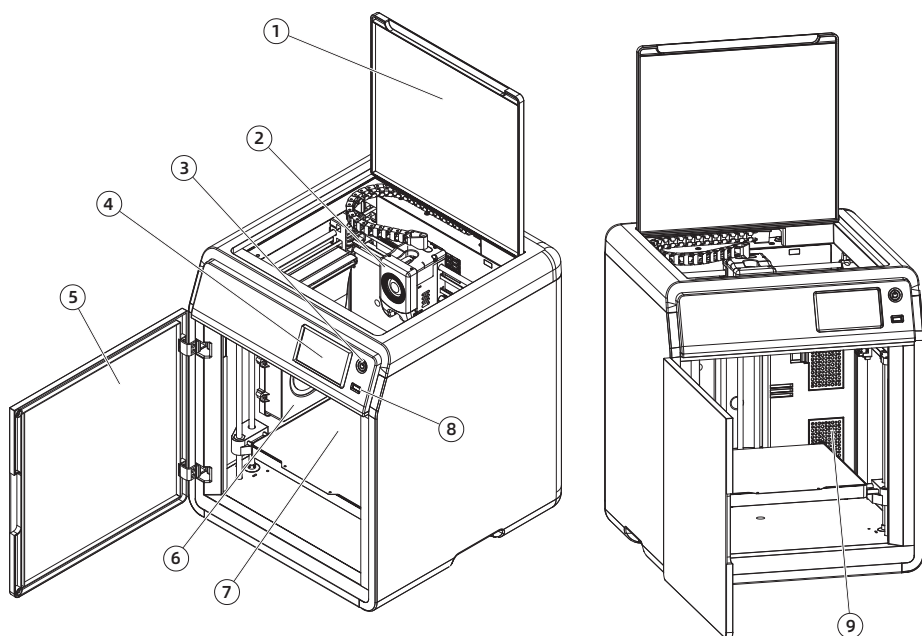


- 1. Top Cover
- 2. Extruder
- 3. Switch Button
- 4. Touch Screen
- 5. Front Door
- 6. Auxiliary Cooling Fan
- 7. Build Plate
- 8. USB Port
- 9. Air Filter
- 10. Screw Holes for Spool Holder
- 11. Ethernet Input
- 12. Power Switch
- 13. Power Socket

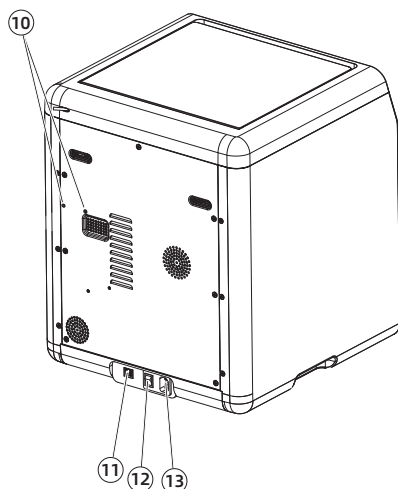

Install the Spool Holder


1. Take out the two screws and spool holder from the accessory box.

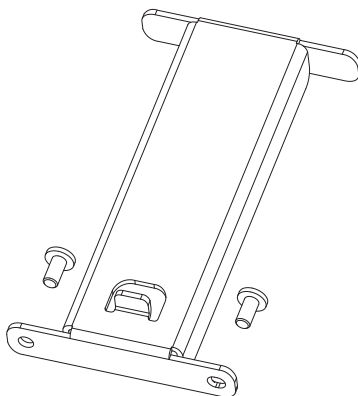

2. Install the spool holder at the position shown in the figure with the two screws.

Note

Please tighten them using a 2.0mm Allen wrench.

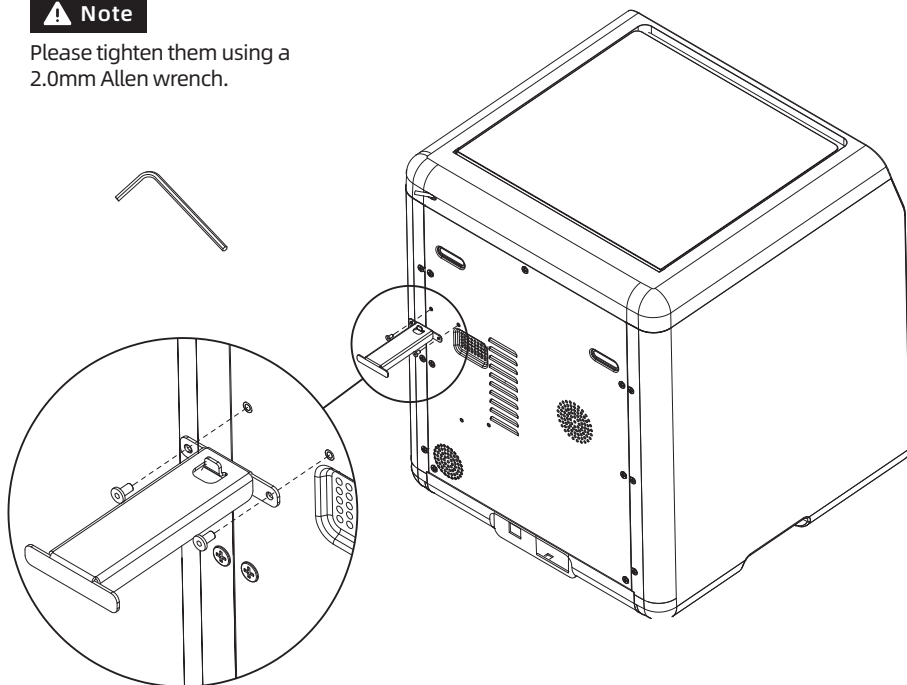


Unlock the Build Plate



Note

Please ensure the platform has been cleared up.



Please use a 2.5mm Allen wrench to remove four screws which lock the build plate (as indicated by the arrow).

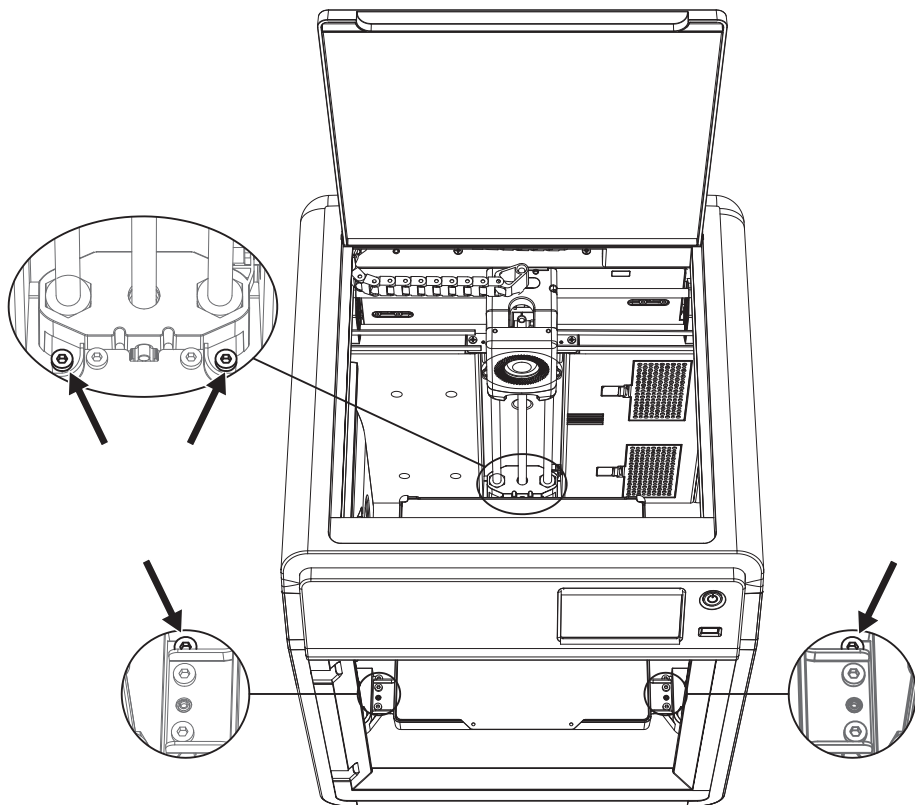

First Print

* The interface layout may change whenever there is an upgrade of firmware.





1. Connect the power, turn on the power switch, and press the switch button to turn on the screen.

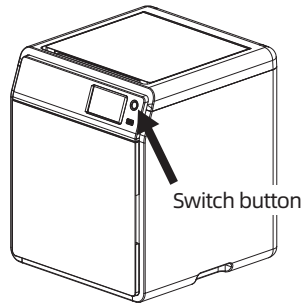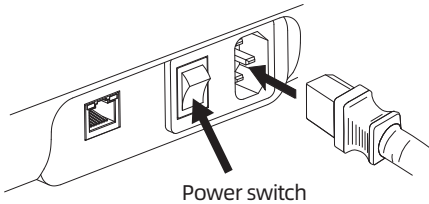

2. Following the guide on the screen, select the language.




3. Turn on the Wi-Fi switch and connect to the network following the instructions. A successful connection notification will pop up once connected.

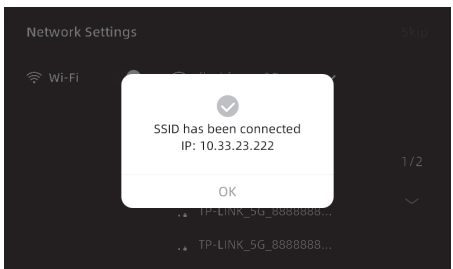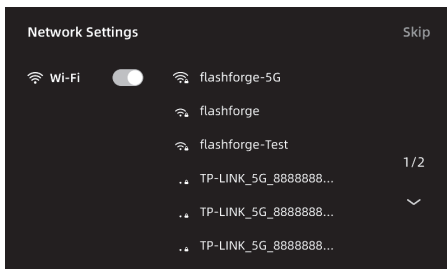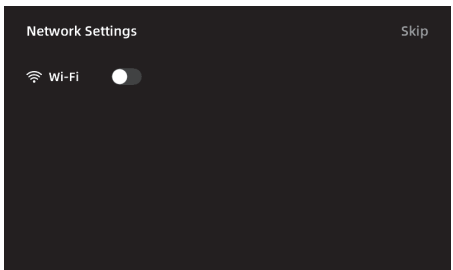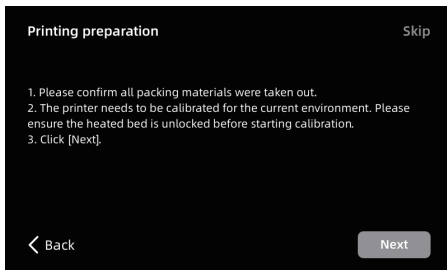

4. Bind the printer following the instructions.
(Note: If skipped, binding can still be done later on the printer, see User Guide for details.)


a. After clicking [OK], the QR code page will appear.

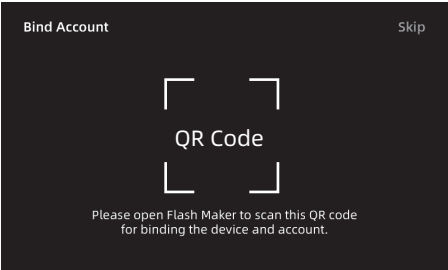

b. Download Flash Maker by scanning the QR code (see right) or from the app store, register your Flashforge account, and log in.





c. Use Flash Maker to scan the QR code on the printer screen to bind the printer to your account. (Note: Default printer name and location are set upon leaving the factory; after completing the startup, you can customize the printer name and location in the settings.)

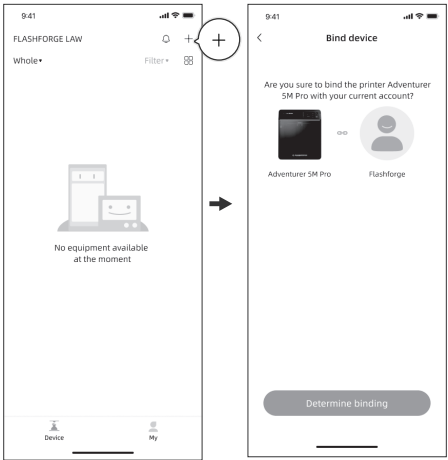


5. Click [Next] and the machine will perform the first calibration. Vibrations and noise during calibration are normal.


(Note: Please keep the machine on a stable surface and do not move it during calibration.)

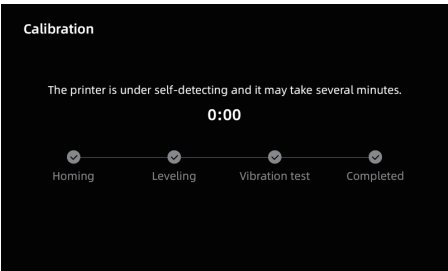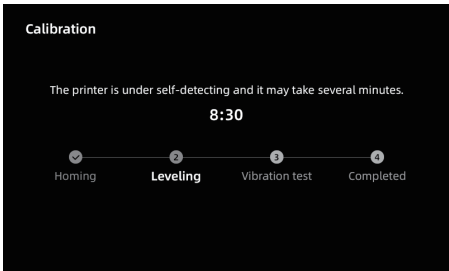



6. Load filament following the on-screen start-up boot:

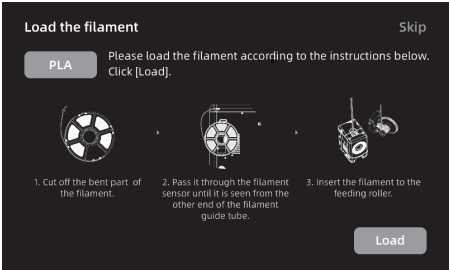


a. Cut off the bent part of the filament end.

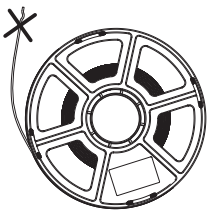


b. Hang the filament on the spool holder. Pass it through the filament sensor until it's seen from the other end of the filament guide tube. Push it forward to the feed roller, until it can not go further. (Please use PLA filament for the first print on initial setup).

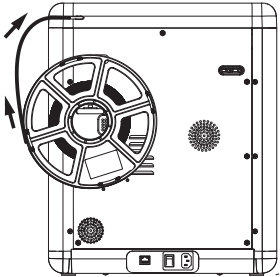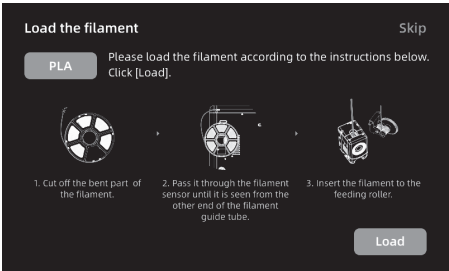




C1. Click [Load] and select [PLA] for the first print.

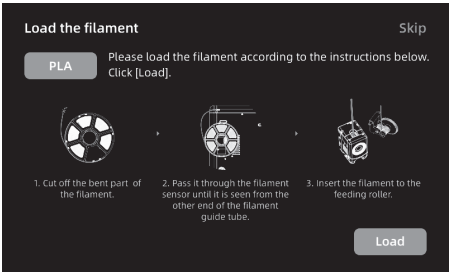

C2. Wait for the extruder to heat up.

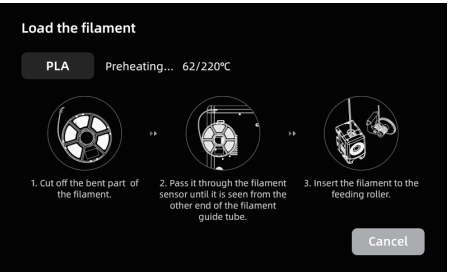


C3. Feeding will begin after heating. Successful filament extrusion from the nozzle indicates successful loading. Lastly, confirm the filament guide tube is properly inserted.

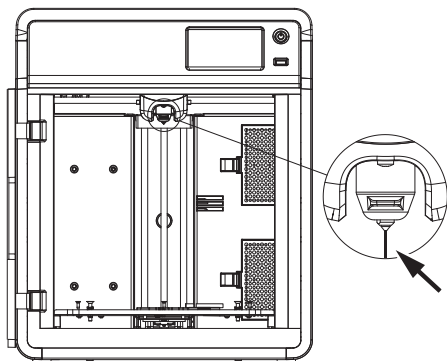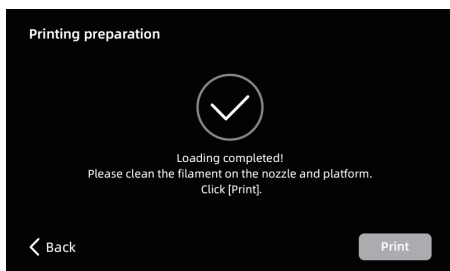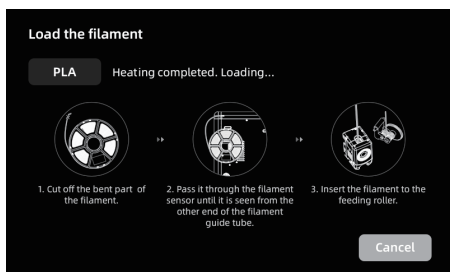


Note

If no filament is extruded, manually insert the filament into the inlet and click [Back] to retry. Feel for filament movement until it is extruded.

7. Please clear the filament residues on the nozzle and platform. Users must apply glue to the platform so as to improve adhesion for the first print.

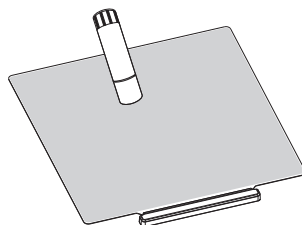

8. Click [Print] and the machine starts printing the built-in file (configured for PLA material).

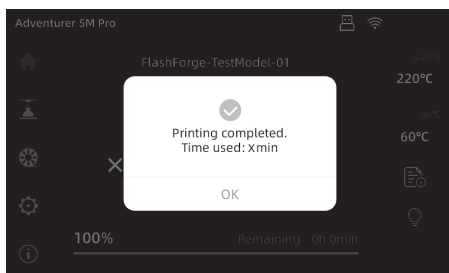


For more information, you can visit the Flashforge official website.
www.flashforge.com - [Support]

Parameters


Machine Name	Adventurer 5M Pro
Extruder Quantity	1
Printing Precision	±0.1mm [testing based on 100mm cubes]
Positioning Accuracy	X/Y-axis: 0.0125mm, Z-axis: 0.0025mm
Layer Thickness	0.1-0.4mm
Build Volume	220 x 220 x 220mm
Nozzle Diameter	0.4mm default [0.6/0.8/0.25mm optional]
Printing Speed	10-300mm/s
Max Acceleration	20000mm/s ²
Max Travel Speed	600mm/s
Max Extruder Temperature	280°C
Supported Filament	*PLA/*PETG [0.4mm nozzle] ABS/ASA *TPU/PLA-CF/PETG-CF [0.6/0.8mm nozzle] * Note: Materials marked with * are recommended for printing.
Power Supply	Input: AC 100~240V, 50/60Hz, 350W
Device Size	380 x 400 x 453mm [excluding the spool holder]
Net Weight	14.6kg
Connectivity	USB/Wi-Fi/Ethernet
Operating Temperature	15-30°C
Compatible Operating System	Windows 7/8/10/11; Linux support version Ubuntu 20.04 or later; Mac OS support version 10.9 or later.
Slicing Software	Orca-Flashforge/OrcaSlicer/FlashPrint 5
Max Platform Temperature	110°C
Leveling Method	One-click auto leveling
Filament Run-out Reminder	√
Power Loss Recovery	√
Smart Touch Screen	4.3-inch
Remote Video Monitoring	√
Time-lapse Video	√
Air Filtration	Internal circulation + external circulation [HEPA + activated carbon]
Build Plate	PEI flexible steel plate
Automatic Shutdown	√

产品开箱


1. 打开纸箱。

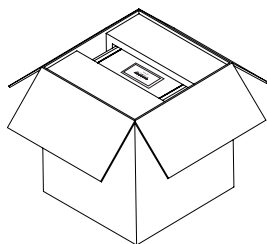


2. 取出上方固定泡棉以及快启售后服务卡。

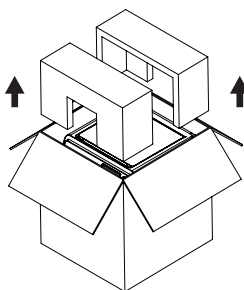


3. 取出机器放置水平桌面，去除包装袋和固定胶带。

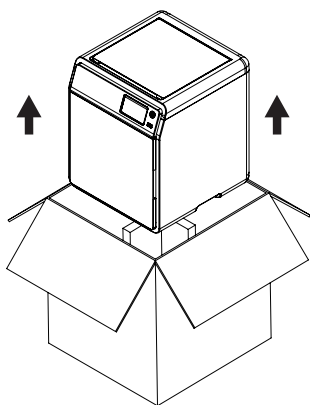


4. 打开机器上盖，取出上部保护棉。

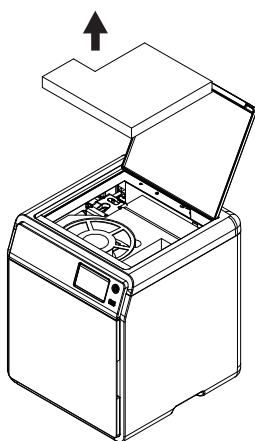


5. 取出腔体保护棉内的耗材、电源线、U盘、0.6mm口径喷嘴和喷头内侧保护棉，同时打开机器前门取出前部保护棉及配件盒。

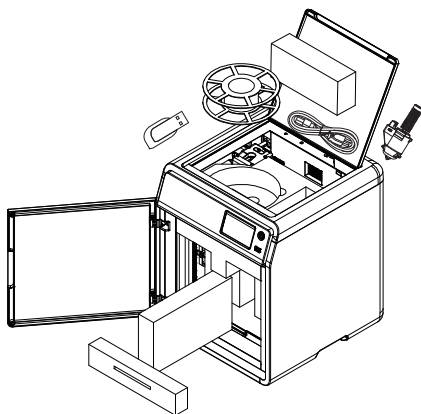


6. 按照箭头方向移动腔体泡棉。

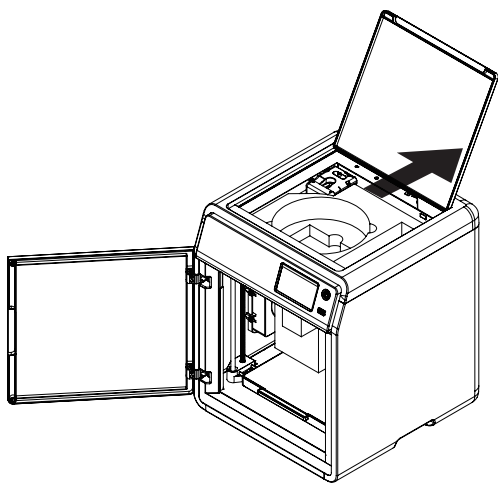

7. 取出泡棉，完成开箱。

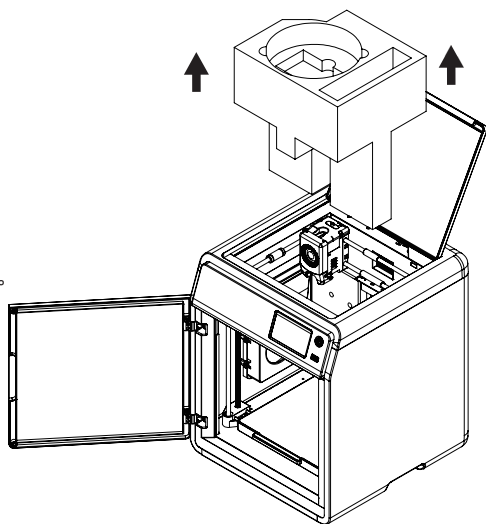

装箱清单

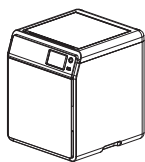

3D打印机




耗材




电源线




快速启动指南

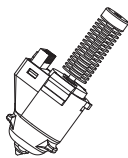

0.6mm 口径喷嘴

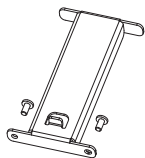


料盘支架
[含两颗螺丝]




润滑脂



水洗胶

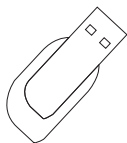


U盘

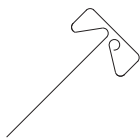


通针



十字螺丝刀

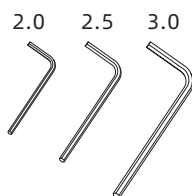


内六角扳手

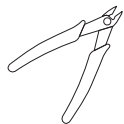


斜口钳

部件介绍

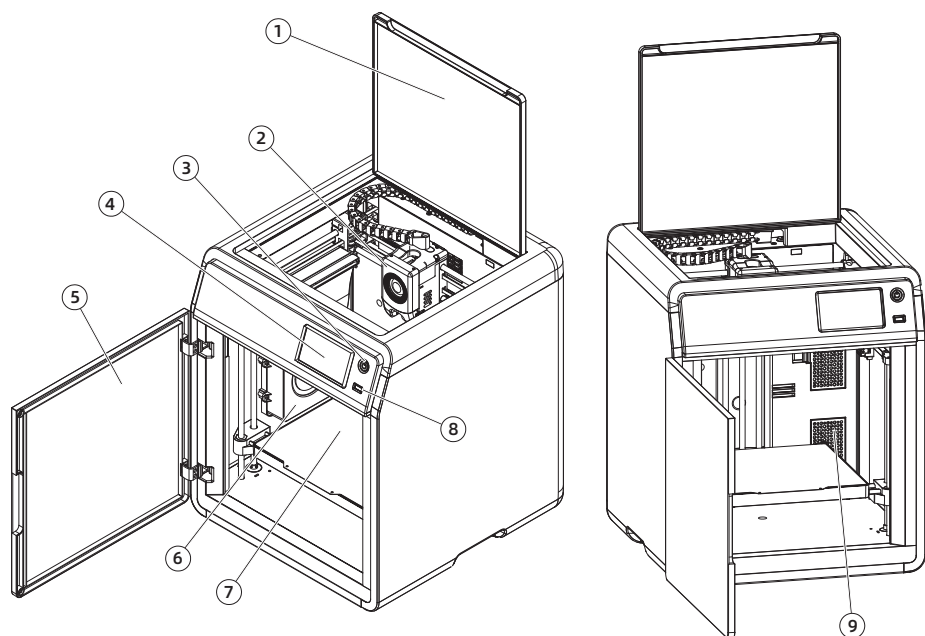


- 1. 上门板
- 2. 喷头
- 3. 开关机键
- 4. 显示屏
- 5. 前门板
- 6. 辅助散热风扇
- 7. 打印平台
- 8. USB接口
- 9. 空气滤芯
- 10. 料盘支架安装孔
- 11. 网线接口
- 12. 电源开关
- 13. 电源接口

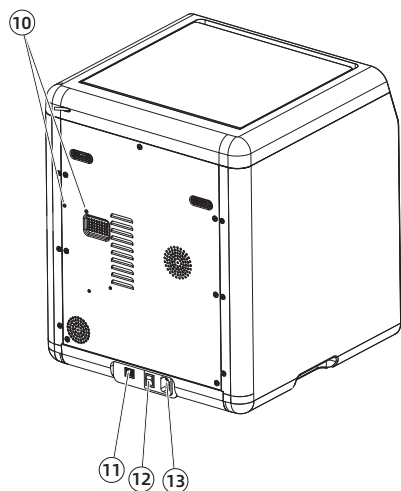


安装耗材架

1. 取出配件盒中的两颗螺丝和料盘架。

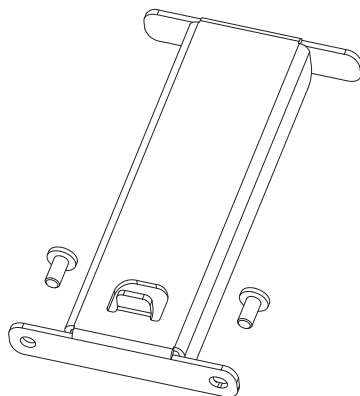


2. 用两颗螺丝将料盘架固定在如图背板位置
(注意：请用2.0mm内六角扳手拧紧固定)。

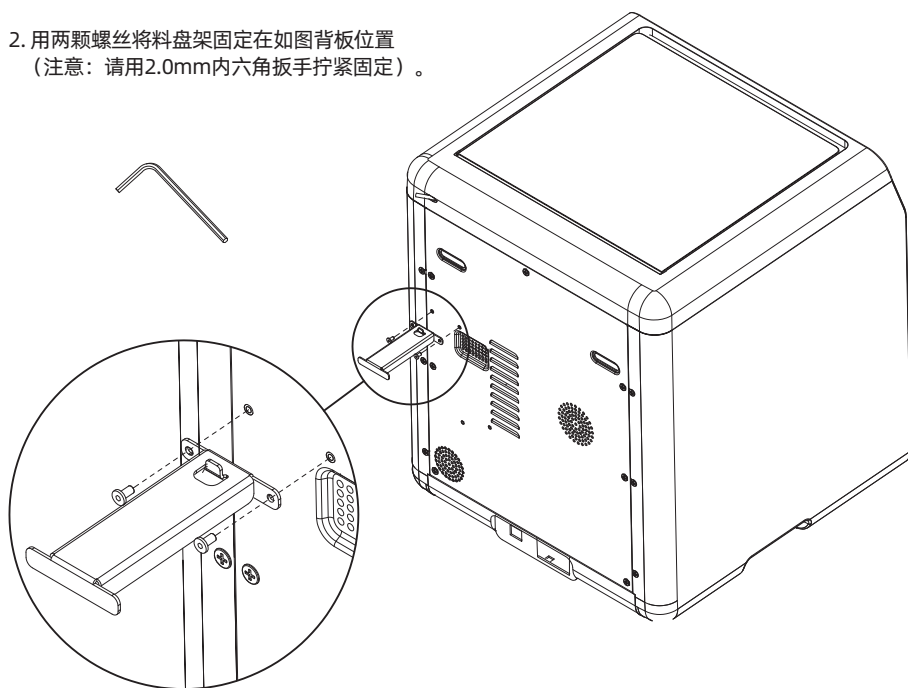

解锁平台

⚠ 注意事项 请确认打印平台无异物!



用2.5mm内六角扳手取下图示中的4颗螺丝（可参照机器上箭头标识），解锁打印平台。

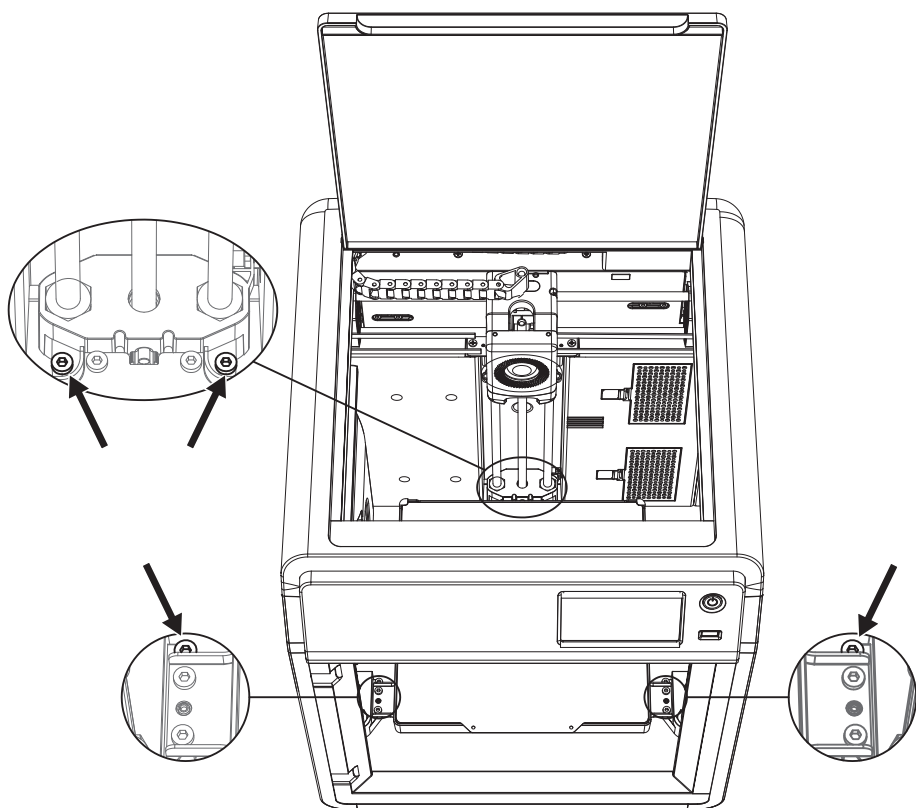

首次打印

* 固件不定期更新，UI界面请以实际为准。




1. 连通电源，打开电源开关，点击开机键点亮屏幕。

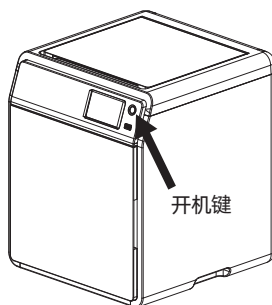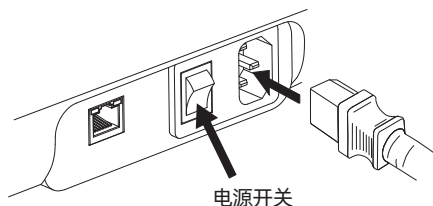

2. 根据屏幕上的开机指引完成界面语言选择。



3. 根据引导打开WiFi开关连接网络，连接成功后会出现提示弹窗。

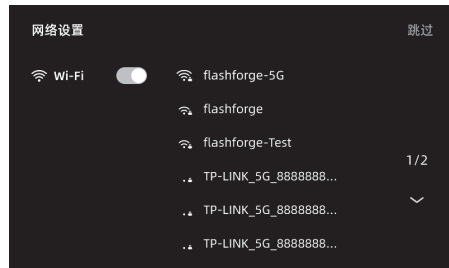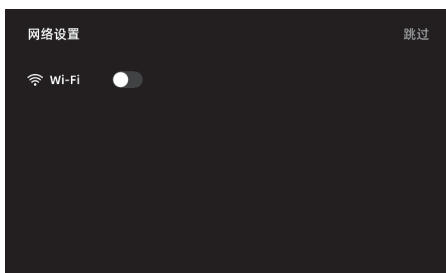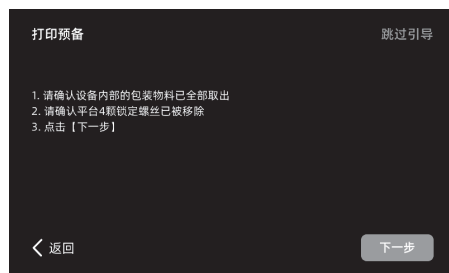

- 4.根据引导绑定打印机。（注：此步骤若跳过，后续仍可在设备上操作绑定，详见说明书。）
- a.点击【确定】后出现打印机二维码页面。



- b.扫码(右图)或通过手机应用商城下载 Flash Maker手机应用，注册您的闪铸账号并登录。




- c.用Flash Maker手机应用扫描打印机屏幕上的二维码，将打印机与您的账号绑定。
(注:设备出厂时默认设备名称与位置；开机指南完成后，可在设备 ① 中自定义设备名称与位置)。




5. 根据屏幕提示，点击[下一步]，机器进行首次校准。校准过程中出现震动和噪音属于正常现象。
(注：请将机器放置于稳定的平台面，且校准过程中请勿移动机器。)





6. 根据屏幕开机指引完成耗材安装进丝操作：

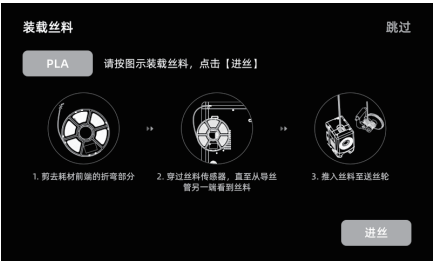


a. 剪去耗材头部弯折部分。

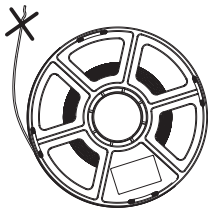


b. 将耗材挂在耗材架上，穿过丝料传感器，直至从导丝管一端看到丝料，将丝料推送到送丝轮处，直到无法再推入（*首次开机请使用PLA耗材进行第一次打印）。

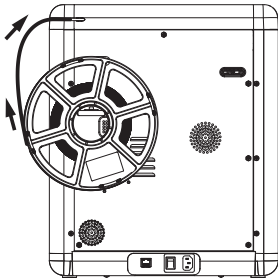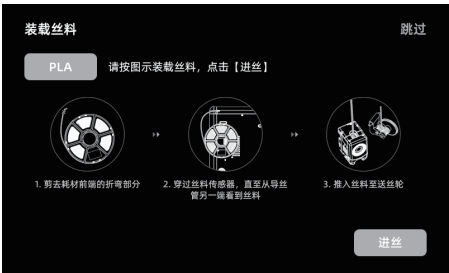


C1. 点击进丝，首次选择默认[PLA]。

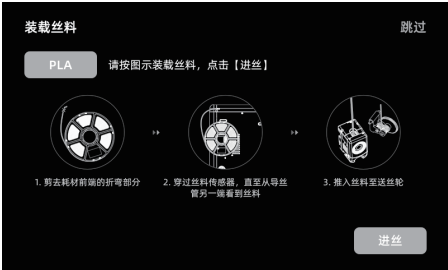

C2. 等待喷头加热。

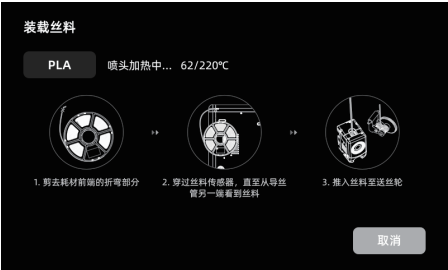


C3. 加热后将开始进丝，直至丝料从喷嘴吐出，说明进丝成功，最后确认导丝管也已完好的插入进丝口。

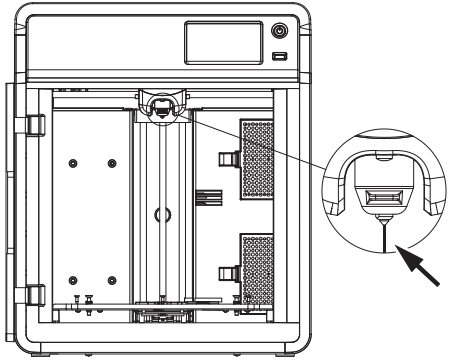

⚠ 注意事项 若一直未见丝料吐出，请用手握住丝料，插入进丝口，点击[返回]重新进行进丝操作。用手感受是否有丝料输送，直到丝料吐出。

7. 清理喷嘴残料以及平台上残余耗材，在打印平台上涂一层胶水，请全幅面涂抹均匀。

注：涂抹胶水有利于改善模型依附。

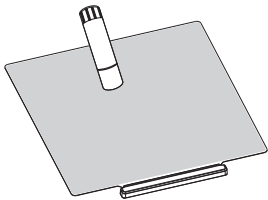

8. 点击[打印]，机器开始首次打印内置文件（该文件的配置参数使用的材料为PLA）。



更多产品相关资料您可以登陆闪铸官网查看。
www.sz3dp.com - [技术支持]

技术参数

设备名称	冒险家5M Pro
喷头数量	1
打印精度	±0.1mm [以100mm方块为测试基准]
定位精度	X/Y轴: 0.0125mm, Z轴: 0.0025mm
层厚度	0.1-0.4mm
打印尺寸	220 x 220 x 220mm
喷嘴口径	0.4mm默认[0.6/0.8/0.25mm可选]
打印速度	10-300mm/s
最大加速度	20000mm/s ²
最大移动速度	600mm/s
最高喷头温度	280°C
支持耗材类型	*PLA/*PETG [0.4mm口径] ABS/ASA *TPU/PLA-CF/PETG-CF [0.6/0.8mm口径] * 为推荐打印材料
电 源	输入: AC 100~240V, 50/60Hz, 350W
设备尺寸	380 x 400 x 453mm [不含料盘支架]
净 重	14.6kg
打印连接方式	USB接口/Wi-Fi/以太网
工作温度	15-30°C
兼容的操作系统	Windows 7/8/10/11; Linux支持Ubuntu 20.04及以上版本; Mac OS支持10.9及以上版本
切片软件	Orca-Flashforge/OrcaSlicer/FlashPrint 5
平台最高温度	110°C
调平方式	一键自动调平
断丝提醒	√
断电续打	√
智能触控液晶屏	4.3英寸
远程视频监控	√
延时视频	√
空气过滤网	内循环+外循环 [HEPA+活性炭]
打印平台	PEI柔性钢板
自动关机	√

After-sales Service

≡ 售后服务卡 ≡

Zhejiang Flashforge 3D Technology Co., Ltd.



Service: support@flashforge.com
Suggestions and Complaints: mkt2@flashforge.com



Web: flashforge.com | enterprise.flashforge.com



Address: Floors 2-4, Building B, Huaxing Development Building, No.328 Wen'er Road, Xihu District, Hangzhou City, Zhejiang Province, China

浙江闪铸集团有限公司



服务热线: 400 8866 023



建议与投诉: mkt2@flashforge.com



网址: www.sz3dp.com



地址: 浙江省杭州市西湖区文二路328号华星发展大厦B座2-4楼



Note The one who sells you the printer should be responsible for your after-sales service.

1. Flashforge grants all end-users a 12-month limited warranty for all Flashforge 3D printers (except the Flashforge extruder) and a 3-month warranty for Flashforge FFF Extruder.
2. If Flashforge 3D printer fails during normal and proper use within the warranty period (judged by Flashforge engineers), Flashforge will provide users with free maintenance services or remote after-sales support.
3. The warranty period starts from the outbound date, or starts from the invoice date if clear and confirmed invoice is provided.
4. Flashforge will repair or replace only the defective parts with new or reconditioned parts or products that are functionally equivalent or superior to those originally supplied. If a part is repaired or replaced during the warranty period, the warranty period still remaining for the entire printer will apply to this part.



注意事项

闪铸科技采用谁销售谁服务的原则，如您的3D打印机是在非闪铸官方平台购买，请向您购买的商家获取相关支持

1. 闪铸科技所有3D打印机均为用户提供12个月整机有限质保。其中FFF技术3D打印机的喷头质保时间为3个月。
2. 质保期内若设备出现非人为损坏（由闪铸工程师评定），您将获得免费配件及售后技术支持。
3. 售后服务周期以产品出厂日期为起始。如能提供清晰的发票，则以发票开具日期为起始。
4. 维修零配件可能为非全新配件，但甲方保证配件功能完全正常。维修配件质保时间与其整机质保时间相同。

Parts Excluded from This Warranty

Build Tape / Build Plate / Acrylic Cover / SD Card / USB Stick / USB Cable / Filament / Filament Spool / Glue / Resin Vat / Film / Rinse Bucket / Gloves / Plastic Scraper / Metal Scraper / Brush / Allen Wrench (2.5mm*1/3mm*1/5mm*1) / Stamping Wrench / Tools Bag / Accessories

*FFF extruder kit shall be purchased independently due to upgrading.

WHAT IS NOT COVERED

- ◆ Unable to provide valid After-sales Service Card or Serial No. (Including but not limited to lost, alter or fuzzy cannot be confirmed);
- ◆ FFF commercial printers out of warranty period or over 1000 working hours; FFF consumer printers out of warranty period or over 400 working hours;
- ◆ Damage(s) caused by improperly or incorrectly performed modifications, alterations or repair;
- ◆ Damage(s) due to operation under improper environment (damp, wet or other extreme weather);
- ◆ Exterior scratch or flaw caused by abrasion, aging or normal use;
- ◆ The warranty period of printer or part has expired;
- ◆ Damage(s) caused in service shops unauthorized by Flashforge;
- ◆ Damage(s) caused by improperly installation, use or operation;
- ◆ Damage(s) caused by abuse(overloaded working), misuses;
- ◆ Damage(s) caused by using unauthorized spare parts or poor quality filament (Recommended to use Flashforge filament);
- ◆ Damage(s) caused by using 3rd party software;
- ◆ Damage(s) caused by force majeure (such as a lightning strike, fire, earthquake, floods or any other event beyond human control);
- ◆ Damage(s) caused by using 3rd party parts;



After-sales Service Registration Form

Series No.: _____ Purchase from: _____

Fault Description: _____

Tel.: _____ Contact: _____

Add.: _____

- ❗ Please fill in this form carefully, cut out this form and mail it back to Flashforge together with the printer, or download this form from **www.flashforge.com**, fill in this form and send it to **support@flashforge.com**. After-sales service shall not be provided without this form.
- ❗ Please contact your printer's reseller to get After-sales service help if your printer is not purchased on official Flashforge website.

以下配件不列入质保范围

平台贴纸 / 平台金属板 / 平台玻璃板 / 亚克力罩 / SD卡及U盘 / USB线 / 打印耗材 / 丝盘轴 / 溶液盒 / 薄膜 / 打印平台 / 遮光罩清洗盒 / 塑料铲刀 / 金属铲刀 / 刷子 / 清洗手套 / 内六角扳手(2.5mm*1/3mm*1/5mm*1) / 开口扳手 / 工具包及包内工具。

*由于FFF产品喷头会有迭代升级，喷头升级套件需单独购买。

以下情况不在质保范围内

- ◆ 无法提供有效质保卡或序列号(遗失、涂改、模糊无法确认)；
- ◆ 整机及部件已经超过质保有效期；
- ◆ FFF商用设备运行总时长超过1000小时，FFF消费级设备运行总时长超过400小时；
- ◆ 设备曾经在未经闪铸授权的维修店维修；
- ◆ 设备在非产品规定的工作环境下使用而造成的设备故障或损坏；
- ◆ 设备正常磨损、老化或因操作造成的外观划痕或瑕疵；
- ◆ 由于使用非闪铸指定的软件而造成的设备故障或损坏；
- ◆ 由于使用其它品牌部件造成的设备故障或损坏；
- ◆ 由于私自对设备进行改装而造成的设备故障或损坏；
- ◆ 由于错误安装、使用而造成的设备故障或损坏；
- ◆ 由于滥用(包括超出工作负荷)、误用而造成设备故障或损坏；
- ◆ 由于使用低质量耗材而造成的设备故障或损坏(建议使用闪铸官方耗材)；
- ◆ 由于维护不当(受潮、发霉或暴露在极端气候)造成的设备故障或损坏；
- ◆ 由不可抗因素(如火灾、地震、雷击、水灾等)造成的故障或损坏。



售后服务登记表

序列号：_____ 从何处购买：_____

故障描述：_____

联系电话：_____ 联系人：_____

地址：_____

❗ 请务必仔细填写此表，剪下并随机器寄回闪铸科技，或在闪铸官网(官网地址见反面)下载此表发送给support@flashforge.com。
未填写此表将无法进行售后服务。

❗ 如您在非闪铸官方平台购买机器，请直接联系您购买的商家获取售后支持。



Follow us

Zhejiang Flashforge 3D Technology Co., Ltd.

Address: Floors 2-4, Building B, Huaxing Development Building,
No.328 Wen'er Road, Xihu District, Hangzhou City, Zhejiang Province, China

Service: support@flashforge.com

Suggestions and Complaints: mkt2@flashforge.com

Web: flashforge.com | enterprise.flashforge.com

浙江闪铸集团有限公司

地址：浙江省杭州市西湖区文二路328号华星发展大厦B座2-4楼

服务热线：400 8866 023

建议与投诉：mkt2@flashforge.com

网址：www.sz3dp.com