

January 2026

by David Malawey, MS, Mechanical Engineer

contact: customersupport@singer.com

Memo to technical support:

Dear Singer Team,

I'm working with a unit of your Stitch Quick Plus, purchased in Bryan Texas at Walmart in 2025, and I've encountered issues with a technical defect that impacts the safety of the users.

The defect:

- * The power switch becomes difficult to move at an arbitrary time after some use. The indicator sliding between [HANDHELD - LOCK - DESKTOP] becomes very stiff and takes a heavy force to push, then suddenly jumps to a position with a crack. The colored switch pressed by the user is likely slipping out of position relative to the electrical switch inside the device.
- * After the defect, the switch does not reflect the present user mode, and for example in the "hand-held" position the device may activate and remain ON.
- * The trigger becomes irregular - it does not swing in the full range of motion and it sometimes remains depressed and cannot release.
- * If the machine turns ON unintentionally the user must pull out the batteries or the power plug or the machine will pull the fabric material in and run continuously, out of control.
- * After the device is reset, if the user can manage to turn off the trigger and switch, there is a high chance of recurrence because some parts internally with the switching mechanism have been dislodged or misaligned, and they cannot be corrected without disassembly of the unit.

For the safety of future users I am recommending that your team performs a re-engineering of the trigger and switching mechanism on this design, and perhaps makes a recall on this model.

My model number is 41774 and I have the variation with light green colored plastic accent.

Since I saw the review (shared below) it appears this is a recurring issue with the design.



Sarah Collins

★☆☆☆☆ **Dangerous**

Reviewed in the United States on February 22, 2023

Style: Two Thread Stitch Quick + | **Verified Purchase**

It may be just the one I received, but it is dangerous. Do not follow the instructions in the manual, could cause harm because the locking mechanism can easily come undone. It happened to me a few times. Lucky, there was no fingers by the needle when this happened. My suggestion: do not install the batteries until you are ready to sew. The instructions did not provide good instructions on how to install the batteries, so you may have to try a few times to get it right. The one I received had been opened and used by someone else. It was not in its bag, with only one side of packing material. The needle was bent. The instructions failed to state there is a little hole below where the needle is to be inserted, while holding needle, first place the needle in the hole then attach to the needle holder. Second, it said place the flat end of the needle on the right side of the machine. Okay, which is the right-side of the machine? After getting everything straight with the machine, it would not sew a stitch. I believe the tension regulator was broken.

14 people found this helpful

Helpful

Report

Above review accessed on Amazon.com January 19, 2025 for product ASIN B08PQ54B44

My photos, taken Jan 2026





SINGER

Stitch Quick™+

CORDLESS MENDING MACHINE

MÁQUINA DE REMENDADO SIN CABLES

MACHINE À RACCOMMODER SANS FIL



Jan 2026
from Amazon.com
also model 41774

Easy to hold lightweight and slim design | Diseño fácil de sostener, ligero y esbelto | Concept compact et léger, facile à tenir



SINGER

Stitch Quick™+

CORDLESS MENDING MACHINE

MÁQUINA DE REMENDADO SIN CABLES

MACHINE À RACCOMMODER SANS FIL





Suitable for a variety of fabrics, papers and crafts
Adecuada para una variedad de telas, papeles y trabajos manuales
Convient à une grande variété de tissus, papiers et matériaux d'artisanat



Scan Here for
Product Demonstration



Includes
Incluye
Inclut

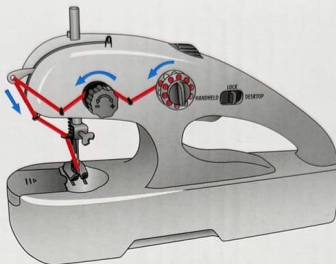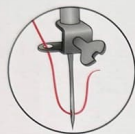

Scan for Threading
Demonstration



SINGER

Stitch Quick™+



3 Modes of Operation
3 modos de operación
3 modes de fonctionnement



Adjustable Tension Dial
Regulador de tensión ajustable
Cadran de réglage de tension du fil



Attached Rear Battery Cover
Cubierta de batería trasera anexa
Couvercle de compartiment à piles fixe à l'arrière



Drop-in Bobbin Compartment
Compartimento para colocar la bobina
Compartiment porte-canonette



Convenient Bobbin Winder
Cómoda devanadora de bobinas
Bobineur pratique



Handle Storage Recess
Nicho para almacenamiento manual
Poignée assurant une bonne prise manuelle



Built-in Thread Cutter
Cortador de hilo integrado
Coupe-fil intégré



Uses Standard Thread Spools
Usa carretes de hilo estándar
Utiliser des bobines de fil standard

Stitch Quick™+ INSTRUCTION MANUAL



Before operating this unit, please read these instructions completely.

IMPORTANT SAFETY INSTRUCTIONS

When using any electrical appliance, basic safety precautions should always be followed, including the following:


Read all instructions before using this handheld machine.

WARNING – To reduce the risk of burns, fire, electric shock or injuries to persons:

1. Keep fingers away from all moving parts. Special care is required around the handheld machine needle.
2. Always use the proper needle plate. The wrong plate can cause the needle to break.
3. Do not use bent needles.
4. Do not push or pull fabric while stitching. It may deflect the needle causing it to break.
5. Turn off the machine and switch to **LOCK** position when making any adjustments in the needle area, such as threading needle, changing needle, threading bobbin, or changing presser foot, etc.
6. Do not allow to be used as a toy. Close attention is necessary when this appliance is used by or near children.
7. Use this appliance only for its intended use as described in this manual. Use only attachments recommended by the manufacturer as contained in this manual. Never operate on a soft surface such as a bed or couch where air openings may be blocked.
8. Never operate the appliance with any air openings blocked. Keep ventilation openings of the handheld machine and foot controller free from the accumulation of lint, dust and loose cloth.
9. Never drop or insert any object into any opening.
10. Do not use outdoors.
11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

SAVE THESE INSTRUCTIONS

This handheld machine is intended for household use only.

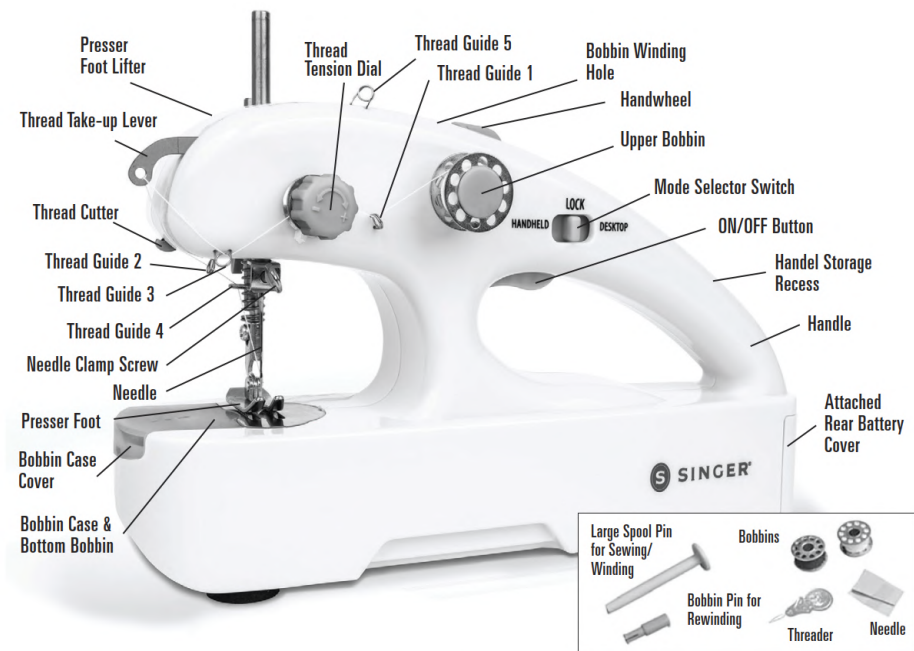

TO REPLACE BATTERIES (4AA not included)


Caution: Make sure device is in the **LOCK/Off** position prior to battery replacement.



Insert 4AA batteries into the battery compartment on the back of the machine. Put batteries in, following the correct polarities marked on the machine or following the diagram. Replace all 4AA batteries as a simultaneous set as shown.

Do not mix old and new batteries. Do not mix alkaline, standard (carbon - zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.

TO USE AC/DC ADAPTER (not included)

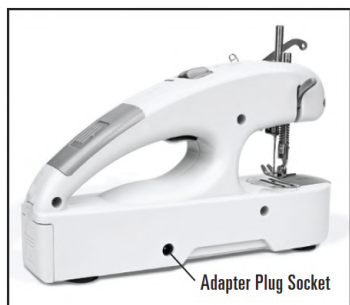

Make sure the device is in the **LOCK/OFF** position. Connect the AC/DC adapter plug into the machine plug socket then into an AC/DC receptacle.



Adapter must be 6V 1000mA. Adapter must use plug with a 5 mm diameter. Plugging an adapter into a portable device that has different ratings could damage the device and adapter. Be sure to set the adapter's tip polarity to conform to the diagram shown: $\ominus - \ominus \oplus$

Caution: Remove batteries from machine when sewing with adapter to prevent possibility of batteries over charging and exploding or leaking.


IMPORTANT NOTES TO BE READ PRIOR TO FIRST USE

1. When operating device for the first time, run for 10 seconds and then pause for 5 seconds. It can then be used again regularly.
2. Lift Presser Foot Lifter and pull out test material. Cut the thread close to the test material.


SEWING

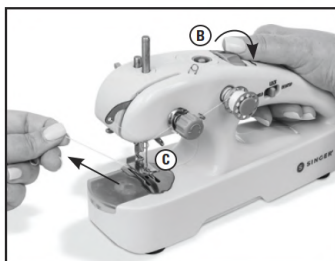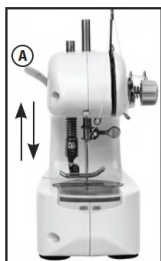

1. Lift up the Presser Foot Lifter (**A**) and raise needle by turning the Handwheel (**B**) toward the front of the machine.
2. Make sure both thread ends are pulled 6 inches back behind the Needle (**C**).
3. Put the fabric under the Presser Foot (**D**) and lower the needle. Then lower the Presser Foot Lifter (**A**).

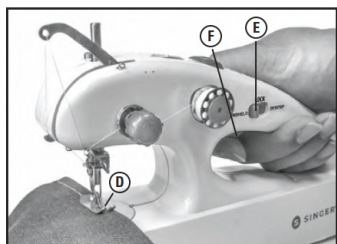

4. Unlock the machine by moving Mode Selector Switch (**E**) to **HANDHELD** mode or **DESKTOP** mode. Press ON/OFF Button (**F**) to start sewing.
 - a. In **HANDHELD** mode, it will stop sewing when the ON/OFF Button (**F**) released.
 - b. In **DESKTOP** mode, it will keep sewing. When complete, press and release the ON/OFF Button (**F**) again to stop sewing.


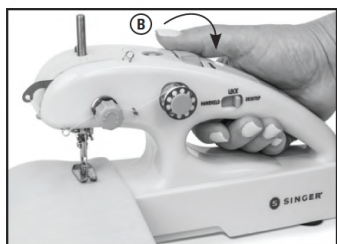


5. **VERY IMPORTANT:** WHEN FINISHED, PULL UPPER THREAD LOOSE BY HAND TO PREVENT THE NEEDLE FROM BENDING WHEN REMOVING THE FABRIC.
6. Raise the needle by turning Handwheel (**B**) and lift Presser Foot Lifter (**A**) and pull the fabric toward the back. Then cut both threads about 4 inches from the edge of the fabric.

- A.** Presser Foot Lifter
B. Handwheel
C. Needle
D. Presser Foot
E. Mode Selector Switch
F. ON/OFF Button

THREADING THE MACHINE FOR SEWING

Caution: When threading machine, make sure the device is in **LOCK/OFF** position.

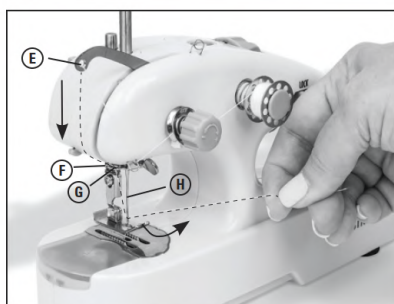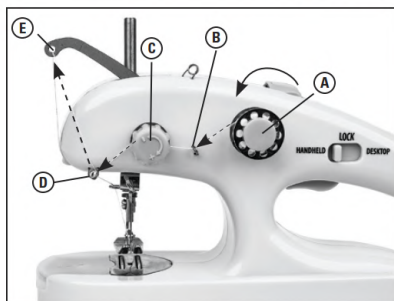

- A. Bobbin
- B. Thread Guide 1
- C. Thread Tension Dial
- D. Thread Guide 2
- E. Thread Take-up Lever

1. Make sure the upper bobbin or spool with thread **(A)** unwinds in a counter-clockwise direction.
2. Then pull the thread through Thread Guide 1 **(B)**. Slip the thread in between the two discs of the Thread Tension Dial **(C)**.
3. Pull thread through Thread Guide 2 **(D)** (from the back to the front), Thread Take-Up Lever **(E)** (from the front to the back), Thread Guide 3 **(F)** (from the front to the back) and Thread Guide 4 **(G)** (down).
4. Raise the Needle **(H)**. Pass needle threader through eye of needle, from right to left. Pass thread through the eye of needle threader.
5. Pull Needle Threader **(I)** with inserted thread through the eye of the needle, from left to right. Remove needle threader.

- F. Thread Guide 3
- G. Thread Guide 4
- H. Needle
- I. Needle Threader

ADJUST THREAD TENSION



Test stitch performance on a scrap of material you are going to use.

When the thread tension is properly adjusted, the upper and lower thread tensions are equal and strong enough to lock both threads in the center of the material.

If the upper tension is too tight, the upper thread lies straight along the surface of fabric, correct by turning tension dial, as illustrated in **(A)**. (Counter-clockwise)






If the upper tension is too loose, the bottom thread lies straight along the bottom of the fabric, correct by adjusting the tension dial, as illustrated in **(B)**. (Clockwise)

WINDING THE BOBBIN

Caution: When winding the bobbin, make sure the device is in **LOCK/OFF** position.

Always remove the Bobbin (B) from the Bobbin Case (C) on the machine and unthread the needle before winding a new bobbin.

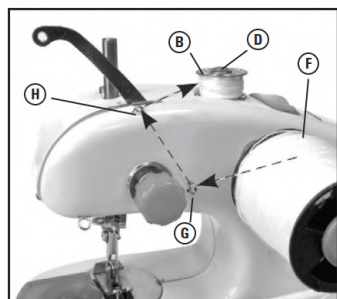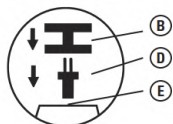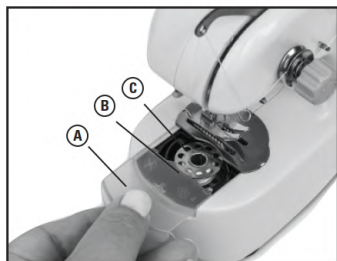

- | | |
|----------------------|-------------------|
| A. Bobbin Case Cover | E. Bobbin Hole |
| B. Bobbin | F. Spool |
| C. Bobbin Case | G. Thread Guide 1 |
| D. Bobbin Pin | H. Thread Guide 5 |

1. Slide open the Bobbin Case Cover (A) and take out the Bobbin (B) from the Bobbin Case (C) or obtain an empty **Class 15 metal bobbin**.
2. Put Bobbin Pin (D) into the Hole (E) on the top of the sewing machine and place an empty Bobbin (B) on the Bobbin Pin (D).
3. Make sure the thread from Spool (F) unwinds in counter-clockwise direction, then route thread through Thread Guide 1 (G) and then Thread Guide 5 (H).
4. Put the thread through the small hole of the Bobbin from the inside pulling about 3 inches of thread through the hole.
5. Hold the thread end tightly. Unlock the machine by moving switch to **HANDHELD** mode, press button under handle and hold to start winding. Stop after a few coils are wound.
6. Cut the thread end on the top of the Bobbin close to the Bobbin. Continue winding until the desired amount of thread is wound.
7. Cut the thread 4 inches from the Bobbin. Remove the wound Bobbin from Bobbin Pin.
8. After winding, return the Bobbin Pin and the Spool Pin to the Handle Storage Recess.



BOTTOM BOBBIN PLACEMENT

Caution: When placing bottom bobbin, make sure the device is in **LOCK/OFF** position.




When the thread in the bottom bobbin is used up or you want to change color of thread, take out the bobbin from the bobbin case.

1. Pull the Bobbin Case Cover to the left and take it off.
2. Pick up the used Bobbin from the Bobbin Case and take it out.
3. When inserting a new threaded bobbin, make sure thread winds in a clockwise direction as marked on bobbin case and then place in the compartment with about 4 inches long thread left out pulled towards the front of the machine.


Note: The tension of bottom thread is controlled by the magnetized compartment and does not need adjustment.

CATCHING THE BOBBIN THREAD

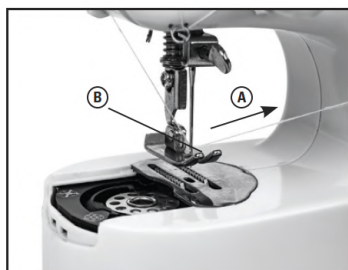

1. Raise the presser foot by pulling up the Presser Foot Lifter.
2. Hold the top thread (A) and turn the Handwheel toward the front of the machine to make the needle go down and back up. You will see a loop formed by the bobbin thread (B).
3. Pull the loop to find the end of the bobbin thread.
4. Pull ends of both threads to the back of the machine (C) and slide the Bobbin Case Cover back into place.

You are now ready to start sewing.

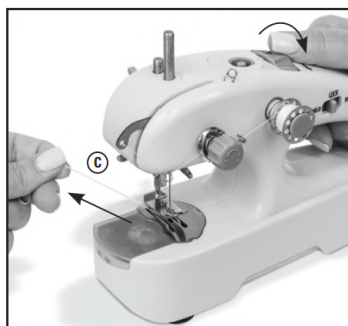

CHANGING THE NEEDLE

Caution: When changing the needle, make sure the device is in **LOCK/OFF** position.



1. Raise the needle to its highest position.
2. Hold the needle and loosen the Needle Clamp Screw (E). Remove the old needle.
3. Insert the new needle into the clamp with the flat side toward the right of the machine making sure the eye is straight facing the right or the left of the machine. Be sure to push the needle all the way up into the bar before tightening the Needle Clamp Screw (E).
4. Tighten the Needle Clamp Screw.



Please note: After replacement of the needle, first move Handwheel toward the front of the machine to check if there are stitches, and then operate machine by power **ONLY WHEN THE NEEDLE IS IN RIGHT POSITION AND THERE ARE STITCHES BEING FORMED.**

IMPORTANT: Safely store and dispose of used machine needles (pins and other sharp objects) in a container to prevent them from becoming loose in the trash, and then place the container in the garbage.

TROUBLESHOOTING POSSIBLE CAUSES OF POOR STITCHES

1. The upper threading is not correct.
2. The presser foot is not in the down position.
3. The needle is not fully inserted in the needle bar.
4. The needle eye is not facing the right or the left of the machine.
5. The needle is bent.
6. Lower threading is not correct.
7. The wrong size bottom bobbin is used.
8. Upper threading is too loose.
9. The bobbin placement in case is not in the right position which will block its correct movement.

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the device.



**Scan Here for
Product Demonstration**

