


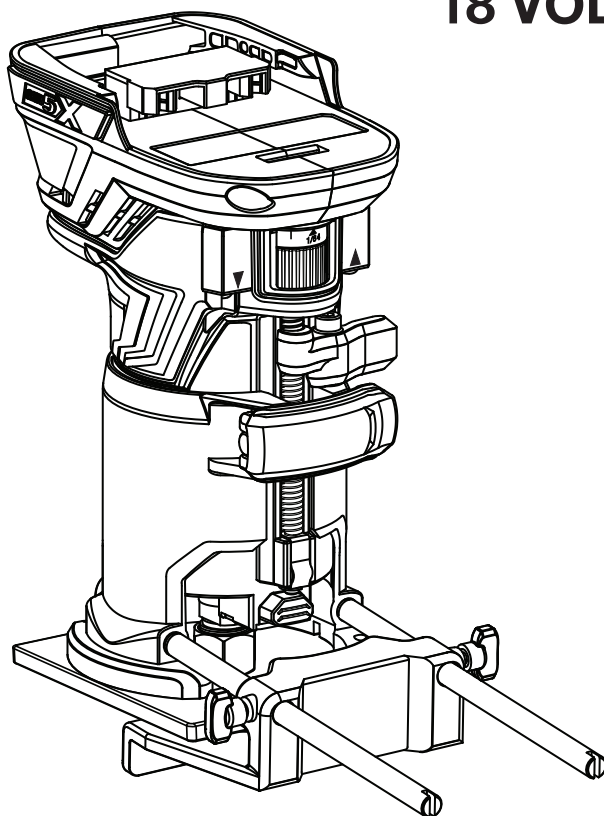

OPERATOR'S MANUAL 18 VOLT COMPACT ROUTER

My model ► **R86044**



To register your RIDGID® product, please visit:
<http://register.RIDGID.com>

INCLUDES: Compact router, Wrench, Roundover bit bit, Edge guide/guide bars, Round subbase, Operator's Manual

TABLE OF CONTENTS

■ General Power Tool Safety Warnings.....	2-3
■ Compact Router Safety Warnings.....	3
■ Symbols.....	4
■ Features.....	4
■ Assembly.....	5
■ Operation.....	6-9
■ Maintenance.....	10
■ Illustrations.....	11-13
■ Parts Ordering/Service.....	Back page



WARNING:

To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

**SAVE THIS MANUAL FOR
FUTURE REFERENCE**

GENERAL POWER TOOL SAFETY WARNINGS

WARNING

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference. The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

WORK AREA SAFETY

- **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY

- **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- **If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply.** Use of a GFCI reduces the risk of electric shock.
- **Use this product only with batteries and chargers listed in tool/appliance/battery pack/charger correlation supplement 988000-302.**

PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.

- **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- **Do not wear loose clothing or jewelry. Contain long hair.** Loose clothes, jewelry, or long hair can be drawn into air vents.
- **Do not use on a ladder or unstable support.** Stable footing on a solid surface enables better control of the power tool in unexpected situations.

POWER TOOL USE AND CARE

- **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

GENERAL POWER TOOL SAFETY WARNINGS

- **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

BATTERY TOOL USE AND CARE

- **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.

- **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.

SERVICE

- **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
- **When servicing a power tool, use only identical replacement parts. Follow instructions in the Maintenance section of this manual.** Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of shock or injury.

COMPACT ROUTER SAFETY WARNINGS

- **Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the work by your hand or against the body leaves it unstable and may lead to loss of control.
- **Hold power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring.** Cutting accessory contacting a “live” wire may make exposed metal parts of the power tool “live” and could give the operator an electric shock.
- **Know your power tool. Read operator’s manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this power tool.** Following this rule will reduce the risk of electric shock, fire, or serious injury.
- **Always wear eye protection with side shields marked to comply with ANSI Z87.1 when assembling parts, operating the tool, or performing maintenance.** Following this rule will reduce the risk of serious personal injury.
- **Protect your lungs. Wear a face or dust mask if the operation is dusty.** Following this rule will reduce the risk of serious personal injury.
- **Protect your hearing. Wear hearing protection during extended periods of operation.** Following this rule will reduce the risk of serious personal injury.
- **Battery tools do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards when not using your battery tool or when changing accessories.** Following this rule will reduce the risk of electric shock, fire, or serious personal injury.

- **Do not place battery tools or their batteries near fire or heat.** This will reduce the risk of explosion and possibly injury.
- **Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow.** A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.
- **Batteries can explode in the presence of a source of ignition, such as a pilot light.** To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.
- **Do not charge battery tool in a damp or wet location. Do not use, store, or charge battery packs or products in locations where the temperature is less than 50°F or more than 100°F.** Do not store outside or in vehicles.
- **Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water. If liquid gets into your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention.** Following this rule will reduce the risk of serious personal injury.
- **Save these instructions.** Refer to them frequently and use them to instruct others who may use this tool. If you loan someone this tool, loan them these instructions also.

SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a hazardous situation, that, if not avoided, may result in minor or moderate injury.
	NOTICE:	(Without Safety Alert Symbol) Indicates information considered important, but not related to a potential injury (e.g. messages relating to property damage).

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
	Safety Alert	Indicates a potential personal injury hazard.
	Read Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always wear eye protection with side shields marked to comply with ANSI Z87.1 when operating this equipment.
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Recycle Symbol	This product uses lithium-ion (Li-ion) batteries. Local, state or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.
V	Volts	Voltage
min	Minutes	Time
==	Direct Current	Type or a characteristic of current
n_0	No Load Speed	Rotational speed, at no load
.../min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute

FEATURES

PRODUCT SPECIFICATIONS

Collet..... 1/4 in.
 No Load Speed..... 17,000-25,000 r/min.

ASSEMBLY

UNPACKING

This product requires assembly.

- Carefully remove the tool and any accessories from the box. All items listed in the **Includes** section must be included at the time of purchase.

WARNING:

Items in this *Assembly* section are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.

-
- If any parts are damaged or missing, please call 1-866-539-1710 for assistance.

WARNING:

If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.

WARNING:

Do not attempt to modify this product or create accessories or attachments not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

REMOVING THE BASE

See Figure 1, page 11.

- Remove the battery pack.
- Pull the quick release lever to the open position.
- Get a firm grasp of the base with one hand. Hold the overmolded grip area on the motor housing with the other.
- Depress the motor release lever completely. Then pull the motor housing away from the base until they separate.

To connect the motor housing to the base:

- Depress the motor release lever completely.
- Align the motor housing with the base and push the motor housing onto the base.

NOTE: This may require some force to overcome the motor retention spring.

- Release the motor release lever and close the quick release lever.

WARNING:

If you are changing a bit immediately after use, do not touch the collet nut, bit, or collet with your hands or fingers as they may be hot. Always use the wrench provided to avoid getting burned.

INSTALLING AND REMOVING BITS

See Figure 2, page 11.

- Remove the battery pack.
- Pull the quick release lever to the open position.
- Depress the motor release lever and move the base to provide clear access to the collet nut. It is not necessary to remove the base.
- Depress the spindle lock button and rotate spindle until the spindle locks.
- Rotate the wrench counterclockwise to loosen the collet nut. The collet is machined to precision tolerances to fit bits with 1/4 in. diameter shanks.
- If installing the bit for the first time, it can be installed once the collet nut is loose. If changing bits, the bit will easily slip from the collet after loosening the collet nut.

NOTE: The tip of the bit has a protective wax coating that must be removed before first-time use. Simply peel off the wax coating and be sure that all traces of wax are removed before using the router.

WARNING:

Bit end is sharp. Be careful when removing wax to prevent injury.

-
- Insert the shank of the bit into the collet until it touches the bottom, then pull it out approximately 1/16 in. This allows for expansion when the bit gets hot.
 - Tighten collet nut securely, by rotating it clockwise, using large end of wrench.

NOTE: You may also lock the shaft for bit changes by using the narrow end of the wrench. The narrow slot will fit onto the flats on the shaft above the collet nut.

WARNING:

If the collet nut is not tightened securely, the bit could come out during use, resulting in possible serious personal injury.

-
- Depress the motor release lever and return the base back to an operating position.
 - Push the quick release lever to the closed position.

OPERATION

WARNING:

Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

WARNING:

Always remove battery pack from the tool when you are assembling parts, making adjustments, cleaning, or when not in use. Removing battery pack will prevent accidental starting that could cause serious personal injury.

WARNING:

Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes and other possible serious injuries.

WARNING:

Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

APPLICATIONS

You may use this tool for the purposes listed below:

- Smooth, professional trimming of laminates
- Trimming counter tops and finishing cabinet work
- Trimming wood and plastics
- Edge shaping

INSTALLING/REMOVING BATTERY PACK

See Figure 3, page 11.

To install:

- Insert the battery pack into the tool.
- Make sure the latches on each side of the battery pack snap into place and the battery pack is secured in the product before beginning operation.

To remove:

- Depress the latches on each side of the battery pack.

For complete charging instructions, see the operator's manuals for your battery pack and charger.

TURNING THE COMPACT ROUTER ON/OFF

See Figure 4, page 12.

- To turn the router ON, pull the slide switch to the **(I) ON** position.

NOTE: The router has a soft start feature. The router will start at a slow speed and gradually get up to the speed set by the adjustable speed dial.

- To turn the router OFF, push the slide switch to the **(O) OFF** position.
-

WARNING:

The bit will continue to spin after the router is turned off. Wait for the bit to come to a complete stop to continue operation. Failure to do so could result in possible serious injury.

ADJUSTING THE SPEED

See Figure 5, page 12.

The variable speed dial is located on the front of the motor housing. The speed is adjustable from 17,000 r/min to 25,000 r/min.

- Rotate the dial to higher numbers to increase speed.
- Rotate the dial to lower numbers to decrease speed.

OPERATING THE COMPACT ROUTER

See Figure 6, page 12.

Before starting the router, make sure the bit is securely tightened in the collet and that the depth of cut is properly set. See **Setting Depth of Cut** later in this manual. Never start the router while the bit is in contact with the workpiece.

After completing a cut, pull the bit slightly away from the cut surface. Turn the router off and wait for the rotating bit to completely stop before removing the base from the work surface.

When cutting, fit the base of the router over the work surface and firmly hold the body of the router as shown. Make sure the router is running at full speed before contacting the workpiece.

WARNING:

Avoid hand positions that may expose fingers to bit through open areas of router base. Fingers entering the opening in the router base can be seriously cut or burned.

OPERATION



WARNING:

Never install a trim bit in this router with a diameter larger than the opening in the subbase. The use of larger bits can result in loss of control and possible serious personal injury.



WARNING:

Never use a trim bit in this router which is rated at less than 25,000 r/min. Doing so could result in serious personal injury.



WARNING:

Always use the base for laminate trimming. Use of the router without a base or using the incorrect base can result in serious personal injury.

DIRECTION OF FEED AND THRUST

See Figures 7 - 8, page 12.

The router motor and bit revolve in a clockwise direction. This gives the tool a slight tendency to twist in your hands in a counterclockwise direction, especially when the motor starts.

Feed the router into the workpiece from left to right. When fed from left to right, the rotation of the bit pulls the router against the workpiece. If fed in the opposite direction, the rotation forces of the spinning bit will tend to throw the router away from the workpiece, causing kickback. This could result in loss of control of the router.

Because of the extremely high speed of bit rotation during a proper feeding operation, there is very little kickback under normal conditions. However, if the bit strikes a knot, hard grain, foreign object, etc., this will affect the normal progress of the cutting action, possibly causing a slight kickback. Kickback could be sufficient to spoil the trueness of your cut if you are not prepared. Such a kickback is always in the direction opposite the direction of bit rotation.

To guard against kickback, plan your setup and direction of feed so that you will always be thrusting the tool—to hold it against whatever you are using to guide the cut—in the same direction that the leading edge of the bit is moving. The thrust should be in a direction that keeps the sharp edges of the bit continuously biting straight into new (uncut) wood.

PROPER RATE OF FEED

Professional trimming and edge shaping depend upon careful set-up and selecting the proper rate of feed.

The proper rate of feed is dependent upon:

- the hardness and moisture content of the workpiece
- the depth of cut
- the cutting diameter of the bit.

When cutting shallow grooves in soft woods such as pine, use a faster rate of feed.

When making cuts in hardwoods such as oak, use a slower rate of feed.

Several factors will help you select the proper rate of feed.

- Choose a rate that does not slow down the router motor.
- Choose the rate at which the bit advances firmly and surely to produce a continuous spiral of uniform chips or a smooth trim edge on laminate.
- Listen to the sound of the router motor. A high-pitched sound means you are feeding too slowly. A strained, lower-pitched sound signals force-feeding.
- Check the progress of each cut. Too-slow feeding can cause the router to take off in a wrong direction from the intended line of cut. Force-feeding increases the strain of holding the tool and results in loss of speed.
- Notice the chips being produced as you cut. If the router is fed too slowly, it will scorch or burn the wood. If the router is fed too fast, it will take large chips out of the wood and leave gouge marks.

Always test a cut on a scrap piece of the workpiece wood or laminate before you begin. Always grasp and hold the router firmly when trimming.

If you are making a small-diameter, shallow groove in soft, dry wood, the proper feed rate may be determined by the speed at which you can travel the router along the guide line. If the bit is a large one, the cut is deep, or the workpiece is hard to cut, the proper feed may be a very slow one. A cross-grain cut may require a slower pace than an identical with-grain cut in the same workpiece.

There is no fixed rule. Proper rate of feed is learned through practice and use.

OPERATION

TOO SLOW FEEDING

See Figure 9, page 12.

When the router is advanced into the work too slowly, the revolving bit does not dig into new wood fast enough to take a bite; instead, it scrapes away sawdust-like particles. Scraping produces heat, which can glaze, burn, or mar the cut, and can overheat the bit. Dull bits can also contribute to scraping and burning.

It is more difficult to control a router when the bit is scraping instead of cutting. With practically no load on the motor, the bit will be revolving near top RPM, and will have a greater than normal tendency to bounce off the sides of the cut, especially if the wood has a pronounced grain with hard and soft areas. The cut that results may have rippled sides instead of straight.

FORCE FEEDING

See Figure 9, page 12.

The router is an extremely high-speed tool (17,000-25,000 r/min.), and will make clean, smooth cuts if allowed to run freely without the overload of a forced feed. Three things that cause force feeding are bit size, depth of cut, and workpiece characteristics. The larger the bit or the deeper the cut, the more slowly the router should be moved forward. If the wood is very hard, knotty, gummy or damp, the operation must be slowed still more.

Clean, smooth laminate trimming and edge shaping can be done only when the bit is revolving at a relatively high speed and is taking very small bites to produce tiny, cleanly-severed chips. If the router is forced to move forward too fast, the speed of the bit becomes slower than normal in relation to its forward movement. As a result, the bit must take bigger bites as it revolves. Bigger bites mean bigger chips and a rougher finish. Bigger chips also require more power, which could result in overloading the motor.

Under extreme force-feeding conditions, the relative speed of the bit can become so slow—and the bites it has to take so large—that chips will be partially knocked off rather than fully cut off. This will result in splintering and gouging of the workpiece.

DEPTH OF CUT

See Figure 10, page 12.

Depth of cut affects the rate of feed and the quality of a cut. Using the proper depth of cut can lessen the possibility of damage to the router motor and bit.

A deeper cut requires a slower feed than a shallow one. Making a cut that is too deep will slow the feed so that the bit is scraping, rather than cutting, and is not recommended.

A too-deep cut can cause smaller bits to be broken off. Bits that are 1/16 in. in diameter are easily broken off when subjected to too much side thrust. A larger bit is not as likely to break, but attempting a cut that is too deep may result in a rough cut, and may make it difficult to guide and control the bit as desired.

It is recommended that you do not exceed 1/8 in. depth of cut in a single pass, regardless of the bit size or the softness or condition of the workpiece. This will result in a higher quality cut.

To make deeper cuts, it is necessary to make as many successive passes as required, lowering the bit 1/8 in. for each new pass. To save time, perform all the cutting necessary at one depth setting, then lower the bit for the next pass. This will assure uniform depth when the final pass is completed.



WARNING:

If the desired depth of cut is greater than can be safely cut in one pass, make cuts in two or more passes. Do not remove more than 1/8 in. in a single pass. Excessive depth of cut can result in loss of control and the possibility of serious personal injury.

OPERATION

SETTING DEPTH OF CUT

See Figure 11, page 13.

- Remove the battery pack.
- Pull the quick release lever to the open position to free the motor housing in the base.
- Depress and hold the motor release lever.

NOTE: Large depth of cut adjustments can be made using the motor release lever and positioning the motor housing by moving it in the base by hand.

- With the desired bit installed into the collet and tightened securely, slide the motor housing section of the router upward in the base until the tip of the bit is just above the work surface (bottom surface of subbase) by 1/4 in. minimum. Release the motor release lever once the bit is positioned above the work surface.
- Turn the micro depth adjustment knob slowly clockwise to lower the bit slowly towards the work surface. The depth of cut is considered “zero” when the bit just touches the work surface.

NOTE: To set the zero reset function to zero while the bit is at zero depth, hold the micro depth adjustment knob in place and rotate the zero reset function ring until it reads “0”.

NOTE: One full revolution of the micro depth adjust knob moves the router housing 1/16 in.

- Remove the router from the work surface.
- Using the micro depth adjustment knob, adjust the position of the bit to obtain the desired depth of cut. To move the bit down, turn the micro depth adjustment knob toward the down indicator arrow to the side of the knob.
- Always observe the 1/8 in. MAX depth of cut per pass rule when cutting.

NOTE: A reference depth scale is located on the motor housing which can be used to measure depth of cut. Each mark on the scale indicates a 1/16 in. change in depth setting. Use the top edge of the removable base as reference when setting depth of cut.

WARNING:

Avoid open area of router base. Serious personal injury will result from contact with a rotating bit.

USING EDGE GUIDE

See Figures 12 - 13, page 13.

Use the edge guide to trim or cut a straight or curved edge.

- Remove the battery pack.
- Thread guide bars into the base and tighten with a flat head screwdriver.
- Slide the edge guide onto the guide bars.
- Install thumb screws provided into the edge guide.
- Measure the proper distance to offset the bit, or if trimming, position the bit at the edge of the workpiece.
- Tighten the two thumb screws to secure the edge guide.
- Reinstall the battery pack.
- Move the router along the workpiece keeping the edge guide in constant contact with edge of the workpiece.

ATTACHING THE ROUND SUBBASE

See Figure 14, page 13.

- Remove the battery pack.
- Turn the router upside down to remove the four subbase screws and the square subbase.
- Attach the round subbase using the same screws.
- Tighten the screws securely. Do not over tighten.

WARNING:

Always use the base for laminate trimming. Use of the router without a base or using the incorrect base can result in serious personal injury.

MAINTENANCE

WARNING:

When servicing, use only identical replacement parts. Use of any other part could create a hazard or cause product damage.

WARNING:

Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes and other possible serious injuries.

WARNING:

To avoid serious personal injury, always remove the battery pack from the tool when cleaning, performing any maintenance, or when storing the tool.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and can be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

WARNING:

Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which could result in serious personal injury.

**NOTE: ILLUSTRATIONS START ON PAGE 11
AFTER FRENCH AND SPANISH LANGUAGE SECTIONS.**

**This product has a 90-Day Satisfaction Guarantee Policy,
as well as a Three-year Limited Warranty.**

**For Warranty and Policy details, please go to
www.RIDGID.com or call (toll free) 1-866-539-1710.**

R86044



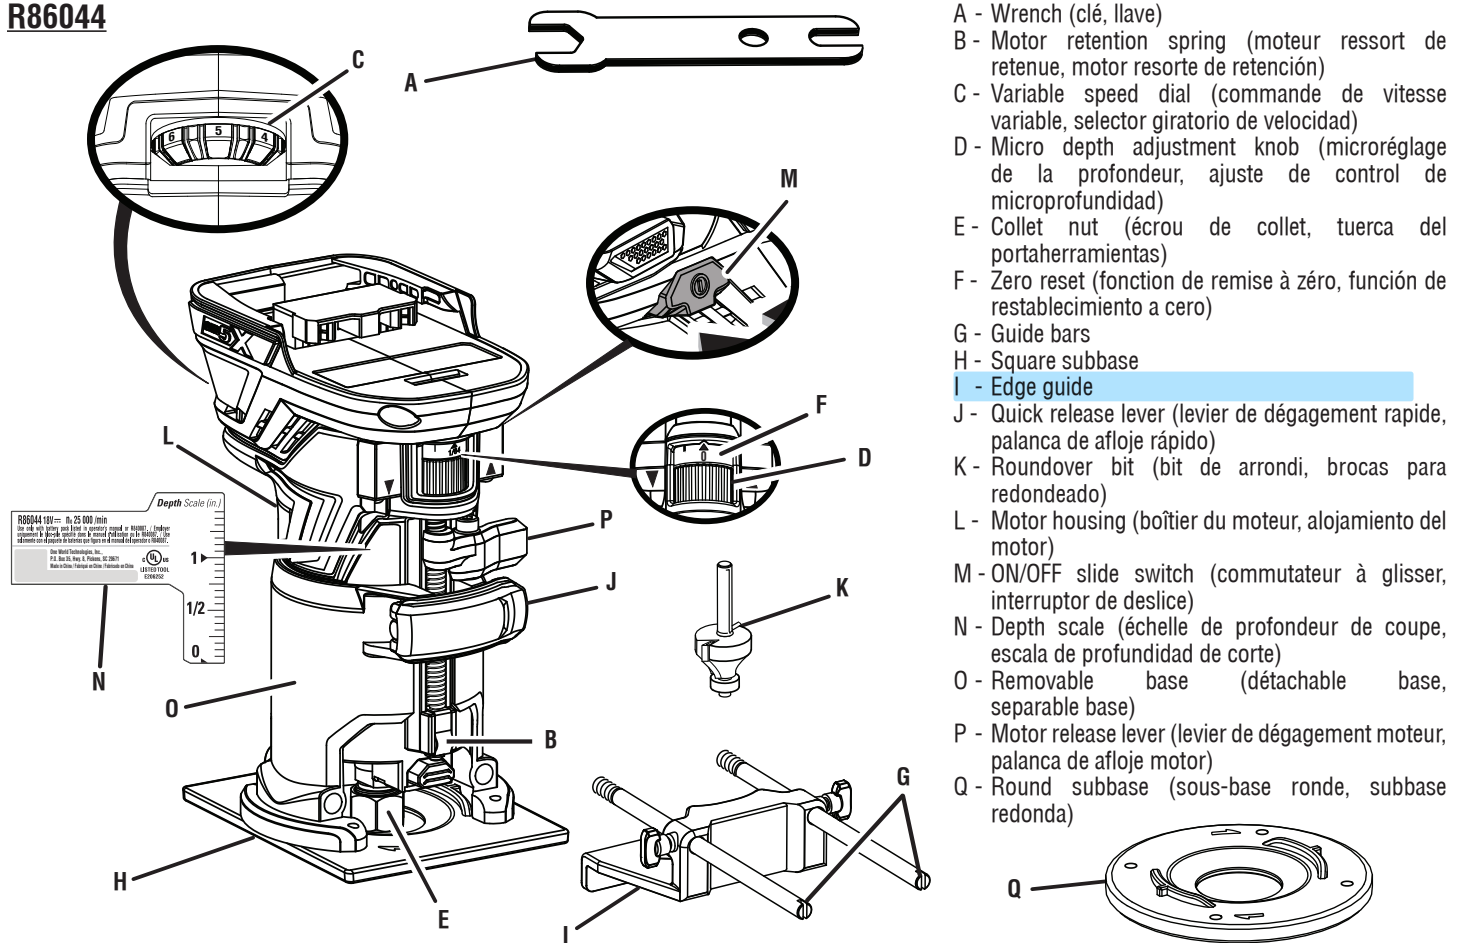


Fig. 1

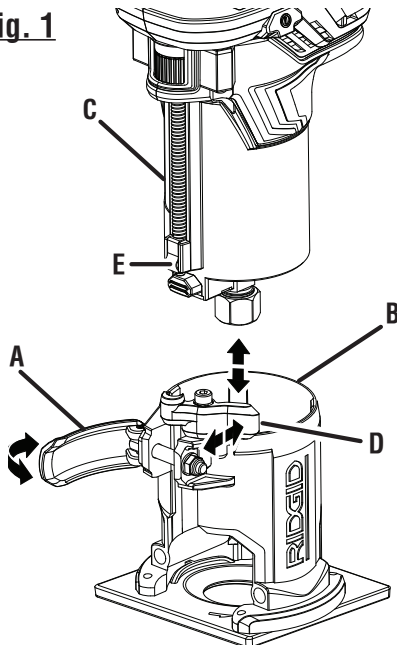


- A - Quick release lever (levier de dégagement rapide, palanca de afloje rápido)
 B - Removable base (détachable base, separable base)
 C - Motor housing (boîtier du moteur, alojamiento del motor)
 D - Motor release lever (levier de dégagement moteur, palanca de afloje motor)
 E - Motor retention spring (moteur ressort de retenue, motor resorte de retención)

Fig. 2

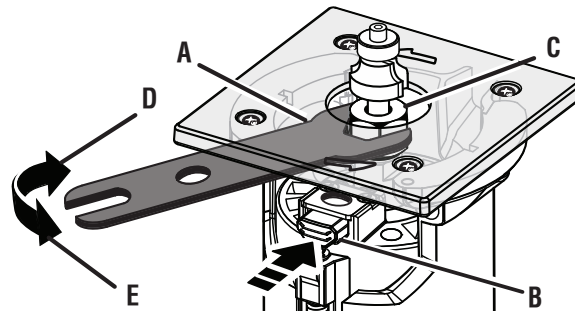


- A - Wrench (clé, llave de tuercas)
 B - Spindle lock (blocage de la broche, bloqueo del husillo)
 C - Collet nut (écrou de collet, tuerca del portaherramientas)
 D - Tighten (verrouiller, asegurar)
 E - Loosen (desserrer, aflojar)


Fig. 3

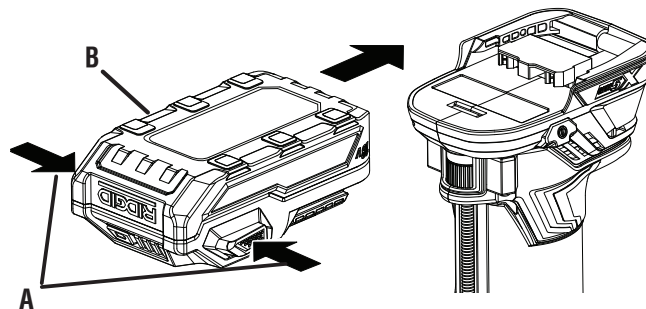



- A - Depress latches to release battery pack (appuyer sur le loquet pour retirer le bloc-piles/para soltar el paquete de baterías oprima los pestillos)
 B - Battery pack (bloc-pile, paquete de baterías)

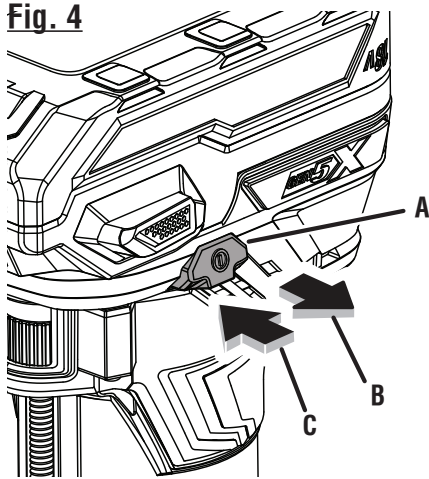Fig. 4

- A - ON/OFF slide switch (commutateur à marche/arrêt, interruptor de encendido/apagado)
 B - To turn ON (pour mettre en marche, para encender la unidad)
 C - To turn OFF (pour arrêter, para apagar la unidad)

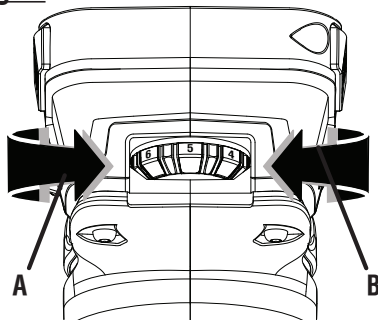Fig. 5


- A - Increase speed (augmentation de la vitesse, aumentar velocidad)
 B - Decrease speed (réduction de la vitesse, disminuir velocidad)

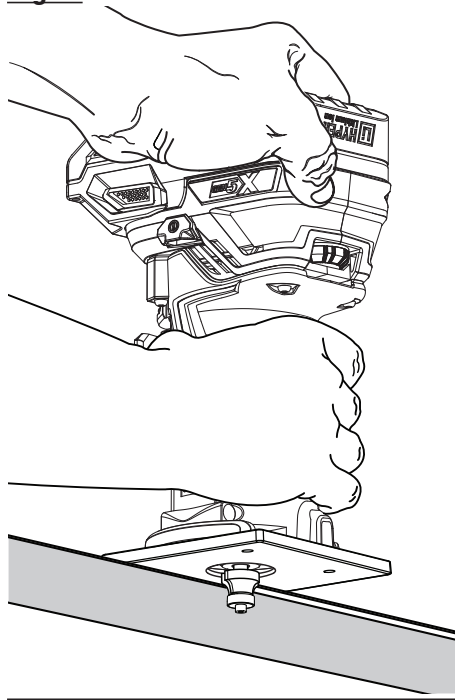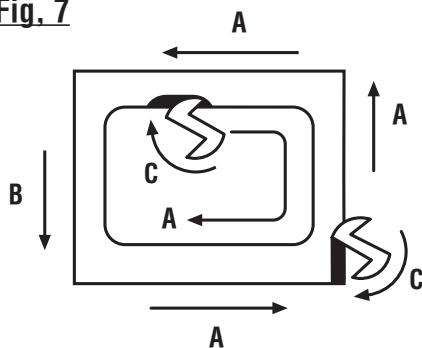Fig. 6**Fig. 7**


- A - Trimmer feed direction (direction d'engagement, dirección de avance de la recortadora)
 B - Trim end grains first (rogner d'abord le grain en bout, recorte primero los extremos de la fibra)
 C - Bit rotation (rotation du fer, giro de la fresa)

Fig. 8


GUIDE OUTSIDE GUIDE À L'EXTÉRIEUR / GUÍA AFUERA

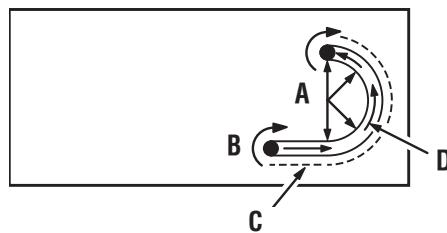

GUIDE INSIDE / GUIDE À L'INTÉRIEUR / GUÍA ADENTRO

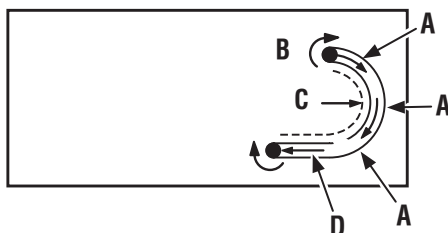



- A - Thrust (poussée, empuje)
 B - Rotation (rotation, giro)
 C - Guide (guide, guía)
 D - Feed (avancement, avance)

Fig. 9

**TOO SLOW / TROP LENTE /
DEMASIADO LENTO**




**TOO FAST / TROP RAPIDE /
DEMASIADO RÁPIDO**

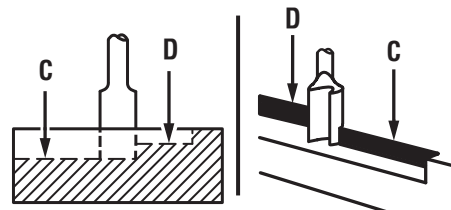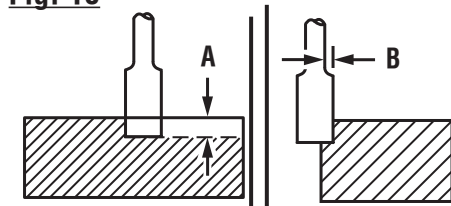Fig. 10

- A - Depth of cut (profondeur de coupe, profundidad del corte)
 B - Width of cut (largeur de coupe, anchura del corte)
 C - 2nd. pass (2ème passe, 2da. pasada)
 D - 1st. pass (1ère passe, 1ra. pasada)

Fig. 11

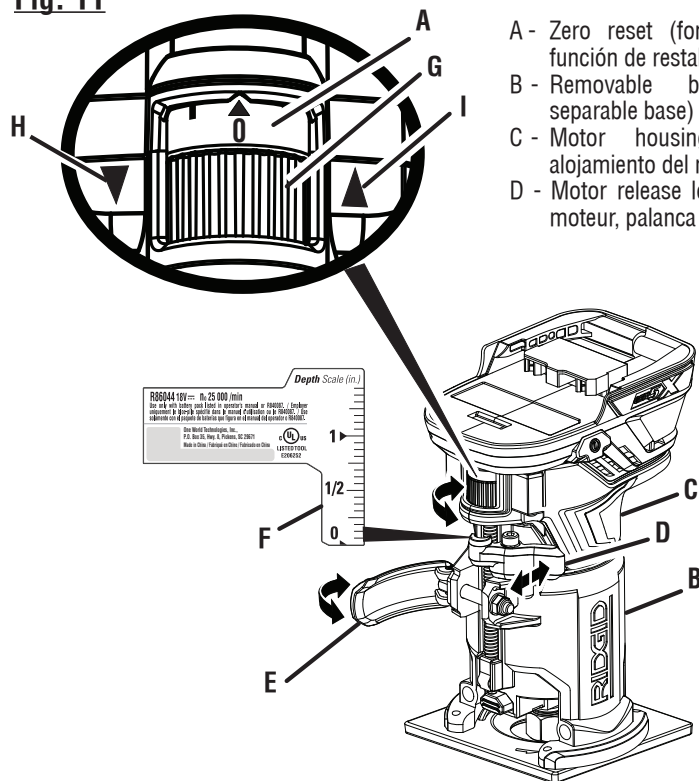


- A - Zero reset (fonction de remise à zéro, función de restablecimiento a cero)
- B - Removable base (détachable base, separable base)
- C - Motor housing (boîtier du moteur, alojamiento del motor)
- D - Motor release lever (levier de dégagement moteur, palanca de afloje motor)

- E - Quick release lever (levier de dégagement rapide, palanca de afloje rápido)
- F - Depth scale (échelle de profondeur de coupe, escala de profundidad de corte)
- G - Micro depth adjustment knob (microréglage de la profondeur, ajuste de control de microprofundidad)


- H - Down arrow (pointant vers le bas, hacia abajo)
- I - Up arrow (pointant vers le haut, hacia arriba)

Fig. 14

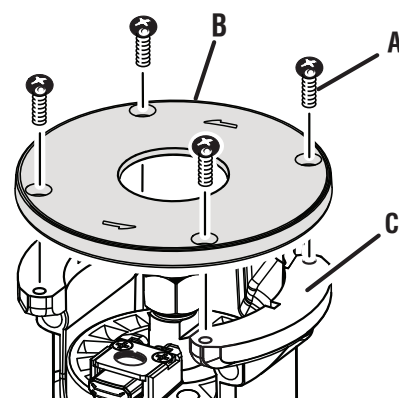


- A - Screws (vis, tornillo)
- B - Round subbase (sous-base ronde, subbase redonda)
- C - Removable base (détachable base, separable base)


Fig. 12

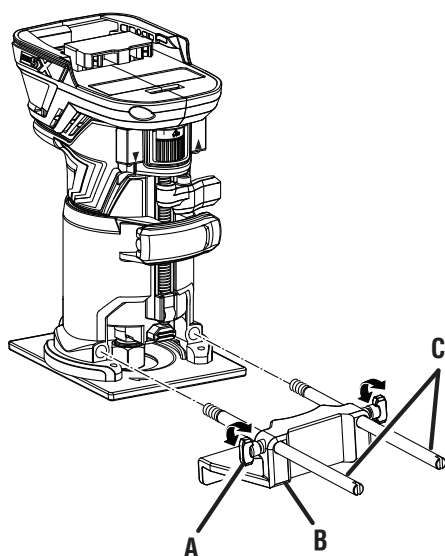

- A - Thumb screws (vis papillon, tornillos de apriete manual)
- B - Edge guide (guide de chant, guía para cantos)
- C - Guide bars (barres guides, barras guía)

Fig. 13

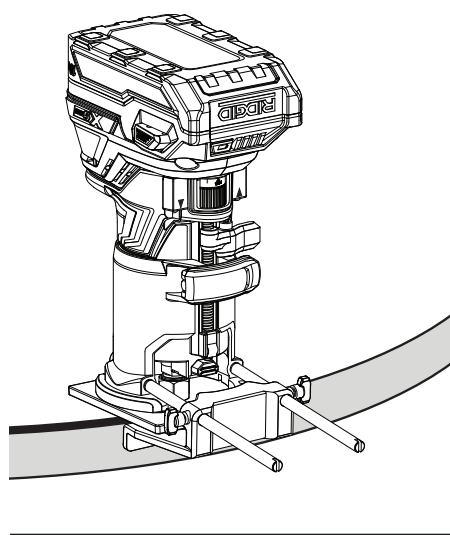

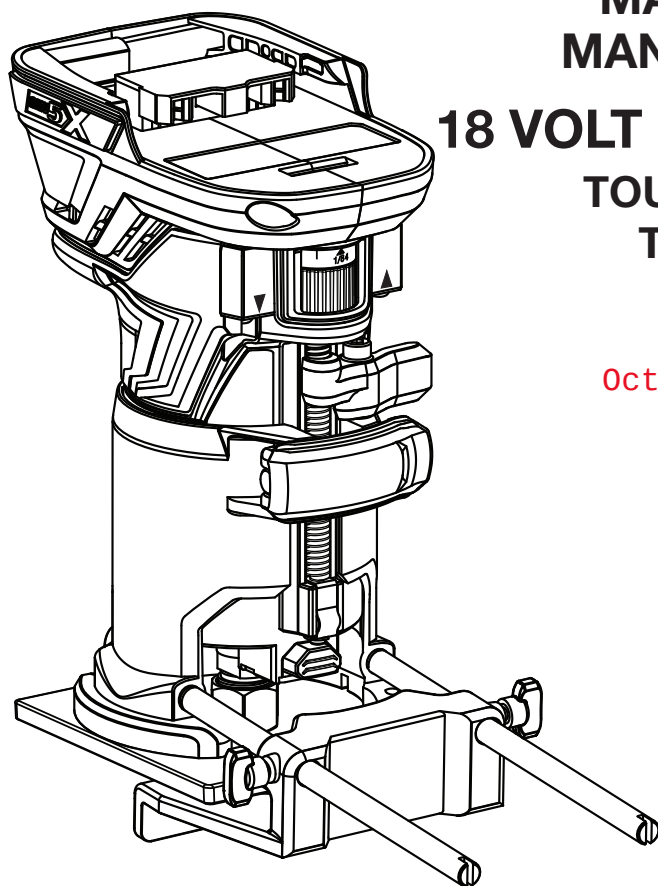

OPERATOR'S MANUAL MANUEL D'UTILISATION MANUAL DEL OPERADOR

18 VOLT COMPACT ROUTER

TOUPE COMPACTE DE 18 V

TUPI COMPACTO DE 18 V

R860443

Octane version for comparison

OCTANE™

To register your RIDGID® product, please visit:
<http://register.RIDGID.com>

Pour enregistrer votre produit de RIDGID®, s'il vous plaît la visite :
<http://register.RIDGID.com>

Para registrar su producto de RIDGID®, por favor visita:
<http://register.RIDGID.com>

INCLUDES: Compact router, Wrench, Roundover bit, Edge guide/guide bars, Round subbase, Vacuum adaptor, Operator's Manual

TABLE OF CONTENTS

■ General Power Tool Safety Warnings.....	2-3
■ Safety Instructions for Routers.....	4
■ Symbols.....	5
■ Features.....	5
■ Assembly.....	6
■ Operation.....	7-11
■ Maintenance.....	11
■ Illustrations.....	12-14
■ Parts Ordering/Service.....	Back page

WARNING:

To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

SAVE THIS MANUAL FOR FUTURE REFERENCE

INCLUT : Toupie compacte, clé, bit de arrondi, guide margeur/ barres guides, subbase rond, adaptateur d'aspiration, manuel del utilisation

TABLE DES MATIÈRES

■ Avertissements de sécurité générales relatives aux outils électriques.....	2-3
■ Consignes de sécurité pour les toupies.....	4
■ Symboles.....	5
■ Caractéristiques.....	5
■ Assemblage.....	6
■ Utilisation.....	7-11
■ Entretien.....	11
■ Illustrations.....	12-14
■ Commande de pièces/dépannage.....	Page arrière

AVERTISSEMENT :

Pour réduire les risques de blessures, l'utilisateur doit lire et veiller à bien comprendre le manuel d'utilisation avant d'utiliser ce produit.

CONSERVER CE MANUEL POUR FUTURE RÉFÉRENCE

INCLUYE: Tupi compacto, llave, brocas para redondeado, guía de bordes/barras guía, subbase redonda, aditamento de succión, manual del operador

ÍNDICE DE CONTENIDO

■ Advertencias de seguridad generales para la herramienta eléctrica.....	2-3
■ Instrucciones de seguridad para fresadoras.....	4
■ Símbolos.....	5
■ Características.....	5
■ Armado.....	6
■ Funcionamiento.....	7-11
■ Mantenimiento.....	11
■ Ilustraciones.....	12-14
■ Pedidos de repuestos/servicio.....	Pág. posterior

ADVERTENCIA:

Para reducir el riesgo de lesiones, el usuario debe leer y comprender el manual del operador antes de usar este producto.

GUARDE ESTE MANUAL PARA FUTURAS CONSULTAS

SAFETY INSTRUCTIONS FOR ROUTERS

- **Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the work by your hand or against the body leaves it unstable and may lead to loss of control.
- **Hold power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring.** Cutting accessory contacting a “live” wire may make exposed metal parts of the power tool “live” and could give the operator an electric shock.
- **Know your power tool. Read operator’s manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this power tool.** Following this rule will reduce the risk of electric shock, fire, or serious injury.
- **Always wear eye protection with side shields marked to comply with ANSI Z87.1 when assembling parts, operating the tool, or performing maintenance.** Following this rule will reduce the risk of serious personal injury.
- **Protect your lungs. Wear a face or dust mask if the operation is dusty.** Following this rule will reduce the risk of serious personal injury.
- **Protect your hearing. Wear hearing protection during extended periods of operation.** Following this rule will reduce the risk of serious personal injury.
- **Battery tools do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards when not using your battery tool or when changing accessories.** Following this rule will reduce the risk of electric shock, fire, or serious personal injury.
- **Do not place battery tools or their batteries near fire or heat.** This will reduce the risk of explosion and possibly injury.
- **Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow.** A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.
- **Batteries can explode in the presence of a source of ignition, such as a pilot light.** To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.
- **Do not charge battery tool in a damp or wet location. Do not use, store, or charge battery packs or products in locations where the temperature is less than 50°F or more than 100°F.** Do not store outside or in vehicles.
- **Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water. If liquid gets into your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention.** Following this rule will reduce the risk of serious personal injury.
- **Save these instructions.** Refer to them frequently and use them to instruct others who may use this tool. If you loan someone this tool, loan them these instructions also.

SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a hazardous situation, that, if not avoided, may result in minor or moderate injury.
	NOTICE:	(Without Safety Alert Symbol) Indicates information considered important, but not related to a potential injury (e.g. messages relating to property damage).

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
	Safety Alert	Indicates a potential personal injury hazard.
	Read Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always wear eye protection with side shields marked to comply with ANSI Z87.1 when operating this equipment.
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Recycle Symbol	This product uses lithium-ion (Li-ion) batteries. Local, state or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.
V	Volts	Voltage
min	Minutes	Time
—	Direct Current	Type or a characteristic of current
n_0	No Load Speed	Rotational speed, at no load
.../min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute

FEATURES

PRODUCT SPECIFICATIONS

Collet..... 1/4 in.
 Revolutions per minute..... 17,000-30,000/min.

ASSEMBLY

UNPACKING

This product requires assembly.

- Carefully remove the tool and any accessories from the box. All items listed in the **Includes** section must be included at the time of purchase.

WARNING:

Items in this *Assembly* section are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.

-
- If any parts are damaged or missing, please call 1-866-539-1710 for assistance.

WARNING:

If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.

WARNING:

Do not attempt to modify this product or create accessories or attachments not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

REMOVING THE BASE

See Figure 1, page 12.

- Remove the battery pack.
- Pull the quick release lever to the open position.
- Get a firm grasp of the base with one hand. Hold the overmolded grip area on the motor housing with the other.
- Depress the motor release lever completely. Then pull the motor housing away from the base until they separate.

To connect the motor housing to the base:

- Depress the motor release lever completely.
- Align the motor housing with the base and push the motor housing onto the base.

NOTE: This may require some force to overcome the motor retention spring.

- Release the motor release lever and close the quick release lever.

WARNING:

If you are changing a bit immediately after use, do not touch the collet nut, bit, or collet with your hands or fingers as they may be hot. Always use the wrench provided to avoid getting burned.

INSTALLING AND REMOVING BITS

See Figure 2, page 12.

- Remove the battery pack.
- Pull the quick release lever to the open position.
- Depress the motor release lever and move the base to provide clear access to the collet nut. It is not necessary to remove the base.
- Depress the spindle lock button and rotate spindle until the spindle locks.
- Rotate the wrench counterclockwise to loosen the collet nut. The collet is machined to precision tolerances to fit bits with 1/4 in. diameter shanks.
- If installing the bit for the first time, it can be installed once the collet nut is loose. If changing bits, the bit will easily slip from the collet after loosening the collet nut.

NOTE: The tip of the supplied bit has a protective wax coating that must be removed before first-time use. Simply peel off the wax coating and be sure that all traces of wax are removed before using the router.

WARNING:

The cutting edge of the bit is sharp. Be careful when removing wax to prevent injury.

-
- Insert the shank of the bit into the collet until it touches the bottom, then pull it out approximately 1/16 in. This allows for expansion when the bit gets hot.
 - Tighten collet nut securely, by rotating it clockwise, using large end of wrench.

NOTE: You may also lock the shaft for bit changes by using the narrow end of the wrench. The narrow slot will fit onto the flats on the shaft above the collet nut.

WARNING:

If the collet nut is not tightened securely, the bit could come out during use, resulting in possible serious personal injury.

-
- Depress the motor release lever and return the base back to an operating position.
 - Push the quick release lever to the closed position.

OPERATION

WARNING:

Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

WARNING:

Always remove battery pack from the tool when you are assembling parts, making adjustments, cleaning, or when not in use. Removing battery pack will prevent accidental starting that could cause serious personal injury.

WARNING:

Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes and other possible serious injuries.

WARNING:

Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

APPLICATIONS

You may use this tool for the purposes listed below:

- Smooth, professional trimming of laminates
- Trimming counter tops and finishing cabinet work
- Trimming wood and plastics
- Edge shaping

INSTALLING/REMOVING BATTERY PACK

See Figure 3, page 12.

- Place the battery pack in the tool. Align the raised rib on the battery pack with the groove inside the tool, then slide the battery pack into the tool.
- Make sure the latches on each side of the battery pack snap into place and the battery pack is secured in the tool before beginning operation.
- Depress the latches to remove the battery pack.

For complete charging instructions, see the operator's manuals for your battery pack and charger.

WARNING:

Battery tools are always in operating condition. Therefore, the slide switch should always be in the **(O) OFF** position when not in use or carrying at your side.

RECOMMENDED BATTERY PACKS

OCTANE™ tools are compatible with all RIDGID® 18 Volt battery packs, but tool performance is maximized with OCTANE™ battery packs.

If you experience frequent shutoffs due to overload protection, try using an OCTANE™ battery pack.

OVERLOAD PROTECTION

When the tool is forced or overloaded, the Li-ion battery pack will automatically shut off the tool. To reset the tool, push the slide switch to the **(O) OFF** position and resume operation. If the tool still does not resume operation, remove and reinsert the battery. **Do not force the tool.**

ATTACHING/REMOVING VACUUM ADAPTOR

See Figures 4 - 6, page 13.

The vacuum adaptor attaches to the router base for dust free routing when used in combination with a vacuum. The vacuum hose adaptor accepts 1-1/4 in. to 1-7/8 in. vacuum hoses.

NOTE: The router ships with a chip shield that must be removed prior to installing the vacuum adaptor.

To remove the chip shield and install the vacuum adaptor:

- Remove the battery pack.
- Turn the router upside down to remove the four subbase screws and the subbase.
- Place your fingers inside the base and gently push out on top of the chip shield near the tab until it snaps free.
- Hold the vacuum adaptor at a slight angle and place it onto the base so that the rounded edges of the adaptor are aligned with the holes in the base.
- Gently press the top of the vacuum adaptor until the tab snaps into place.
- Align the tabs on the subbase with the grooves in the removable base, then place the subbase onto the removable base.
- Attach the subbase using the four subbase screws.
- Tighten the screws securely. Do not over tighten.

WARNING:

Always use a subbase recommended for use with this product when trimming. Use of the router without a subbase or using the incorrect subbase can result in serious personal injury.

OPERATION

To remove the vacuum adaptor and install the chip shield:

- Remove the battery pack.
- Turn the router upside down to remove the four subbase screws and the subbase.
- Place your fingers inside the base and gently push out on top of the vacuum adaptor near the tab until it snaps free.
- Hold the chip shield at a slight angle and place it onto the base so that the rounded edges of the shield are aligned with the holes in the base.
- Gently press the top of the chip shield until the tab snaps into place.
- Align the tabs on the subbase with the grooves in the removable base, then place the subbase onto the removable base.
- Attach the square subbase using the four subbase screws.
- Tighten the screws securely. Do not over tighten.

TURNING THE COMPACT ROUTER ON/OFF

See Figure 7, page 13.

- To turn the router on, pull the slide switch to the **(I) ON** position.

NOTE: The router has a soft start feature. The router will start at a slow speed and gradually get up to the speed set by the adjustable speed dial.

- To turn the router off, push the slide switch to the **(O) OFF** position.

WARNING:

The bit will continue to spin after the router is turned off. Wait for the bit to come to a complete stop to continue operation. Failure to do so could result in possible serious injury.

ADJUSTING THE SPEED

See Figure 8, page 13.

The variable speed dial is located on the front of the motor housing. The speed is adjustable from 17,000 RPMs to 30,000 RPMs.

- Rotate the dial to higher numbers to increase speed.
- Rotate the dial to lower numbers to decrease speed.

OPERATING THE COMPACT ROUTER

See Figure 9, page 13.

Before starting the router, make sure the bit is securely tightened in the collet and that the depth of cut is properly set. See **Setting Depth of Cut** later in this manual. Never start the router while the bit is in contact with the workpiece.

After completing a cut, pull the bit slightly away from the cut surface. Turn the router off and wait for the rotating bit to completely stop before removing the base from the work surface.

When cutting, fit the base of the router over the work surface and firmly hold the body of the router as shown. Make sure the router is running at full speed before contacting the workpiece.

WARNING:

Avoid hand positions that may expose fingers to bit through open areas of router base. Fingers entering the opening in the router base can be seriously cut or burned.

WARNING:

Never install a trim bit in this router with a diameter larger than the opening in the subbase. The use of larger bits can result in loss of control and possible serious personal injury.

WARNING:

Never use a trim bit in this router which is rated at less than 30,000 RPMs. Doing so could result in serious personal injury.

WARNING:

Always use a subbase recommended for use with this product when trimming. Use of the router without a subbase or using the incorrect subbase can result in serious personal injury.

DIRECTION OF FEED AND THRUST

See Figures 10 - 11, page 13.

The router motor and bit revolve in a clockwise direction. This gives the tool a slight tendency to twist in your hands in a counterclockwise direction, especially when the motor starts.

Feed the router into the workpiece from left to right. When fed from left to right, the rotation of the bit pulls the router against the workpiece. If fed in the opposite direction, the rotation forces of the spinning bit will tend to throw the router away from the workpiece, causing kickback. This could result in loss of control of the router.

Because of the extremely high speed of bit rotation during a proper feeding operation, there is very little kickback under normal conditions. However, if the bit strikes a knot, hard grain, foreign object, etc., this will affect the normal progress of the cutting action, possibly causing a slight kickback. Kickback could be sufficient to spoil the trueness of your cut if you are not prepared. Such a kickback is always in the direction opposite the direction of bit rotation.

OPERATION

To guard against kickback, plan your setup and direction of feed so that you will always be thrusting the tool—to hold it against whatever you are using to guide the cut—in the same direction that the leading edge of the bit is moving. The thrust should be in a direction that keeps the sharp edges of the bit continuously biting straight into new (uncut) wood.

PROPER RATE OF FEED

Professional trimming and edge shaping depend upon careful set-up and selecting the proper rate of feed.

The proper rate of feed is dependent upon:

- the hardness and moisture content of the workpiece
- the depth of cut
- the cutting diameter of the bit.

When cutting shallow grooves in soft woods such as pine, use a faster rate of feed.

When making cuts in hardwoods such as oak, use a slower rate of feed.

Several factors will help you select the proper rate of feed.

- Choose a rate that does not slow down the router motor.
- Choose the rate at which the bit advances firmly and surely to produce a continuous spiral of uniform chips or a smooth trim edge on laminate.
- Listen to the sound of the router motor. A high-pitched sound means you are feeding too slowly. A strained, lower-pitched sound signals force-feeding.
- Check the progress of each cut. Too-slow feeding can cause the router to take off in a wrong direction from the intended line of cut. Force-feeding increases the strain of holding the tool and results in loss of speed.
- Notice the chips being produced as you cut. If the router is fed too slowly, it will scorch or burn the wood. If the router is fed too fast, it will take large chips out of the wood and leave gouge marks.

Always test a cut on a scrap piece of the workpiece wood or laminate before you begin. Always grasp and hold the router firmly when trimming.

If you are making a small-diameter, shallow groove in soft, dry wood, the proper feed rate may be determined by the speed at which you can travel the router along the guide line. If the bit is a large one, the cut is deep, or the workpiece is hard to cut, the proper feed may be a very slow one. A cross-grain cut may require a slower pace than an identical with-grain cut in the same workpiece.

There is no fixed rule. Proper rate of feed is learned through practice and use.

TOO SLOW FEEDING

See Figure 12, page 13.

When the router is advanced into the work too slowly, the revolving bit does not dig into new wood fast enough to take a bite; instead, it scrapes away sawdust-like particles. Scraping produces heat, which can glaze, burn, or mar the cut, and can overheat the bit. Dull bits can also contribute to scraping and burning.

It is more difficult to control a router when the bit is scraping instead of cutting. With practically no load on the motor, the bit will be revolving near top RPM, and will have a greater than normal tendency to bounce off the sides of the cut, especially if the wood has a pronounced grain with hard and soft areas. The cut that results may have rippled sides instead of straight.

FORCE FEEDING

See Figure 12, page 13.

The router is an extremely high-speed tool (17,000-30,000 RPMs.), and will make clean, smooth cuts if allowed to run freely without the overload of a forced feed. Three things that cause force feeding are bit size, depth of cut, and workpiece characteristics. The larger the bit or the deeper the cut, the more slowly the router should be moved forward. If the wood is very hard, knotty, gummy or damp, the operation must be slowed still more.

Clean, smooth laminate trimming and edge shaping can be done only when the bit is revolving at a relatively high speed and is taking very small bites to produce tiny, cleanly-severed chips. If the router is forced to move forward too fast, the speed of the bit becomes slower than normal in relation to its forward movement. As a result, the bit must take bigger bites as it revolves. Bigger bites mean bigger chips and a rougher finish. Bigger chips also require more power, which could result in overloading the motor.

Under extreme force-feeding conditions, the relative speed of the bit can become so slow—and the bites it has to take so large—that chips will be partially knocked off rather than fully cut off. This will result in splintering and gouging of the workpiece.

DEPTH OF CUT

See Figure 13, page 14.

Depth of cut affects the rate of feed and the quality of a cut. Using the proper depth of cut can lessen the possibility of damage to the router motor and bit.

A deeper cut requires a slower feed than a shallow one. Making a cut that is too deep will slow the feed so that the bit is scraping, rather than cutting, and is not recommended.

A too-deep cut can cause smaller bits to be broken off. Bits that are 1/16 in. in diameter are easily broken off when subjected to too much side thrust. A larger bit is not as likely to break, but attempting a cut that is too deep may result in a rough cut, and may make it difficult to guide and control the bit as desired.

OPERATION

It is recommended that you do not exceed 1/8 in. depth of cut in a single pass, regardless of the bit size or the softness or condition of the workpiece. This will result in a higher quality cut.

To make deeper cuts, it is necessary to make as many successive passes as required, lowering the bit 1/8 in. for each new pass. To save time, perform all the cutting necessary at one depth setting, then lower the bit for the next pass. This will assure uniform depth when the final pass is completed.



WARNING:

If the desired depth of cut is greater than can be safely cut in one pass, make cuts in two or more passes. Do not remove more than 1/8 in. in a single pass. Excessive depth of cut can result in loss of control and the possibility of serious personal injury.

SETTING DEPTH OF CUT

See Figure 14, page 14.

- Remove the battery pack.
- Pull the quick release lever to the open position to free the motor housing in the base.
- Depress and hold the motor release lever.

NOTE: Large depth of cut adjustments can be made using the motor release lever and positioning the motor housing by moving it in the base by hand.

- With the desired bit installed into the collet and tightened securely, slide the motor housing section of the router upward in the base until the tip of the bit is just above the work surface (bottom surface of subbase) by 1/4 in. minimum. Release the motor release lever once the bit is positioned above the work surface.
- Turn the micro depth adjustment knob slowly clockwise to lower the bit slowly towards the work surface. The depth of cut is considered “zero” when the bit just touches the work surface.

NOTE: To set the zero reset function to zero while the bit is at zero depth, hold the micro depth adjustment knob in place and rotate the zero reset function ring until it reads “0”.

NOTE: One full revolution of the micro depth adjust knob moves the router housing 1/16 in.

- Remove the router from the work surface.
- Using the micro depth adjustment knob, adjust the position of the bit to obtain the desired depth of cut. To move the bit down, turn the micro depth adjustment knob toward the down indicator arrow to the side of the knob.
- Always observe the 1/8 in. MAX depth of cut per pass rule when cutting.

NOTE: A reference depth scale is located on the motor housing which can be used to measure depth of cut. Each mark on the scale indicates a 1/16 in. change in depth setting. Use the top edge of the removable base as reference when setting depth of cut.



WARNING:

Avoid open area of router base. Serious personal injury will result from contact with a rotating bit.

USING EDGE GUIDE

See Figures 15 - 16, page 14.

Use the edge guide to trim or cut a straight or curved edge.

NOTE: To use the edge guide with the vacuum adaptor, install the adaptor first and then attach the edge guide.

- Remove the battery pack.
- Thread guide bars into the base and tighten with a flat head screwdriver.
- Slide the edge guide onto the guide bars.
- Install thumb screws provided into the edge guide.
- Measure the proper distance to offset the bit, or if trimming, position the bit at the edge of the workpiece.
- Tighten the two thumb screws to secure the edge guide.
- Reinstall the battery pack.
- Move the router along the workpiece keeping the edge guide in constant contact with edge of the workpiece.

OPERATION

ATTACHING THE ROUND SUBBASE

See Figure 17, page 14.

NOTE: To use the round subbase with the vacuum adaptor, install the adaptor first and then attach the subbase.

- Remove the battery pack.
- Turn the router upside down to remove the four subbase screws and the square subbase.
- Align the tabs on the round subbase with the grooves in the removable base, then place the round subbase onto the removable base.

- Attach the round subbase using the four subbase screws.
- Tighten the screws securely. Do not over tighten.



WARNING:

Always use a subbase recommended for use with this product when trimming. Use of the router without a subbase or using the incorrect subbase can result in serious personal injury.

MAINTENANCE



WARNING:

When servicing, use only identical replacement parts. Use of any other part could create a hazard or cause product damage.



WARNING:

Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes and other possible serious injuries.



WARNING:

To avoid serious personal injury, always remove the battery pack from the tool when cleaning, performing any maintenance, or when storing the tool.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and can be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.



WARNING:

Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which could result in serious personal injury.

**NOTE: ILLUSTRATIONS START ON PAGE 12
AFTER FRENCH AND SPANISH LANGUAGE SECTIONS.**

**This product has a 90-Day Satisfaction Guarantee Policy,
as well as a Three-year Limited Warranty.**

**For Warranty and Policy details, please go to
www.RIDGID.com or call (toll free) 1-866-539-1710.**

R860443



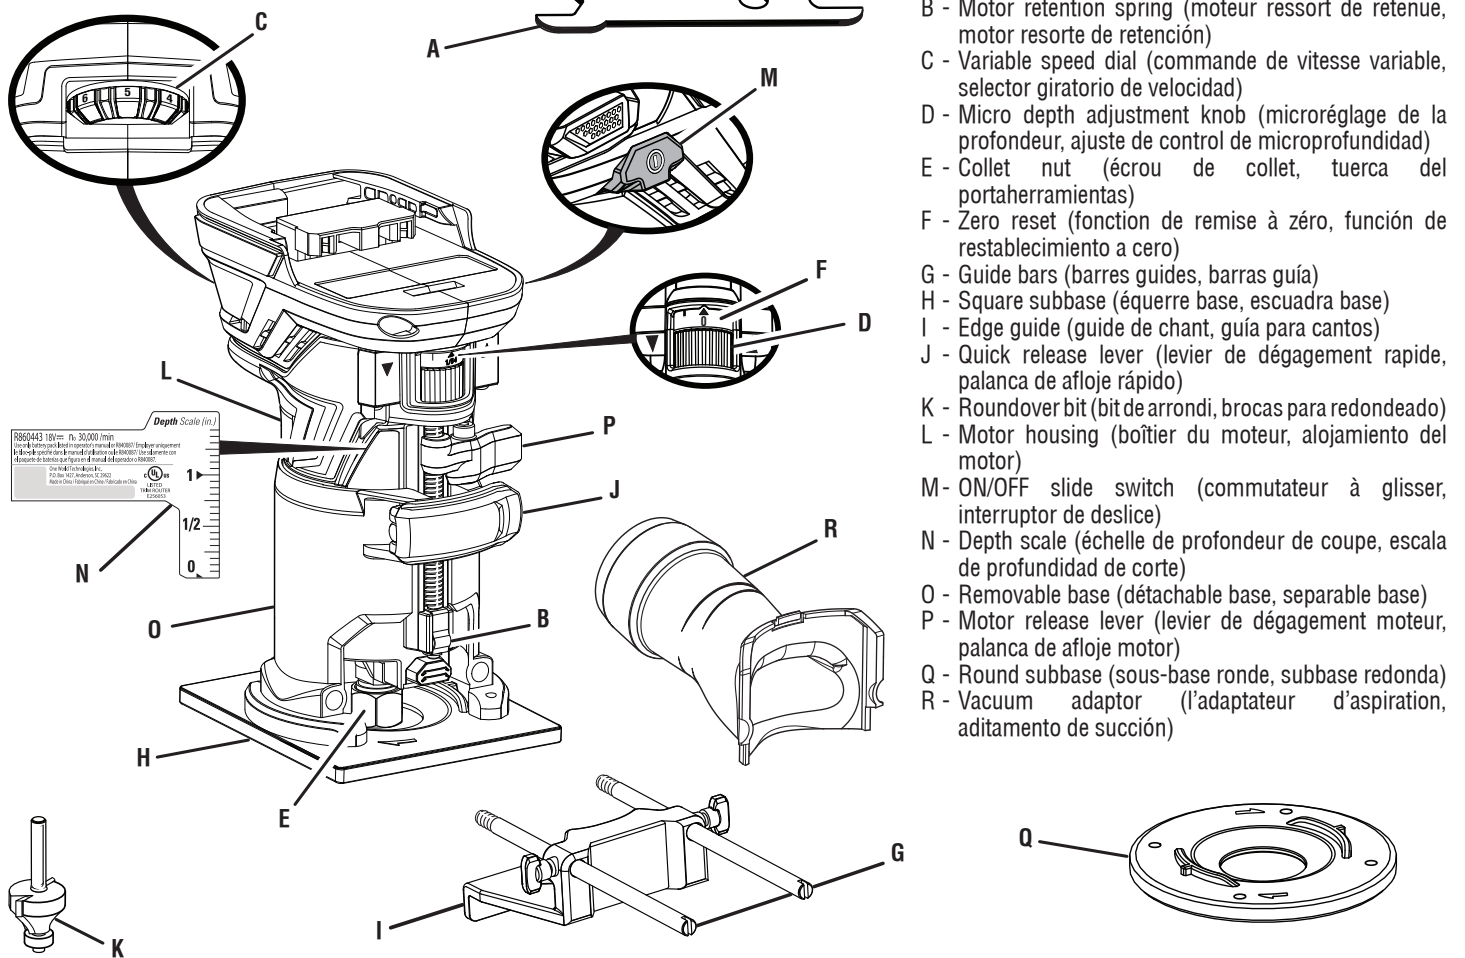


Fig. 1

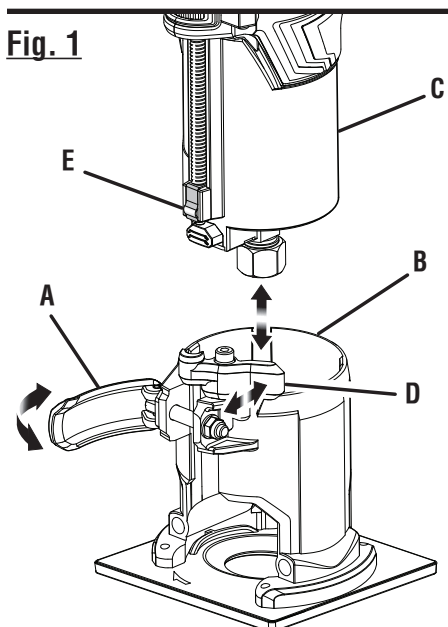


- A - Quick release lever (levier de dégagement rapide, palanca de afloje rápido)
 B - Removable base (détachable base, separable base)
 C - Motor housing (boîtier du moteur, alojamiento del motor)
 D - Motor release lever (levier de dégagement moteur, palanca de afloje motor)
 E - Motor retention spring (moteur ressort de retenue, motor resorte de retención)

Fig. 2

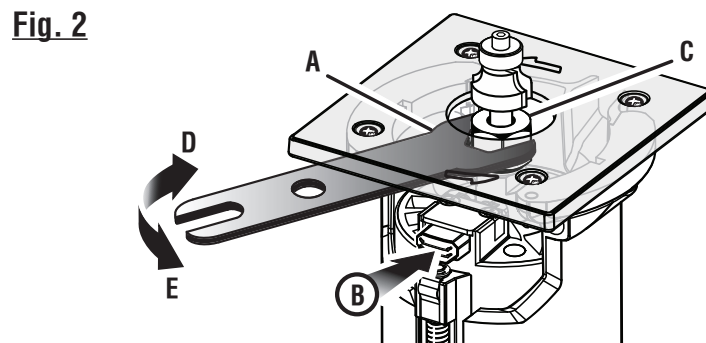


- A - Wrench (clé, llave de tuercas)
 B - Spindle lock (blocage de la broche, bloqueo del husillo)
 C - Collet nut (écrou de collet, tuerca del portaherramientas)
 D - Tighten (verrouiller, asegurar)
 E - Loosen (desserrer, aflojar)


Fig. 3

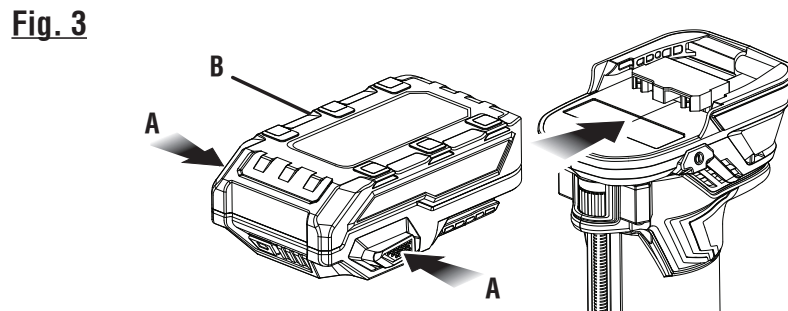


- A - Depress latches to release battery pack (appuyer sur le loquet pour retirer le bloc-piles/para soltar el paquete de baterías oprima los pestillos)
 B - Battery pack (bloc-pile, paquete de baterías)

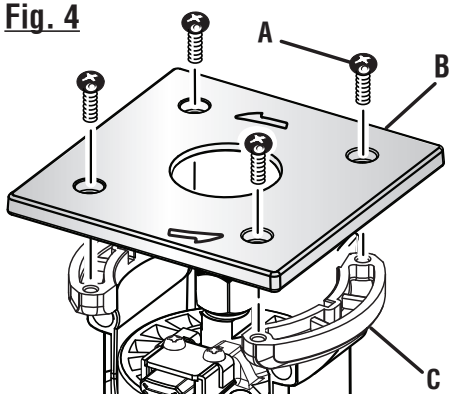Fig. 4


- A - Screws (vis, tornillo)
 B - Square subbase (équerre base, escuadra base)
 C - Removable base (détachable base, separable base)

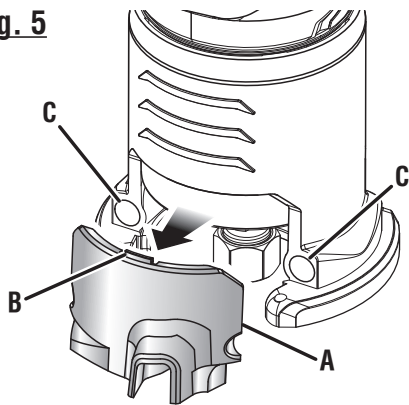Fig. 5


- A - Chip shield (écran de protection contre les copeaux, protector para residuos)
 B - Tab (ergot, orejeta)
 C - Hole (trou, agujero)

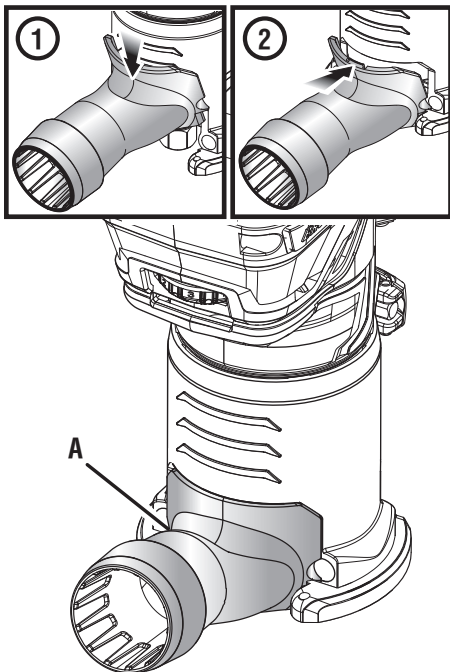Fig. 6



- A - Vacuum adaptor (l'adaptateur d'aspiration, aditamento de succión)

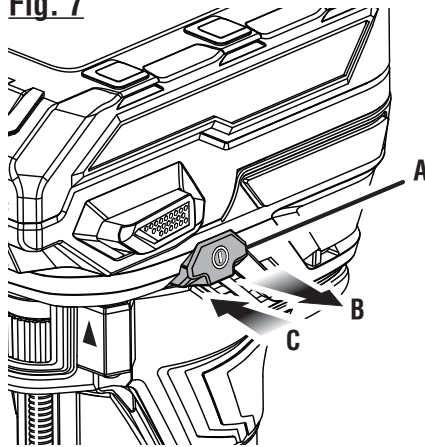Fig. 7

- A - ON/OFF slide switch (commutateur à marche/arrêt, interruptor de encendido/apagado)
 B - To turn ON (pour mettre en marche, para encender la unidad)
 C - To turn OFF (pour arrêter, para apagar la unidad)

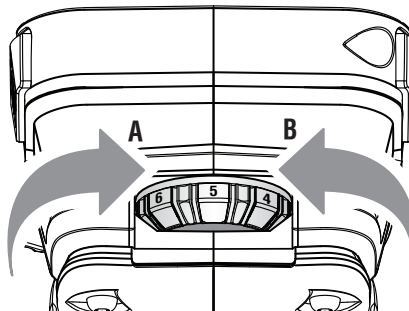Fig. 8


- A - Increase speed (augmentation de la vitesse, aumentar velocidad)
 B - Decrease speed (réduction de la vitesse, disminuir velocidad)

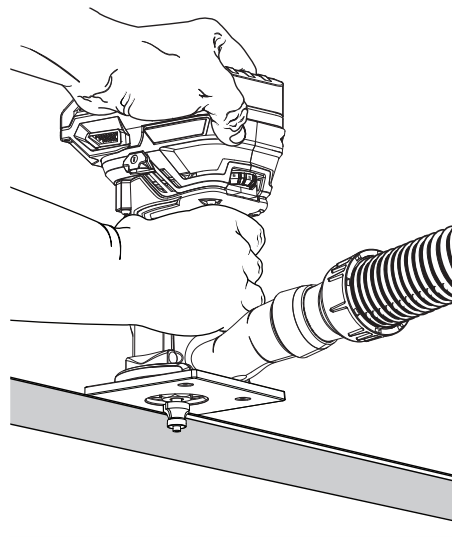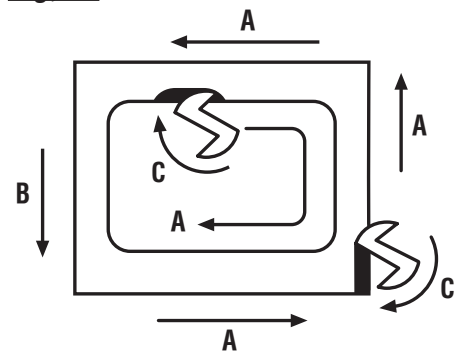Fig. 9**Fig. 10**


- A - Trimmer feed direction (direction d'engagement, dirección de avance de la recortadora)
 B - Trim end grains first (rogner d'abord le grain en bout, recorte primero los extremos de la fibra)
 C - Bit rotation (rotation du fer, giro de la fresa)

Fig. 11

GUIDE OUTSIDE GUIDE À L'EXTÉRIEUR / GUÍA AFUERA

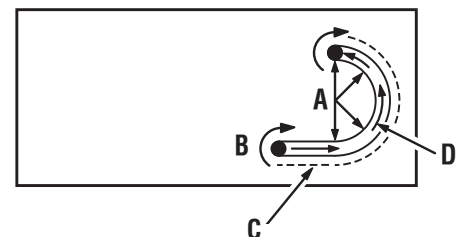

GUIDE INSIDE / GUIDE À L'INTÉRIEUR / GUÍA ADENTRO

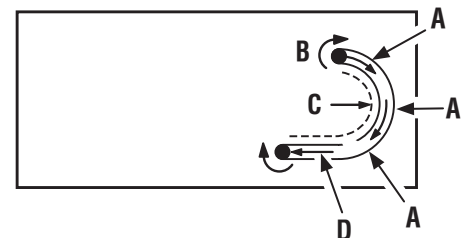

- A - Thrust (poussée, empuje)
 B - Rotation (rotation, giro)
 C - Guide (guide, guía)
 D - Feed (avancement, avance)


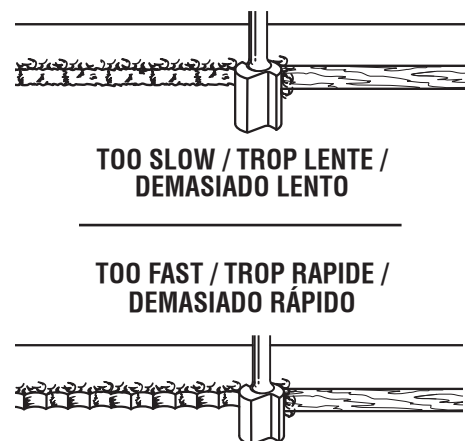
Fig. 12


Fig. 13

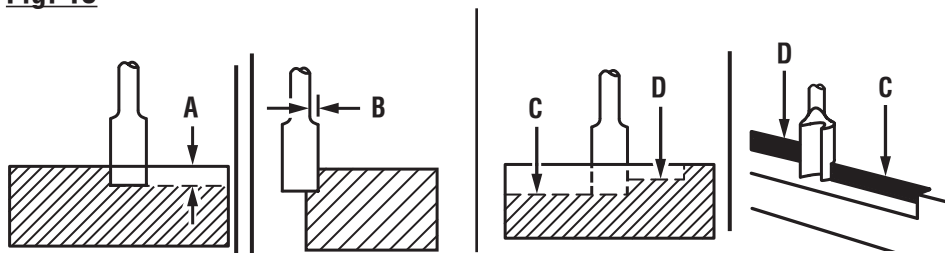

A - Depth of cut (profondeur de coupe, profundidad del corte)
 B - Width of cut (largeur de coupe, anchura del corte)

C - 2nd. pass (2ème passe, 2da. pasada)
 D - 1st. pass (1ère passe, 1ra. pasada)


Fig. 14

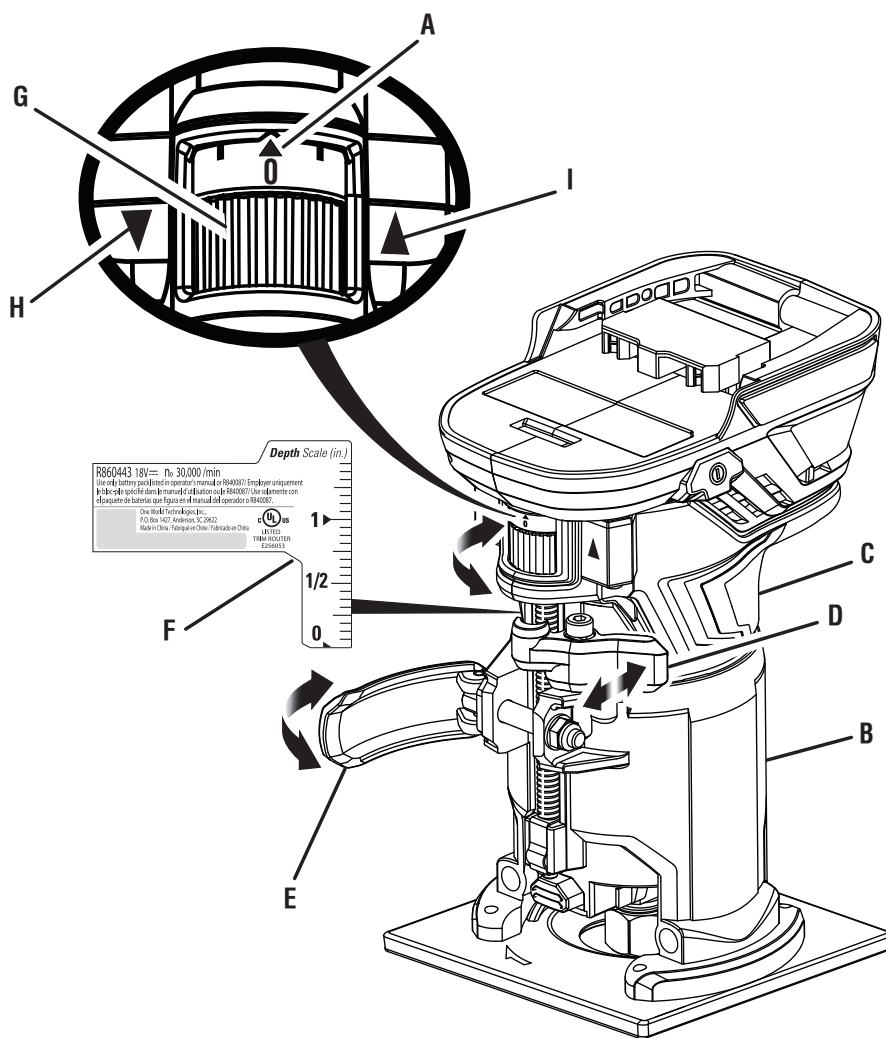

A - Zero reset (fonction de remise à zéro, función de restablecimiento a cero)
 B - Removable base (détachable base, separable base)
 C - Motor housing (boîtier du moteur, alojamiento del motor)
 D - Motor release lever (levier de dégagement moteur, palanca de afloje motor)
 E - Quick release lever (levier de dégagement rapide, palanca de afloje rápido)

F - Depth scale (échelle de profondeur de coupe, escala de profundidad de corte)
 G - Micro depth adjustment knob (microréglage de la profondeur, ajuste de control de microprofundidad)
 H - Down arrow (pointant vers le bas, hacia abajo)
 I - Up arrow (pointant vers le haut, hacia arriba)

Fig. 15

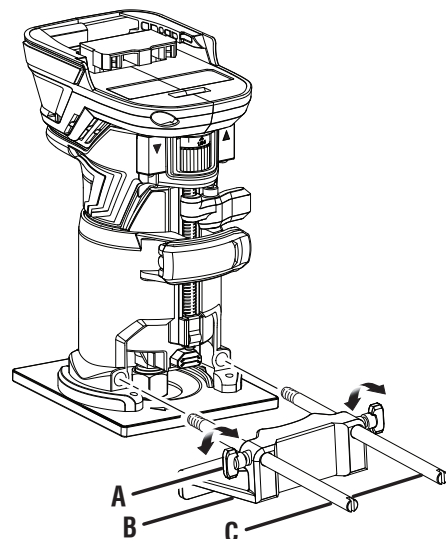

A - Thumb screws (vis papillon, tornillos de apriete manual)
 B - Edge guide (guide de chant, guía para cantos)
 C - Guide bars (barres guides, barras guía)

Fig. 16


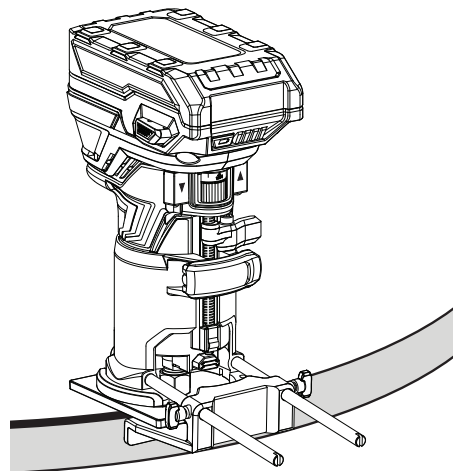


Fig. 17

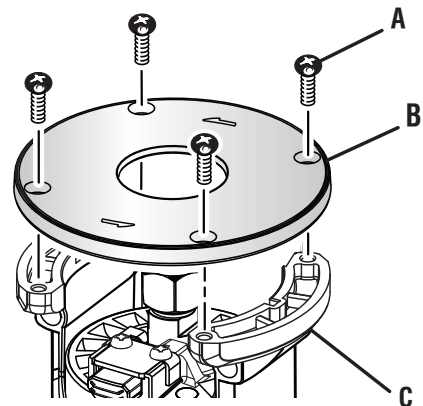

A - Screws (vis, tornillo)
 B - Round subbase (sous-base ronde, subbase redonda)
 C - Removable base (détachable base, separable base)

OPERATOR'S MANUAL

MANUEL D'UTILISATION


MANUAL DEL OPERADOR

18 VOLT COMPACT ROUTER

TOUPE COMPACTE DE 18 V

TUPI COMPACTO DE 18 V

R860443

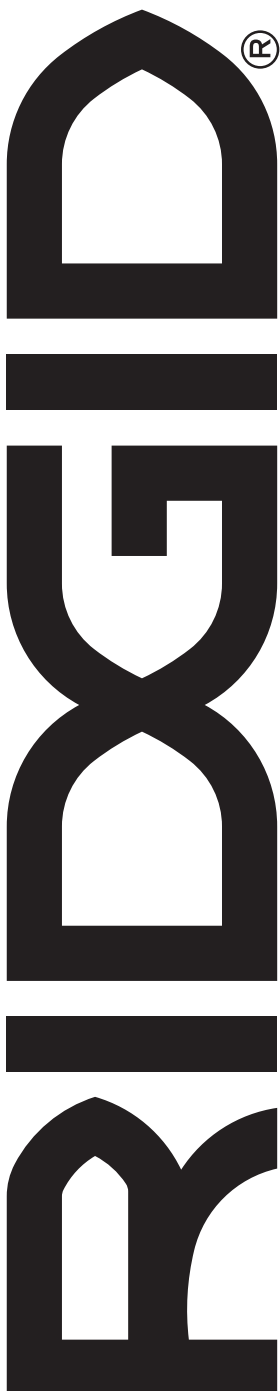

Customer Service Information:

For parts or service, do not return this product to the store. Contact your nearest RIDGID® authorized service center. Be sure to provide all relevant information when you call or visit. For the location of the authorized service center nearest you, please call 1-866-539-1710 or visit us online at www.RIDGID.com.

MODEL NO. _____ SERIAL NO. _____

Service après-vente :

Pour acheter des pièces ou pour un dépannage, ne pas retourner ce produit au magasin. Contacter le centre de réparations RIDGID® agréé le plus proche. Veiller à fournir toutes les informations pertinentes lors de tout appel téléphonique ou visite. Pour obtenir l'adresse du centre de réparations agréé le plus proche, téléphoner au 1-866-539-1710 ou visiter notre site www.RIDGID.com.

NO. DE MODÈLE _____ NO. DE SÉRIE _____

Información sobre servicio al consumidor:

Para piezas de repuesto o servicio, no devuelva este producto a la tienda. Comuníquese con el centro de servicio autorizado de productos RIDGID® de su preferencia. Asegúrese de proporcionar todos los datos pertinentes al llamar o al presentarse personalmente. Para obtener información sobre el centro de servicio autorizado más cercano a usted, le suplicamos llamar al 1-866-539-1710 o visitar nuestro sitio en la red mundial, en la dirección www.RIDGID.com.

NÚM. DE MODELO _____ NÚM. DE SERIE _____

ONE WORLD TECHNOLOGIES, INC.

P.O. Box 1427
Anderson, SC 29622 USA
1-866-539-1710 ■ www.RIDGID.com

RIDGID is a registered trademark of RIDGID, Inc., used under license.

995000788
1-22-19 (REV:02)

RIDGID
R86044 18 V COMPACT ROUTER
REPAIR SHEET

RIDGID
R86044 TOUPIE COMPACTE DE 18 V
FEUILLE DE RÉPARATION

RIDGID
R86044 TUPI COMPACTO DE 18 V
HOJA DE REPARACIONES

ONE WORLD TECHNOLOGIES, INC.

P.O. Box 1427

Anderson, SC 29622, USA

1-866-539-1710 ■ www.RIDGID.com

OPERATOR'S MANUAL

MANUEL D'UTILISATION

MANUAL DEL OPERADOR

18 VOLT TRIM ROUTER

TOUPIE DE 18 V

FRESADORA-RECORTADORA DE 18 V

R86044



Customer Service Information:

For parts or service, do not return this product to the store. Contact your nearest RIDGID® authorized service center. Be sure to provide all relevant information when you call or visit. For the location of the authorized service center nearest you, please call 1-866-539-1710 or visit us online at www.RIDGID.com.

MODEL NO. _____ SERIAL NO. _____



Service après-vente :

Pour acheter des pièces ou pour un dépannage, ne pas retourner ce produit au magasin. Contacter le centre de réparations RIDGID® agréé le plus proche. Veiller à fournir toutes les informations pertinentes lors de tout appel téléphonique ou visite. Pour obtenir l'adresse du centre de réparations agréé le plus proche, téléphoner au 1-866-539-1710 ou visiter notre site www.RIDGID.com.

NO. DE MODÈLE _____ NO. DE SÉRIE _____



Información sobre servicio al consumidor:

Para piezas de repuesto o servicio, no devuelva este producto a la tienda. Comuníquese con el centro de servicio autorizado de productos RIDGID® de su preferencia. Asegúrese de proporcionar todos los datos pertinentes al llamar o al presentarse personalmente. Para obtener información sobre el centro de servicio autorizado más cercano a usted, le suplicamos llamar al 1-866-539-1710 o visitar nuestro sitio en la red mundial, en la dirección www.RIDGID.com.

NÚM. DE MODELO _____ NÚM. DE SERIE _____

ONE WORLD TECHNOLOGIES, INC.

P.O. Box 1427

Anderson, SC 29622 USA

1-866-539-1710 ■ www.RIDGID.com

RIDGID is a registered trademark of RIDGID, Inc., used under license.

991000882
3-8-18 (REV:05)

REPAIR SHEET / Feuille de réparation / Listas de piezas de repuesto

BRAND / MARQUE / MARCA


RIDGID

MODEL NO. / NUM. DE MODÈLE / NUM. DE MODELO

R860443

DESCRIPTION / DESCRIPTION / DESCRIPCIÓN

18 Volt Compact Router
Toupie compacte 18 V
Tupi compacto de 18 V

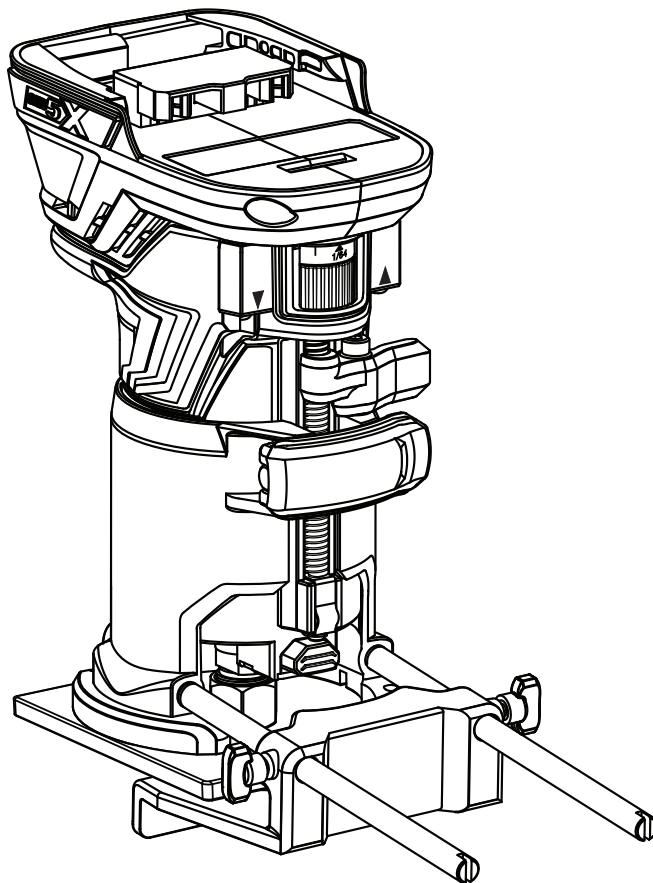

TTI CONSUMER POWER TOOLS, INC.


P.O. Box 1427, Anderson, SC 29622 ■ 1-866-539-1710 ■ powertools.RIDGID.com

6-26-23 (Rev:06)

The model number and manufacturing location will be found on a label attached to your product. Always mention this information in all communications regarding this product and when ordering parts.

Le numéro de modèle et lieu de fabrication se trouve sur une étiquette fixée sur votre produit. Mentionner toujours ces informations dans toute correspondance concernant ce produit ou lors de la commande de pièces détachées.

El número de modelo y lugar de fabricación se encuentra en una etiqueta adherida a su producto. Siempre mencione esta información en toda la correspondencia relacionada con este producto o al pedir piezas para repararla.

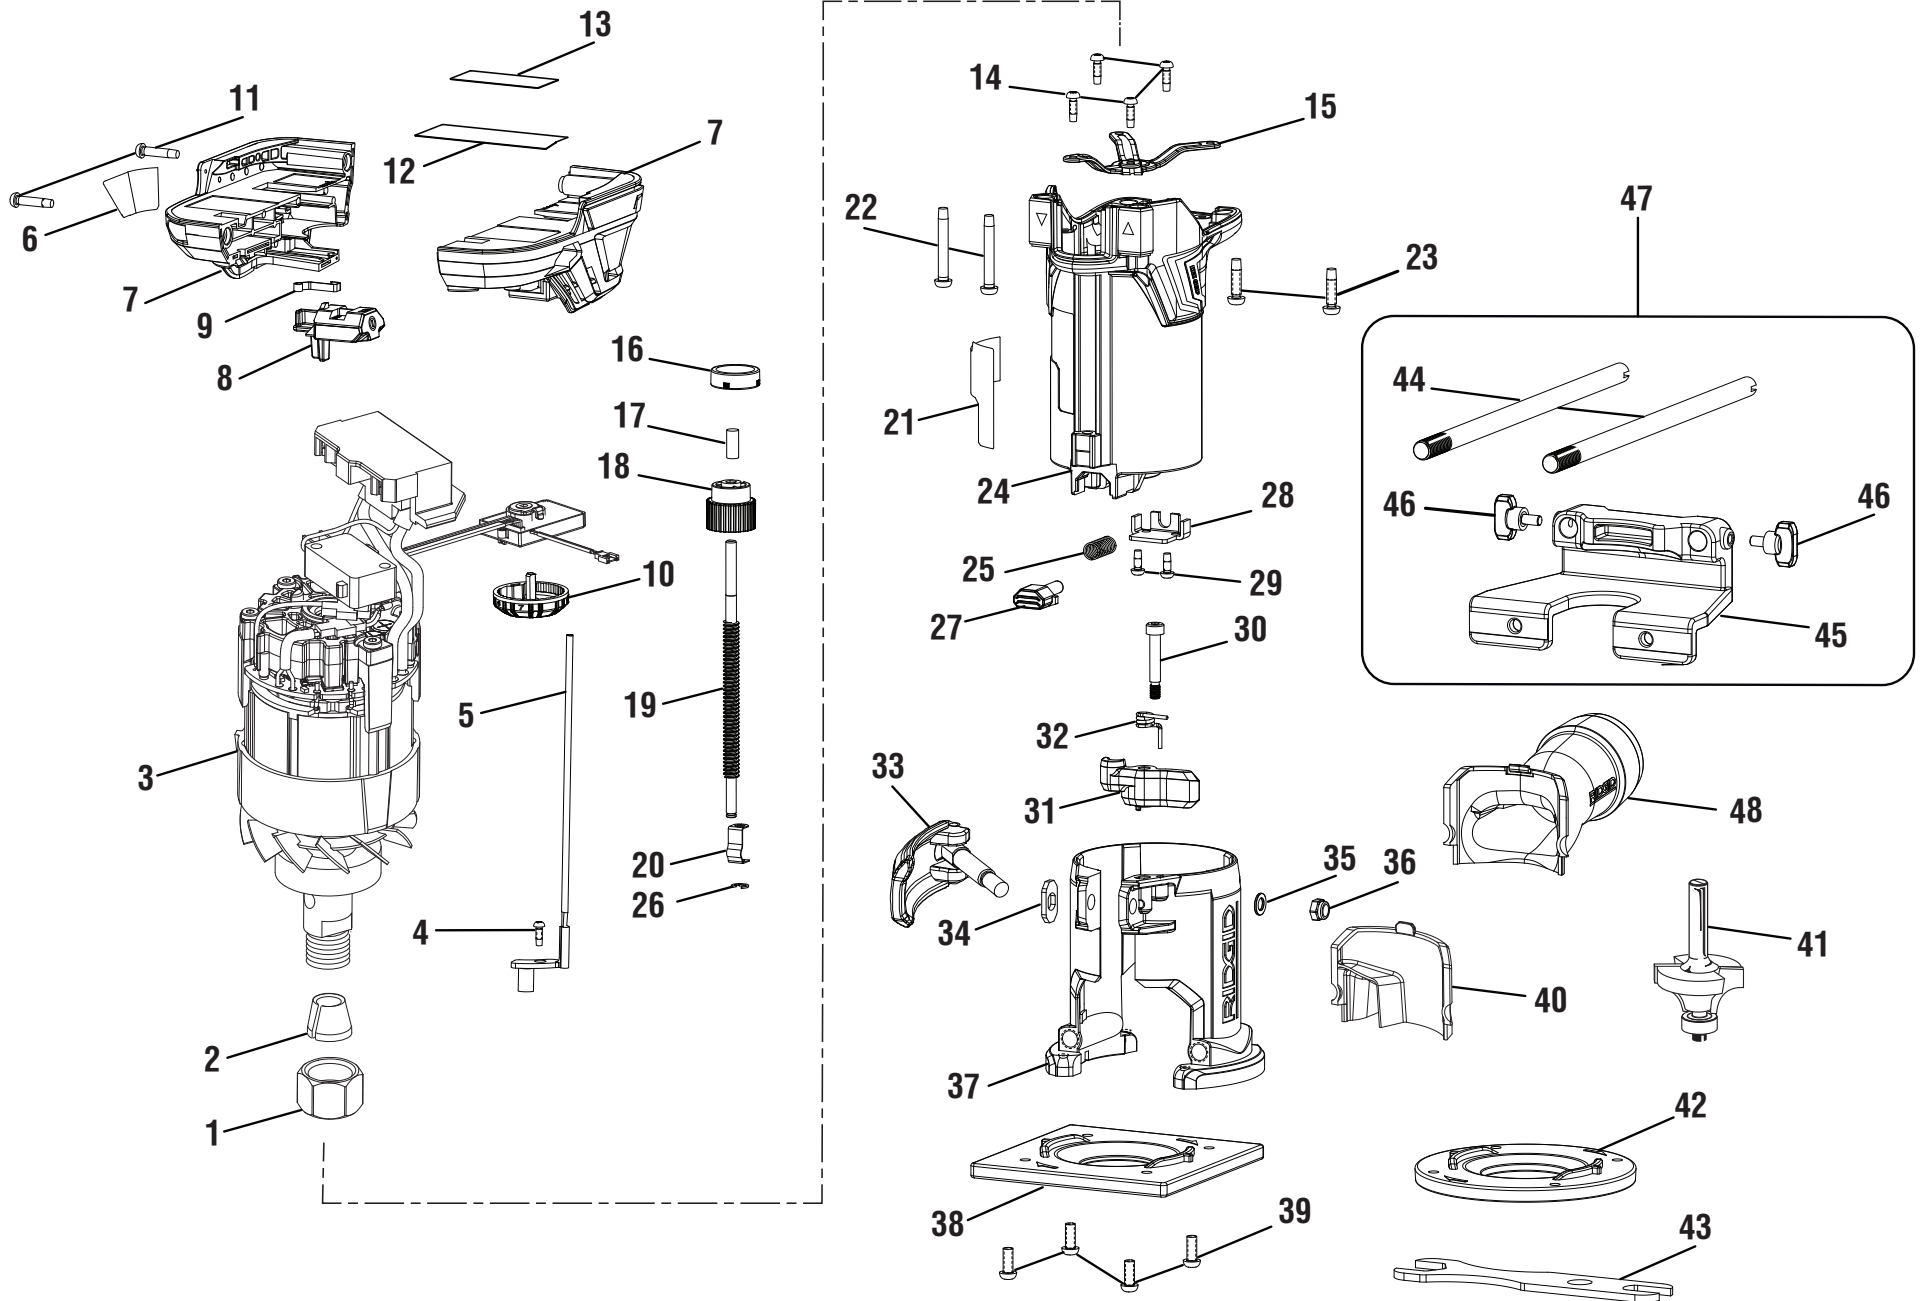

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS

KEY NO. NO. DE RÉF. NÚM. REF.	PART NO. NO. DE PIÈCE NÚM. PIEZA	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY. QTÉ. CANT.
1	671361001	Collet Nut	Écrou de douille	Tuerca del portaherramientas	1
2	671362001	Collet	Douille	Portaherramientas	1
3	CN- 206563002	Motor, Switch & Circuit Board Assembly	Ensemble de carte de circuit imprimé avec moteur et commutateur	Conjunto de la placa de circuitos con motor e interruptor	1
	VN- 206812002	Motor, Switch & Circuit Board Assembly	Ensemble de carte de circuit imprimé avec moteur et commutateur	Conjunto de la placa de circuitos con motor e interruptor	1
4	660201003	Screw (M2.6 x 8 Mm, Pan Hd.)	Vis (M2,6 x 8mm, tête ronde)	Tornillo (M2,6 x 8mm, cabeza de botón)	1
5	CN- 280815001	Led Assembly	Ensemble de LED	Conjunto de diodo	1
	VN- 280815007	Led Assembly	Ensemble de LED	Conjunto de diodo	1
6	941120212	Warning Label	Étiquette d'avertissement	Etiqueta de advertencia	1
7	204359002	Top Cover Assembly (Inc. Key Nos. 6 & 12-13)	Ensemble du dessus de couvercle (incl. pièces no. 6 & 12-13)	Conjunto del cubierta superior (incl. pzas. núms. 6 y 12-13)	1
8	531856001	Slide Switch Button	Glisse de interrupteur	Botón de deslice el interruptor	1
9	671845002	Detent Spring	Ressort de détente	Resorte del trinquete	1
10	340277004	Speed Control Assembly	Ensemble de commande d'accélérateur	Conjunto del control de velocidad	1
11	660031011	Screw (M3.5 x 16 mm, T10 Torx Pan Hd.)	Vis (M3,5 x 16 mm, tête bombée torx T10)	Tornillo (M3,5 x 16 mm, cabeza tronc. torx T10)	2
12	941120224	Warning Label (English/French)	Étiquette d'avertissement (ENG/FR)	Etiqueta de advertencia (ENG/FR)	1
13	941120225	Warning Label (Spanish)	Étiquette d'avertissement(ESP)	Etiqueta de advertencia (ESP)	1
14	660230011	Screw (M3 x 10 mm, T10 Torx Pan Hd.)	Vis (M3 x 10 mm, tête bombée torx T10)	Tornillo (M3 x 10 mm, cabeza tronc. torx T10)	4
15	658534001	Retainer Strap	Courroie de retenue	Correa de retención	1
16	340028001	Zero Reset Ring	Bouchon en caoutchouc	Tapón de caucho	1
17	570334001	Rubber Plug	Bouchon de caoutchouc	Tapón de goma	1
18	519238001	Micro Depth Adjustment Knob	Bouton de réglage de micro la profondeur	Microinterruptor perilla de ajuste de la profundidad	1
19	692257001	Height Adjust Rod	Barre de réglage de hauteur	Palanca de ajuste la barra	1
20	632954001	Base Retaining Clip	Clip de retenue de base	Abrazadera de retención de la base	1
21	CN- 941122193	Data Label	Étiquette de données	Etiqueta de datos	1
	VN- 941122867	Data Label	Étiquette de données	Etiqueta de datos	1
22	660422010	Screw (M4 x 30 mm, T20 Torx Pan Hd.)	Vis (M4 x 30 mm, tête bombée torx T20)	Tornillo (M4 x 30 mm, cabeza tronc. torx T20)	2
23	660024044	Screw (M4 x 16 mm, T20 Torx Pan Hd.)	Vis (M4 x 16 mm, tête bombée torx T20)	Tornillo (M4 x 16 mm, cabeza tronc. torx T20)	2
24	204360002	Motor Housing (Inc. Key No. 21)	Carter du moteur (incl. pièce no. 21)	Alojamiento del motor (incl. pza. núms. 21)	1
25	692272001	Compression Spring	Ressort de compression	Resorte de compresión	1

If a key number has multiple part numbers, please order the part that corresponds with the country of origin shown on the product's data label.

CN = China VN = Vietnam

Si un numéro clé a plusieurs numéros de pièce, commander la pièce qui correspond au pays d'origine indiqué sur l'étiquette des données du produit.

CN = China VN = Vietnam

Si una número de referencia tiene varios números de pieza, solicite la pieza que corresponda con el país de origen que se muestra en la etiqueta de datos del producto.

CN = China VN = Vietnam

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS (cont.)

KEY NO. NO. DE RÉF. NÚM. REF.	PART NO. NO. DE PIÈCE NÚM. PIEZA	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY. QTÉ. CANT.
26	671826001	Retaining Ring (E-Ring)	Bague de retenue (anneau en E)	Anillo de retén (anillo en E)	1
27	519264001	Spindle Lock Button	Blocage de la broche	Botón de bloqueo del husillo	1
28	632956001	Cover Plate	Couverture	Placa tapa	1
29	660203027	Screw (M3 x 8 Mm, Pan Hd.)	Vis (M3 x 8 mm, tête ronde)	Tornillo (M3 x 8 mm, cabeza troncocónica)	2
30	621061003	Shoulder Screw	Vis à épaulement	Tornillo de resalto	1
31	610975005	Quick Release Lever	Palanca de afloje rápido	Palanca de afloje rápido	1
32	692271001	Torsion Spring	Ressort de torsion	Resorte de torsión	1
33	200274007	Latch Assembly	Ensemble de loquet	Conjunto del pestillo	1
34	634001002	Plate	Plaque	Placa	1
35	670060001	Washer (OD10 x ID5.1 x 1t)	Rondelle (OD10 x ID5,1 x 1t)	Arandela (OD10 x ID5,1 x 1t)	1
36	670974002	Lock Nut (M5)	Écrou de blocage (M5)	Contratuercas (M5)	1
37	204812002	Base Assembly (Inc. Key Nos. 30-32)	Ensemble de semelle (incl. pièces no. 30-32)	Conjunto del base (incl. pzas. núms. 30-32)	1
38	519234001	Subbase (Square)	Sous-base (carrée)	Subbase (escuadra)	1
39	660212002	Screw (M4 x 10 mm, Button Hd.)	Vis (M4 x 10 mm, tête ronde)	Tornillo (M4 x 10 mm, cabeza de botón)	4
40	519412001	Dust Chute	Éjecteur de sciure	Vertedero de aserrín	1
41	612922001	Cutter (1/4 in. Round Over)	Coupe (1/4 po. ronde)	Cortes (1/4 pulg. redonda)	1
42	519233001	Subbase (Round)	Sous-base (ronde)	Subbase (redonda)	1
43	637753001	Wrench	Clé	llave	1
44	671499001	Edge Guide Rod	Barre de guide de bordures	Barra de guía de bordes	2
45	640795001	Straight Edge Guide	Guide de chant	Guía recta de bordes	1
46	512777001	Edge Guide Knob	Bouton de guide de bordures	Juego de guía de bordes	2
47	204358001	Edge Guide Assembly (Inc. Key Nos. 44-46)	Ensemble guide de bordures (incl. pièces no. 44-46)	Conjunto del guía de bordes (incl. pzas. núms. 44-46)	1
48	CN- 537239001	Vacuum adaptor	Adaptateur d'aspiration	Aditamento de succión	1
	VN- 537239003	Vacuum adaptor	Adaptateur d'aspiration	Aditamento de succión	1
		Not Shown:	Pas illustré :	No se muestra:	
	CN- 903209087	Tool Bag	Sac à outils	Bolsa de herramientas	
	VN- 903211040	Tool Bag	Sac à outils	Bolsa de herramientas	
	995000788	Operator's Manual (CN – 961153026) (VN – 961153284)	Manuel d'utilisation (CN – 961153026) (VN – 961153284)	Manual del operador (CN – 961153026) (VN – 961153284)	

If a key number has multiple part numbers, please order the part that corresponds with the country of origin shown on the product's data label.


CN = China VN = Vietnam

Si un numéro clé a plusieurs numéros de pièce, commander la pièce qui correspond au pays d'origine indiqué sur l'étiquette des données du produit.

CN = China VN = Vietnam


Si una número de referencia tiene varios números de pieza, solicite la pieza que corresponda con el país de origen que se muestra en la etiqueta de datos del producto.

CN = China VN = Vietnam

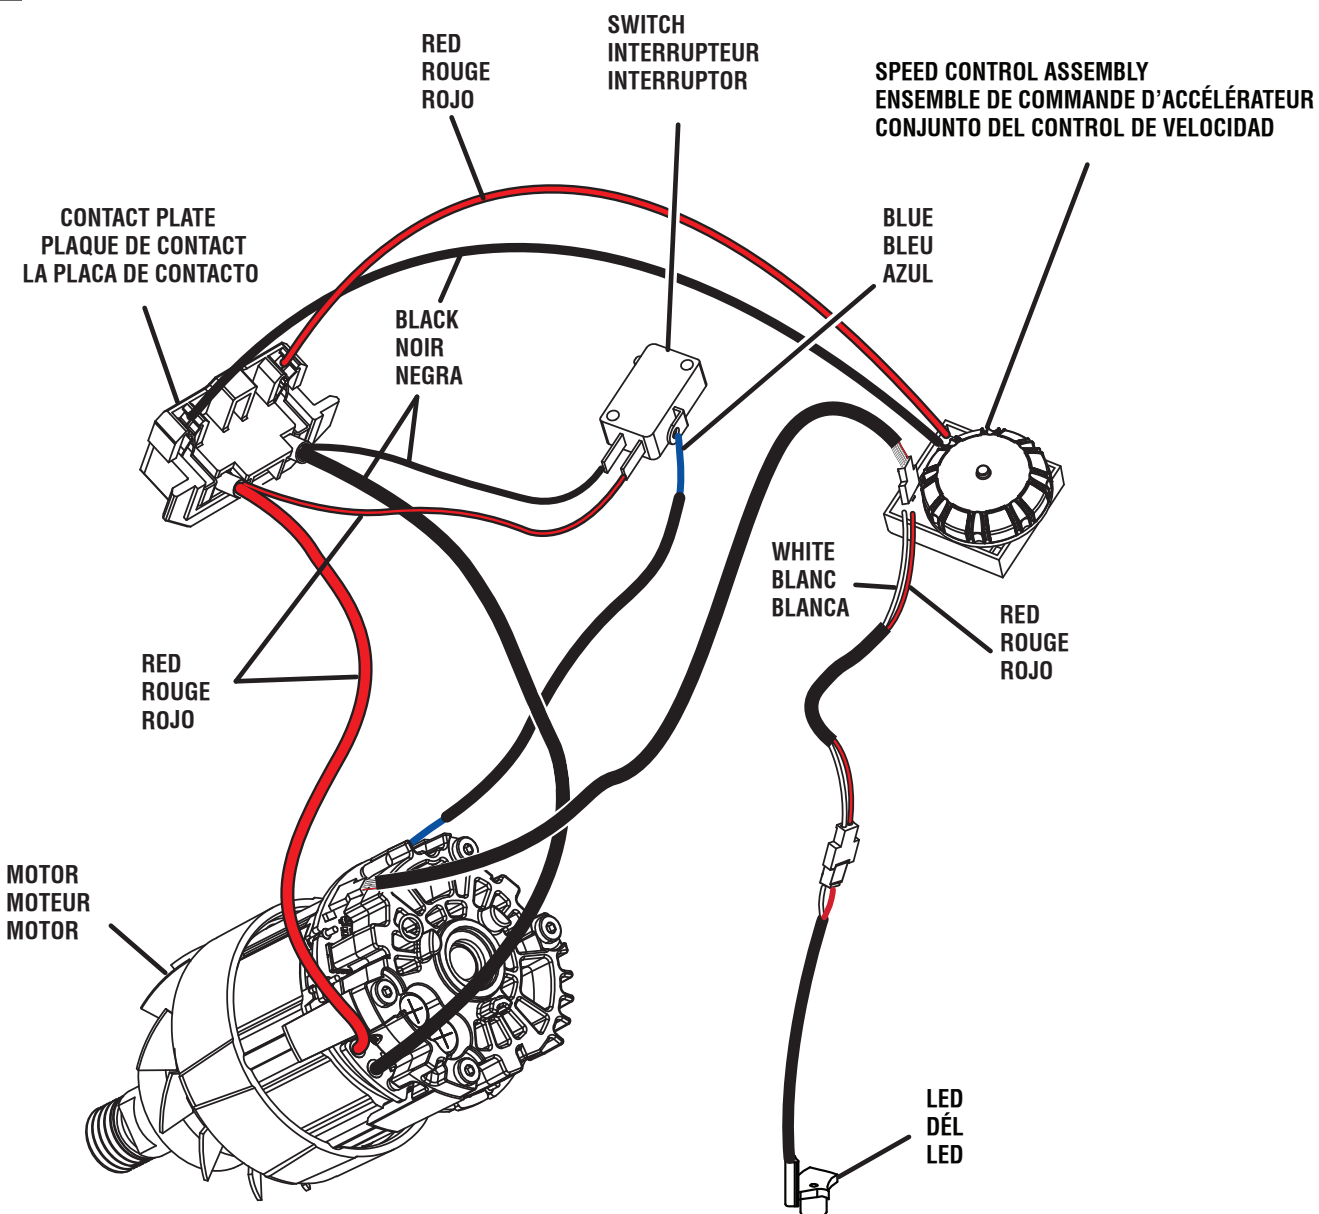

WIRING DIAGRAM / SCHÉMA DE CÂBLAGE / DIAGRAMA DE CABLEADO

RIDGID® R86044

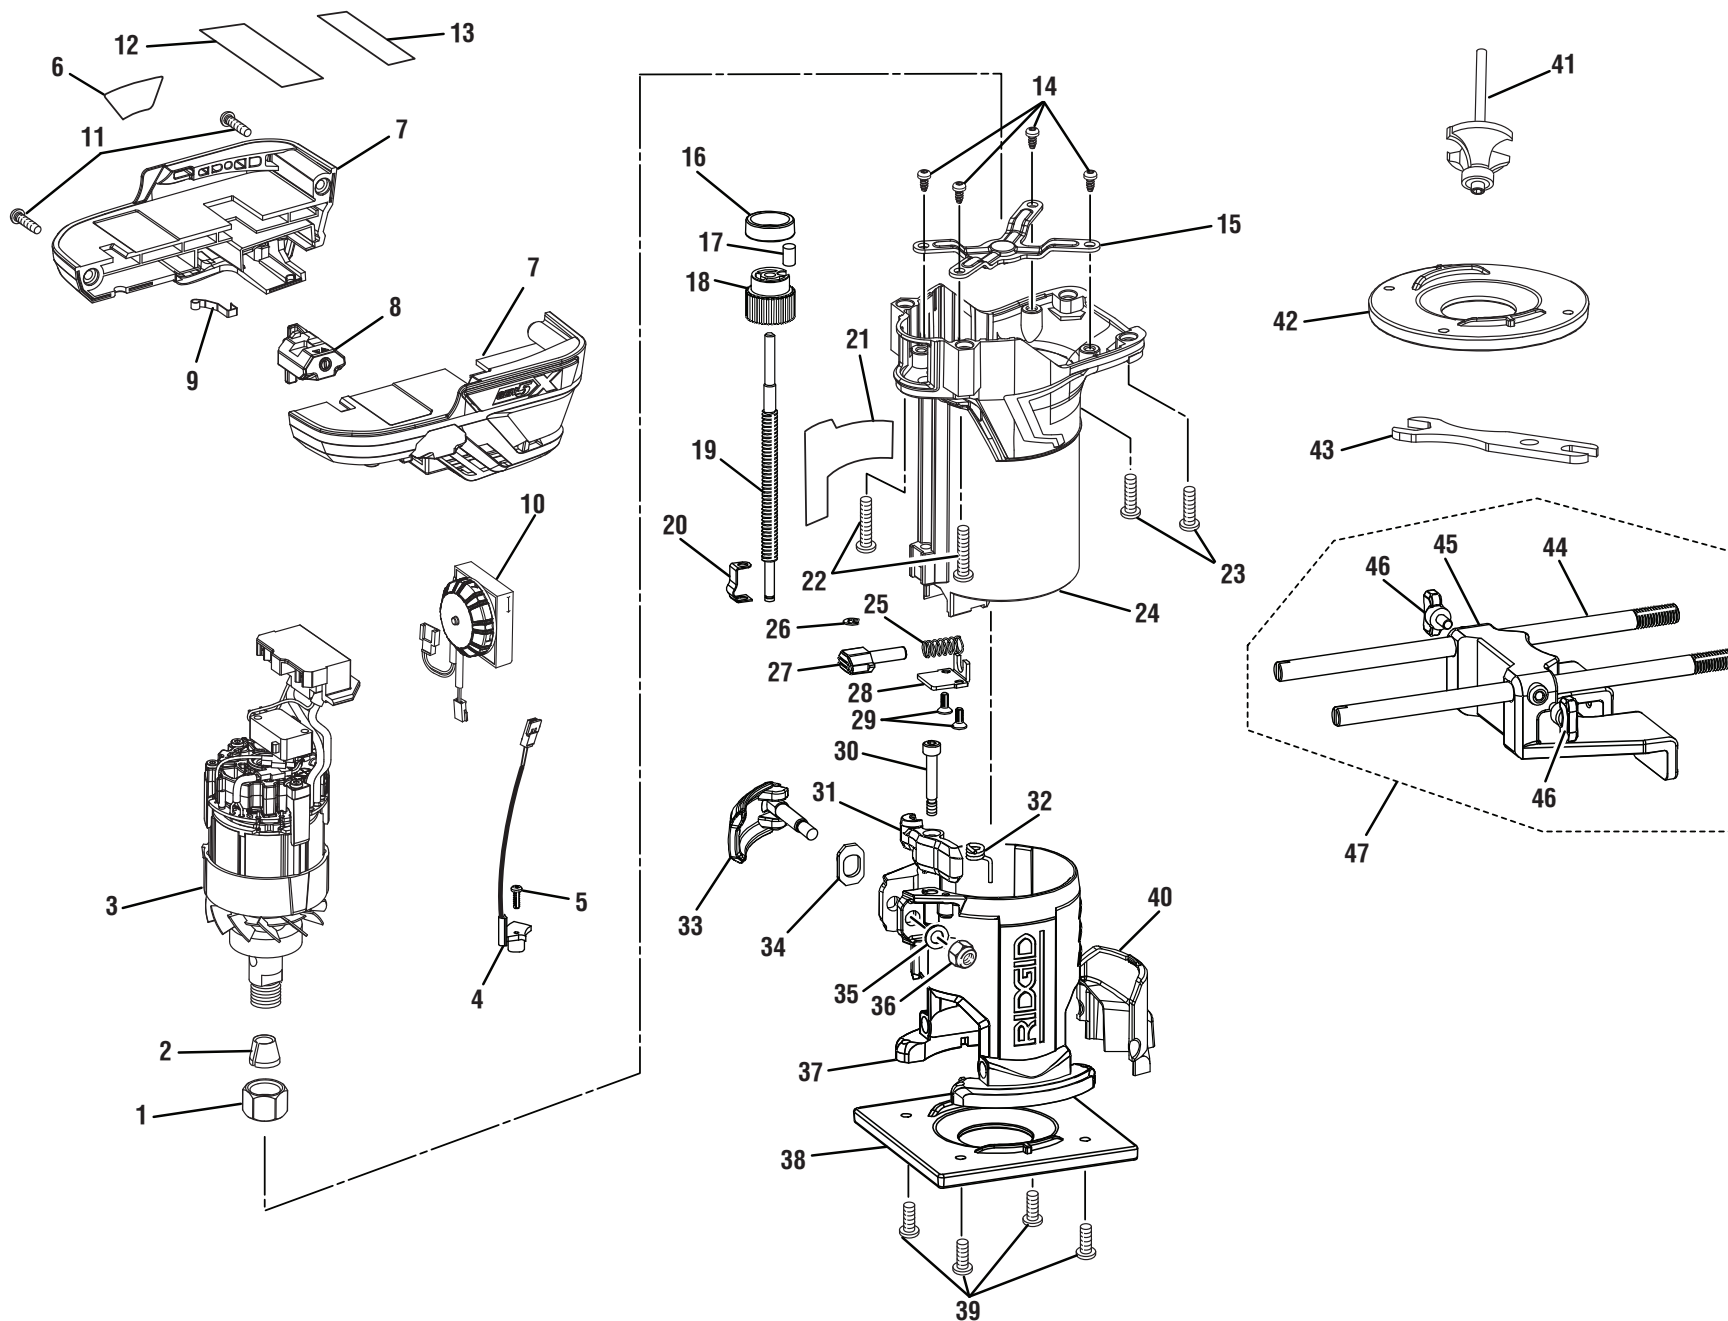




R86044

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY	KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	671361001	Collet Nut.....	1	27	519264001	Spindle Lock Button	1
2	671362001	Collet.....	1	28	632956001	Cover Plate	1
3	206563001	Motor Assembly.....	1	29	660203027	Screw (M3 x 8 Mm, Pan Hd.).....	2
4	291711001	Led Assembly	1	30	621061003	Shoulder Screw	1
5	660201003	Screw (M2.6 x 8 Mm, Pan Hd.).....	1	31	610975002	Quick Release Lever.....	1
6	941120212	Warning Label.....	1	32	692271001	Torsion Spring.....	1
7	204359001	Top Cover Assembly (Inc. Key Nos. 6 & 12-13).....	1	33	200274007	Latch Assembly	1
8	531856001	Slide Switch Button	1	34	634001002	Plate.....	1
9	671845002	Detent Spring.....	1	35	670060001	Washer (OD10 x ID5.1 x 1t)	1
10	204362001	Speed Control Assembly (Inc. Key No. 4)	1	36	670974002	Lock Nut (M5)	1
11	660024049	Screw (M4 x 16 mm, T15 Torx Pan Hd.).....	2	37	200234019	Base Assembly (Inc. Key Nos. 30-32)	1
12	941120224	Warning Label (English/French)	1	38	519234001	Subbase (Square)	1
13	941120225	Warning Label (Spanish).....	1	39	6621202	Screw (M4 x 10 mm, Button Hd.)	4
14	660230011	Screw (M3 x 10 mm, T10 Torx Pan Hd.).....	4	40	519412001	Dust Chute.....	1
15	637700001	Retainer Strap.....	1	41	612922001	Cutter (1/4 in.).....	1
16	340028001	Zero Reset Ring	1	42	519233001	Subbase (Round)	1
17	570334001	Rubber Plug.....	1	43	637753001	Wrench.....	1
18	519238001	Micro Depth Adjustment Knob	1	44	671499001	Edge Guide Rod	2
19	692257001	Height Adjust Rod.....	1	45	640795001	Straight Edge Guide	1
20	632954001	Base Retaining Clip	1	46	512777001	Edge Guide Knob	2
21	941121751	Data Label.....	1	47	204358001	Edge Guide Assembly (Inc. Key Nos. 44-46).....	1
22	660422010	Screw (M4 x 30 mm, T20 Torx Pan Hd.).....	2	Not Shown:			
23	660024044	Screw (M4 x 16 mm, T20 Torx Pan Hd.).....	2	903209087	Tool Bag		
24	204360001	Motor Housing (Inc. Key No. 21)	1	991000882	Operator's Manual (961152616)		
25	692272001	Compression Spring.....	1	(Rev:03)			
26	671826001	Retaining Ring (E-Ring).....	1	3-29-18			

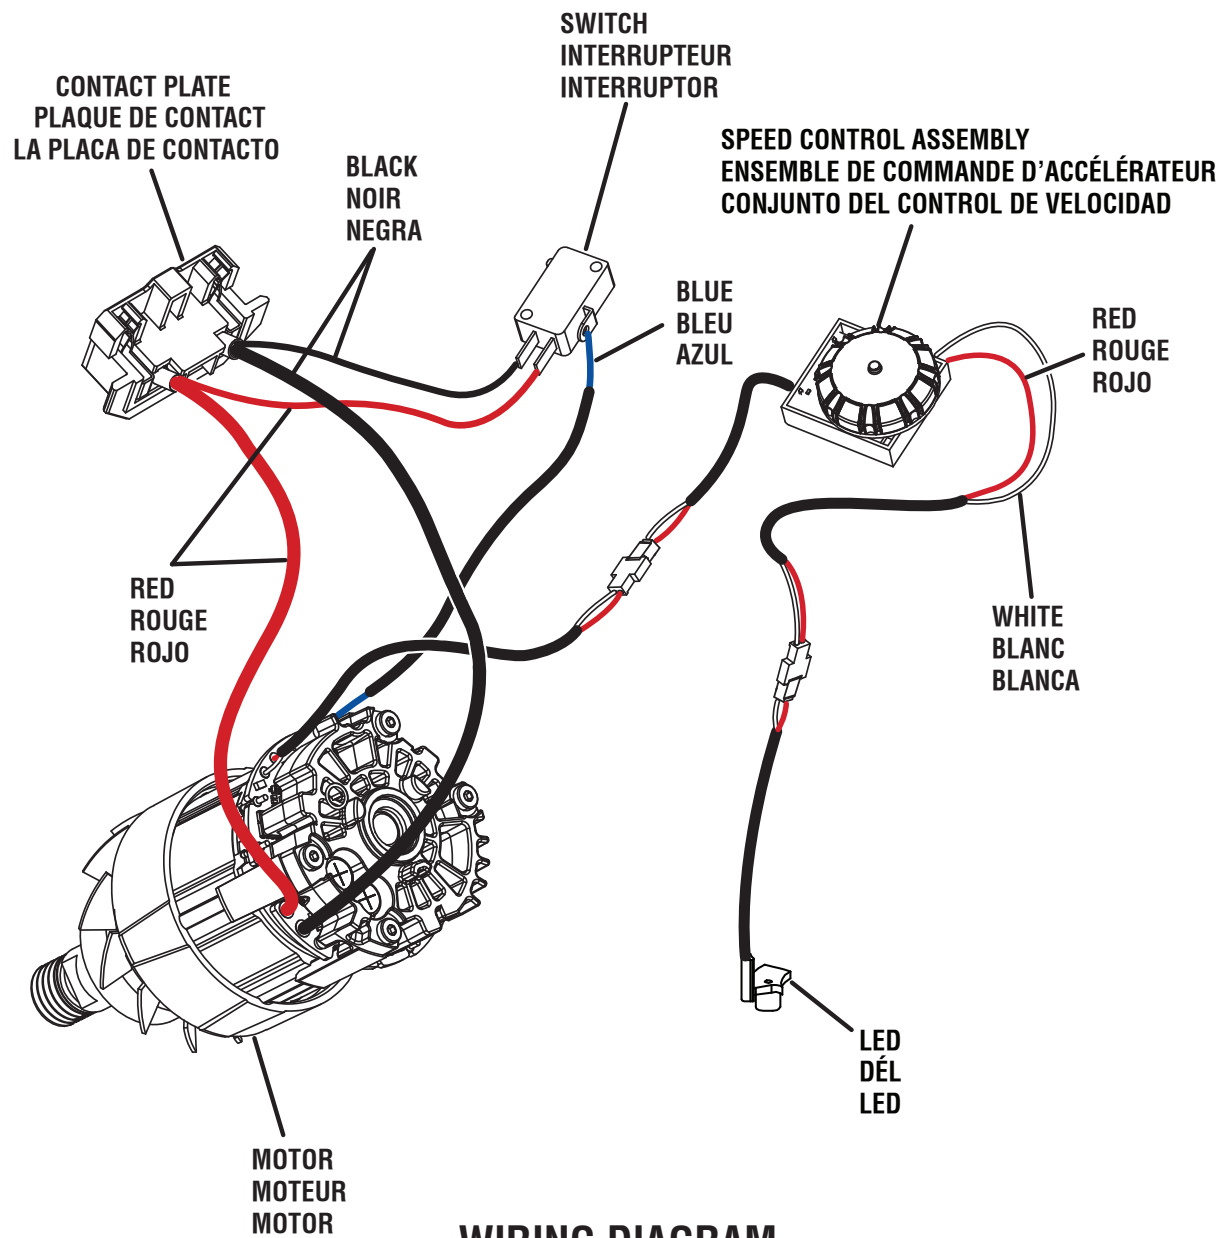

WIRING DIAGRAM
SCHÉMA DE CÂBLAGE
DIAGRAMA DE CABLEADO