




OPERATOR'S MANUAL

18 GAUGE BRAD NAILER R213BNE

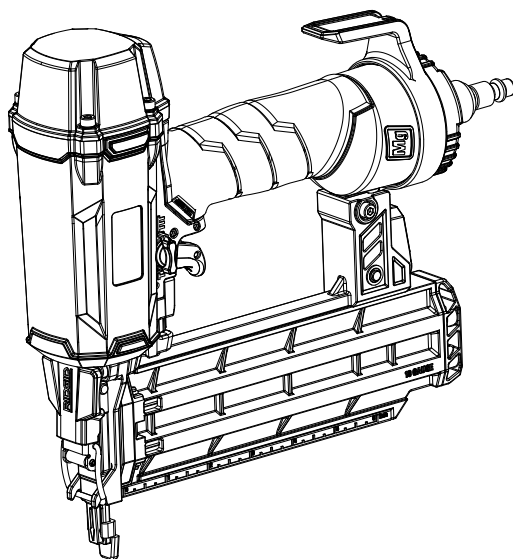

To register your RIDGID
product, please visit:
<http://register.RIDGID.com>

TABLE OF CONTENTS

■ General Safety Rules	2
■ Specific Safety Rules	3-4
■ Symbols.....	5
■ Glossary of Terms.....	6
■ Features.....	7
■ Assembly	8
■ Operation.....	8-11
■ Maintenance.....	11-12
■ Accessories	13
■ Troubleshooting.....	13
■ Illustrations	14-15
■ Parts Ordering and Service	Back page

⚠ WARNING:

To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

**SAVE THIS MANUAL FOR
FUTURE REFERENCE**

GENERAL SAFETY RULES



DANGER:

READ AND UNDERSTAND TOOL LABELS AND MANUAL. Failure to follow warnings could result in DEATH or SERIOUS INJURY.

SAVE THESE INSTRUCTIONS

WORK AREA

- **Keep your work area clean and well lit.** Cluttered benches and dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep bystanders, children, and visitors away while operating a power tool.** Distractions can cause you to lose control.

PERSONAL SAFETY

- **Eye protection which conforms to ANSI specifications and provides protection against flying particles both from the FRONT and SIDE should ALWAYS be worn by the operator and others in the work area when loading, operating or servicing this tool.** Eye protection is required to guard against flying fasteners and debris, which could cause severe eye injury.
- **The employer and/or user must ensure that proper eye protection is worn.** We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses that provide protection against flying particles both from the front and side. Always wear eye protection with side shields marked to comply with ANSI Z87.1.
- **Additional safety protection will be required in some environments.** For example, the working area may include exposure to noise level which can lead to hearing damage. The employer and user must ensure that any necessary hearing protection is provided and used by the operator and others in the work area. Some environments will require the use of head protection equipment. When required, the employer and user must ensure that head protection conforming to ANSI Z89.1-1997 is used.
- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- **Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts.** Loose clothes, jewelry, or long hair can be caught in moving parts.

- **Keep fingers away from trigger when not driving fasteners to avoid accidental firing.**
- **Do not overreach. Keep proper footing and balance at all times.** Proper footing and balance enables better control of the tool in unexpected situations.
- **Use safety equipment. Always wear eye protection.** Dust mask, nonskid safety shoes, hard hat, or hearing protection must be used for appropriate conditions.
- **Do not use on a ladder or unstable support.** Stable footing on a solid surface enables better control of the tool in unexpected situations.

TOOL USE AND CARE

- **Do not force tool. Use the correct tool for your application.** The correct tool will do the job better and safer at the rate for which it is designed.
- **Do not use tool if trigger does not actuate properly.** Any tool that cannot be controlled with the trigger is dangerous and must be repaired.
- **Check operation of the workpiece contact mechanism frequently.** Do not use the tool if the workpiece contact mechanism is not working correctly as accidental driving of a fastener may result. Do not interfere with the proper operation of the workpiece contact mechanism.
- **Store idle tools out of the reach of children and other untrained persons.** Tools are dangerous in the hands of untrained users.
- **Maintain tools with care.** Follow maintenance instructions. Properly maintained tools are easier to control.
- **Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tool's operation. If damaged, have the tool serviced before using.** Many accidents are caused by poorly maintained tools.
- **Use only fasteners that are recommended for your model.**
- **Keep the tool and its handle dry, clean and free from oil and grease.** Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any strong solvents to clean your tool. Following this rule will reduce the risk of loss of control and deterioration of the enclosure plastic.

SERVICE

- **Tool service must be performed only by qualified repair personnel.** Service or maintenance performed by unqualified personnel may result in a risk of injury.
- **When servicing a tool, use only identical replacement parts. Follow instructions in the Maintenance section of this manual.** Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of injury.

SPECIFIC SAFETY RULES

- **Know your pneumatic tool.** Read operator's manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this tool. Following this rule will reduce the risk of electric shock, fire, or serious injury.
- **Always wear eye protection with side shields marked to comply with ANSI Z87.1.** Failure to do so could result in objects being thrown into your eyes resulting in possible serious injury.
- **Protect your lungs.** Wear a face or dust mask if the operation is dusty. Following this rule will reduce the risk of serious personal injury.
- **Protect your hearing.** Wear hearing protection during extended periods of operation. Following this rule will reduce the risk of serious personal injury.
- **Make sure the hose is free of obstructions or snags.** Entangled or snarled hoses can cause loss of balance or footing and may become damaged.
- **Use the tool only for its intended use.** Do not discharge fasteners into open air.
- **Use the pneumatic tool only for the purpose for which it was designed.**
- **Use only the fasteners recommended for this tool.** Use of the wrong fasteners could result in poor fastener feeding, jammed fasteners, and nails leaving the tool at erratic angles. If fasteners are not feeding smoothly and properly, discontinue their use immediately. Jammed and improperly feeding fasteners could result in serious personal injury.
- **Never use this tool in a manner that could cause a fastener to be directed toward anything other than the workpiece.**
- **Do not use the tool as a hammer.**
- **Always carry the tool by the handle.** Never carry the tool by the air hose.
- **Do not alter or modify this tool from the original design or function without approval from the manufacturer.**
- **Always be aware that misuse and improper handling of this tool can cause injury to yourself and others.**
- **Never clamp or tape the trigger or workpiece contact in an actuated position.**
- **Never leave a tool unattended with the air hose attached.**
- **Do not operate this tool if it does not contain a legible warning label.**
- **Do not continue to use a tool that leaks air or does not function properly.**

OPERATION

- **Always assume that the tool contains fasteners.**
- **Do not carry the tool from place to place holding the trigger.** Accidental discharge could result.
- **Always handle the tool with care:**
 - Respect the tool as a working implement.
 - Never engage in horseplay.
 - Never pull the trigger unless nose is directed toward the work.
 - Keep others a safe distance from the tool while tool is in operation as accidental actuation may occur, possibly causing injury.
- **Choice of triggering method is important. Check manual for triggering options.**
- **Pneumatic tools are designed for single-hand use.** Do not hold the tool by the front of the magazine. Do not put hands, head, or other parts of your body near the bottom of the magazine where the nail exits the tool, as serious personal injury could result.
- **Do not point the tool toward yourself or anyone whether it contains fasteners or not.**
- **Do not actuate the tool unless you intend to drive a fastener into the workpiece.**
- **Always ensure that the workpiece contact is fully positioned above the workpiece.** Positioning the workpiece contact only partially above the workpiece could cause the fastener to miss the workpiece completely and result in serious personal injury.
- **Do not drive fasteners near edge of material.** The workpiece may split causing the fastener to ricochet, injuring you or a co-worker. Be aware that the nail may follow the grain of the wood, causing it to protrude unexpectedly from the side of the work material.
- **Keep hands and body parts clear of immediate work area.** Hold workpiece with clamps when necessary to keep hands and body out of potential harm. Be sure the workpiece is properly secured before pressing the nailer against the material. The workpiece contact may cause the work material to shift unexpectedly.
- **Keep face and body parts away from back of the tool cap when working in restricted areas.** Sudden recoil can result in impact to the body, especially when nailing into hard or dense material.
- **During normal use the tool will recoil immediately after driving a fastener. This is a normal function of the tool.** Do not attempt to prevent the recoil by holding the nailer against the work. Restriction to the recoil can result in a second fastener being driven from the nailer. Grip the handle firmly, let the tool do the work and do not place second hand on top of tool or near exhaust at any time. Failure to heed this warning can result in serious personal injury.

SPECIFIC SAFETY RULES

- Do not drive fasteners on top of other fasteners or with the tool at an overly steep angle as this may cause deflection of fasteners which could cause injury.
- Do not drive fasteners close to the edge of the workpiece as the wood may split, allowing the fastener to be deflected possibly causing injury.

AIR SUPPLY AND CONNECTIONS

- Do not use oxygen, combustible gases or bottled gases as a power source for this tool as tool will explode, possibly causing injury or death.
- Do not use with an air compressor which can potentially exceed 200 psi as tool may burst, possibly causing injury.
- The connector on the tool must not hold pressure when air supply is disconnected. If an incorrect fitting is used, the tool can remain charged with air after disconnecting and thus will be able to drive a fastener even after the air line is disconnected, possibly causing injury.

■ Always disconnect air supply:

- Before making adjustments
- When servicing the tool
- When clearing a jam
- When tool is not in use
- When moving to a different work area, as accidental actuation may occur, possibly causing injury.

LOADING TOOL

- Do not load the tool with fasteners when any one of the operating controls is activated.

When loading tool:

- Never place a hand or any part of body in fastener discharge area of tool.
- Never point tool at anyone.
- Do not pull the trigger or depress the workpiece contact as accidental actuation may occur, possibly causing injury.

SAVE THESE INSTRUCTIONS

- Refer to them frequently and use them to instruct others who may use this tool. If you loan someone this tool, loan them these instructions also.

SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a hazardous situation, that, if not avoided, may result in minor or moderate injury.
	NOTICE:	(Without Safety Alert Symbol) Indicates information considered important, but not related to a potential injury (e.g. messages relating to property damage).

Some of the following symbols may be used on this tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
	Safety Alert	Indicates a potential personal injury hazard
	Read The Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always wear eye protection with side shields marked to comply with ANSI Z87.1.
	Eye, Ear and Head Protection	Always wear eye protection with side shields marked to comply with ANSI Z87.1, along with hearing and head protection when needed.
	Keep Hands Away	Keep hands and body away from the discharge area of the tool.

GLOSSARY OF TERMS

Activate (operating controls)

To move an operating control so that it is in a position that allows the tool to be actuated or that satisfies one requirement for the tool to be actuated.

Actuate (tool)

To cause movement of the tool component(s) intended to drive a fastener.

Actuation system

The use of a trigger, workpiece contact, and/or other operating control, separately or in some combination or sequence, to actuate the tool.

- **Single sequential actuation**

An actuation system in which there is more than one operating control and the operating controls must be activated in a specific sequence to actuate the tool. Additional actuation can occur when a specific operating control, other than a workpiece contact, is released and re-activated.

- **Contact actuation**

An actuation system in which there is more than one operating control and the operating controls can be activated in any sequence to actuate the tool. Additional actuation can occur when any operating control is released and re-activated.

Air inlet port

In an air tool, the opening to which the compressed air supply is connected, usually by means of a threaded fitting.

Fastener

A staple, pin, brad, nail, or other fastening device which is designed and manufactured for use in the tools within the scope of this standard.

Jam

An obstruction in the feed or drive areas of the tool.

Maximum air pressure

The maximum allowable pressure of the compressed air, as specified by the manufacturer, for operating a tool.

Operating control

A control that separately, or as part of an actuation system, can cause the actuation of a tool.

Trigger

A tool operating control activated by a tool operator's fingers.

Workpiece

The intended object into which a fastener is to be driven by a tool.

Workpiece contact

An operating control element or assembly on the tool intended to be activated by the material to be fastened.

FEATURES

PRODUCT SPECIFICATIONS

Operating Pressure..... 70-120 psi
Fastener Type 18 gauge brad nails
Fastener Range 5/8 in. to 2-1/8 in.
Magazine Capacity..... 105 brad nails
Air Consumption..... 0.05 ft³/cycle at 100 psi

Air Inlet 1/4 in. NPT
Weighted sound impulse power level..... 83 dBA
Emission sound pressure level..... 78.5 dBA
Vibration 2.57 m/s²

ASSEMBLY

WARNING:

Do not use this product if it is not completely assembled or if any parts appear to be missing or damaged. Use of a product that is not properly and completely assembled or with damaged or missing parts could result in serious personal injury.

WARNING:

Do not attempt to modify this product or create accessories or attachments not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

If any parts are damaged or missing, please call 1-866-539-1710 for assistance.

OPERATION



DANGER:

Do not use oxygen, combustible gases or bottled gases as a power source for this tool. The tool will explode and cause death or serious injury.



WARNING:

Do not allow familiarity with tools to make you careless. Remember that a careless fraction of a second is sufficient to inflict severe injury.



WARNING:

Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes resulting in possible serious injury.



WARNING:

Disconnect the tool from the air supply and remove nails from the tool before leaving the work area, moving the tool to another location, or handing the tool to another person. Failure to do so could result in serious personal injury.

APPLICATIONS

You may use this tool for the purposes listed below:

- Finish and Trim (interior and exterior)
- Decorative Trim
- Book Cases
- Baseboard
- Cabinets
- Case Backs
- Drawers
- Molding
- Mirror and Picture Frames
- Paneling
- Shoe & Base Moldings
- Staircases
- Upholstery Trim Panels
- Wainscoting
- Window Beading
- Chair Rail
- Furniture Frames
- Lattice Strip Molding
- Nailable Plastic Parts
- Crafts



WARNING:

Always wear eye protection. Eye protection does not fit all operators in the same way. Make sure the eye protection chosen has side shields or provides protection from flying debris both from the front and sides.

PREPARING THE TOOL FOR USE

This is an oil-free tool, therefore lubrication is not required. However, the occasional addition of air tool lubrication into the air fitting on the tool will not adversely affect performance or harm the tool.

Before connecting the tool, check the air compressor gauge to be sure it is functioning within the proper range of 70-120 psi.

NO-MAR PAD

See Figure 1, page 14.

The no-mar pad attached to the workpiece contact helps prevent marring and denting when working with softer woods.



WARNING:

Disconnect the tool from the air supply and remove nails from the tool before removing or replacing the no-mar pad. Failure to do so could result in serious personal injury.

The no-mar pad can be removed by pulling it down and away from the workpiece contact. To replace the no-mar pad, fit it into place over the workpiece contact and push up at the back to reseal.

On-board storage for the no-mar pad is located on the magazine of the tool. An extra no-mar pad is provided in the on-board storage area..

ACCU-DRIVE TIP DESIGN

See Figure 2, page 14.

The ACCU-Drive arrows on the nose of the tool are reference points that indicate the location and angle that fasteners will enter the workpiece. Fasteners are driven at approximately the same angle and location as the arrows.

ADJUSTING THE EXHAUST

See Figure 3, page 14.

The adjustable exhaust on the end cap of the tool allows the operator to direct the exhaust according to operator preference. To adjust, turn the exhaust cap in the desired direction.

OPERATION

CONNECTING THE TOOL TO AN AIR SUPPLY

See Figure 4, page 14.

DANGER:

Do not use oxygen, combustible gases or bottled gases as a power source for this tool. The tool will explode and cause death or serious injury.

WARNING:

Disconnect the tool from the air supply and remove nails from the tool before leaving the work area, moving the tool to another location, or handing the tool to another person. Failure to do so could result in serious personal injury.

This tool is designed to operate on clean, dry compressed air at regulated pressures between 70 and 120 psi . The correct air pressure is the lowest pressure that will do the job.

NOTE: Air pressure that is higher than 120 psi may damage the tool.

The tool and air hose must have a hose coupling that allows all pressure to be released from the tool when the coupling is disconnected.

WARNING:

Always use a coupling that discharges all the compressed air in the tool at the time the fitting or hose coupling is disconnected. Using a coupling that does not discharge the compressed air could cause unintended operation and serious personal injury.

WARNING:

Do not climb rigging or scaffolding while carrying a tool that is connected to an air hose. Doing so could result in serious personal injury.

Connect the tool to the air supply with a 1/4 in. female quick connector.

LOADING THE TOOL WITH NAILS

See Figures 5 - 6, pages 14 and 15.

WARNING:

The tool's driving mechanism may cycle when the tool is first connected to the air supply. Always connect the tool to a pressurized air supply before loading nails to prevent injury from unintended cycling. Always make sure the tool's magazine is empty at the beginning of each work session, before connecting to an air supply.

WARNING:

Keep the tool pointed away from yourself and others when loading nails. Failure to do so could result in possible serious personal injury.

- Connect the tool to the air supply.
 - With the nose of the tool pointed away from you, depress the latch located at the rear of the magazine and slide the magazine open.
 - Feed a strip of brad nails into the magazine. Be sure the nail heads are pointed upward, the tips are pointed downward, and the tips rest against the bottom of the magazine.
 - Push the magazine cover closed until it securely snaps into place.
-

WARNING:

Use only the nails recommended for use with this tool (refer to the Fastener Guide). The use of any other nails can result in tool malfunction, leading to serious injuries.

WARNING:

Never load nails with the workpiece contact or trigger activated. Doing so could result in possible serious personal injury.

OPERATION

USING THE SELECTABLE TRIGGER

See Figures 7 - 9, page 15.

WARNING:

Never wedge or hold back the workpiece contact mechanism during operation of the tool. Doing so could result in possible serious injury.

This tool is shipped from the factory with a selectable trigger set in the **Single Sequential Actuation** mode. The selectable trigger can also be set for **Contact Actuation** mode.

SINGLE SEQUENTIAL ACTUATION MODE

Single sequential actuation provides the most accurate fastener placement.

- Disconnect the tool from the air supply and remove nails from the tool.
- Depress the actuation mode button.
- Rotate the selector to position (T).
- Release the actuation mode button.

NOTE: The actuation mode selector is spring loaded and held in position by locking tab to prevent movement during operation.

WARNING:

The nailer will not function properly if the selector is not securely seated in either position (T) or (TTT). Always assure the selector is seated properly to avoid an unexpected fastener discharge and possible serious personal injury.

- Reconnect the tool to the air supply and reload the tool with nails.
- Grip the tool firmly to maintain control. Position the workpiece contact onto the work surface.
- Push the tool against the work surface to depress the workpiece contact.
- Squeeze the trigger to drive a fastener.
- Allow the tool to recoil away from the work surface as the fastener is driven.
- Always remove your finger from the trigger when the desired number of nails has been driven.

CONTACT ACTUATION MODE

Contact actuation allows very fast repetitive fastener placement.

- Disconnect the tool from the air supply and remove nails from the tool.
- Depress the actuation mode button.
- Rotate the selector to Position (TTT).
- Release the actuation mode button.

NOTE: The actuation mode selector is spring loaded and held in position by locking tab to prevent movement during operation.

- Reconnect the tool to the air supply and reload the tool with nails.
- Grip the tool firmly to maintain control.
- Squeeze and hold the trigger. Push the tool against the work surface to depress the workpiece contact and drive a fastener.
- Allow the tool to recoil away from the work surface as the fastener is driven.
- Always remove your finger from the trigger when the desired number of nails has been driven.

NOTE: In Contact Actuation Mode, the tool may also be operated by depressing the workpiece contact against the surface and squeezing the trigger.

WARNING:

During normal use the tool will recoil immediately after driving a fastener. This is a normal function of the tool. Do not attempt to prevent the recoil by holding the nailer against the work. Restriction to the recoil can result in a second fastener being driven from the nailer. Grip the handle firmly, let the tool do the work, and do not place second hand on top of tool or near exhaust at any time. Failure to heed this warning can result in serious personal injury.

SETTING THE AIR PRESSURE

The amount of air pressure required will depend on the size of the nail and the workpiece material.

Begin testing the depth of drive by driving a test nail into the same type of workpiece material used for the actual job.

Drive a test nail with the air pressure set at 90-95 psi. Raise or lower the air pressure to find the lowest setting that will perform the job with consistent results.

It may be possible to achieve the desired depth with air pressure adjustments alone. If finer adjustments are needed, use the drive depth adjustment on the tool.

OPERATION

DEPTH-OF-DRIVE ADJUSTMENT

See Figure 10, page 15.

The depth-of-drive of the nail may be adjusted. It is advisable to test the depth on a scrap workpiece to determine the required depth for the application.

To determine depth-of-drive, first adjust the air pressure and drive a test nail. To achieve the desired depth, use the depth-of-drive adjustment on the tool.

- Disconnect the tool from the air supply and remove nails from the tool.
- Turn the depth selector left or right to change the depth-of-drive.
- Reconnect the tool to the air supply and reload the tool with nails.
- Drive a test nail after each adjustment until the desired depth is set.

REMOVING NAILS FROM THE TOOL

See Figure 11, page 15.



WARNING:

Disconnect the tool from the air supply before removing nails. Failure to do so could result in serious personal injury.

- Disconnect the tool from the air supply.
- With the nose of the tool pointed away from you, depress the latch located at the rear of the magazine and slide the magazine open.
- Remove the nail strip.

CLEARING A JAMMED NAIL

See Figure 12, page 15.



WARNING:

Disconnect the tool from the air supply and remove nails from the tool before clearing a jammed nail. Failure to do so could result in serious personal injury.

If a nail or fastener becomes jammed in the tool, disconnect the air hose and keep the tool pointed away from you while clearing the jam.

- Disconnect the tool from the air supply and remove nails from the tool.
- Pull the latch to release and open the jam-clearing mechanism.
- Insert a flat blade screwdriver into the driving mechanism and push the driver mechanism back, freeing the nail jam.
- Remove the bent nail.
- Close the jam-clearing mechanism and latch.
- Reconnect the tool to the air supply.
- Reinstall nails and close the magazine.

MAINTENANCE



WARNING:

When servicing use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.



WARNING:

Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes resulting in possible serious injury.



WARNING:

Disconnect the tool from the air supply and remove fasteners from the tool before performing maintenance. Failure to do so could result in serious personal injury.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

MAINTENANCE



WARNING:

Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.

LUBRICATION

The cylinder, o-ring, and piston ring in this tool are lubricated with a sufficient amount of high grade lubricant for the life of the unit under normal operating conditions. Therefore, no further lubrication is required.

COLD WEATHER OPERATION

For cold weather operation, near and below freezing, the moisture in the air line may freeze and prevent tool operation. We recommend the use of air tool lubricant or permanent antifreeze (ethylene glycol) as a cold weather lubricant.

NOTICE:

Do not store tools in a cold weather environment to prevent frost or ice formation on the tools' operating valves and mechanisms that could cause tool failure.

NOTE: Some commercial air line drying liquids are harmful to "O" rings and seals. Do not use these low temperature air dryers without checking compatibility.

AIR SUPPLY PRESSURE AND VOLUME

Air volume is as important as air pressure. The air volume supplied to the tool may be inadequate because of undersize fittings and hoses, or from the effects of dirt and water in the system. Restricted air flow will prevent the tool from receiving an adequate volume of air, even though the pressure reading is high. The results will be a slow operation or reduced driving power. Before evaluating tool problems for these symptoms, trace the air supply from the tool to the supply source for restrictive connectors, low points containing water and anything else that would prevent full volume flow of air to the tool.

REQUIRED DAILY CHECKLIST

See Figures 7 - 9, page 15.

- Disconnect the air supply from the tool and remove all fasteners.
- Check all screws, nuts, bolts, and pins on the tool. If any of these are loose, they must be tightened with the appropriate size wrench.
- If your tool is equipped with a dry-fire lockout mechanism, then you will need to disengage this feature by opening the magazine slightly or retracting the bypass pusher.

With the dry-fire lockout disengaged, perform the steps below:

- Press the workpiece contact against a workpiece to ensure that it moves smoothly.
- With the workpiece contact depressed, pull the trigger. The trigger should move smoothly, without binding.
- Select the single sequential actuation mode (T).
- While the tool is not loaded, connect the appropriate air supply (at 70 psi) to the tool.
- Begin inspection:
 - Without pulling the trigger, press the workpiece contact against a workpiece several times. The tool must not actuate.
 - With the workpiece contact not engaged on the workpiece, point the tool down and away in a safe direction and pull the trigger several times. Hold the trigger in this position for a minimum of 5 seconds. The tool must not actuate.
 - Press the workpiece contact firmly against the workpiece and pull the trigger. The tool must actuate.
 - With the workpiece contact still depressed, release the trigger. The driver must return to its up position.
- Select the contact actuation mode (TTT).
- Begin inspection:
 - With the workpiece contact not engaged on the workpiece, point the tool down and away in a safe direction. Pull the trigger. The tool must not actuate.
 - Fully depress the trigger and push the workpiece contact against a workpiece. The tool must actuate.
- Disconnect the air supply from the tool.
- If the tool successfully meets all the requirements in this checklist, it is ready for use. Set the trigger on the tool to operate in the manner that best fits your application. Load the proper fasteners for the desired application.
- Set the depth of drive according to the **Drive Depth Adjustment** section in this manual. Repeat this checklist before using the tool each day, or if the tool is dropped or damaged in any way.

ACCESSORIES

To order parts and maintenance kits, call 1-866-539-1710.

Driver Maintenance Kit	079073001702
Wrench Kit	079074001703
Overhaul Kit	079073001701

WARNING:


Current attachments and accessories available for use with this tool are listed above. Do not use any attachments or accessories not recommended by the manufacturer of this tool. The use of attachments or accessories not recommended can result in serious personal injury.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Air leak near the top of the tool or in the trigger area	Loose screws Worn or damaged O-rings or seals	Tighten screws Install Overhaul Kit
Air leak near the bottom of the tool	Loose screws Worn or damaged O-rings or bumper	Tighten screws Install Overhaul Kit
Tool does nothing or operates sluggishly	Inadequate air supply Inadequate lubrication; Possible debris or buildup slowing delivery of air through the tool Worn or damaged O-rings or bumper	Verify adequate air supply Lubricate tool Install Overhaul Kit
Tool jams frequently	Incorrect fasteners Damaged fasteners Loose magazine Dirty magazine Worn or damaged driver	Verify that fasteners are the correct size Replace fasteners Tighten screws Clean magazine Install Driver Maintenance Kit

**NOTE: ILLUSTRATIONS START ON PAGE 14
AFTER FRENCH AND SPANISH LANGUAGE SECTIONS.**


**This product has a 90-Day Satisfaction Guarantee Policy, as well as a
Three-year Limited Warranty.
For Warranty and Policy details, please go to www.RIDGID.com
or call (toll free) 1-866-539-1710.**

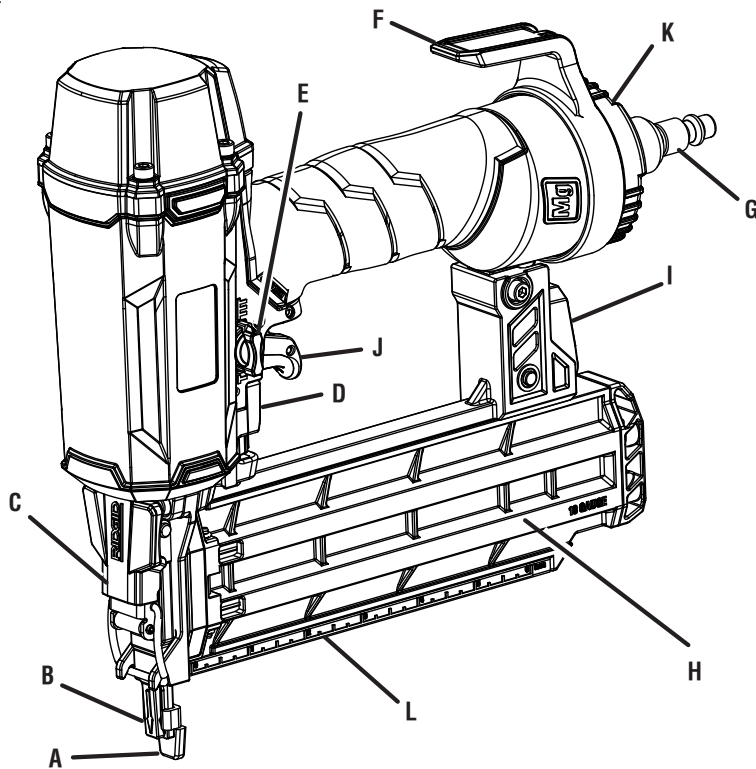

- A - Workpiece contact with no-mar pad (contact de déclenchement avec coussinet de protection, disparador de contacto con almohadilla protectora)
 B - Nose (tête, punta)
 C - Jam release (déblocage, soltador)
 D - Depth of drive adjustment (réglage de profondeur d'enfoncement, ajuste de la profundidad de introducción)
 E - Actuation mode selector (sélection du mode de déclenchement, selector del modo de accionamiento)
 F - Belt hook (crochet de courroie, gancho de la correa)


- G - Quick-connect air fitting (connecteur rapide raccord d'air, conector de aire de conexión rápida)
 H - Side-loading magazine (magasin à chargement latéral, cargador de carga lateral)
 I - Latch (loquet, pestillo)
 J - Selectable trigger (gâchette à sélecteur, gatillo de modo seleccionable)
 K - Adjustable exhaust (échappement réglable, escape ajustable)
 L - Construction ruler (règle graduée, regla para construcción)

Fig. 1

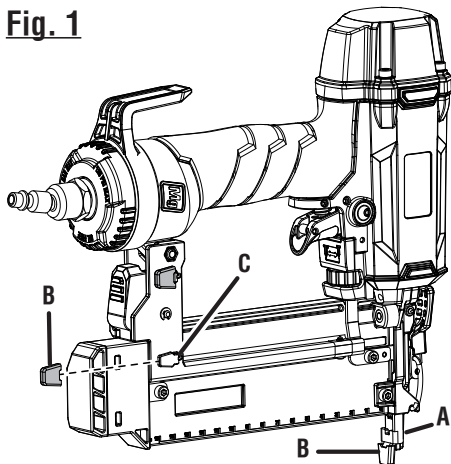


- A - Nose (tête, punta)
 B - Workpiece contact with no-mar pad (contact de déclenchement avec coussinet de protection, disparador de contacto con almohadilla protectora)
 C - No-mar pad storage (rangement du coussinet de protection, lugar para guardar la almohadilla protectora)

Fig. 2

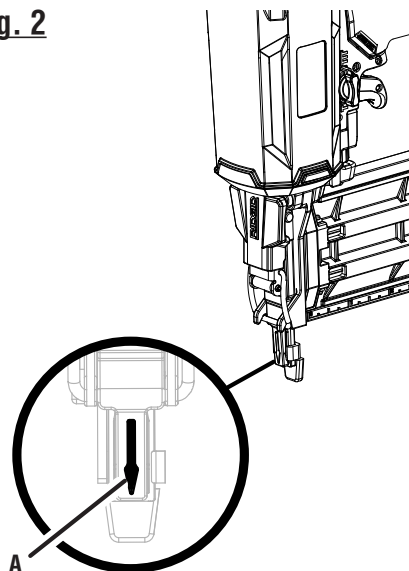


- A - ACCU-Drive arrow (Flèche ACCU-Drive, Flecha ACCU-Drive)

Fig. 3

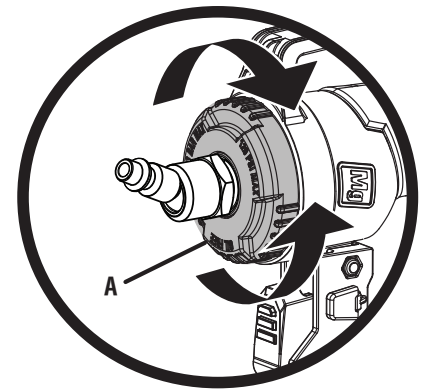


- A - Adjustable exhaust (échappement réglable, escape ajustable)

Fig. 4

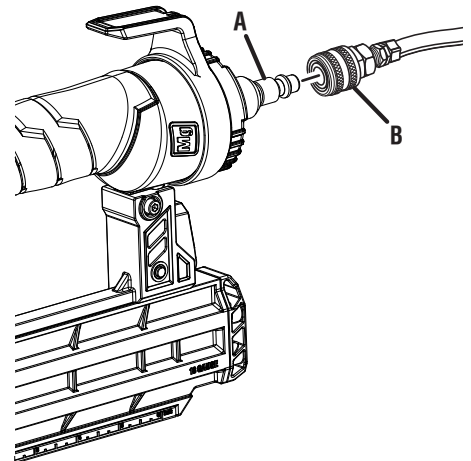


- A - Quick-connect air fitting (connecteur rapide raccord d'air, conector de aire de conexión rápida)
 B - Air hose connector (connecteur de flexible d'air, conector de la manguera de aire)

Fig. 5

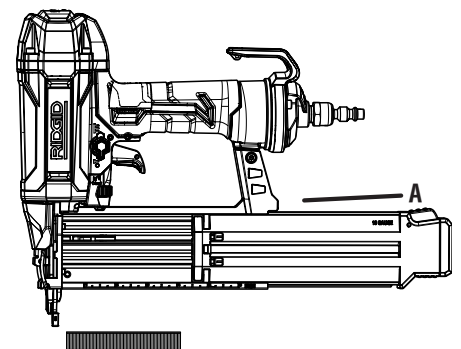

- A - Latch (loquet, pestillo)


Fig. 6

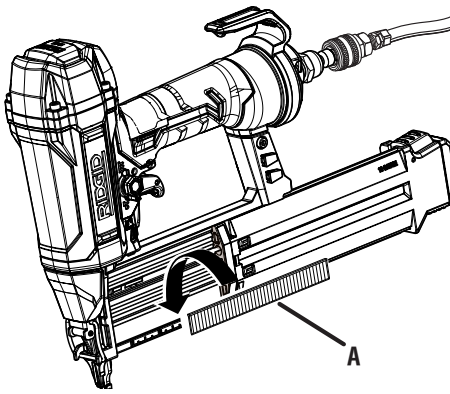

A - Nails (clous, clavos)

Fig. 7


RIGHT SIDE OF TOOL
CÔTÉ DROIT DE L'OUTIL
LADO DERECHO DE LA HERRAMIENTA

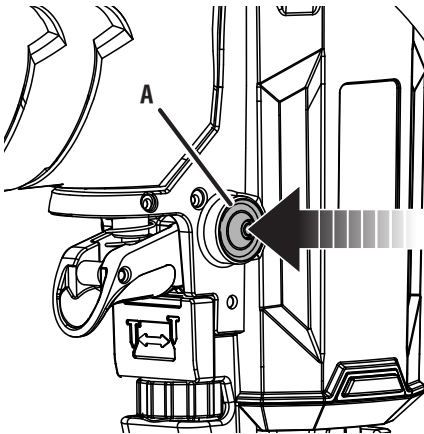

A - Actuation mode button (depress to allow selector to rotate) [bouton du mode de déclenchement (enfoncer pour permettre la rotation du sélecteur), botón del modo de accionamiento (oprímalo para poder girar el selector)]


Fig. 8

LEFT SIDE OF TOOL
CÔTÉ GAUCHE DE L'OUTIL
LADO IZQUIERDO DE LA HERRAMIENTA

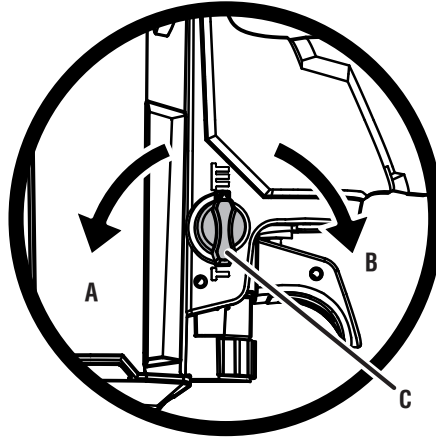


- A - Contact actuation (TTT) [déclenchement par contact (TTT), accionamiento por contacto (TTT)]
- B - Single sequential actuation mode (T) [déclenchement par séquence unique (T), accionamiento secuencial sencillo (T)]
- C - Actuation mode selector (sélection du mode de déclenchement, selector del modo de accionamiento)

Fig. 9

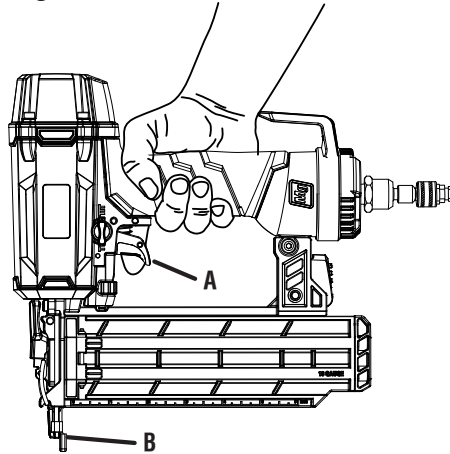


- A - Selectable trigger (gâchette à sélecteur, gatillo de modo seleccionable)
- B - Workpiece contact with no-mar pad (contact de déclenchement avec coussinet de protection, disparador de contacto con almohadilla protectora)

Fig. 10

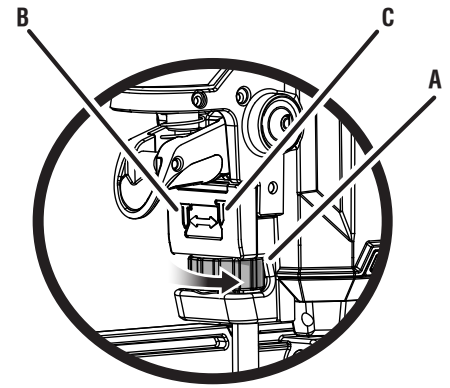


- A - Drive depth adjustment (réglage de profondeur d'enfoncement, ajuste de la profundidad de introducción)
- B - To increase depth (pour augmenter la profondeur, para aumentar la profundidad)
- C - To decrease depth (pour réduire la profondeur, para disminuir la profundidad)

Fig. 11

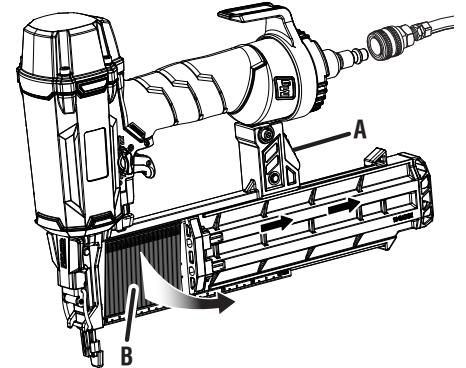

- A - Latch (loquet, pestillo)
- B - Nails (clous, clavos)

Fig. 12

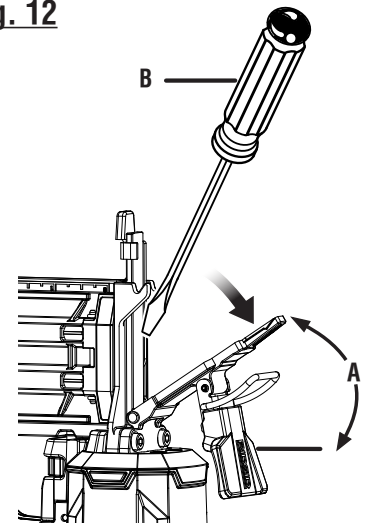

- A - Jam-clearing mechanism (mécanisme de déblocage, mecanismo de liberación de atascos)
- B - Screwdriver (tournevis, destornillador)

OPERATOR'S MANUAL

MANUEL D'UTILISATION


MANUAL DEL OPERADOR

18 GAUGE BRAD NAILER

CALIBRE 18, CLOUEUSE DE FINITION

CALIBRE 18, CLAVADORA DE PUNTILLAS

R213BNE

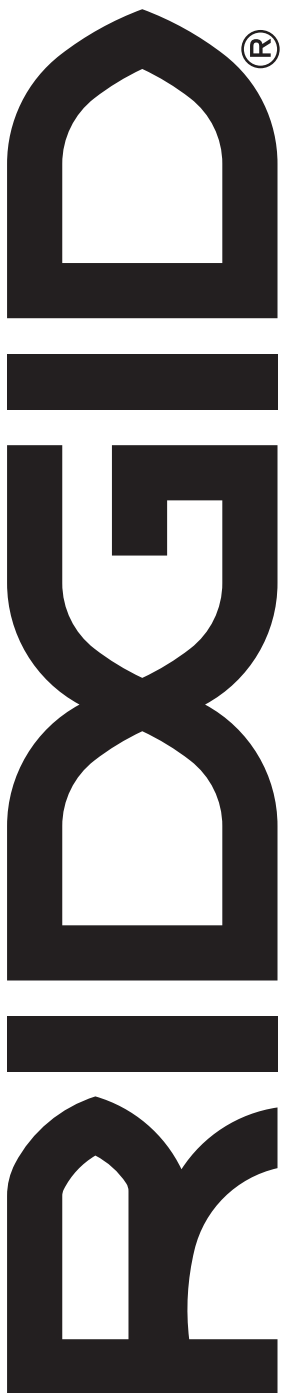

Customer Service Information:

For parts or service, do not return this product to the store. Contact your nearest RIDGID® authorized service center. Be sure to provide all relevant information when you call or visit. For the location of the authorized service center nearest you, please call 1-866-539-1710 or visit us online at www.RIDGID.com.

MODEL NO. _____ SERIAL NO. _____

ONE WORLD TECHNOLOGIES, INC.


P.O. Box 1427

Anderson, SC 29622 USA

1-866-539-1710 ■ www.RIDGID.com

RIDGID is a registered trademark of RIDGID, Inc., used under license.

988000-610
9-4-18 (REV:05)

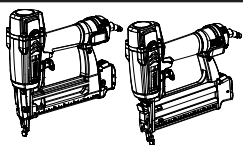

RIDGID

OVERHAUL KIT
R150FSA Finish Stapler
R213BNA Brad Nailer

PFS0003



DANGER:

Do not use oxygen, combustible gases, or bottled gases as a power source for this tool. The tool will explode and cause death or serious injury.



WARNING:

To reduce the risk of injury, the user must read and understand the operator's manual before using this product. If the operator's manual which originally accompanied this tool is missing, visit us at www.ridgid.com or call 1-866-539-1710.



WARNING:

Disconnect the tool from the air supply before performing maintenance on this tool. Failure to do so could result in serious personal injury.



WARNING:

The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields, or a full face shield when needed. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1.

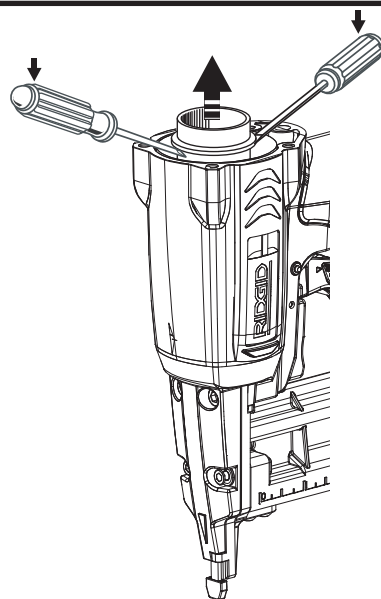


Fig. 1

THIS KIT INCLUDES:

Collar (4)	Trigger Valve Head (21)
Seal (7)	Spring (22)
Piston Ring (8)	Plunger (23)
O-Rings (13, 16)	Plunger Cap (27)
Cylinder Ring (14)	Retainer (29)
Bumper (17)	Grease
Cylinder Cap Seal (19)	Overhaul Kit Instruction Sheet
Seal (20)	

Tools needed (but not included): 2.5 mm punch for removing trigger pivot pin.

REMOVING AND REPLACING O-RINGS AND SEALS

See Figures 1 - 3.

1. Disconnect the tool from the air supply and remove any fasteners that remain in the tool.
2. Using a 4 mm hex key, remove the four screws (1) from the top cap (2) of the tool.
3. Remove the **cylinder cap seal (19)**.
4. With two flat head screwdrivers, gently pry the cylinder (12) from the tool body. Remove the driver unit (9) from the cylinder and set aside.
5. Remove the cylinder spacer (15) from the tool body and set aside.
6. Remove the **seal (7)** and the head valve piston (6) from the top cap (2) by prying out with a flat head screwdriver. Set aside, along with the compression spring (5).
7. Remove the **collar (4)** from the top cap (2) by prying out with a flat head screwdriver. Set aside.
8. Clean all parts with a dry, clean cloth.
9. Reassemble parts in the order shown in Figure 2.
10. Push head valve assembly into cap, applying sufficient pressure to insure the **seal (7)** and **collar (4)** fit into position.
11. Set aside tool cap and proceed with cylinder maintenance.

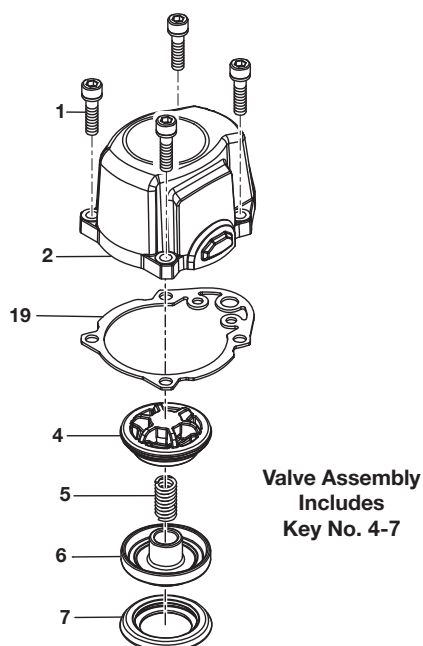


Fig. 2

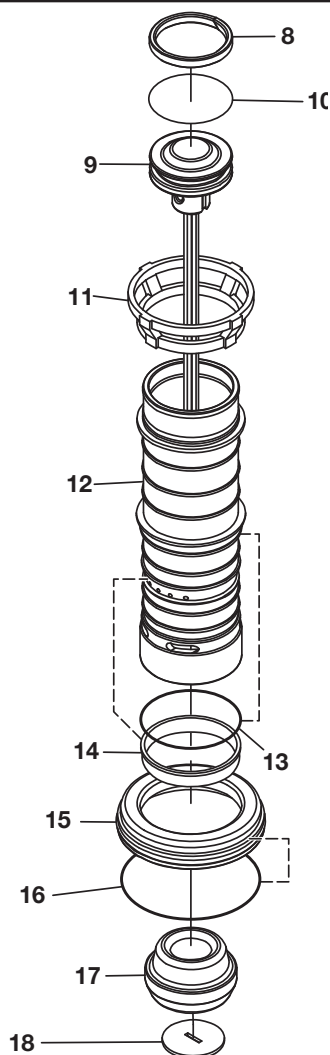


Fig. 3

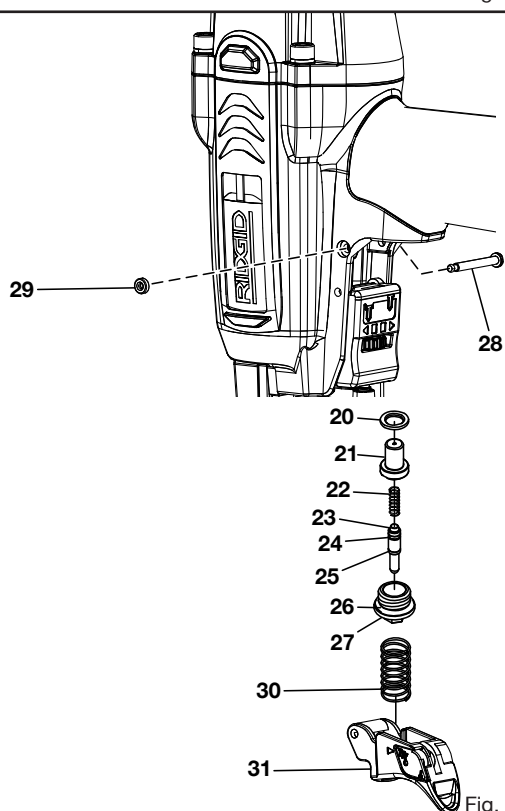


Fig. 4

CYLINDER MAINTENANCE

See Figure 3.

1. Remove **piston ring (8)**.
2. Remove **o-ring (13)** and **cylinder ring (14)** from the cylinder (12).
3. Remove **o-ring (16)** from the cylinder spacer (15).
4. Clean all parts with a dry, clean cloth.
5. Remove and replace **bumper (17)**.
6. Apply a light coat of **grease** to new **o-rings (13, 16)**.
7. Install **o-ring (13)** and **cylinder ring (14)** onto cylinder (12) as shown in Figure 3.
8. Install **o-ring (16)** onto the cylinder spacer (15).
9. Install the **cylinder ring (14)** onto the cylinder with the ridged edge up as shown.
10. Reassemble parts in the order shown in Figure 3.
11. Reinsert the driver unit (9) and cylinder (12) into the tool body. Be sure the driver guide (18) is properly seated and the driver shaft is inserted into the driver guide in the proper direction.
12. Replace the **cylinder cap seal (19)**.
13. Reinstall the top cap and secure.


NOTE: To properly seat cap, tighten the screws at alternate corners a few turns at a time until all screws are secure.

REPLACING THE TRIGGER VALVE ASSEMBLY

See Figure 4.

1. Push out the trigger pivot pin (28) and retainer (29); set aside.
- NOTE:** The retainer is a very small part. Remove it carefully.
2. Remove the trigger (31) and spring (30).
3. Using a 3/16-in. wrench, unscrew the **plunger cap (27)** from the tool.
4. Remove the **plunger (23)** and **spring (22)**. Set aside.
5. While holding the tool in the upright position, insert a flat head screwdriver and pry out the **trigger valve head (21)** and the **seal (20)**.
6. Reassemble parts in the order shown in Figure 4.
7. Reinstall the spring (30) and trigger (31).
8. Reinstall the trigger pivot pin (28) and the retainer (29).

SIZING GUIDE

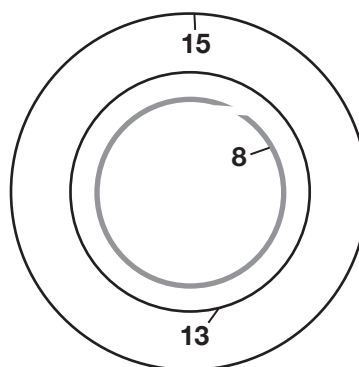

ONE WORLD TECHNOLOGIES, INC.

P.O. Box 35, Hwy. 8, Pickens, SC 29671


1-866-539-1710

RIDGID® is a registered trademark of RIDGID, Inc. and used under license.

983000-670

3-30-06

(REV:01)

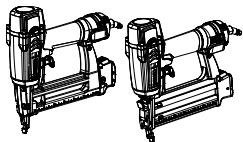

DRIVER ASSEMBLY KIT

R150FSA Finish Stapler

R213BNA Brad Nailer

PFS0001

PBN0001



DANGER:

Do not use oxygen, combustible gases, or bottled gases as a power source for this tool. The tool will explode and cause death or serious injury.



WARNING:

To reduce the risk of injury, the user must read and understand the operator's manual before using this product. If the operator's manual which originally accompanied this tool is missing, visit us at www.ridgid.com or call 1-866-539-1710.



WARNING:

Disconnect the tool from the air supply before performing maintenance on this tool. Failure to do so could result in serious personal injury.



WARNING:

The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields, or a full face shield when needed. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1.

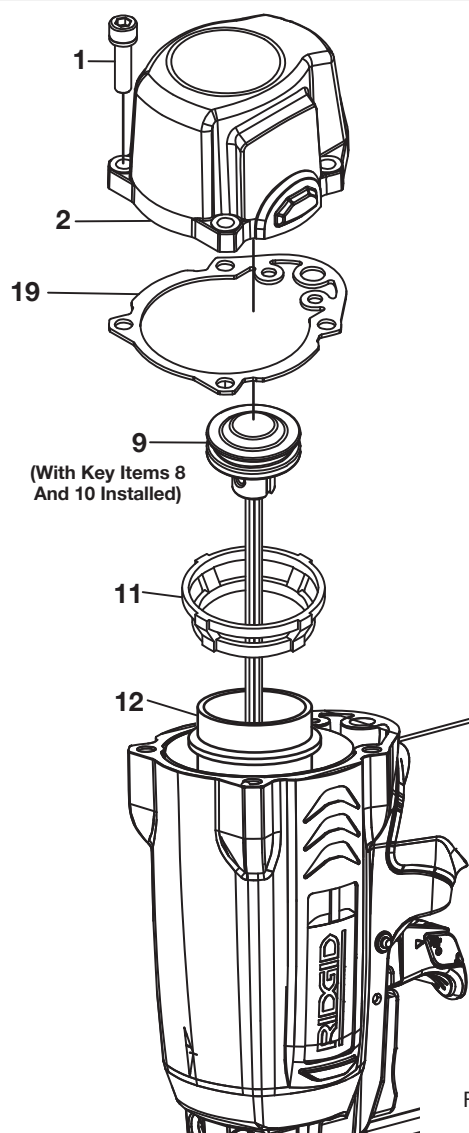


Fig. 1

THIS KIT INCLUDES:

Piston Ring (8)

Driver Unit (9)

O-Ring (10)

Grease

Driver Assembly Kit Instruction Sheet

DRIVER REPLACEMENT

See Figure 1.

1. Disconnect the tool from the air supply and remove any fasteners that remain in the tool.
2. Using a 4 mm hex key, remove the four screws (1) from the top cap (2) of the tool.
3. Remove the cylinder cap seal (19).
4. Remove the driver unit (9) from the cylinder (12).
5. Insert the new **driver unit** (9) into the cylinder (12). Be sure the driver guide is properly seated and the driver shaft is inserted into the driver guide in the proper direction.
6. Reassemble parts in the order shown in Figure 1. Be sure that the collar (11) is positioned with the wider edge up.
7. Reinstall the cylinder cap seal (19).
8. Reinstall and secure the top cap (2).

NOTE: To properly seat cap, tighten the screws at alternate corners a few turns at a time until all screws are secure.

ONE WORLD TECHNOLOGIES, INC.

P.O. Box 35, Hwy. 8, Pickens, SC 29671

1-866-539-1710

RIDGID® is a registered trademark of RIDGID, Inc. and used under license.

983000-681


3-30-06

(REV:01)

RIDGID
18 GAUGE BRAD NAILER
MODEL NO. R213BNF
REPAIR SHEET

ONE WORLD TECHNOLOGIES, INC.

P.O. Box 1427
Anderson, SC 29622
1-866-539-1710
powertools.RIDGID.com

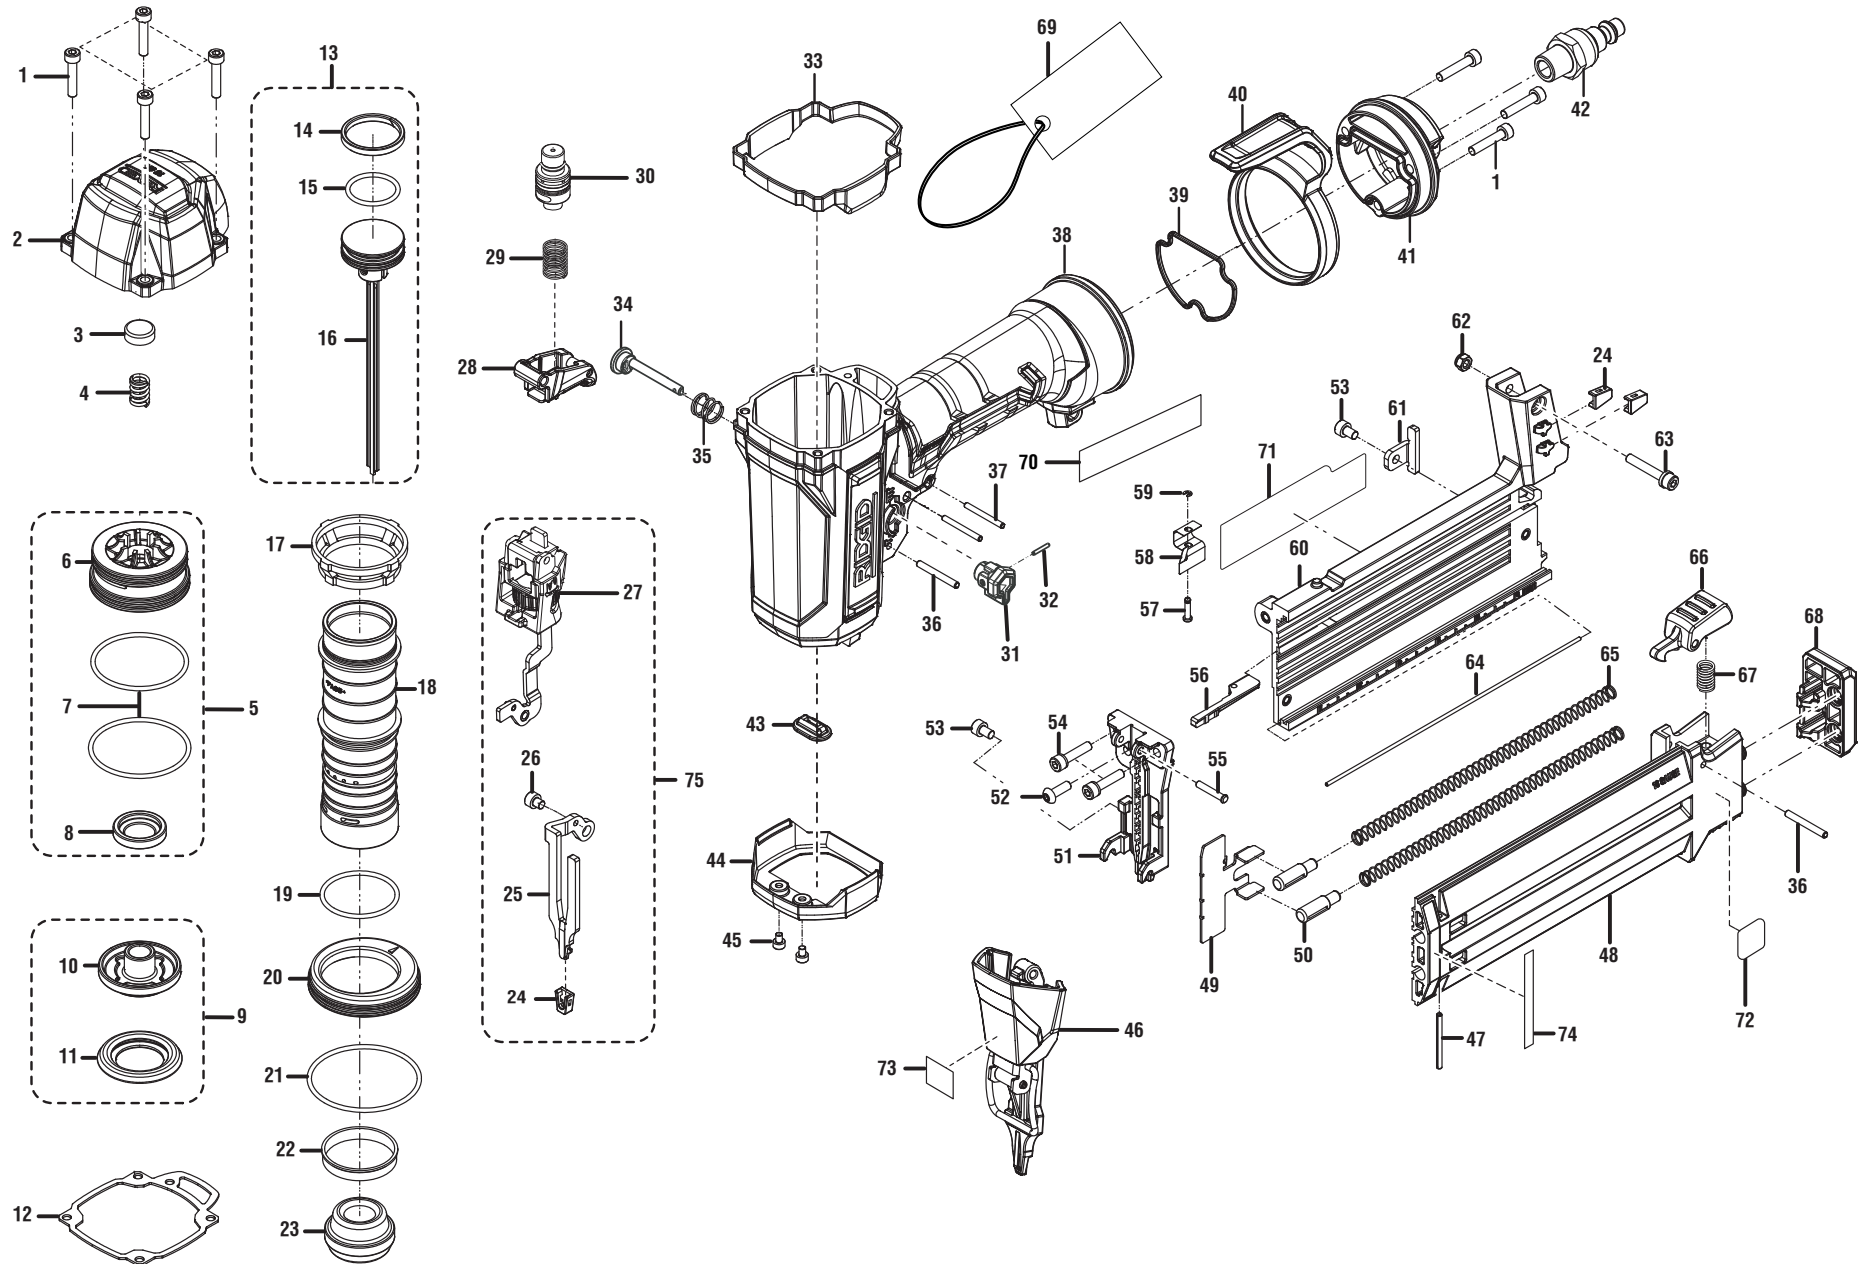



R213BNF Brad Nailer

KEY	P/N	DESCRIPTION	QTY	KEY	P/N	DESCRIPTION	QTY	KEY	P/N	DESCRIPTION	QTY
1	079071001046	Screw (M4 x 20 mm, Soc. Hd.)	7	29	079001001030	Compression Spring (11.1 x 23)....	1	58	079007001061	Spring Plate.....	1
2	079079013001	Top Cap	1	30	079079012704	Trigger Valve Assembly (Inc. Key Nos. 31-32).....	1	59	079007001062	E-Clip (ETW1.5)	1
3	079074001002	Cushion	1					60	079079013021	Magazine A (Inc. Key No. 71)	1
4	079001001005	Compression Spring (9 x 17.5L)....	1	31	079079012014	Mode Selector Switch.....	1	61	079073001011	Retaining Plate	1
5	079079012701	Upper Head Valve Assembly (Inc. Key Nos. 6-8).....	1	32	079079012016	Spring Pin.....	1	62	079073001021	Hex Nut (M4)	1
6	079079013002	Collar	1	33	079079013014	Protection Ring (Upper).....	1	63	079027004038	Bolt w/Flat Washer (M4 x 25 mm, OD8 x ID4.2 x 1.5t) ...	1
7	079074001004	O-Ring (39.5 x 2)	2	34	079079012015	Mode Selector Button	1				
8	079074001005	Oil Seal	1	35	079071001034	Spring (10.8 x 11L)	1	64	079007001059	Flat Bar	1
9	079074001705	Lower Head Valve Assembly (Incl. Key Nos. 10-11).....	1	36	079074001022	Spring Pin (D3 x 25)	2	65	079073001014	Pusher Spring (6.6 x 234.5L).....	2
10	079001001006	Head Valve Piston	1	37	079074001021	Spring Pin (D2.5 x 24)	2	66	079079013025	Latch	1
11	079001001007	Seal	1	38	079079013010	Tool Body Unit.....	1	67	079079013026	Latch Spring (8 x 21L)	1
12	079079013003	Top Cap Gasket	1	39	079079013011	End Cap Gasket.....	1	68	079079013027	Magazine End Cap.....	1
13	079079013703	Driver Assembly (Inc. Key Nos. 14-16).....	1	40	079079013012	Belt Hook	1	69	079079013902	Danger and Data Hang Tag.....	1
14	079079013004	Piston Ring.....	1	41	079079013013	End Cap	1	70	079005004908	Trigger Wrap Label	1
15	079001001010	O-Ring (23 x 2)	1	42	079072001070	Air Plug (NPT 1/4-18)	1	71	079079013901	Data and Danger Label	1
16	079079013005	Driver Unit	1	43	079073001003	Joint Guide.....	1	72	079079013906	18 Gauge Icon Label.....	1
17	079001001011	Collar	1	44	079079013015	Protection Ring (Lower).....	1	73	079079013907	Clean Drive Label.....	1
18	079073001002	Cylinder	1	45	079071001049	Screw (M3 x 4 mm, Soc. Hd.)	2	74	079079013905	Measurement Label.....	1
19	079001001013	O-Ring (32 x 2)	1	46	079079013705	Jam Release Latch Assembly	1	75	079079013706	Workpiece Contact Assembly (Inc. Key Nos. 24-27)	1
20	079079013006	Cylinder Spacer.....	1	47	079079013024	Spring Pin (2.5-30)	1				
21	079001001016	O-Ring (47.5 x 2)	1	48	079079013023	Magazine B	1		Not Shown:		
22	079001001014	Cylinder Ring.....	1	49	079073001012	Pusher	1		079079012705	Overhaul Maintenance Kit (Inc. Key Nos. 5, 9, 12, 14-15, 19-23 and 30)	
23	079001001017	Bumper.....	1	50	079073001013	Guide Pin.....	2				
24	079079013034	No Mar Pad.....	3	51	079079013016	Driver Guide	1		079079013708	Driver Maintenance Kit (Inc. Key Nos. 12-13 and 23)	
25	079079013033	Workpiece Contact (C)	1	52	079007001049	Screw (M4 x 12 mm, Round Hd.)..	1				
26	079007001083	Screw (M4 x 4 mm, Soc. hd.).....	1	53	079007001058	Screw (M4 x 6 mm, Soc. Hd.)	2		079074001062	Tool Bag	
27	079079013709	Upper Workpiece Contact Assembly.....	1	54	079073001020	Bolt w/Lock Washer (M4 x 18 mm, Soc. Hd.)	2		983000623	Fastener Guide (079074001056)	
28	079079013008	Trigger	1	55	079079013020	Fixed Pin (3 x 18L).....	1		995000349	Operator's Manual (079079013802)	
				56	079079013036	Dry-Fire Lockout Tab.....	1		2-26-20 (Rev:04)		
				57	079007001060	Fixed Pin (2.5 x 12.3L).....	1				

⚠ DANGER: Do not use oxygen, combustible gases, or bottled gases as a power source for this tool. The tool will explode and cause death or serious injury.

⚠ WARNING: Disconnect the tool from the air supply before performing maintenance. Failure to do so could result in serious personal injury.