


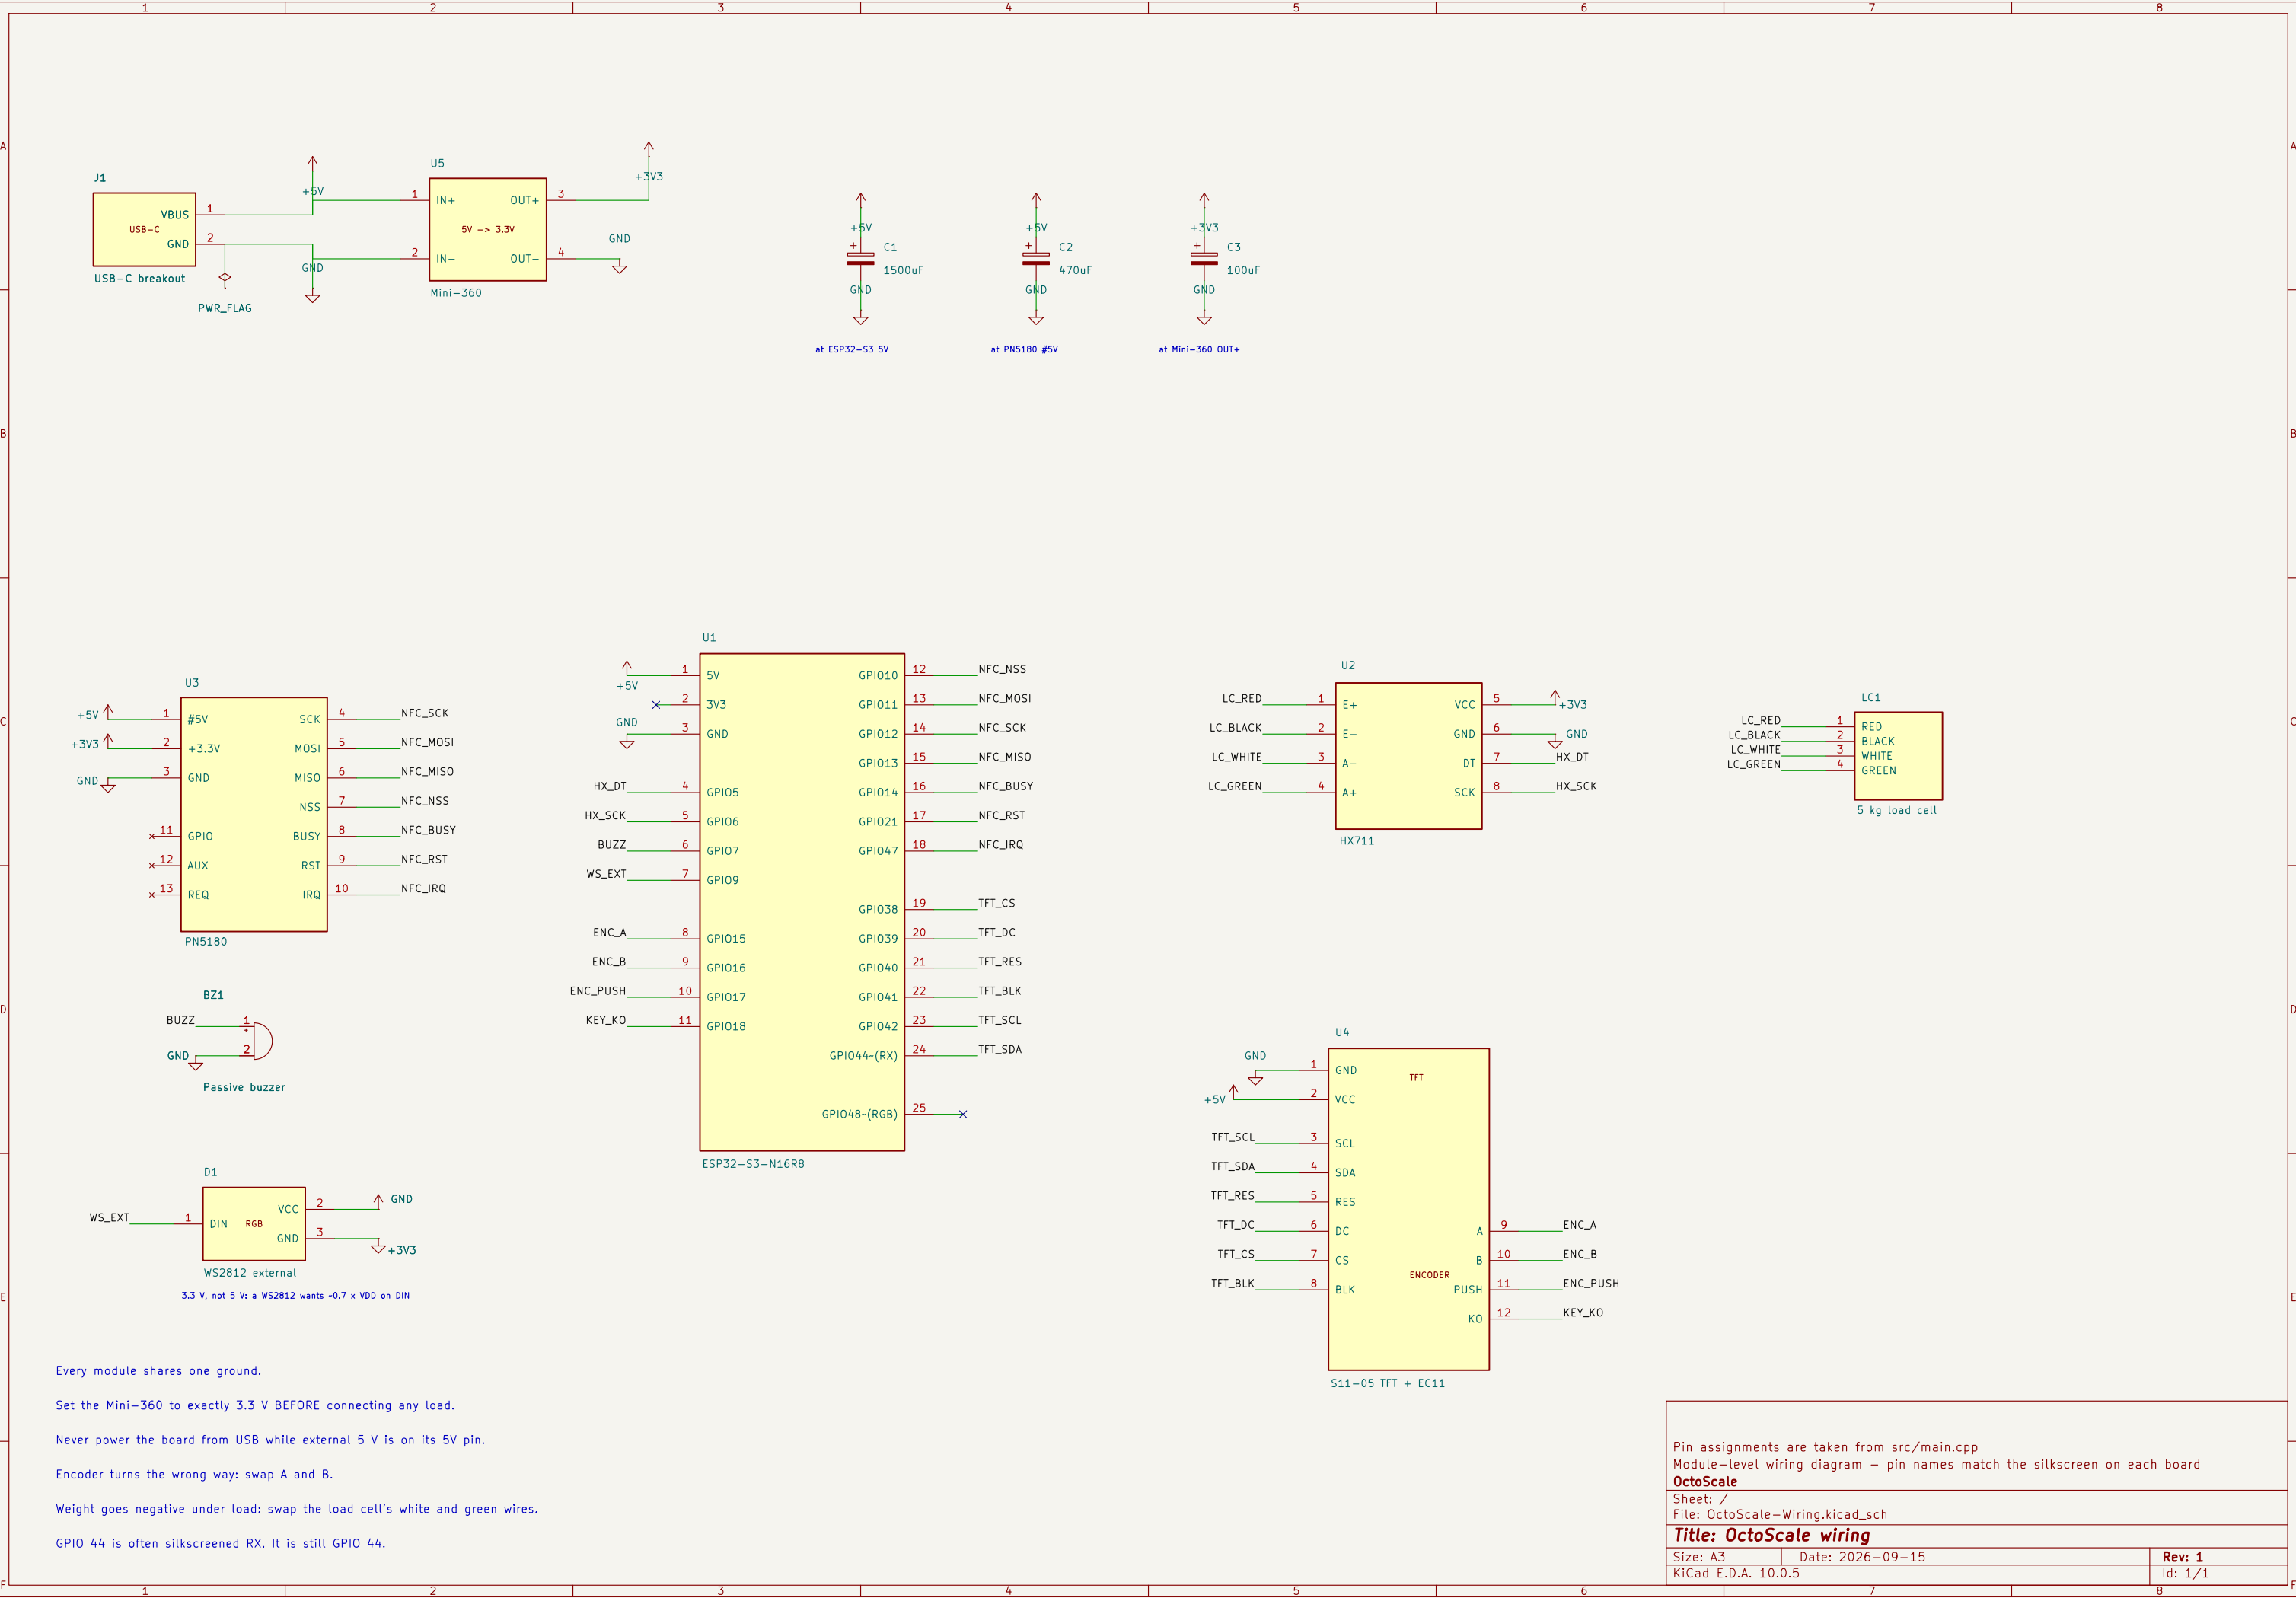

Every module shares one ground.

Set the Mini-360 to exactly 3.3 V BEFORE connecting any load.

Never power the board from USB while external 5 V is on its 5V pin.

Encoder turns the wrong way: swap A and B.

Weight goes negative under load: swap the load cell's white and green wires.

GPIO 44 is often silkscreened RX. It is still GPIO 44.