

OWNER'S MANUAL

Operation and Maintenance



Product: Overlap sectional garage door

Model: OVERLAP 2.0

Operation: Manual and automatic

For Residential Use Only

Manufacturer: Delta Overlap s.r.l


Legal Headquarters: I - 60131 Ancona (AN) - via Albertini, 26

Manufacturing plant: I. 83054 Sant'Angelo dei Lombardi (AV)

- Zona Industriale Loc. Porrara

Tel. +39 071 9033455 Fax +39 071 9203459

www.overlapgaragedoors.com - sales@deltaoverlap.com

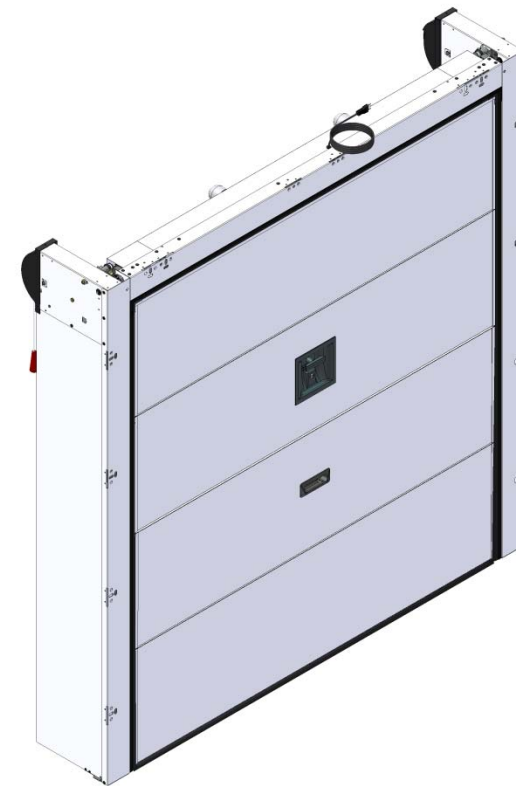

OVERLAP 2.0

TABLE OF CONTENTS

1.PREFACE.....	4
2.OVERLAP GENERAL DESCRIPTION.....	4
2.1 Product certification label.....	4
2.2 Danger warning labels.....	5
3.OVERLAP OPERATION.....	7
3.1 Manual operation of garage door.....	8
3.2 Automatic operation of garage door.....	11
3.3 In case of emergency.....	13
3.4 Reset maneuver.....	13
4.ELECTRIC CONNECTIONS AND ELECTRONIC COMPONENTS.....	14
4.1 General overview.....	14
4.2 Terminal Block.....	15
4.3 Wiring diagram.....	17
4.4 Timer-to-Close (TTC) adjustment.....	18
4.5 LEDs description.....	18
4.6 Internal buzzer.....	19
4.7 Home automation contacts.....	19
4.8 Optional device prerequisites.....	19
4.9 Remote control.....	20
5.MAINTENANCE.....	21
5.1 Visual inspection.....	21
5.2 Door balance.....	21
5.3 Opener safety device.....	21
5.4 Opener reversal.....	21
5.5 Door lubrication.....	22
6.CARE.....	24
6.1 Windows and windows insert cleaning.....	24
6.2 Plastic and steel parts cleaning.....	24
7.TROUBLESHOOTING.....	25
7.1 Pulleys cables derailment.....	25

7.2 Automatic door malfunctions.....	25
8.LIMITED WARRANTY.....	27
8.1 Limited Warranty Periods.....	28
8.2 Warranty disclaimer.....	28
9.INSTALLATION BOOK.....	30
10.PERIODIC MAINTENANCE BOOK.....	31
11.DISMANTLING.....	33
12.ASSISTANCE AND ACCESSORIES.....	33

PREFACE

Dear customer, we want to inform you about safety, maintenance and operating issues of your Delta Overlap garage door. If you correctly follow all the instructions, the product will work as expected. The garage door is typically the largest moving object in the house. Improper installation, operation or maintenance of a garage door can create a hazardous condition that can cause serious injury or even death.



WARNING

In the interest of safety this symbol means WARNING or CAUTION. Injury to people and/or property damage may occur unless instructions are followed correctly.



WARNING

In the interest of safety this symbol means WARNING. Injury to people and/or property damage may occur from electrocution or fire unless instructions are followed correctly.

OVERLAP GENERAL DESCRIPTION

Overlap garage door is an innovative sectional garage door with an opening mechanism that does not need sliding bars and tracks on the ceiling and requires less internal space. Overlap is equipped with a garage door opener (GDO) embedded in the crossbar fixed to the wall. No visible and cumbersome motor unit is anchored to the ceiling. Operation commands are given via a radio transmitter or with a wall push-button.

Operation features of the GDO:

- Rated voltage: 100-120 V AC single phase –50/60 Hz
- Rated power: 200 W
- Sound intensity: less than 70 dB (A)

2.1 Product certification label

In the internal side of the upper section, the ID label indicating all the data necessary for the identification of the garage door is present. This label, together with the declaration of conformity, certifies that the product complies with the applicable standards (Figure 2-1 and Table 21).

2.2 Danger warning labels

These labels indicate the danger from improper use of the door. They are the general warning label, wall station control button label and the emergency release handle label (Figure 2-1 and Table 21).

Table 21

1	ID LABEL
2	GENERAL WARNING LABEL
3	WALL STATION CONTROL BUTTON LABEL
4	EMERGENCY RELEASE HANDLE LABEL
5	EMERGENCY RELEASE HANDLE
6	INNER HANDLE (OPTIONAL)
7	UPPER INNER HANDLE
8	LOWER INNER HANDLE
9	COURTESY LIGHT, VOLTAGE and DIAGNOSTIC LEDs
10	PHOTO EYE
11	OUTER HANDLE (OPTIONAL)
12	LOWER OUTER HANDLE (OPTIONAL)



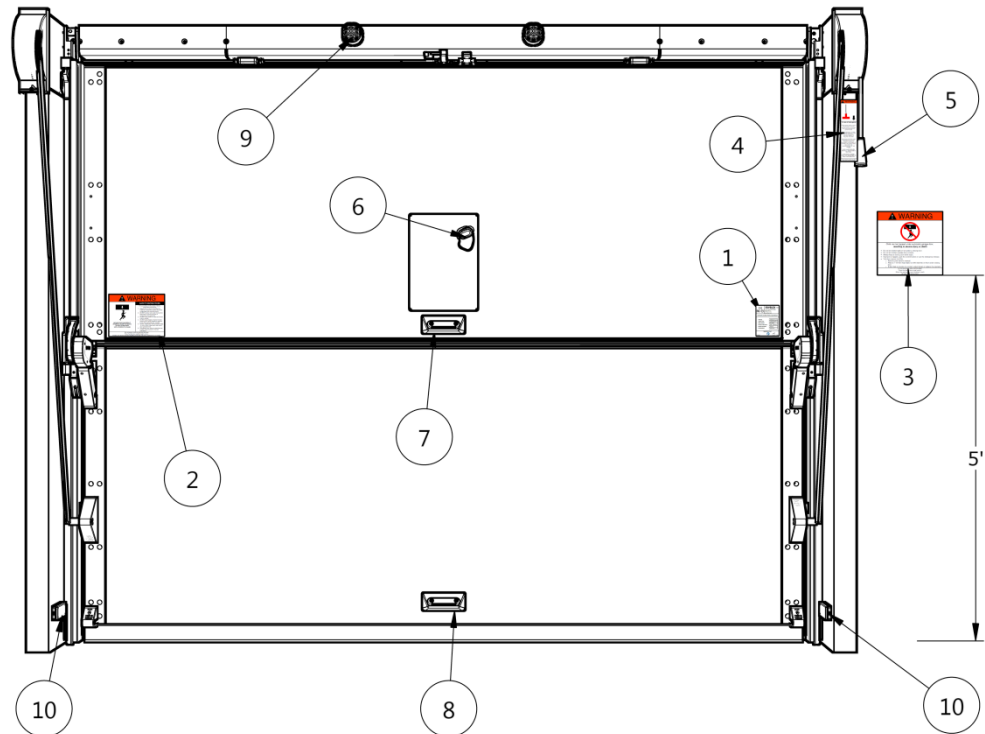


Figure 2-1 Interior door view

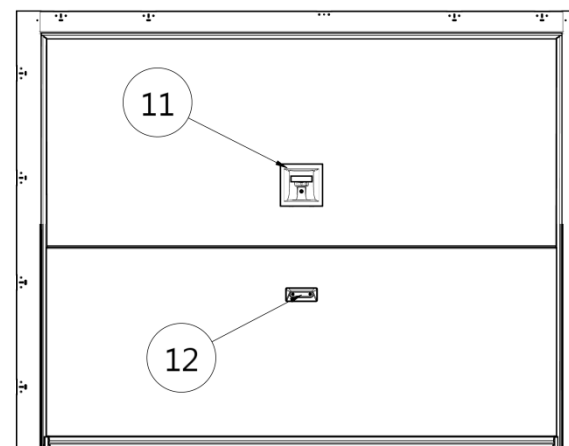

3. OVERLAP OPERATION

IMPORTANT SAFETY INSTRUCTIONS

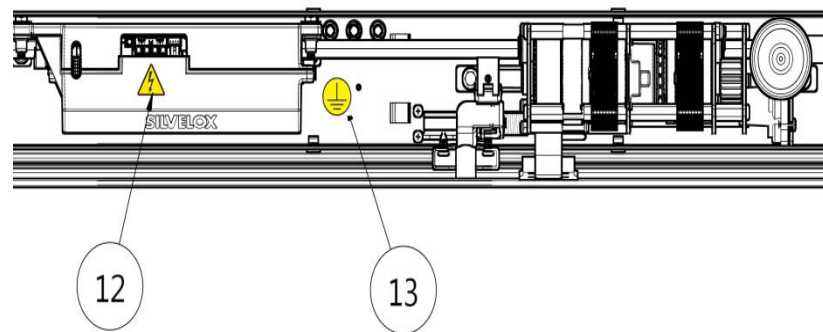

WARNING: To reduce the risk of severe injury or death

1. READ AND FOLLOW ALL WARNINGS AND INSTRUCTIONS before to operate, perform maintenance or repair the garage door.
2. GARAGE DOOR SAFETY IS YOUR RESPONSIBILITY. Garage doors, garage door openers, and electric transmitters are not toys. Careless operation or allowing children to use garage door controls can lead to serious injury or death. Discuss garage door safety with your children, explain the dangers and outline emergency procedures in the event of an accident.
3. CONTACT WITH A MOVING DOOR COULD CAUSE SERIOUS INJURY. Teach children to keep their hands and fingers clear of the garage door, section interface, track, and other door parts during operation.
4. ALWAYS keep remote controls out of reach of children. NEVER permit children to operate or play with garage door control push buttons or remote controls.
5. PUSHBUTTON WALL CONTROLS SHOULD BE OUT OF THE REACH OF CHILDREN. Mount at least ten feet away from the garage door and at least five feet from the floor and where the user can clearly see the moving garage door.
6. ONLY activate garage door when it can be seen clearly, it is properly adjusted, and there are no obstructions to door travel.
7. ALWAYS keep garage door in sight until completely closed. NO ONE SHOULD CROSS THE PATH OF THE MOVING DOOR.
8. NO ONE SHOULD GO UNDER A STOPPED, PARTIALLY OPEN DOOR.
9. If possible, use emergency release handle to disengage the operator ONLY when garage door is CLOSED. An unbalanced garage door could result in an open door falling rapidly and/or unexpectedly, causing SEVERE INJURY or DEATH.
10. NEVER use emergency release handle unless garage doorway is clear of persons and obstructions.
11. After ANY adjustments are made, the opener reversal MUST be tested.
12. Safety reversal system MUST be tested every month. Garage door MUST reverse on contact with 1-1/2" (3.8 cm) high object (or a 2x4 laid flat) on the floor. Failure to adjust the operator properly may cause SEVERE INJURY or DEATH.
13. ALWAYS KEEP GARAGE DOOR PROPERLY BALANCED. An improperly balanced door may not reverse when required and could result in SEVERE INJURY or DEATH.
14. ALL repairs to cables, counter-weights assemblies and other hardware, MUST be made by a trained door systems technician.
15. ALWAYS disconnect electric power to garage door opener BEFORE making ANY repairs or removing covers.
16. Do not permit kids to play with packaging components (plastic bags, boxes, Expanded polystyrene (EPS), sheet metals...) to avoid any dangerous situations.
17. Do not operate the garage door in any different ways other than those indicated in the present manual. Any different operation is considered not reasonable and the producer declines any responsibility.
18. Do not perform any maintenance or adjustment if the door is moving.
19. Keep nearby the product a fire extinguisher with a capacity of 6 – 9 kg, for rooms up to 200 square meters.
20. Do not impair or try to repair any electrical or electronic part or any other device related to safety, like: printed circuit board (PCB), actuators, photo-eyes, limiting devices, LEDs.

3.1 Manual operation of garage door

The garage door can always be opened or closed manually, without the aid of the electronic garage door opener. To operate manually, follow the instructions listed below:

Opening from inside (figure 3-1):

- Unlock the door by pulling down the emergency release handle (1) or rotating downward the inner handle if present (1);
- Grab the lower inner handle (2) and pull the lower section upward up to the maximum opening height.

Closing from inside (figure 3-1):

- Grab the lower inner handle (3) and pull it downward until the lower section reaches the lowest position;
- Conclude the closing maneuver by pushing the upper section outward (4) until the door is closed.

Opening from outside with OPTIONAL OUTER HANDLES ONLY (figure 3-2)

- Rotate the outer handle (1) counter clockwise;
- Grab the lower outer handle (2) and pull the lower section upward;
- Grab the lower part of the lower section (3) and push it up to the maximum opening height.

Closing from outside with OPTIONAL OUTER HANDLES ONLY (figure 3-2):

- Grab the lower part of the lower section (4) and pull it downward;
- Push the lower leaf downward using the outer lower handle (5);
- Conclude the closing maneuver pulling the outer handle outward (6).

3.1.1 Safety devices for manual operation

The garage door in manual operation is provided with safety devices, to help prevent dangerous situations. Such devices are described below:

- In case of hand or fingers entrapment between the two sections, the lower section moves or can be pushed toward the inside of the garage, avoiding serious injuries.
- Perimeter seals between the two sections are made of EPDM rubber, with a tubular shape. Their purpose is to avoid possible injury to fingers if inadvertently they are between the door sections.
- Floor astragal is made of EPDM rubber and has the purpose to cushion the accidental impact against a body during the descent of a panel, as well as to close the space between the door and the floor, with the door closed.

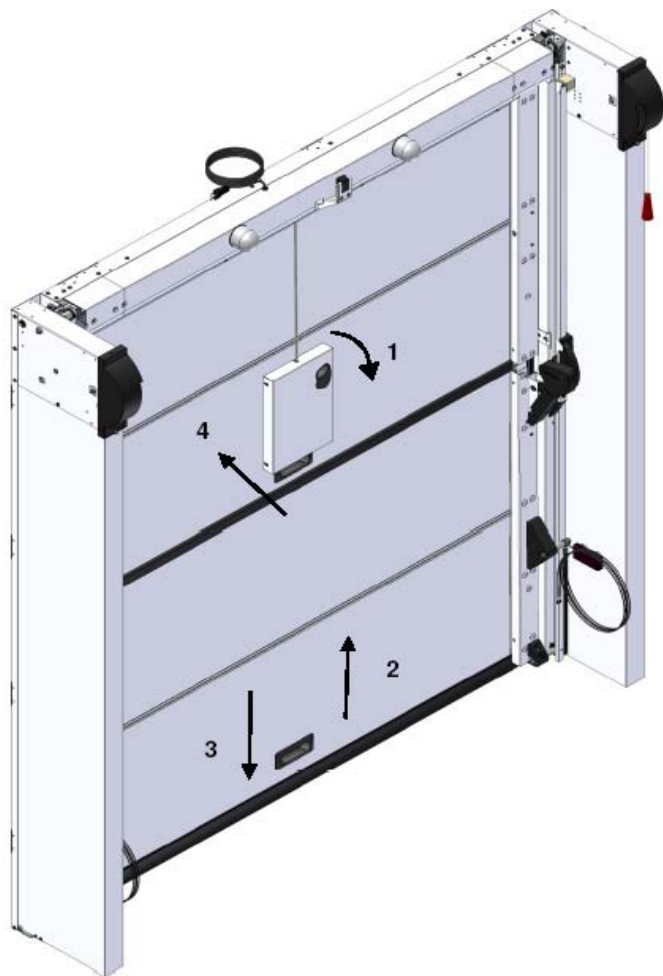


Figure 3-1 Opening/Closing from inside

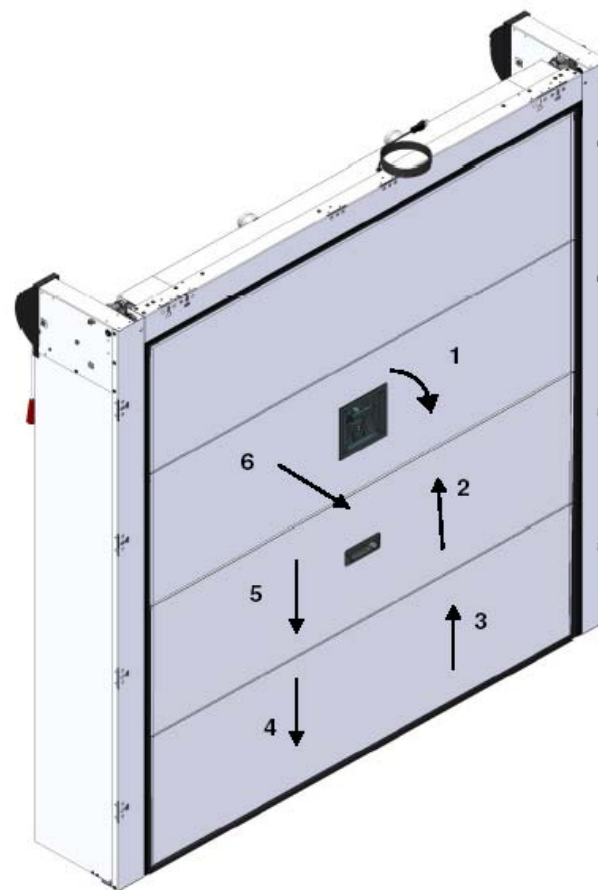


Figure 3-2 Opening/Closing from outside (optional)

3.2 Automatic operation of garage door

To open automatically, follow the instructions below.

Automatic opening/closing of the garage door:

- 1) Press the remote control button to open. The door can also be opened/closed with the wall button(optional installation) or with another remote control linked with an optional receiver;
- 2) The courtesy light, the external flashing light (optional) and the external buzzer(optional) are activated.
- 3) The door opening/closing movement starts up to the ending position.
- 4) Once the ending position is reached, the door automatically stops.
- 5)To stop the door during operation, press button (1) of the remote control (impulse mode OPEN/STOP/CLOSE); from any intermediate position, the motor will turn off and the door will stop. If the door stopped during opening, press button (1) again and door will continue to open. If the door stopped during closing, press button (1) again and the door will reverse to the fully open position.
- 6) In case of power outage, during opening or closing, the door will stop in the actual position. When the power is restored, the door does not move automatically. To reset door, close the door manually and then operate door automatically; alternatively, perform a reset maneuver (Section 3.4).



WARNING

When the door is activated from a position other than perfectly closed, it performs the reset maneuver (Section 3.4). During the reset maneuver, the force controls are higher than typical, so **take great care to avoid contact with the door during the reset maneuver**. The reset maneuver is signaled by the internal buzzer beeping and courtesy light flashing.

3.2.1 Safety devices for automatic operation

To help preventing dangerous situations, the garage door is provided with safety devices. Such devices are described below:

- Electronic sensor system: photo-eyes installed on the internal walls of the counterweights boxes that control the reversal of the closing of the door in the event of object detection. A red LED, placed in the proximity of the photo-eyes, indicates their operation.
- "Amperostop" current control system: this system, in the presence of obstacles placed outside the working region of the photo-eyes, blocks and reverses the movement of the door.

3.3 In case of emergency

During a power outage, or during monthly inspections, the garage door must be released to be opened manually. To release the door, with door fully closed, pull down vertically on the red emergency release handle. The door may now be opened and closed manually following the instruction of Section 3.1. **If the door had to stop in an intermediate position due to voltage interruption or other cause, do not use the release handle.** For moving the door manually, slightly force its movement in the sense of opening or closing, until reaching the disengagement of the opener. To re-attach opener, once the power is restored, simply push the transmitter or wall control button.



WARNING

Read carefully the following information regarding the reset maneuver.

3.4 Reset maneuver

Every time that the door loses its reference positions, once activated, it performs a reset maneuver. The reset maneuver is signaled by the beeping of the internal buzzer and the flashing of the courtesy light. The door performs a closing maneuver with the "Amperostop" current control set to a higher current level allowing the system to recalibrate. Pay particular attention during this operation; to reverse the door during the reset maneuver, a bigger force is required than normal operation conditions. The door can lose the reference positions in the following cases:

- After a reversal due to "Amperostop" current control activation;
- After a reversal due to photoeyes activation;
- After a power outage occurred when the door was not in closed position;
- After a manual door operation that does not leave the door in closed position;
- After many door activations within short time intervals.

ELECTRIC CONNECTIONS AND ELECTRONIC COMPONENTS

4.1 General overview

The electric connections and the electronic components are located in the operator control unit box, immediately visible on the headbar, if the headbar central cover is not in place (figure 4-1). The electric connections/components are listed in table 4-1, referring to Figure 4-2

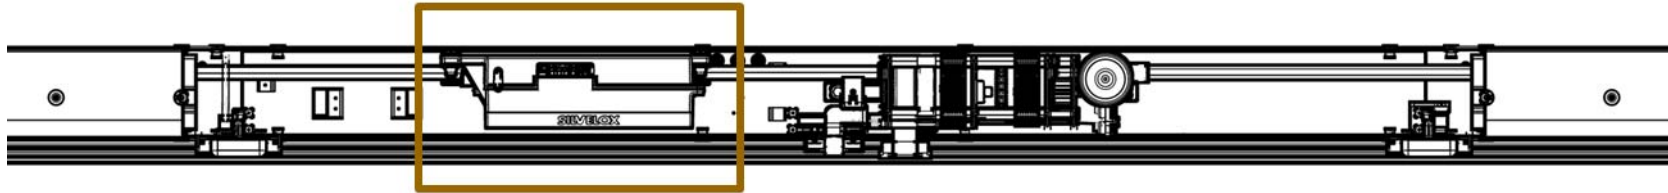


Figure 4-1

Table 4-1

Reference	Description
1	Terminal Block (see Figure 4-3)
2	Built-in Receiver Controls (NOT for USA&Canada)
3	Timer-to-Close (TTC) Control Button
4	Diagnostic LED
5	Voltage LED
6	Configuration Port
7	Courtesy Light LEDs
/	Internal Buzzer (not visible)

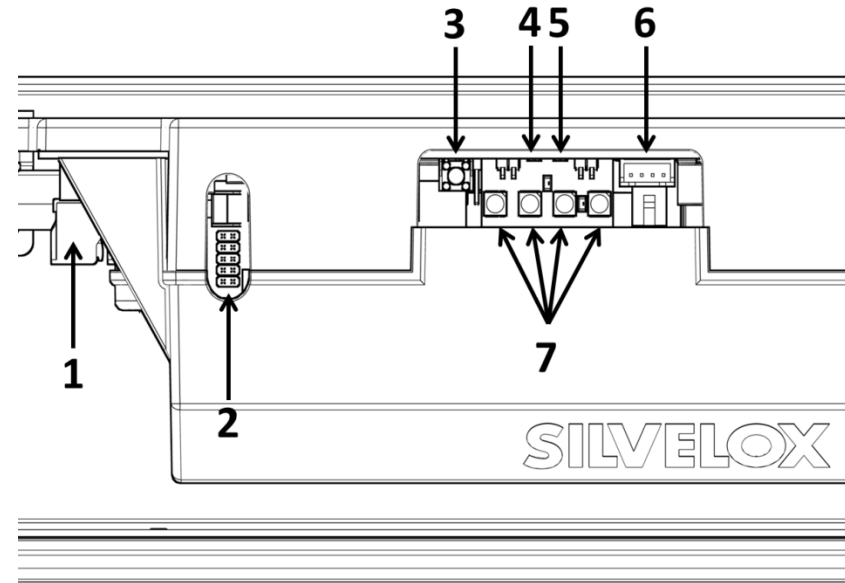


Figure 4-2

4.2 Terminal Block

Safety appliances and/or optional devices have to be connected to the terminal blocks (Figure 4-2 reference number 1). A close view of the terminal blocks is presented in Figure 4-3 and the contact descriptions are listed in Table 4-2. To facilitate the cable connections it is possible to remove the terminal blocks from their sockets and place them back once the connections are placed. In Section 4-3 the wiring diagram can help to visualize the connections.



WARNING

To prevent possible SERIOUS INJURY or DEATH from electrocution or fire:

- Disconnect ALL electric and battery power BEFORE connecting ANY cable to the terminal block.

Table 4-2

CN1 Contacts (Inputs)			
15 (-) white/black		14 (+) white	
16 (NO) pink	16 (+) purple	13 (-) grey	12 (C) blue
8 - 7			
8 - 5			
8 - 4			
8 - 2			
CN2 Contacts (Outputs)			
11 - 10			
9 - 8			
7 - 6			
7 - 5			
12 (+) - 13 (-)			
1 - 13			
(12 - 2 bridged)			
3 - 13			
(12 - 4 bridged)			


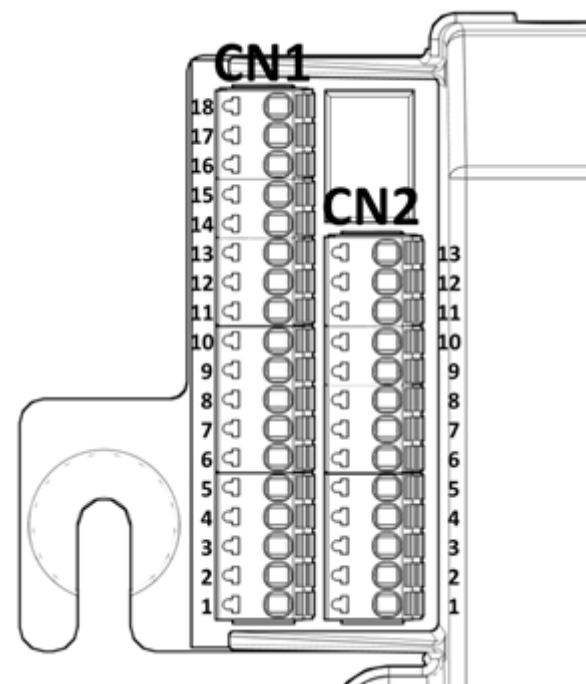


Figure 4-3

4.3 Wiring diagram

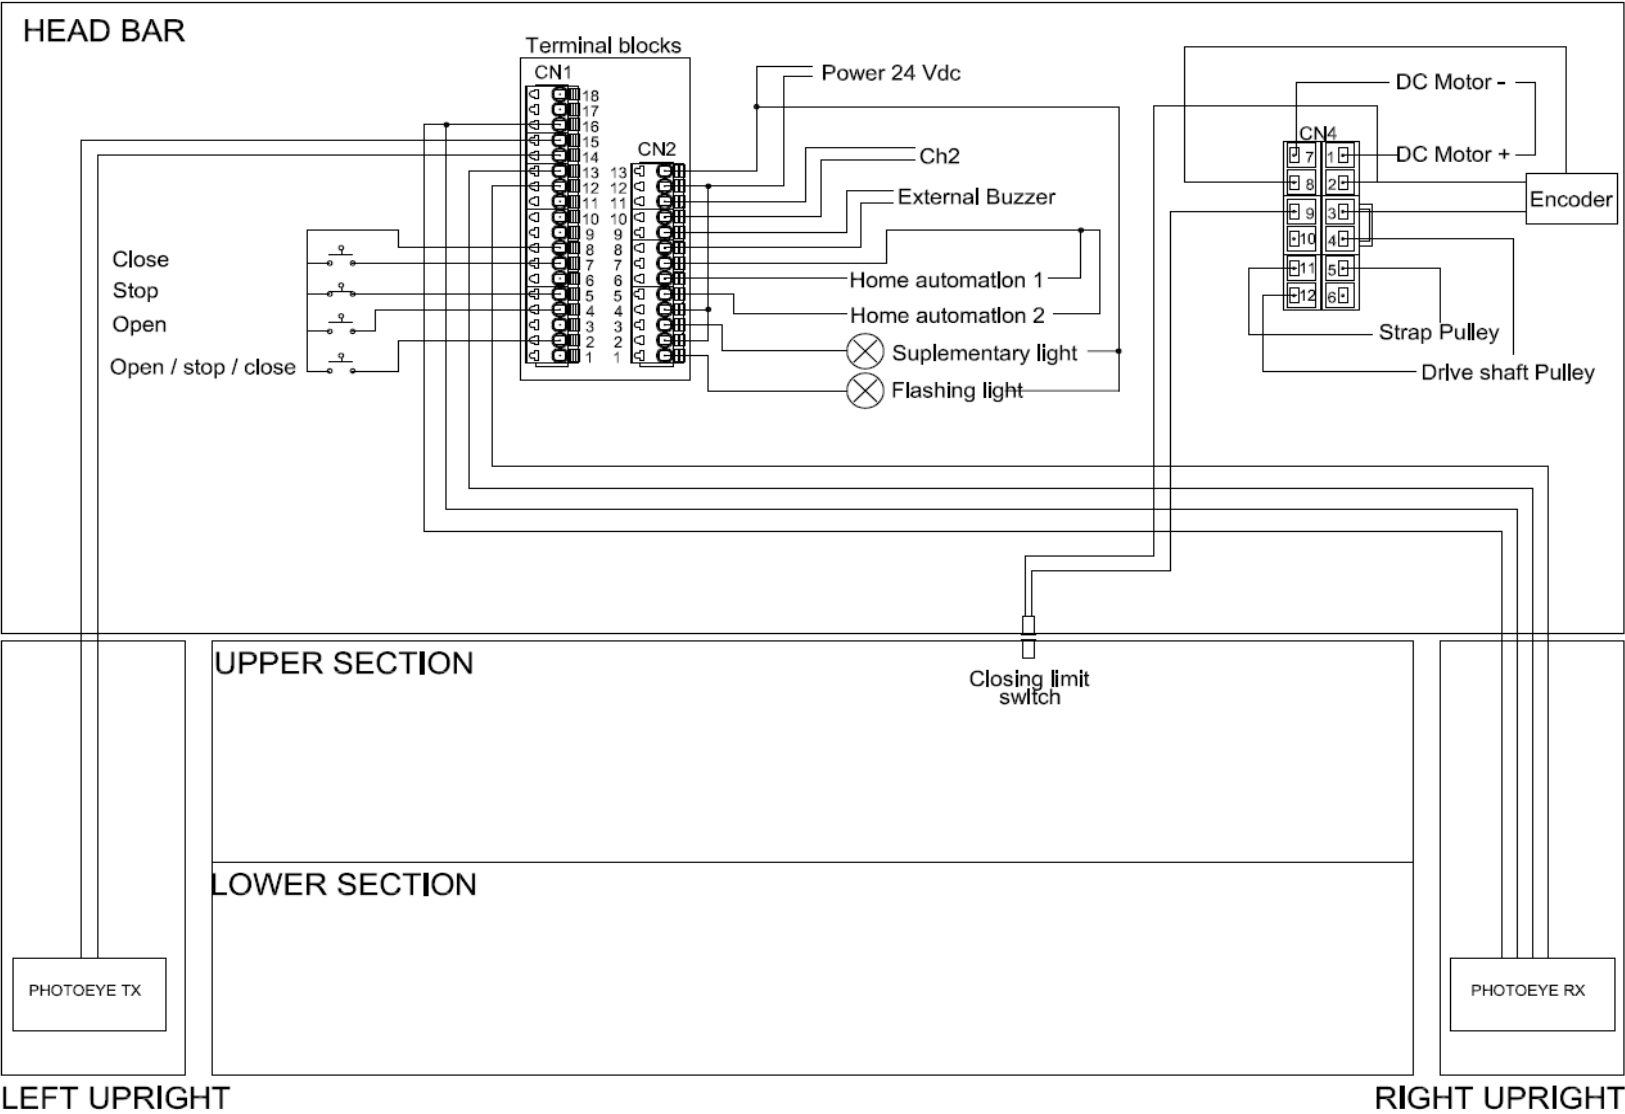

4.4 Timer-to-Close (TTC) adjustment

By default, TTC is set to off. TTC can be set to automatically close your garage door from the fully open position after a specified period of time (1,3,5 or 10 minute intervals). The garage door opener will *Beep* and the courtesy light will *Flash* before closing the door.

To set TTC, please follow the instructions below:

- With door closed and connected to the power, remove the headbar central cover;
- Keep pressed for 3 seconds the TTC Control Button (Figure 4-2 referenced as number 3); the Diagnostic LED (Figure 4-2, referenced as number 4) will blink 2 times;
- Press the TTC Control Button to set 1 minute closing interval; the Diagnostic LED will blink 1 time;
- Press the TTC Control Button, within 10 seconds from the last operation, to set 3 minutes closing interval; the Diagnostic LED will blink 2 times;
- Press the TTC Control Button, within 10 seconds from the last operation, to set 5 minutes closing interval; the Diagnostic LED will blink 3 times;
- Press the TTC Control Button, within 10 seconds from the last operation, to set 10 minutes closing interval; the Diagnostic LED will blink 4 times;
- Press the TTC Control Button, within 10 seconds from the last operation, to set to off the TTC; the Diagnostic LED will blink 5 times;
- After 10 seconds from the last selection made, the TTC is set.



WARNING

In case of a voltage interruption during opening or closing, once the voltage is restored, the door remains in the actual position. Close the door manually or perform the reset maneuver (see Section 3.4).

4.5 LEDs description

A total of six LEDs are present in the operator control unit box:

- The Diagnostic LED (Figure 4-2, referenced as number 4): it starts to blink (red color) in case of electronic anomalies;
- The Voltage LED (Figure 4-2 referenced as number 5): it turns ON (green color) once the door is plugged to the power network;
- The Courtesy Light LEDs (Figure 4-2, referenced as number 7): it is a group of four white LEDs; once the door is activated, they turn ON and stay ON for 1 minute after that the door operation is completed.

4.6 Internal buzzer

The operator control box is equipped also with an internal buzzer. When the door performs a reset maneuver (see Section 3.4), the internal buzzer will beep for the whole maneuver signaling that the current control is set to a higher potentially dangerous level to allow the door to re-define its reference positions.

4.7 Home automation contacts

Two home automation free contacts (FCs) are present on the terminal block CN2 (Figure 4-3). Use these contacts to connect the door to home alarm systems.

- Home automation 1 is active when the door is opening;
- Home automation 2 is active when the door is closing;
- When the door is operated manually or during a reset operation, the contacts are open.

4.8 Optional device prerequisites

The following optional devices can be installed by the dealer:

- External buzzer
- External flashing light
- Supplementary light
- External receiver

These accessories have to be connected on the relays of the terminal block CN2 (see Table 4-2 and Wiring diagram of Section 4.3).

The specifics of the relays are:


- Max 1 A @ 125 V AC (resistive load)
- Max 1 A @ 30 V DC (resistive load)
- Max 500 mA @ 230 V AC(resistive load)
- Max 500 mA @ 125 V AC (inductive load)
- Max 250 mA @ 230 V AC (inductive load)
- Minimum load: 5 V, 10 mA

In the Wiring diagram of Section 4.3, the flashing light and the supplementary light are powered by the contacts 13-12. This is only a possibility; in this case the absorption of the connected devices cannot exceed the capacity of the power contacts 13-12, which is: 24 V Dc, max 500 mA (12 W). An external source of power might be preferable.

4.9 Remote control

The operator is compatible with the Liftmaster 3-Channel Universal Receiver 850LM which can be connected inside the headbar. The main features of the 850LM are:

- Three channels provide expanded remote control capacity: Channel 1 - 50 remotes, Channel 2 - 20 remotes, Channel 3 - 20 remotes
- Multiple remote control options available to provide secure access from the safety and convenience of a vehicle
- Compact design fits most gate and commercial door operators
- Compatible with 811LM and all MAX remote controls
- Power: 12-24VDC or 12-24VAC
- Narrow-band on 310 MHz, 315 MHz, and 390 MHz Security+ 2.0™ Rolling Code and Encrypted DIP
- Operational temperature from -35 to 65 degrees C; Storage temperature from -40 to 85 degrees C
- Compliant with FCC Part 15

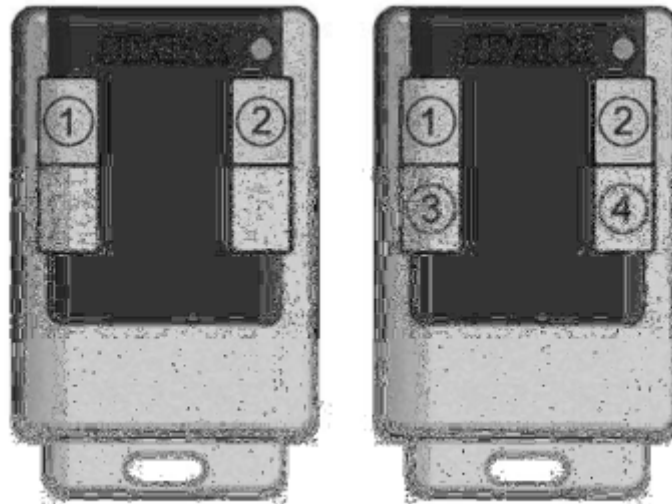

MAINTENANCE

Monthly safety checks of your garage door and opener, and an annual visit from a trained garage door technician, will maintain the safety and smooth operation of your garage door.

5.1 Visual inspection

Visually scan tracks, cables, rollers, and pins for fraying, rupture, and other signs of wear. A trained garage door technician must replace these items to ensure garage door safety.

5.2 Door balance

To test door balance, first disconnect electric opener while door is closed (use emergency release handle). Raise door to waist level and slowly release. Door should hold in this position. If door drops or rises without assistance, call a trained door system technician to correct the door balance.

5.3 Opener safety device

To test photo eyes, stand inside garage, safely away from path of door; push wall button to close door. As door closes wave an object in path of photoelectric eye beam. The door should reverse and return to the fully open position. Photo eyes should be installed no more than 6" above the floor.

5.4 Opener reversal

Garage door openers manufactured after January 1, 1993 are required by Federal law to have advanced safety features that comply with UL 325 standards. To test reversal, door must be properly balanced. Open garage door fully, place a 1-1/2" thick piece of wood on the floor under the center of the door. Stand inside garage, safely away from path of the door, push the transmitter or wall button to close door. The door must reverse when it strikes the wood. If the door does not reverse, contact a trained garage door technician to adjust, repair, or replace the opener or door.



WARNING

After door balance (if door not brought manually to closed position), photoeyes and/or opener reversal tests, at the successive door activation, it will perform a reset maneuver (see Section 3.4).





5.5 Door lubrication



WARNING

All the lubrication procedures of the door must be performed with the door closed and disconnected from the source of supply.

TABLE 5-1 SUGGESTED LUBRICATION PROCEDURES		
ACTIVITY DESCRIPTION	REFERENCE	FREQUENCY
Grease the plastic strikers of the closing latches on the upper side of the upper section.	Figure 5-1 A	12 MONTHS
Grease both pins of the arms: upper pin inside the crossbar, lower pin on the side of the upper section.	Figure 5-1 B,E	12 MONTHS
Grease both pins of the cables to the lower section, by inserting the grease in the slot of the cable in contact with the pin.	Figure 5-1 C	12 MONTHS
Grease rollers.	Figure 5.1 D	12 MONTHS
WARNING! DO NOT GREASE CABLES If you are not confident doing these operation, contact a trained garage door technician		

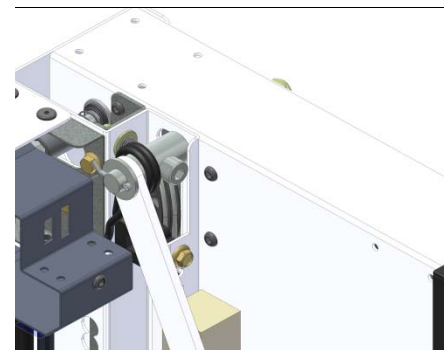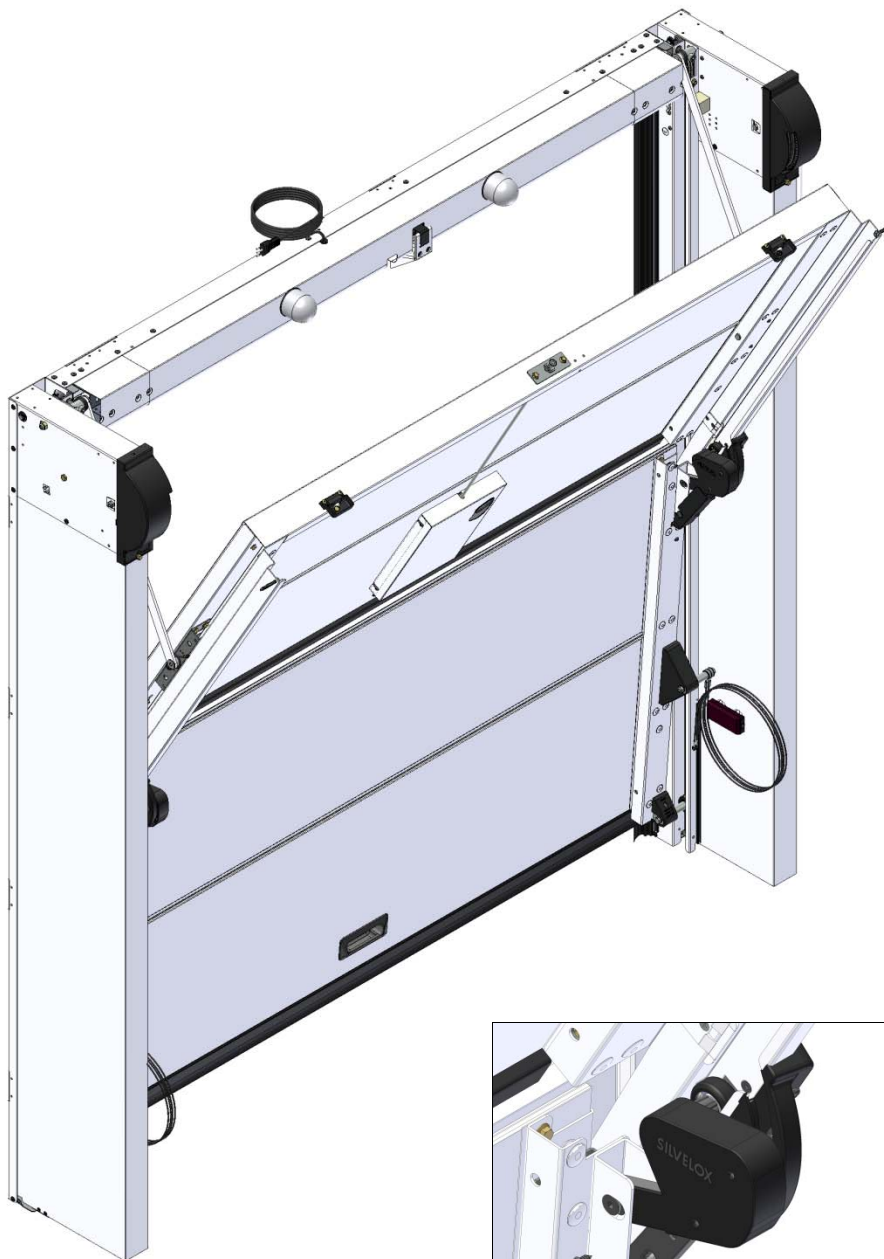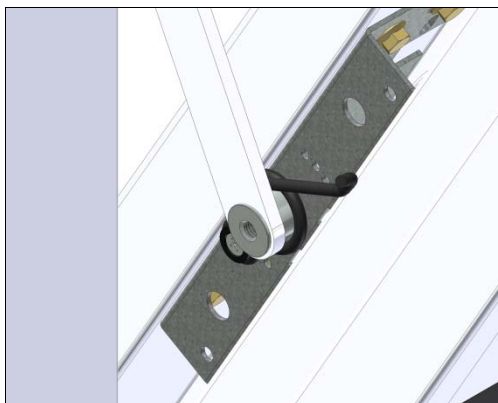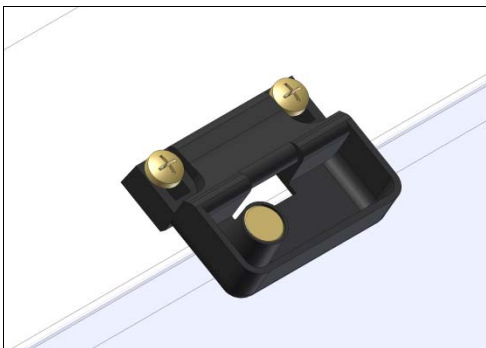

CARE

To maintain the appearance and safety of your garage door, regularly clean and inspect the door and the area in which the door operates. Wipe out, using a cloth dampened with water, any dust or dirt on the exterior surface of sections, at least one time per year. If necessary, use only mild soap, avoiding alcohol-based detergents or ammonia. In case of doubt or difficulty, ask to qualified service personnel.

6.1 Windows and windows insert cleaning

Use a soft cloth and common household glass cleaner.

6.2 Plastic and steel parts cleaning

We recommend to use non-aggressive neutral detergents of common use for household cleaning (Warning: cleaners should not contain abrasive elements). Slight oxide glazes on AISI 316L stainless steel parts, can be removed with Scotch-Brite 3M sponges. Use the sponge only in the same direction of the grain.

TROUBLESHOOTING

7.1 Pulleys cables derailment



WARNING

**In the event of pulley cable derailment, do not try to unlock or repair any equipment.
To repair the system, contact a trained garage door technician.**

7.2 Automatic door malfunctions

In the event that you experience malfunctions of the door with the GDO, check if door works manually. If so, evaluate the possibility of solving the problem by adopting the following suggestions:

Problem	Possible cause	Suggestion
A) The door does not work and the voltage indicator LED on the crossbar is turned off (the door can only be operated manually)	1) power is out	1) wait for power reactivation
	2) some protection fuses may have been activated	2) contact an accredited garage door technician
	3) the power plug is not inserted correctly in the socket	3) restore the correct power plug connection into the power socket
	4) the wiring of the building is defective	4) contact an accredited technician to repair the wiring
B) The door does not work and the voltage indicator LED on the crossbar is turned on	1) the photo-eyes do not work properly	1) clean the photo-eyes covers and/or align them properly if accidentally bumped. If door is still not working, contact a trained garage door technician.
	2) the upper section is not released	2) grease the striker of the upper section. If door is still not working, contact a trained garage door technician.
C) During operation, the sections stop in an intermediate position	1) sudden power failure	1) wait for power reactivation; to manual operate the door, slightly force the door movement with inner handle until the GDO is disengaged.
	2) during operation, the door encountered an obstacle	2) remove the obstacle; if door is still not working, contact a trained garage door technician.
D) the remote controller does not work or only within few meters distance	1) the battery of the remote controller is depleted	1) replace the battery
	2) electronic malfunction	2) contact a trained garage door technician.

Problem	Possible cause	Suggestion
E) the door does not close completely or starts to open again after closing	1) photo-eyes recognize some obstacles	1) remove the obstacles; If door is still not working, contact a trained garage door technician.
	2) the upper section does not engage with the crossbar	2) adjust the position of the leaf strikers; if door is still not working, contact a trained garage door technician.
	3) failure of mechanical components	3) contact a trained garage door technician.
F) the flashing light does not work	1) light elements are damaged	1) contact a trained garage door technician.
	2) interrupted electric contact	2) contact a trained garage door technician.
G) During operation, reaching full closed position, the electric motor remains in tension after the maneuver is complete	1) the closing limit switch is defective or its magnet is out of position	1) try to relocate the magnet to restore the contact or contact a trained garage door technician.
H) The red diagnostic LED is blinking. Before to analyze the possible causes, remove the power supply for at least 40 seconds and plug it again	1) electronic malfunction	1) contact Delta Overlap at sales@deltaoverlap.com

LIMITED WARRANTY

Delta Overlap warrants to the original purchaser that Delta Overlap will repair, repaint, replace or refund the original purchase price, at its option, any sections or hardware that are defective in material or workmanship at the home of original installation pursuant to the terms of this limited warranty for the period from the installation date specified in the "Limited Warranty Periods" listed below. These warranties are for installations of complete garage doors (sections manufactured by Delta Overlap and hardware distributed by Delta Overlap) for single-family residential, residential condominium or similar residential multi-family housing. They do not apply to commercial, industrial, or non-residential uses. This warranty extends to normal usage when the door has been installed and maintained in accordance with manufacturer's instructions. The warranty period begins at the time of purchase. The Limited Warranty is extended to the original purchaser only.

To make a claim under this warranty, contact us immediately in writing at sales@deltaoverlap.com. Please send a complete description and photograph of the issue and the serial number of the door, which is found on the ID label. Response may take up to two weeks from receipt of warranty claim. Upon receiving the claim, Delta Overlap may, at its discretion, instruct original purchaser to return the specified door section or part(s) thereof, shipping prepaid.

If Delta Overlap determines the sections or hardware warranted to be defective within the applicable limited warranty period, Delta Overlap agrees to repair, repaint, replace or refund, at Delta Overlap option, the defective door sections or hardware. Any charges for freight, removal, installation, or labor shall be the responsibility of the original purchaser. REPAIR, REPAINT, REPLACEMENT OR REFUND OF ORIGINAL PURCHASE PRICE OF SPECIFIED PARTS IS THE SOLE REMEDY OFFERED BY THIS WARRANTY. IN NO EVENT, SHALL DELTA OVERLAP BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES CAUSED BY OR RESULTING FROM DEFECTIVE GARAGE DOOR ITEM(S).

Some states do not allow the exclusion or limitations of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state or province to province.

ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY EXPRESSLY EXCLUDED AND DISCLAIMED. TO THE EXTENT THAT ANY IMPLIED WARRANTIES ARE NOT DISCLAIMED, THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS LIMITED WARRANTIES HEREIN.

8.1 Limited Warranty Periods

The applicable limited warranty periods are from the installation date by the original owner as follows:

- material and workmanship: 5 years;
- garage door opener:
 - motor unit: 2 years;
 - parts: 2 years;
 - electronic control unit: 2 years.

8.2 Warranty disclaimer

THE WARRANTIES DO NOT APPLY TO ANY DAMAGE OR DETERIORATION CAUSED BY:

- failure to follow the "Installation Manual";
- failure to follow the "User's Manual" (inadequate maintenance of the product);
- modifications or tampering of the original conditions of the product, abuse or misuse;
- delay, missing or partial payments.
- exposure conditions in corrosive or aggressive environments: eg. areas within 200 meters (600 feet) of chemical plants, refineries, industrial laundries, foundries, etc.;
- exposure conditions in very aggressive natural environments, such as areas within 200 meters (600 feet) from the last wave of the sea, or doors installed above 2000 meters (6000 feet) above sea level;
- damage caused by fire, hail, hurricanes, tornadoes, flood, wind or any other acts of God or nature;
- whitening of the painted film caused by prolonged contact with water in the first months after the installation of the garage door;
- alterations and/or additions to door, any puncture or hole drilled into the door not shown on the installation instructions and the results of such puncture or hole;
- adjustments made with products not recommended by Delta Overlap;

- garage door cleaning made with harsh chemical cleaners based on acid ammonia (eg. multi-purpose products) or alcohol;
- damage to the painted film due to external causes such as strokes, scratches, staples, repeated friction, vandalism, burglary, etc.;
- improper installation or handling of garage door or electric garage door opener;
- damage caused by contact with chemically aggressive substances, such as ammonia, hydrochloric acid, alcohols, bird droppings, product for home cleaning, or pressure washing;
- damage to the painted film from contact (splashes or drips) with products used on construction sites such as paints, cement, enamel, lime, plaster, etc.;
- damage to the painted film caused by the prolonged stay of garage doors left in direct contact of rain and/or sun light, for reasons attributable to the user, or installer;
- failure to perform the monthly cleaning of the protective film with non-aggressive detergents as mild soap and water;
- atmospheric and other local conditions, including, but not limited to: areas subject to fallout or exposure to corrosive chemicals, fumes, salt spray, ash, cement dust, animal waste or foreign substances and areas subject to abrasive cleaners, vandalism, accident, neglect radiation, or water runoff from lead, copper or galvanic metal flashing, or any cause beyond the reasonable control of Delta Overlap.

The manufacturer reserves the right to modify the product, at any time and without prior notice, with technical improvements.

The manufacturer is not liable for any direct or indirect damage caused to persons or property arising from the misuse of the product.

INSTALLATION BOOK

Manufacturer: Delta Overlap s.r.l

Legal Headquarters: I - 60131 Ancona (AN) - via Albertini, 26

Manufacturing plant: I. 83054 Sant'Angelo dei Lombardi (AV) - Zona Industriale Loc. Porrara

Tel. +39 071 9033455 Fax +39 071 9203459

www.overlapgaragedoors.com - sales@deltaoverlap.com

PRODUCT: GARAGE DOOR

MODEL: OVERLAP 2.0

SERIAL NUMBER:

INSTALLATION + TEST ON CONSTRUCTION SITE:

INSTALLER

DATE:

INSTALLER SIGNATURE:

PERIODIC MAINTENANCE BOOK

DATE	ACTIVITY DESCRIPTION	NAME AND SIGNATURE OF THE TECHNICIAN	NOTE

Notes: Enter any periodic maintenance (see Table 5-1) made by the customer in activity description field

DATE	ACTIVITY DESCRIPTION	NAME AND SIGNATURE OF THE TECHNICIAN	NOTE

Notes: Enter any periodic maintenance(see Table 5-1) made by the customer in activity description field

DISMANTLING

In case of dismantling, it is necessary to lock the door and disconnect some components to make the door unusable, as: counterweights boxes, pulleys and power plug. To discard, please contact an accredited company following local laws and regulations.

ASSISTANCE AND ACCESSORIES

Dear Customer, Delta Overlap is available for any further explanation. In case you need the assistance of a qualified technician or you want new accessories for your garage door, you can contact the Delta Overlap Customer Care. With the purpose to speed up the handling of your inquiry, please provide the serial number of your door (placed in the label above the inner door handle)

Delta Overlap s.r.l

Legal Headquarters: I - 60131 Ancona (AN) - via Albertini, 26

Manufacturing plant: I. 83054 Sant'Angelo dei Lombardi (AV) - Zona Industriale Loc. Porrara

Tel. +39 071 9033455 Fax +39 071 9203459

www.overlapgaragedoors.com - sales@deltaoverlap.com

Although we did our best to ensure that the information in this manual is the most accurate possible, the manufacturer cannot assume any responsibility for possible errors, imprecisions or omissions. Information in this document is subject to change without notice. All rights reserved. No part of this manual can be reproduced, copied and transmitted for any purposes without the express prior written consent of Delta Overlap.



Delta Overlap s.r.l
Legal Headquarters: I - 60131 Ancona (AN) - via Albertini, 26
Manufacturing plant: I. 83054 Sant'Angelo dei Lombardi (AV) - Zona
Industriale Loc. Porrara
Tel. +39 071 9033455 Fax +39 071 9203459

www.overlapgaragedoors.com - sales@deltaoverlap.com