
QMK 系列教程之如何设置配列


1. 用浏览器打开 https://config.qmk.fm

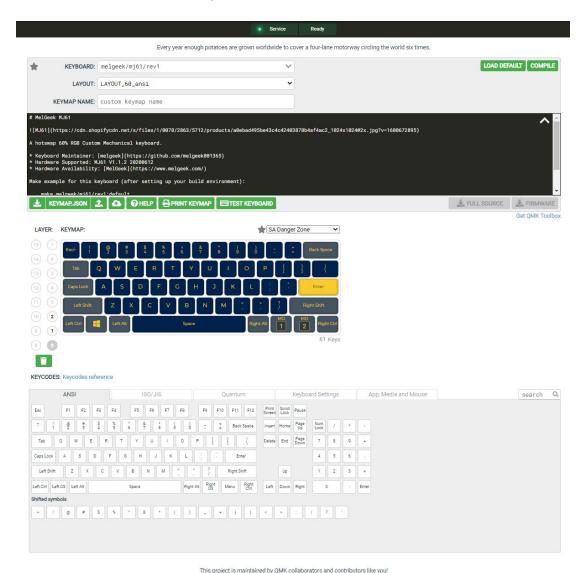

This project is maintained by QMK collaborators and contributors like you


Hosted on GitHub Pages

2. 在 "KEYBOARD" 输入栏中搜索 melgeek, 会显示所有 MelGeek 支持的 PCB 型号, 如图我们选择了 melgeek/mj61/rev1(*rev1 是固件的版本号*)。

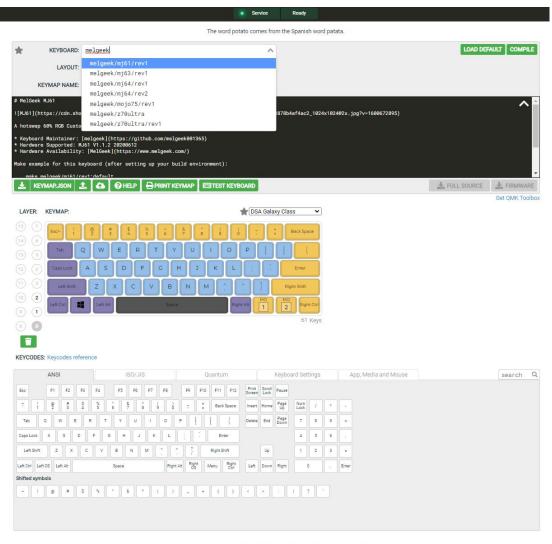

This project is maintained by QMK collaborators and contributors like you! Hosted on GitHub Pages

MJ61 出厂默认有三层配列 (分别是 0、1、2), 最多支持 16 层 (0~15)。

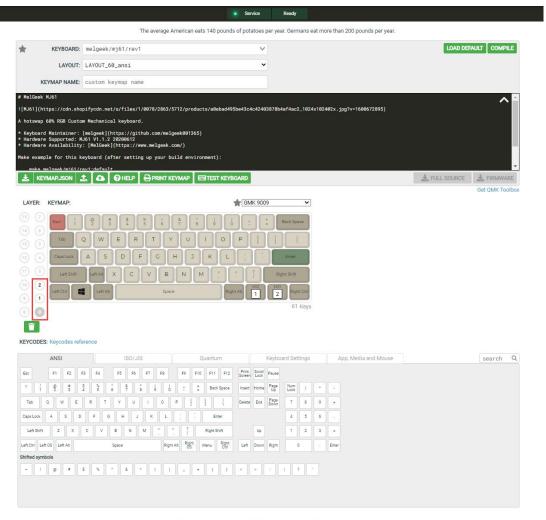


This project is maintained by QMK collaborators and contributors like you!


Hosted on GitHub Pages

version: 2fabe59d47ec50cc110fba6ba4494094e4b31900


3. 首先用鼠标选中蓝色框区域内某个你希望改变键值的按键,然后用鼠标点击红色框区域内任意键值即可。如图,我们把蓝色框内的'CapsLock'改变为'LeftCtrl'。

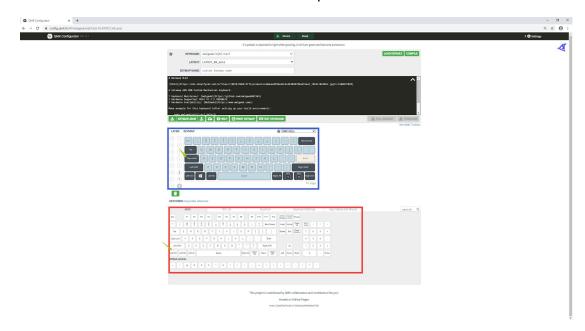


4. 在完成设置键值后,用鼠标点击"COMPILE",会显示如下界面(一块旋转的乳酪),说明正在编译新的固件,编译的过程大概持续 100 秒左右。

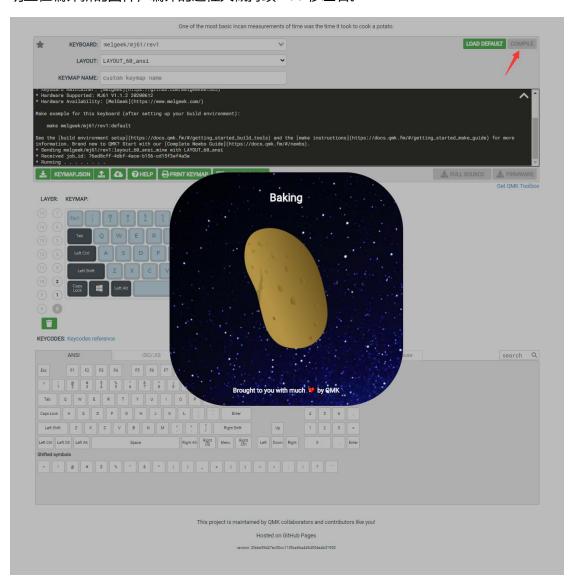


5. 在完成编译固件后,只需要点击"FIRMWARE"即可下载刚刚编译好的固件到你浏览器 默认的下载地址,文件名是"melgeek_mj61_rev1_layout_60_ansi_mine.bin"。请记住下 载路径,方便后续操作。

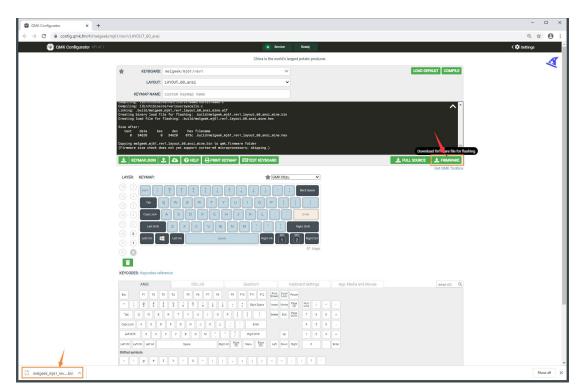


6. 下载 QMK Toolbox,该工具是用来刷固件到 MJ61PCB。 如图点击"Get QMK Toolbox',将会打开一个新的网页 (https://github.com/qmk/qmk_toolbox/releases)。截止到目前最新的版本号是 0.0.20,Windows 用户只需要下载 "qmk_toolbox.exe"。如果你之前已经下载安装过该工具,可以忽略 6、7 步骤,直接执行步骤 8。

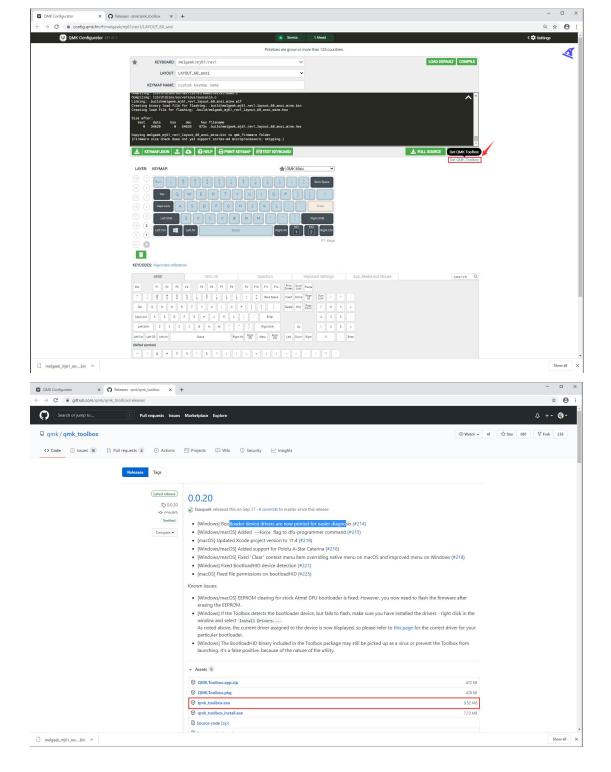


7. 完成 QMK Toolbox 下载后,只需要双击就会弹出如下界面,点击"Yes"即可。

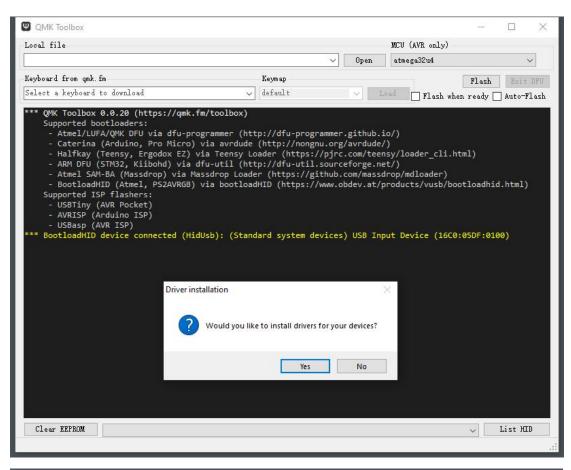

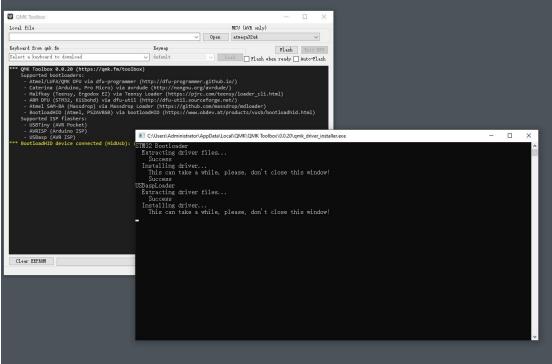

8. 点击 "Open " 找到刚刚在步骤 5 下载好的固件, 文件名 "melgeek_mj61_rev1_layout_60_ansi_mine.bin"。

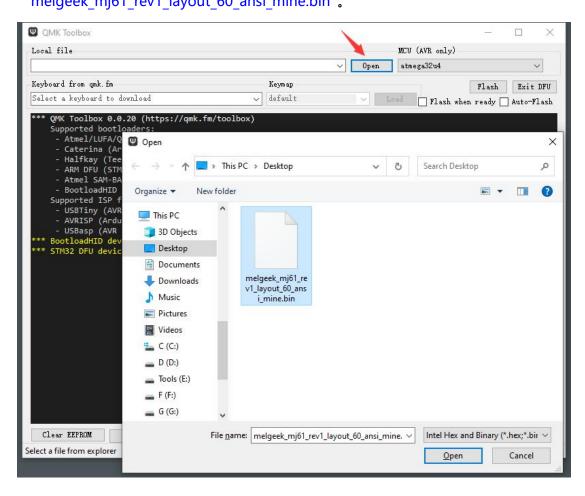


9. 这个时候需要设置 MJ61 至 DFU 模式, 方法有两种, 通过物理拨码开关或者组合键。


方法一: 拨动 PCB 上的拨码开关至 DFU 模式,需重新拔插一下 USB 数据线;

方法二: MJ61 出厂固件默认按组合键 "FN1+\";

如图红色框内, 说明 QMK Toolbox 已经检测到处于 DFU 模式的 MJ61。

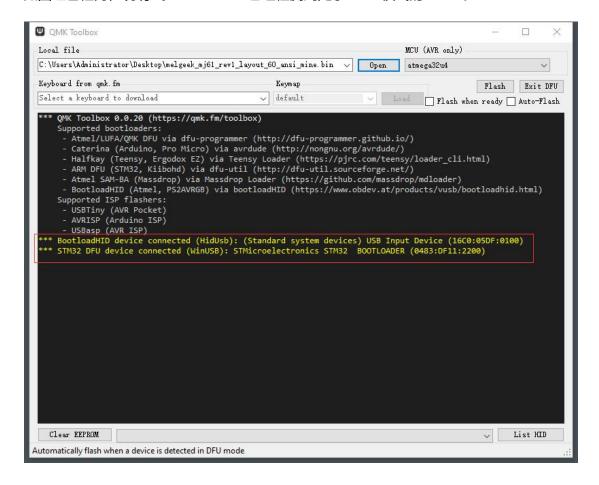

10. 在完成上述步骤后,只需要点击 "Flash" 就可以把固件升级到 MJ61PCB 上了。

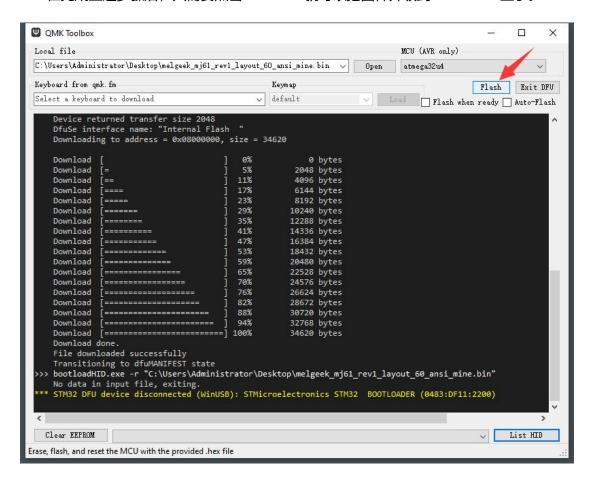

注意:在完成升级后,如果是通过方法一进入 DFU 模式的(通过拨动 MJ61PCB 上的拨码 开关),记得在完成升级后一定要把拨码开关拨回去,否则下次重新拔插键盘后将会自动进入 DFU 模式。